

Introduction

Thank you for selecting the Extech Model AN25 Hygro Thermo-Anemometer. Please visit our website (www.extech.com) to check for the latest version of this User Guide or to contact Customer Care.

Operation

Switching the Meter ON/OFF

- Press the POWER button to switch the meter ON
- Press and hold POWER for approx. 3 seconds to switch OFF
- The meter's Auto Power OFF feature turns the meter OFF after 15 minutes of inactivity

Changing the Air Velocity Units

With the meter in air flow measurement mode press HOLD for approx. 3 seconds to change air flow units from m/s, KMH, M/H, FPM, BFT, KNT and then back to m/s. See Specifications for icon definitions.

Change Modes and Temperature units

- Press MODE button to select the desired mode: WNCL (wind-chill), TEMP, RH, HI (heat index), DP (dew point), WB (wet bulb), WBGT (wet bulb globe), and back to m/s.
- From any temperature mode press the HOLD button to change temperature units (°C / °F).

MAX/AVG Mode

- With the meter ON press the POWER button. The MAX icon will display on the LCD with the highest (maximum) reading.
- Press POWER again. The AVG (average) icon will display on the LCD. Press the POWER button to step through the averaging time selections (5sec, 10sec, and to 13sec). After selecting the averaging time the meter will begin averaging readings.
- To exit the MAX/AVG mode, repeatedly press the POWER button until MAX and AVG icons switch OFF.

Data Hold

- Press the HOLD button to freeze the displayed reading. The HOLD icon will appear on the display.
- Press HOLD button again to return to normal operating mode.

Auto Power OFF

- The meter will power OFF after about 15 minutes of inactivity.
- To disable Auto Power OFF: With the meter switched OFF, press the HOLD and POWER buttons until the meter switches ON.
- The 'n' icon will be displayed on the LCD and the meter will return to normal operating mode.
- Now the meter will not switch OFF until the user manually switches it OFF. Note that on the next cycle of power, the meter will revert to the Auto Power OFF mode.


Error Messages

Er1: Sensor Error (replace unit); Er2: Measurement out of range

Important Note: If the meter is placed near a source of electricity the electrical signal may affect the meter's displayed reading.

Meter Description

- Vane impeller
- Relative Humidity & Temperature sensors
- LCD display
- POWER button
- HOLD button
- MODE button
- Battery compartment (on rear)
- Tripod mounting hole
- Impeller set screw (on side)

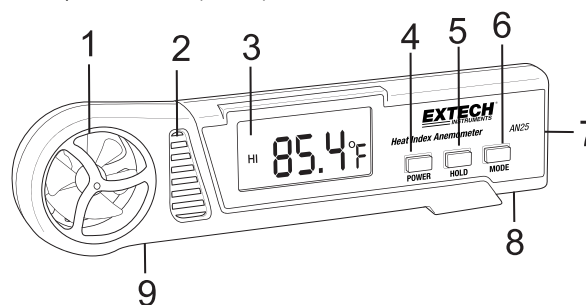

Specifications

Measurements	Range	Resolution	Accuracy
m/s (meters per second)	0.40 to 25 m/s	0.1 m/s	± (3%FS)
FPM (feet per minute)	80 to 999 ft/min	0.1 ft/min	
	1000 to 4922 ft/min	1 ft/min	
KMH (kilometers per hour)	1.4 to 90.0 km/hr	0.1 km/hr	± (3%FS)
M/H (miles per hour)	0.9 to 55.9 mph	0.1 mph	
BFT (beaufort)	0 to 10	1 BFT	
KNT (knots)	0.8 to 48.6 knots	0.1 knots	± 1°C (± 1.8°F)
Temp./WNCL (Wind-chill)	-15 to 50°C (5 to 122°F)	0.1°C/F	
RH (relative humidity)	5 to 95% RH	0.1% RH	
WB (wet bulb)	-15 to 50°C (5 to 122°F)	0.1°C/F	Calculation
DP (dew point)	-75 to 50°C (-103 to 122°F)	0.1°C/F	
HI (heat index)	-35 to 205°C (-31 to 401°F)	0.1°C/F	
WBGT (wet bulb globe)	-29 to 54°C (-20 to 130°F)	0.1°C/F	

*@25°C 10-90%RH otherwise ±5%RH

General Specifications

Display	28 x 14mm (1.1 x 0.5") LCD with low battery & multifunction indicators
Max/Avg/Hold Modes	Max shows highest reading; AVG averages readings; Data Hold freezes the display
Operating conditions	0 to 50°C (32 to 122°F) / < 80% RH
Power supply	Lithium battery (CR-2032 or equivalent)
Dimensions/weight	152 x 40 x 18mm (6.0 x 1.6 x 0.7"); 60g (2.1 oz.)

Battery Replacement

The meter has a low battery indicator (BAT). **Important: Turn the meter off before opening the battery compartment.** Using a coin, turn the battery compartment cover COUNTER-CLOCKWISE to remove it. Once opened, observe the position of the battery, placing the new one in the same position. Secure the battery compartment cover and dispose of the lithium battery in accordance with local, state, or national disposal codes.



Never dispose of used batteries or rechargeable batteries in household waste. As consumers, users are legally required to take used batteries to appropriate collection sites, the retail store where the batteries were purchased, or wherever batteries are sold.

Disposal: Do not dispose of this instrument in household waste. The user is obligated to take end-of-life devices to a designated collection point for the disposal of electrical and electronic equipment.

Impeller Replacement

The replacement part number for the impeller kit is AN25-V (two impellers are supplied). Loosen and remove the impeller set screw (9) and then, from the back of the meter, turn the impeller counter-clockwise to remove. Insert new impeller and turn it clockwise to lock it. Insert and tighten the impeller set screw to complete the replacement.

Support Lines: U.S. (877) 439-8324; International: +1 (603) 324-7800

Technical Support: Option 3; E-mail: support@extech.com

Repair & Returns: Option 4; E-mail: repair@extech.com

Product specifications are subject to change without notice

Please visit our website for the most up-to-date information

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

ISO 9001 Certified

Copyright © 2013 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form
www.extech.com

AMEYA360

Components Supply Platform

Authorized Distribution Brand :



Website :

Welcome to visit www.ameya360.com

Contact Us :

➤ Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd
Minhang District, Shanghai , China

➤ Sales :

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

➤ Customer Service :

Email service@ameya360.com

➤ Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com