# **TS1003 Demo Board**

#### **REVISION NOTE**

The current revisions for the TS1003 Demo Boards display the identifier TS100x Demo Board on the top side of the evaluation board as depicted in Figure 1. If the identifier is not printed on the top side of the evaluation board, please contact Silicon Labs for support at:

https://www.silabs.com/support/pages/contacttechnicalsupport.aspx

#### **COMPONENT LIST**

DESIGNATION	QTY	DESCRIPTION
C1, C2, C3, C5	4	0.1µF ± 10%
		capacitors (0805)
C4, C6	2	1µF ±10%
		capacitors (0805)
R2	1	665kΩ ± 1%
		resistor (0805)
R7	1	500kΩ ± 1%
		resistor (0805)
R5, R6, R10	3	1MΩ ± 1%
		resistors (0805)
R8, R9	2	1.25MΩ ± 1%
		resistors (0805)
R1, R3, R4	3	2MΩ ± 1%
		resistors (0805)
U1, U2	2	TS1003
		operational
		amplifiers
$V_{DD}$ , $V_{in}$ , $V_{out}$ ,GND	11	Test points



Figure 1. TS1003 Evaluation Board Top View

#### **FEATURES**

- > 0.8V to 5.5V Single-supply operation
- AC-coupled Non-Inverting and Inverting configuration supplied
- Fully Assembled and Tested
- 2in x 2in 2-layer demo board

#### DESCRIPTION

The demo board for the TS1003 is a completely assembled and tested circuit board that can be used for evaluating the TS1003. The TS1003 is the industry's first sub-1µA supply current, precision CMOS operational amplifier fully specified to operate over a supply voltage range from 0.8V to 5.5V. Fully specified at 1.8V, the TS1003 is optimized for ultralong-life battery powered applications. The TS1003 exhibits a typical input bias current of 2pA, and rail-to-rail input and output stages.

The TS1003 is fully specified over the industrial temperature range (-40°C to +85°C). The TS1003 evaluation board is offered with either a PCB-space saving 5-lead SC70 or 5-lead SOT23 packaging.

Product data sheets and additional documentation can be found at www.silabs.com.

# **Ordering Information**

Order Number	Description
TS1003DB	SC70 Packaging
	Demo Board
TS1003DB-SOT	SOT23 Packaging
	Demo Board



Figure 2. TS1003 Evaluation Board Bottom View

# **TS1003 Demo Board**



# **Description**

The TS1003 evaluation boards provide two configurations for evaluating the TS1003 operational amplifier in one single PCB board, namely a non-inverting configuration located on the left-hand side of the board and an inverting configuration located on the right-hand side of the board. In both cases, the input to each circuit is AC-coupled. The demo board provides a re-biasing scheme at one-half the power supply or  $V_{\rm DD}/2$  for the inverting configuration and at  $V_{\rm DD}/4$  for the non-inverting configuration.

The TS1003 demo board provides a dedicated power supply for the non-inverting circuit and a dedicated power supply for the inverting circuit. This provides the user the flexibility of evaluating one circuit at a time or both at the same time.

In both the non-inverting and the inverting configuration, the AC-coupling capacitor creates a high pass filter. The resulting cut-off frequency,  $f_{\text{C}}$ , is given as:

$$f_C = \frac{1}{2\pi RC}$$

In the non-inverting circuit, R=R5=1M $\Omega$  and C=C5=0.1 $\mu$ F. In the inverting case, R=R10=1M $\Omega$  and C=C1=0.1 $\mu$ F. In both cases, these component values generate a high-pass cut-off frequency of 1.6Hz.

# **Default Configurations**

## Non-Inverting configuration

In the non-inverting configuration, the circuit's transfer function is given by the following equation:

$$\frac{V_{OUT}}{V_{IN}} = 1 + \frac{R4}{R3}$$

With R4=2M $\Omega$  and R3=2M $\Omega$  the circuit signal gain is 2 with a circuit bandwidth of 2kHz. This results in an overall circuit bandwidth range of 1.6Hz to 2kHz.

## Inverting configuration

In an inverting configuration, the circuit's transfer function is given by the following equation:

$$\frac{V_{OUT}}{V_{IN}} = -\frac{R6}{R10}$$

In this case, R6=1M $\Omega$  and R10=1M $\Omega$ . This results in a signal gain of -1 with a circuit bandwidth of 2kHz and an overall circuit bandwidth range of 1.6Hz to 2kHz.

#### **Quick Start Procedures**

# Required Equipment

- TS1003 demo board
- DC Power Supply, Single or Dual Output
- Function Generator
- 4-channel Oscilloscope
- Two 1MΩ oscilloscope probes

## Non-Inverting Configuration

In order to evaluate the TS1003 operational amplifier in the non-inverting configuration, the following steps are to be performed:

- Before connecting the DC power supply to the demo board power test points, turn on the power supply and set the DC voltage to 5.5V and then turn it off.
- 2) Set the function generator frequency to 500Hz and output level with a  $V_{OH}$  = 2.35V and a  $V_{OL}$  = 2.15V. This sets the input signal swing to 200mV<sub>PP</sub>, centered at 2.25V.
- 3) In order to monitor the input and output signal, select two channels on the oscilloscope and set the vertical voltage scale and the vertical position on each channel to 100mV/DIV and -2.25V, respectively. Set the horizontal time scale to 500μs/DIV.
- 4) Connect the positive terminal of the DC power supply to  $V_{DD}$  and the ground terminal to GND.

TS1003-EVB Rev. 1.0 Page 2



# **TS1003 Demo Board**

- 5) Connect the signal output of the function generator to V<sub>in</sub> and the ground terminal to GND.
- 6) To monitor the input, connect the signal terminal of one of the oscilloscope probes to V<sub>in</sub> and the ground terminal to GND. To monitor the output, use the second probe to connect the signal terminal to V<sub>OUT</sub> and the ground terminal to GND.
- 7) Turn on the power supply and check that the power supply current is approximately 3.6µA.
- 8) Turn on the function generator.
- 9) Observe the input and output signal. The output signal is an amplified version of the input signal with an output swing of approximately 400mV<sub>PP</sub>, corresponding to a signal gain of two.

# **Inverting Configuration**

In order to evaluate the TS1003 operational amplifier in the inverting configuration, the following steps are to be performed:

- 1) Before connecting the DC power supply to the demo board, turn on the power supply and set the DC voltage to 5.5V and then turn it off.
- 2) Set the function generator output frequency to 500Hz and output level with a  $V_{OH} = 2.35$ V and a

- $V_{OL}$  = 2.15V. This sets the input swing to  $200 \text{mV}_{PP}$ , centered at 2.25V.
- 3) In order to monitor the input and output signal, select two channels on the oscilloscope and set the vertical voltage scale and the vertical position on each channel to 100mV/DIV and -2.25V, respectively. Set the horizontal time scale to 500μs/DIV.
- Connect the positive terminal of the DC power supply to VDD and the ground terminal to GND.
- 5) Connect the signal output of the function generator to V<sub>in</sub> and the ground terminal to GND.
- 6) To monitor the input, connect the signal terminal of one of the oscilloscope probes to V<sub>in</sub> and the ground terminal to GND. To monitor the output, use the second probe to connect the signal terminal to V<sub>OUT</sub> and the ground terminal to GND.
- 7) Turn on the power supply and check that the power supply current is approximately 3.0µA.
- 8) Turn on the function generator.
- Observe the input and output signal. The output signal is an inverted version of the input signal and the swing should be 200mV<sub>PP</sub>.

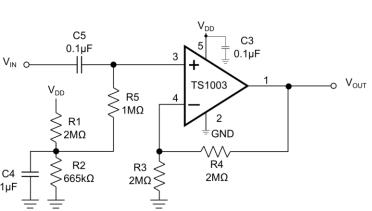
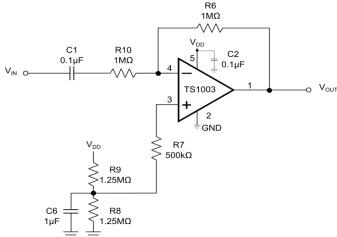


Figure 3. Non-Inverting Configuration



**Figure 4. Inverting Configuration** 

TS1003-EVB Rev. 1.0 Page 3



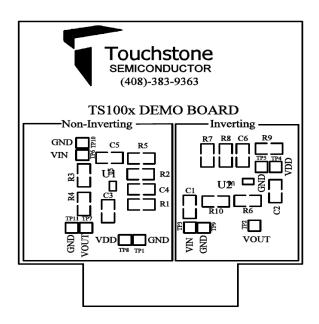


Figure 5. TS1003 Demo Board Top Layer #1

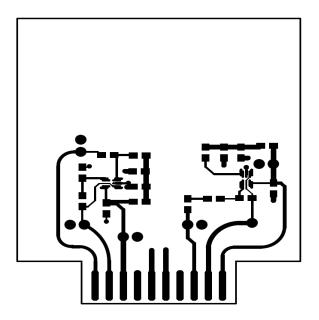


Figure 6. TS1003 Demo Board Top Layer #2

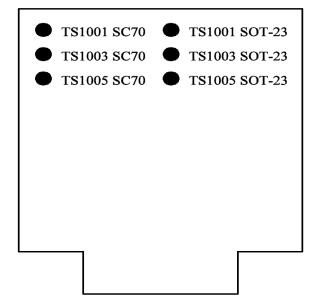


Figure 7. TS1003 Demo Board Bottom Layer (GND) #1

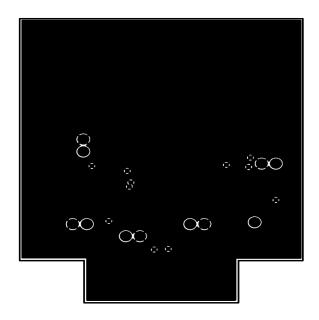


Figure 8. TS1003 Demo Board Bottom Laver (GND) #2

# AMEYA360 Components Supply Platform

## **Authorized Distribution Brand:**

























#### Website:

Welcome to visit www.ameya360.com

#### Contact Us:

#### > Address:

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd Minhang District, Shanghai , China

#### > Sales:

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

#### Customer Service :

Email service@ameya360.com

# Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com