

## General Description

The MAX4444 evaluation kit (EV kit) simplifies evaluation of the MAX4444 ultra-fast differential line receiver. The EV kit includes the MAX4444, which has a fixed gain of +2V/V. This EV kit can also be used to evaluate the adjustable-gain MAX4445, which is stable with a minimum gain of +2V/V. To evaluate the MAX4445, order a free sample of the MAX4445ESE along with the MAX4444 EV kit.

## Component List

DESIGNATION	QTY	DESCRIPTION	
C1, C3	2	4.7μF ±20%, 10V tantalum capacitors AVX TAJA475M010R	
C2, C4	2	0.1µF ceramic capacitors	
R1, R2, R3	3	49.9Ω ±1% resistors	
R4	1	1MΩ ±5% resistor	
RG	0	Not installed	
JU1	1	2-pin header	
None	1	Shunt (JU1)	
IN-, IN+, OUT	3	SMA connectors	
U1	1	MAX4444ESE (16-Pin SO)	
None	1	MAX4444 EV kit PC board	
None	1	MAX4444 EV kit data sheet	
None	1	MAX4444/MAX4445 data sheet	

## Component Supplier

SUPPLIER	PHONE	FAX
AVX	803-946-0690	803-626-3123

Note: Please indicate that you are using the MAX4444 or MAX4445 when contacting the above component supplier. Features

- ♦ 500MHz Full-Power Bandwidth
- ♦ 5000V/µs Slew Rate
- ♦ Proven PC Board Layout
- ◆ Fully Assembled and Tested Surface-Mount Board

## Ordering Information

ĺ	PART	TEMP. RANGE	IC PACKAGE
	MAX4444EVKIT	0°C to +70°C	16 SO

### Quick Start

The MAX4444 EV kit is fully assembled and tested. Follow these steps to verify board operation. Do not turn on the power supply until all connections are com-

- 1) Connect a +5V power supply to the V<sub>CC</sub> pin and a -5V power supply to the VEE pin. Connect power-supply ground to the GND pads.
- 2) Ensure that the shunt is installed on jumper JU1.
- 3) Apply signals to IN+ and IN- whose differential voltage does not exceed ±1.5V. These signals must not exceed the amplifier's input common-mode range of -2.9V to +2.9V.
- 4) Connect the output marked OUT to a  $50\Omega$  terminated oscilloscope input.
- 5) Turn on the power supply and verify the output signal on the oscilloscope. The output amplitude observed on the oscilloscope will be the same as the amplitude of the differential input. This is due to the multiplication of the gain of +2V/V with the voltage divider formed by the 49.9 $\Omega$  back-terminating resistor (R3) and the oscilloscope input termination.

NIXIN

# MAX4444 Evaluation Kit

## Detailed Description

#### **Enable Control**

The MAX4444 provides an enable pin (EN) to enable or disable the output. Table 1 lists the options available for the enable/disable control jumper (JU1). EN is a TTL/CMOS-logic level input.

#### Layout Considerations

The MAX4444 EV kit layout has been optimized for high-speed signals, with careful attention given to grounding, power-supply bypassing, and signal-path layout. The small, surface-mount, ceramic bypass capacitors (C2, C4) have been placed as close to the MAX4444 supply pins as possible. Signal traces have been kept as short as possible by using 0805-sized termination and gain-set resistors.

**Table 1. Jumper JU1 Functions** 

SHUNT	MAX4444 ENABLE PIN	MAX4444 OUTPUT	
Installed	Connected to VCC	MAX4444 enabled	
Not installed	Pulled to GND through $1M\Omega$ resistor (R4)	MAX4444 in shut- down	

#### Evaluating the MAX4445

To evaluate the MAX4445, turn off the power to the EV kit. Replace the MAX4444 with a MAX4445ESE, and install gain-setting resistor RG (0805, 1%) according to the following formula:

$$R_G = 600\Omega / (gain - 1)$$

**Note:** The gain must be at least +2V/V ( $R_G \le 600\Omega$ ) for the amplifier to be stable.

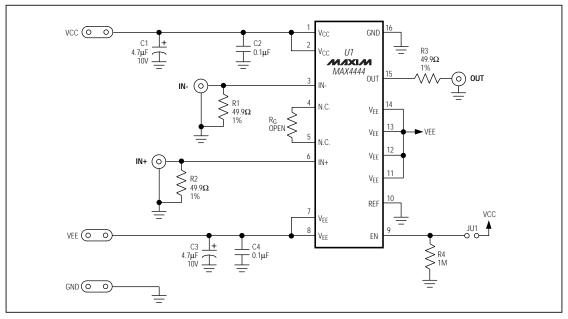


Figure 1. MAX4444 EV Kit Schematic

# MAX4444 Evaluation Kit

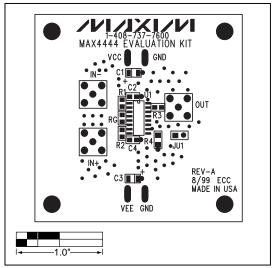


Figure 2. MAX4444 EV Kit Component Placement Guide— Component Side

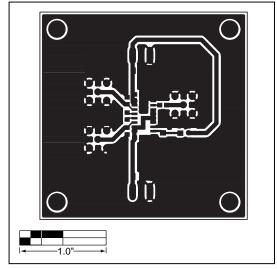


Figure 3. MAX4444 EV Kit PC Board Layout—Component Side

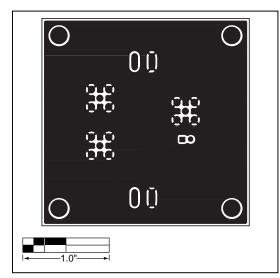


Figure 4. MAX4444 EV Kit PC Board Layout—Solder Side

# MAX4444 Evaluation Kit

**NOTES** 

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

# AMEYA360 Components Supply Platform

# **Authorized Distribution Brand:**

























# Website:

Welcome to visit www.ameya360.com

## Contact Us:

# > Address:

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd Minhang District, Shanghai , China

## > Sales:

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

# Customer Service :

Email service@ameya360.com

# Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com