

[PanaX EX – Package number]

PanaX EX1

	USB cable and DWire10 Connecting Cable set	USB cable and DWire14 Connecting Cable set
Standard	PX-PAC-X1NU-0P5E	PX-PAC-X1NU4-0P5E
Isolated	PX-PAC-X1IU-0P5E	PX-PAC-X1IU4-0P5E

PanaX EX2

	USB cable and DWire10 Connecting Cable set	USB cable and DWire14 Connecting Cable set
Standard	PX-PAC-X2NU-0P5E	PX-PAC-X2NU4-0P5E
Isolated	PX-PAC-X2IU-0P5E	PX-PAC-X2IU4-0P5E

	USB cable and AC adapter and DWire10 Connecting Cable set	USB cable and AC adapter and DWire14 Connecting Cable set
Standard	PX-PAC-X2NUA-0P5E	PX-PAC-X2NUA4-0P5E
Isolated	PX-PAC-X2IUA-0P5E	PX-PAC-X2IUA4-0P5E

Optional Products

 
PanaX EX programming system

-[Programmer board PX-PGBXN](#)

 
-[Programmer socket board](#)

"Support list of programmer socket board"

 
Optional Products

	
USB Cable : PX-IFC-USB-20C10B	AC Adapter : BI-GTUSB1/WH
	
DWire10 Connecting Cable : PX-CBLXD10	JTAG16 Connecting Cable : PX-CBLXJ16
	
DWire14 Connecting Cable : PX-CBLXD14	
	
DWire FL Connecting Cable : PX-CBLXDFL	JTAG FL Connecting Cable : PX-CBLXJFL
	
DWire Connecting Board : PX-ADPXDU	JTAG Connecting Board : PX-ADPXJU

 
Package number : PX-PAC-X1NU-0P5E

	
PanaX EX1 Standard : PX-ODBX1N	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire10 Connecting Cable: PX-CBLXD10	USB Cable : PX-IFC-USB-20C10B

Package number : PX-PAC-X1NU4-0P5E

	
PanaX EX1 Standard : PX-ODBX1N	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire14 Connecting Cable: PX-CBLXD14	USB Cable : PX-IFC-USB-20C10B

Package number : PX-PAC-X1IU-0P5E

	
PanaX EX1 Isolated : PX-ODBX1I	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire10 Connecting Cable: PX-CBLXD10	USB Cable : PX-IFC-USB-20C10B

 
Package number : PX-PAC-X1IU4-0P5E

	
PanaX EX1 Isolated : PX-ODBX1I	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire14 Connecting Cable: PX-CBLXD14	USB Cable : PX-IFC-USB-20C10B

 
Package number : PX-PAC-X2NU-0P5E

	
PanaX EX2 Standard : PX-ODBX2N	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire10 Connecting Cable: PX-CBLXD10	USB Cable : PX-IFC-USB-20C10B

 
Package number : PX-PAC-X2NU4-0P5E

	
PanaX EX2 Standard : PX-ODBX2N	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire14 Connecting Cable: PX-CBLXD14	USB Cable : PX-IFC-USB-20C10B

 
Package number : PX-PAC-X2IU-0P5E

	
PanaX EX2 Isolated : PX-ODBX2I	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire10 Connecting Cable: PX-CBLXD10	USB Cable : PX-IFC-USB-20C10B

Package number : PX-PAC-X2IU4-0P5E

	
PanaX EX2 Isolated : PX-ODBX2I	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire14 Connecting Cable: PX-CBLXD14	USB Cable : PX-IFC-USB-20C10B

 
Package number : PX-PAC-X2NUA-0P5E

	
PanaX EX2 Standard : PX-ODBX2N	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire10 Connecting Cable: PX-CBLXD10	USB Cable : PX-IFC-USB-20C10B
	
AC Adapter : BI-GTUSB1/WH	

 
Package number : PX-PAC-X2NUA4-0P5E

	
PanaX EX2 Standard : PX-ODBX2N	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire14 Connecting Cable: PX-CBLXD14	USB Cable : PX-IFC-USB-20C10B
	
AC Adapter : BI-GTUSB1/WH	

Package number : PX-PAC-X2IUA-0P5E

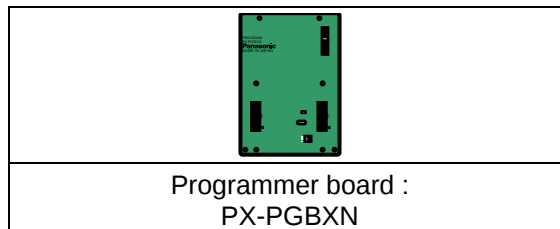 
	
PanaX EX2 Isolated : PX-ODBX2I	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire10 Connecting Cable: PX-CBLXD10	USB Cable : PX-IFC-USB-20C10B
	
AC Adapter : BI-GTUSB1/WH	

Package number : PX-PAC-X2IUA4-0P5E

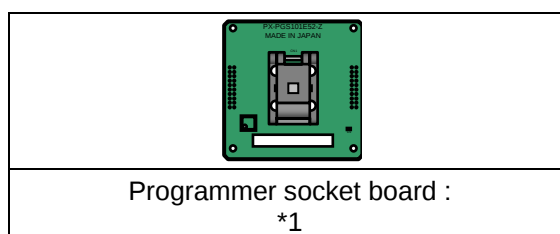 
	
PanaX EX2 Isolated : PX-ODBX2I	Software CD-ROM : DebugFactory Builder (PX-DBFAM-0P0E) PanaX EX Commander (PX-PRGEXC-0P0E)
	
DWire14 Connecting Cable: PX-CBLXD14	USB Cable : PX-IFC-USB-20C10B
	
AC Adapter : BI-GTUSB1/WH	

PanaX EX programming system

- Programmer board



- Programmer socket board



*1: Refer to the support list of programmer socket board.

Support list of programmer socket board

Part of programmer socket board	Package Code	Supported MCUs
PX-PGS101E52-Z	TQFP032-P-0707A	MN101EF52A
PX-PGS101E57G-L	LQFP080-P-1414A	MN101EF57G
PX-PGS101E92G-M	LQFP100-P-1414C	MN101EF92
PX-PGS101EA5A-Y	SSOP032-P-0300B	MN101EFA0A/A5A
PX-PGS101EA6A-7	QFP044-P-1010F	MN101EFA1A/A6A
PX-PGS101EA7D-U	TQFP064-P-1010D	MN101EFA2D/A7D
PX-PGS101EA8D-T	TQFP080-P-1212D	MN101EFA3D/A8D
PX-PGS103SJ9D-7	QFP044-P-1010F	MN103SFJ9D

AMEYA360

Components Supply Platform

Authorized Distribution Brand :



Website :

Welcome to visit www.ameya360.com

Contact Us :

➤ Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd
Minhang District, Shanghai , China

➤ Sales :

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

➤ Customer Service :

Email service@ameya360.com

➤ Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com