




WiFi2 click™


1. Introduction

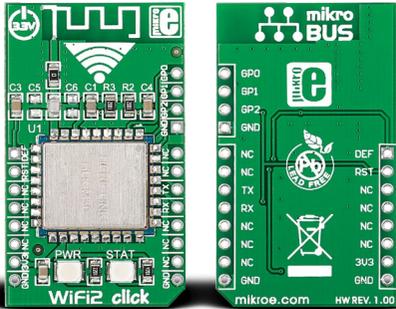

WiFi2 click™ is an affordable solution for adding WiFi functionality to your design. The board carries the **HLK-M30 WiFi module**, based on the universal serial interface network standard, with a built-in TCP/IP protocol stack. WiFi2 click™ is simple to use and is especially convenient for IoT applications. It communicates with the target board microcontroller through **mikroBUS™** UART (TX, RX) RST, and AN lines. It uses a 3.3V power supply.


2. Soldering the headers

Before using your click™ board, make sure to solder 1x8 male headers to both left and right side of the board. Two 1x8 male headers are included with the board in the package.

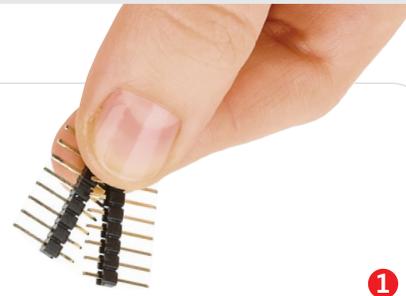


1

2

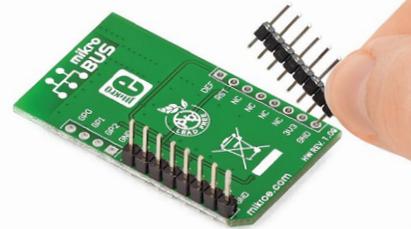


Turn the board upside down so that the bottom side is facing you upwards. Place shorter pins of the header into the appropriate soldering pads.

3

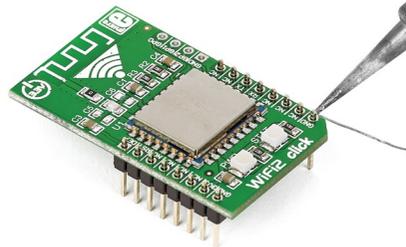

Turn the board upward again. Make sure to align the headers so that they are perpendicular to the board, then solder the pins carefully.

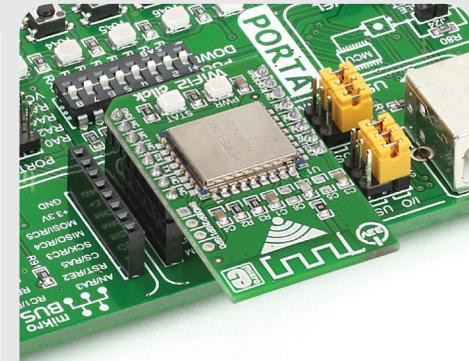


4. Essential features

WiFi2 click™ can be set up both as a **TCP/IP client or server**. You can configure it with either a static or dynamic IP address. Use the mikroBUS™ AN line (DEF on this click) to reset WiFi2 to default factory settings if needed. WiFi2 click™ supports standard security authentication systems (WEP64/WEP128/TKIP/ AES, WEP/WPA-PSK/WPA2-PSK); as well as multiple network protocols (TCP/UDP/DHCP/DNS). All these features make WiFi2 click ideal for home automation applications, remote controls, telemetry and so on.

3. Plugging the board in

Once you have soldered the headers your board is ready to be placed into the desired mikroBUS™ socket. Make sure to align the cut in the lower-right part of the board with the markings on the silkscreen at the mikroBUS™ socket. If all the pins are aligned correctly, push the board all the way into the socket.

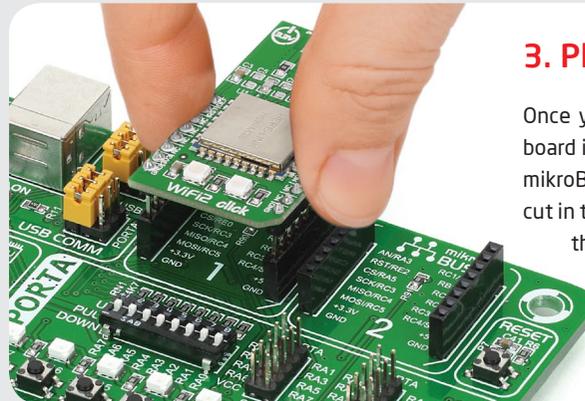

click™
BOARD
www.mikroe.com



WiFi2 click manual
ver. 1.00



0100000070277

AMEYA360

Components Supply Platform

Authorized Distribution Brand :



Website :

Welcome to visit www.ameya360.com

Contact Us :

➤ Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd
Minhang District, Shanghai , China

➤ Sales :

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype [ameyasales1](#) [ameyasales2](#)

➤ Customer Service :

Email service@ameya360.com

➤ Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com