

# AVR1907: Xplain Hardware User's Guide

## Features


- ATxmega128A1 microcontroller
- External Memory
  - 8MB SDRAM
  - 8MB Serial Data Flash
- AT90USB1287
  - Communication gateway
  - Programmer for Atmel® AVR® XMEGA™
- Analog Input (to ADC)
  - Temperature sensor
  - Potentiometer
- Analog Output (from DAC)
  - Mono speaker via audio amplifier
- Digital IO
  - UART communication through USB gateway
  - 8 micro switch buttons
  - 8 LEDs
  - 8 spare analog pins
  - 8 spare digital pins

## 1 Introduction

The Xplain evaluation kit is a hardware platform to evaluate the ATxmega128A1.

The kit offers a larger range of features that enables the XMEGA user to get started using the XMEGA's peripherals right away and to get an understanding of how to integrate the XMEGA in their own design.

**Figure 1-1.** Xplain evaluation kit.

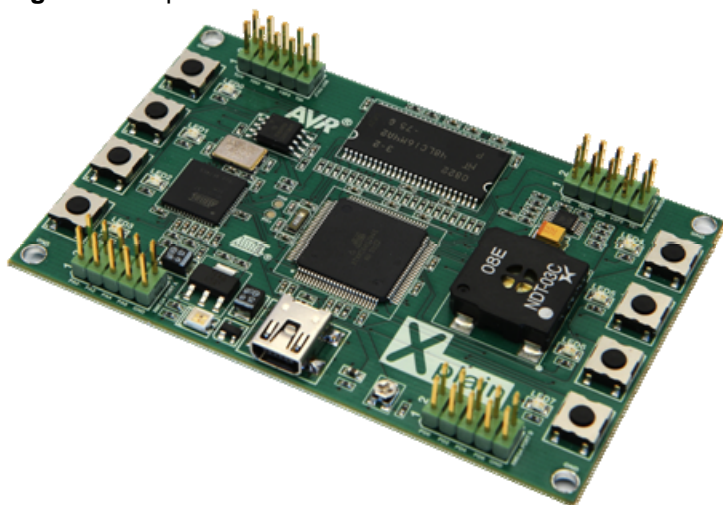

8-bit **AVR**<sup>®</sup>  
Microcontrollers

Application Note

Preliminary

Rev. 8203D-AVR-04/10



## 2 Related Items

**FLIP** (Flexible In-System Programmer)

[http://www.atmel.com/dyn/products/tools\\_card.asp?tool\\_id=3886](http://www.atmel.com/dyn/products/tools_card.asp?tool_id=3886)

**AVR Studio 4** (Atmel's free IDE)

[http://www.atmel.com/dyn/products/tools\\_card.asp?tool\\_id=2725](http://www.atmel.com/dyn/products/tools_card.asp?tool_id=2725)

**JTAGICE mkII** (On-chip programming and debugging tool)

[http://www.atmel.com/dyn/products/tools\\_card.asp?tool\\_id=3353](http://www.atmel.com/dyn/products/tools_card.asp?tool_id=3353)

**AVR ONE!** (On-chip programming and debugging tool)


[http://www.atmel.com/dyn/products/tools\\_card.asp?tool\\_id=4279](http://www.atmel.com/dyn/products/tools_card.asp?tool_id=4279)

## 3 General information

This document targets the Xplain evaluation kit revision 3 and parts of the document may therefore be inconsistent with earlier revisions of the product. For earlier revision please refer to the schematics, which is this only documentation available for these revision.

The Xplain kit is intended to demonstrate the ATxmega128A1, and the hardware that relates to the AT90USB1287 is therefore not covered in this document.

**Figure 3-1.** Overview of the Xplain kit.

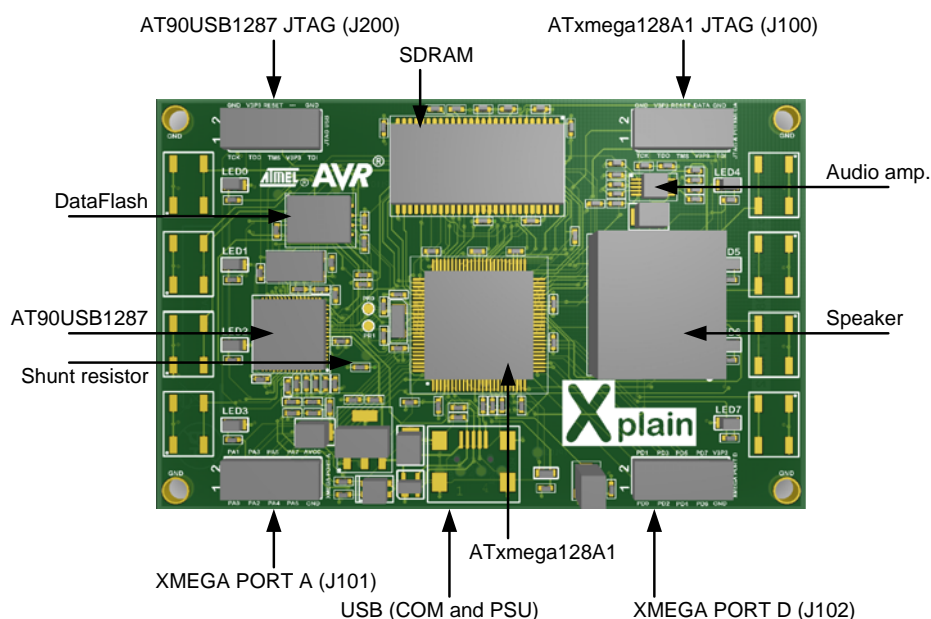

### 3.1 Preprogrammed firmware

The Xplain kit comes with both the ATxmega128A1 and the AT90USB1287 preprogrammed.

The preprogrammed firmware in the XMEGA plays different sounds when the micro switch buttons are pushed.

The preprogrammed AT90USB1287 firmware offers features such as a bootloader for self-programming and a UART-to-USB gateway.

## **3.2 Power supply**

The kit is powered from USB which leaves two options to power it: Either connects the kit to a PC through an USB cable, or to a 5V USB power supply (AC/DC adapter).

## **3.3 Measuring the XMEGA power consumption**

As part of an evaluation of the ATxmega128A1 it can be of interest to measure its power consumption. The R105 resistor (0 Ohm) is the only connection point between the XMEGA power plane (the V\_XM net) and common 3.3V supply of the board (the V3P3 net). By replacing the R105 shunt resistor with a higher value resistor it is possible to determine the current consumption of the ATxmega128A1.

## **3.4 Programming the XMEGA through the USB gateway**

Programming of the ATxmega128A1 through the USB is not supported in the preliminary release.

## **3.5 Communication through UART-to-USB gateway**

The XMEGA's UARTC0 is connected to a software UART on the AT90USB1287. The AT90USB1287 UART is communicating at 9600 baud, using one start bit, eight data bits, one stop bit and no parity.

When the AT90USB1287 device is enumerated (connected to a PC) the data transmitted from the XMEGA is passed on to a (virtual) COM port. This means that it is possible to use a terminal program to receive the transmitted data on a PC. Similarly data transmitted from the PC COM port is passed on to the XMEGA UART through the gateway.

If the USB device is not enumerated, e.g. powering the kit from an USB supply adapter, the AT90USB1287 device's UART will operate in loop back mode (echo back everything it receives).

# **4 Connectors**

The Xplain kit has four 10-pin 100mill headers. Two are used for programming the ATxmega128A1 and AT90USB1287, and two are to access spare analog and digital pins on the XMEGA (expansion headers).

## **4.1 Programming headers**

The XMEGA can be programmed and debugged by connecting an external programming/debugging tool to the "JTAG & PDI XMEGA" pin header (J100). The pin header is having a standard JTAG programmer pinout (refer to online help in AVR Studio®), and tools like the JTAGICE mkII or the AVR ONE! can thus be connected directly to the header. If it is desired to use PDI programming/debugging an adapter must be used.



**Table 4-1.** XMEGA programming and debugging interface – JTAG and PDI.

J100 pin	JTAG <sup>(1)</sup>	PDI <sup>(2)</sup>
J100-1	TCK	-
J100-2	GND	GND <sup>(3)</sup>
J100-3	TDO	-
J100-4	VCC	VCC <sup>(3)</sup>
J100-5	TMS	-
J100-6	nSRST	CLK
J100-7	VCC	VCC <sup>(3)</sup>
J100-8	-	DATA
J100-9	TDI	-
J100-10	GND	GND <sup>(3)</sup>

- Notes:
1. Standard pin-out for JTAGICE mkII and other Atmel programming tools.
  2. Requires adapter to connect a JTAGICE mkII (refer to AVR Studio help).
  3. It is only required to connect on VCC/GND pin.

The AT90USB1287 can be programmed through its bootloader. The bootloader is evoked by shorting the (PORTF4) pin to GND before applying power to the board. This can be done by shorting pin 1 and 2 on the “JTAG USB” pin header (J200) with a jumper. Programming is performed through the “FLIP” plug-in in AVR Studio (can be started as a stand-alone application also).

*FLIP (FLexible In-system Programmer) is a free Atmel's proprietary software that runs Windows® 9x/Me/NT/2000/XP and Linux x86. FLIP supports in-system programming of Flash devices through RS232, USB or CAN.*

Alternatively, the AT90USB1287 can be also programmed by connecting a programming tool, such as a JTAGICE mkII, to the “JTAG USB” pin header (J200).

**Note that it is not recommended to program the AT90USB1287 using a programming tool as this will erase the bootloader.**

## 4.2 IO expansion headers

The XMEGA's analog PORTA is available on the “XMEGA PORT A” pin header (J101). This allows the user to connect external signals to the ADC, DAC and Analog Comparators on PORTA.

The XMEGA's digital PORTD is available on the “XMEGA PORT D” pin header (J102). This port features general purpose IO and various communication modules (USART, SPI and TWI).

Note that the communication modules on PORTD can be interconnected to test out various functions and features: The USART can loop back communication with a jumper, or communicate between the two UARTs on the PORT. The native SPI and the USART in SPI master mode can be connected, and the TWI module can be enabled in both master and slave mode at the same time to get loop back behavior (pull-up resistors required).

## **5 Attached Memories**

The Xplain kit demonstrates how to use the External Bus Interface (EBI) module to interface a 4-bit SDRAM. An 8MB SDRAM (16M x 4) is attached in 3-port EBI mode (PORTH, PORTK and PORTJ).

An 8MB serial Dataflash® is connected to the UARTC1 which can operate in SPI master mode to interface the dataflash.

## **6 Miscellaneous IO**

### **6.1 Micro switch buttons**

Eight micro switch buttons are connected to the XMEGA's PORTF. Internal pull-ups should be enabled to detect when the buttons are pushed as they short the respective line to GND.

### **6.2 LEDs**

Eight LEDs are connected to the XMEGA's PORTE. The LEDs are active low – and thus lights up when the respective lines are drawn low by the XMEGA.

### **6.3 Analog IO**

An NTC and an adjustable resistor divider (potentiometer) are connected to PORTB on PINB0 and PINB1 respectively. These analog references can be used as input to the ADC.

An audio amplifier (and mono speaker) is connected to PORTB on PINB2. This pin is connected to the XMEGA's DAC and thus offers a way to generate sound.

## **7 Available code examples and drivers**

A Getting-Started training for the Xplain kit can be downloaded from the Atmel web site. This training is a general introduction to XMEGA peripherals.

Further information and drivers for XMEGA can be downloaded as application notes, also distributed from Atmel's web site.



## 8 Revision history

Different revisions of the Xplain kit is released, these revisions are not fully identical it can therefore be relevant to identify the board used.

### 8.1 Revision 1

Revision 1 of the Xplain kit can be identified by **not** having a bar-code sticker on the back side.

**Table 8-1.** Xplain revision 1 – known issues.

Issue	Cause	Solution
Speaker is noisy during programming and debugging of the ATxmega128A1 when using JTAG.	Problem due to cross-talk contaminating the audio amplifier input.	Use the PDI interface or remove resistor R305.
AT90USB1287 cannot connect to FLIP programming software to reprogram the AT90USB1287 application section of the flash.	No bootloader programmed in the AT90USB1287	Upgrade to the AT90USB1287 with the latest firmware using an external programming tool such as the JTAG ICE mkII.

### 8.2 Revision 2

Revision 2 of the Xplain kit can be identified by a bar-code sticker on the back side with the following product ID: A09-0560/2.

**Table 8-2.** Difference between Xplain revision 1 and revision 2.

Difference	Comment
Dataflash changed to 45DB642D-CNU	The 45DB642D-CNU is replacing the 45DB041D-SU.
AT90USB1287 bootloader	Bootloader is entered by shorting pin 1 and 2 on the J200.
R305 removed	To eliminate noise on speaker during JTAG programming and debugging of the ATxmega128A1.
Two jumpers added – default placed on the J101 and J102.	For convenience of the end-user.

### 8.3 Revision 3

Revision 3 of the Xplain kit can be identified by a bar-code sticker on the back side with the following product ID: A09-0560/3.

**Table 8-3.** Difference between Xplain revision 2 and revision 3.

Difference	Comment
Series resistors on SDRAM lines removed	Not required – and therefore removed.
Shunt resistor (R105) added	This is a zero ohm resistor that enables measurement of the ATxmega128A1 current consumption.
Audio amplifier is default off (R300 is pulling down the SD line of the U300).	Reduce power consumption and reduce faint noise from speaker.

## 8.4 Revision 4

Revision 4 of the Xplain kit can be identified by a bar-code sticker on the back side with the following product ID: A09-0560/4.

**Table 8-4.** Difference between Xplain revision 3 and revision 4.

Difference	Comment
Replaced resistor R400 with a 0 ohm resistor.	Reduce the noise on the power line but disable the Xplain board current measurement.



## Headquarters

**Atmel Corporation**  
2325 Orchard Parkway  
San Jose, CA 95131  
USA  
Tel: 1(408) 441-0311  
Fax: 1(408) 487-2600

## International

**Atmel Asia**  
Unit 1-5 & 16, 19/F  
BEA Tower, Millennium City 5  
418 Kwun Tong Road  
Kwun Tong, Kowloon  
Hong Kong  
Tel: (852) 2245-6100  
Fax: (852) 2722-1369

**Atmel Europe**  
Le Krebs  
8, Rue Jean-Pierre Timbaud  
BP 309  
78054 Saint-Quentin-en-  
Yvelines Cedex  
France  
Tel: (33) 1-30-60-70-00  
Fax: (33) 1-30-60-71-11

**Atmel Japan**  
9F, Tonetsu Shinkawa Bldg.  
1-24-8 Shinkawa  
Chuo-ku, Tokyo 104-0033  
Japan  
Tel: (81) 3-3523-3551  
Fax: (81) 3-3523-7581

## Product Contact

**Web Site**  
<http://www.atmel.com/>

**Technical Support**  
[avr@atmel.com](mailto:avr@atmel.com)

**Sales Contact**  
[www.atmel.com/contacts](http://www.atmel.com/contacts)

**Literature Request**  
[www.atmel.com/literature](http://www.atmel.com/literature)

**Disclaimer:** The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. **EXCEPT AS SET FORTH IN ATMEL'S TERMS AND CONDITIONS OF SALE LOCATED ON ATMEL'S WEB SITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.** Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and product descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel's products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

© 2010 Atmel Corporation. All rights reserved. Atmel®, Atmel logo and combinations thereof, AVR®, AVR® logo, AVR Studio®, DataFlash® and others, are the registered trademarks, XMEGA™ and others are trademarks of Atmel Corporation or its subsidiaries. Windows® and others are registered trademarks or trademarks of Microsoft Corporation in the US and/or other countries. Other terms and product names may be trademarks of others.



# AMEYA360

## Components Supply Platform

### Authorized Distribution Brand :



### Website :

Welcome to visit [www.ameya360.com](http://www.ameya360.com)

### Contact Us :

#### ➤ Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd  
Minhang District, Shanghai , China

#### ➤ Sales :

Direct +86 (21) 6401-6692

Email [amall@ameya360.com](mailto:amall@ameya360.com)

QQ 800077892

Skype ameyasales1 ameyasales2

#### ➤ Customer Service :

Email [service@ameya360.com](mailto:service@ameya360.com)

#### ➤ Partnership :

Tel +86 (21) 64016692-8333

Email [mkt@ameya360.com](mailto:mkt@ameya360.com)