


# Rheostat and Tap Switch Hardware

## Knobs, Dials, Mounting Fasteners

### RHEOSTAT TANDEM COUPLING KITS

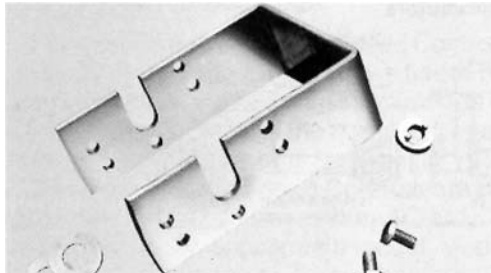


Ohmite coupling kits permit tandem mounting of two rheostat units. A coupling fastens to the shaft of the back unit; projections on the coupling engage the recesses in the driving hub of the front unit.

Each kit consists of a steel "U" frame, a coupling with set screw, mica washer, allen wrench and instructions.

| Part No. | Front mount models | Rear mount models | Max. panel thickness |
|----------|--------------------|-------------------|----------------------|
| ✓ 6532   | H, J               | H, J, G, K, L     | 5/32"                |
| ✓ 6533   | G, K, L            | H, J, G, K, L     | 1/8"                 |
| ✧ 6591   | E                  | E                 | 1/16"                |

### KNOBS

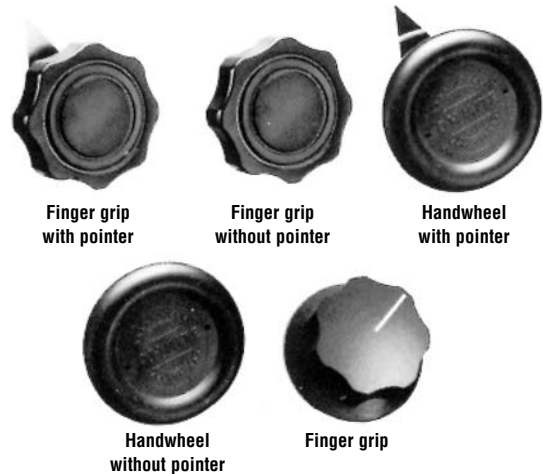

Any knob can be used with any rheostat and tap switch model which has the corresponding shaft diameter. Knobs are fastened to shafts with slotted set screws.

| Slotted set screw | Hex socket set socket | Description                 | Knob dia. | Hole dia. | Fits model    |
|-------------------|-----------------------|-----------------------------|-----------|-----------|---------------|
| ✧ 5102            | —                     | Bar knob, 2 1/4" long       | —         | 1/4"      | H, J, G, K, L |
| ✓ 5103            | ✓ 5103A               | Bar knob, 1 1/4" long       | —         | 1/4"      | H, J, G, K, L |
| ✓ 5104            | ✓ 5104A               | Handwheel with pointer      | 3 1/4"    | 3/8"      | P, N, R, U    |
| ✓ 5105            | —                     | Handwheel without pointer   | 3 1/4"    | 3/8"      | P, N, R, U    |
| ✓ 5106            | ✧ 5106A               | Handwheel with pointer      | 3 1/4"    | 1/4"      | H, J, G, K, L |
| ✧ 5107            | —                     | Handwheel without pointer   | 3 1/4"    | 1/4"      | H, J, G, K, L |
| ✓ 5109            | ✓ 5109A               | Finger-grip with pointer    | 1 5/8"    | 1/4"      | H, J, G, K, L |
| ✓ 5110            | ✧ 5110A               | Finger-grip without pointer | 1 5/8"    | 1/4"      | H, J, G, K, L |
| ✓ 5111            | ✓ 5111A               | Finger-grip with pointer    | 2 3/8"    | 1/4"      | H, J, G, K, L |
| ✧ 5112            | ✧ 5112A               | Finger-grip without pointer | 2 3/8"    | 1/4"      | H, J, G, K, L |
| ✓ 5150            | ✧ 5150A               | Finger-grip                 | 1 1/2"    | 1/4"      | H, J, G, K, L |
| ✓ 5151            | —                     | Finger-grip                 | 3/4"      | 1/8"      | C, E          |
| —                 | ✓ 5152A               | Like 5104 (shorter pointer) | 3 1/4"    | 1/4"      | H, J, G, K, L |

### RHEOSTAT REPAIR KITS



Electrical contact replacement kit. Kit includes contact/slip ring assemblies (for round and ribbon wire rheostats), copper graphite washer, spring arm and hub. Instructions included.

| Part No. | Rheostat model |
|----------|----------------|
| ✓ 7070   | P              |
| ✓ 7071   | N              |
| ✓ 7072   | R              |
| ✓ 7074   | U              |

### EXTRA MOUNTING HARDWARE

Kit contains 25 each, nuts and lock washers for panel mounting units.


| Part No. | For model                    |
|----------|------------------------------|
| ✓ 7090   | E                            |
| ✓ 7091   | H, J, G, K, L, 111, 212, 711 |

✓ = Standard values

✧ = Non-standard values subject to minimum handling charge per item

### DIALS

Handsomely finished, black-enameled, aluminum dials for Ohmite rheostats and tap switches. Figures and lines are etched on a black background for contrast and ease of readability. On rheostat dials, divisions indicating approximate percentage of rheostat resistance in circuit are marked from 0 to 100. On tap switch dials, Number of dial positions are identical with number of switch positions.

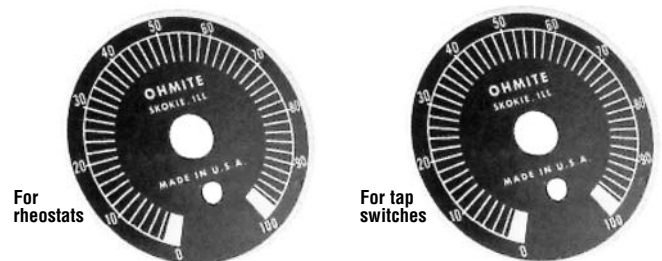

| Part No. | For model                       | For knob         | Dial dia. |
|----------|---------------------------------|------------------|-----------|
| ✓ 5007   | C, E                            | 5151             | 1 1/4"    |
| ✓ 5000   | H, J, G, K, L                   | 5150, 5116, 5103 | 2 3/16"   |
| ✓ 5001   | P, N, R, U                      | 5104, 5106       | 5 1/2"    |
| ✓ 5002-* | 111, 212 (single), 312 (single) | 5109, 5116, 5150 | 2 3/4"    |
| ✓ 5003-* | 212 (tandem), 312 (tandem), 412 | 5111, 5152A      | 3 3/4"    |
| ✓ 5004-* | 608                             | 5104             | 5 1/2"    |

\* Specify number of positions as suffix.

# AMEYA360

Components Supply Platform

Authorized Distribution Brand :



Website :

Welcome to visit [www.ameya360.com](http://www.ameya360.com)

Contact Us :

➤ Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd  
Minhang District, Shanghai , China

➤ Sales :

Direct      +86 (21) 6401-6692  
  
Email        amall@ameya360.com  
  
QQ          800077892  
  
Skype        ameyasales1 ameyasales2

➤ Customer Service :

Email        service@ameya360.com

➤ Partnership :

Tel          +86 (21) 64016692-8333  
  
Email        mkt@ameya360.com