

OLIMEXINO-STM32 development board User's manual



All boards manufactured by Olimex are ROHS compliant

Document revision G, September 2016
Designed by OLIMEX Ltd, 2012

INTRODUCTION TO DUINO:

Arduino is an open-source electronics prototyping platform, designed to make the process of using electronics in multidisciplinary projects easily accessible. The hardware consists of a simple open hardware design for the Arduino board with an Atmel AVR processor and on-board I/O support. The software consists of a standard programming language and the boot loader that runs on the board.

Arduino hardware is programmed using a Wiring-based language (syntax + libraries), similar to C++ with some simplifications and modifications, and a Processing-based Integrated Development Environment (IDE). The project began in Ivrea, Italy in 2005 aiming to make a device for controlling student-built interaction design projects less expensively than other prototyping systems available at the time. As of February 2010 more than 120,000 Arduino boards had been shipped. Founders Massimo Banzi and David Cuartielles named the project after a local bar named "Arduino". The name is an Italian masculine first name, meaning "strong friend". The English pronunciation is "Hardwin", a namesake of Arduino of Ivrea.

More information could be found at the creators web page <http://arduino.cc/> and in the Arduino Wiki <http://en.wikipedia.org/wiki/Arduino>

To make the story short – Arduino is easy for beginners who lack Electronics knowledge, but also does not restrict professionals as they can program it in C++ or mix of Arduino/C++ language. There are thousands of projects which makes it easy to startup as there is barely no field where Arduino enthusiasts to have not been already.

Arduino has inspired two other major derivatives – MAPLE and PINGUINO. Based on 8-bit AVR technology the computational power of Arduino boards is modest, this is why a team from MIT developed the MAPLE project which is based on ARM7 STM32F103RBT6 microcontroller. The board has same friendly IDE as Arduino and offers the same capabilities as hardware and software but runs the Arduino code much faster. Unfortunately, by year 2016, the MAPLE project is now no longer supported and updated. The remaining resources of the Maple project can be found at <http://leaflabs.com>

In parallel with Arduino another project was started called PINGUINO. This project chose its first implementation to be with PIC microcontrollers, as AVR's were hard to find in some parts of the world like South America so it is likely to see lot of PINGUINO developers are from that part of the world. PINGUINO project founders decided to go with Python instead Java for processing language. For the moment PINGUINO is much more flexible than Arduino as it is not limited to 8bit microcontrollers. Currently the IDE, which has GCC in background, can support 8-bit PIC microcontrollers, 32bit PIC32 (MIPS) microcontrollers and ARM7/CORTEXM3 microcontrollers which makes PINGUINO very flexible because once you make your project you can migrate easily through different hardware platforms and not being bound to a single microcontroller manufacturer. The PINGUINO project can be found at: <http://www.pinguino.cc>.

BOARD FEATURES:

We entered the Arduino/MAPLE field 5 years after the design was introduced, and this allowed us to see and resolve some of (what we consider) errors made by the Arduino inventors.

We had the possibility to read current customer feedback and to implement what they wanted to see in the original Arduino.

1. Original Arduino/MAPLE uses linear power supply, this limits the input voltage range. We designed the power supply to accept power from 9 to 30V DC thus making it possible to take virtually any power supply adapter on the market, also enable application which are in industrial power supply 24VDC.
2. We carefully selected all components to work reliable in INDUSTIRAL temperature range -25+85C so the board can be used in INDUSTIRAL applications while the original design is to Commercial 0 – 70C operating temperature.
3. The original Arduino/MAPLE design is not very reliable for portable applications as consumes it too much power with the linear voltage regulators, we put ULTRA LOW POWER voltage regulators and the consumption is only few microampers, which enables handheld and battery powered applications.
4. We add Li-Ion rechargeable battery power supply option with BUILD-IN on board charger, so when you attach battery it is automatically charged and kept in this state until the other power source (USB or external adapter) is removed and it AUTOMATICALLY will power the board – no jumpers, no switches!
5. Our board has UEXT connector which allows many existing modules like RF, ZIGBEE, GSM, GPS to be connected.
6. Our board has micro SD card
7. Our board has CAN driver on board
8. Our design allows RTC – Real Time Clock.
9. We made our design noise immune.
10. We use separate voltage regulator for the Analog part, which allows the ADC to be read correctly without the digital noise pickup.
11. The LEDs and the BUTTONs are on the edge of the board so there is easy access even if the boards have shields on them.
12. All components are LOWER than the connectors, so the shields do not interfere with them.
13. mini USB connector is used which is common and used in most cell phones, so you do not have to buy other cables
14. Original Arduino design had a flaw and the connectors were not spaced at 0.1" thus making breadboarding board use impossible, to keep the compatibility we have the same spacing but we added next to this connector on 0.1" which customer can use with perforated boards.
15. All signals on the connectors are printed on top and on bottom of the board, so when you check with probe you know exactly which port you are measuring.
16. 4 mount holes make board attachment easier

ELECTROSTATIC WARNING:

The OLIMEXINO-STM32 board is shipped in protective anti-static packaging. The board must not be subject to high electrostatic potentials. General practice for working with static sensitive devices should be applied when working with this board.

BOARD USE REQUIREMENTS:

HARDWARE REQUIREMENTS:

- **Cables:** You'll need a USB cable with mini USB connector for connecting the board to a personal computer and MAPLE IDE. The board also gets powered via this cable.

- **ARM programming tool (optional but recommended):** STM32-compatible programmer/debugger is recommended:

1. if you wish to use a general-purpose approach of programming (not bootloader and USB method)
2. if you wish to change the bootloader with MPIDE bootloader
3. if you managed to overwrite the bootloader program and wish to recover the device

You can use any STM32F103 compatible programmer or debugger just notice that the board has a 10-pin mini JTAG/SWD connector (0.05" step) – make sure that you have a suitable adapter. You can use ARM-JTAG-20-10 adapter for this task.

Our [ARM-USB-OCD-H](#), [ARM-USB-TINY-H](#), [ARM-JTAG-COOCOX](#) tools are capable of programming the board (remember the adapter).

SOFTWARE REQUIREMENTS:

- Environment (recommended)

By default the board comes with MAPLE IDE bootloader. It is recommended to use MAPLE IDE initially.

- Environment (recommended)

Since the MAPLE project is now completely abandoned it is recommended to either use an alternative (MPIDE; Espruino IDE; stm32duino; etc) or use general-purpose method of programming.

It is important to notice that the STM32 chip has internal bootloader which can be used to change any code without JTAG debugger. Please find instructions on how to use "STM32 Flash Load Demonstrator" in the wiki article: https://www.olimex.com/wiki/How_to_use_OLIMEXINO-STM32_with_Espruino_IDE

Note that usually the general-purpose require a programmer or debugger in order to interact with the board.

Serial wire debug (SWD)

3.3V

SWD

TMS/SWDIO

TCK/SWCLK

TDO/SWO

TDI

RESET

GP127SMT-02X05(PIN7-CUT)

R-T

TRST

USB_DEVICE

+5V

1N5819S/SS14

USB P

R1 15k

R2 22k

DISC

T1 DTA114YKA

3.3V

R5 1.5k

USBDM

R3 22k

R4 22k

USBDP

U5

MINI_USB93M01AER_CREAM

C7 100nF

C8 100nF

C9 100nF

C10 47pF

POWER_SUPPLY

9-30VDC

PWRJ

D1

YD-1136

NA

R16 0.47k

R17 0.47k

U2

MC33063ADR(S08)

VIN

SC

SE

TC

VSS

FB

L1

CLC0401 500k

D2

D3

1N4001

R18 1k

R19 330k

R20 1k

R21 1k

R22 1k

R23 1k

R24 1k

R25 1k

R26 1k

R27 1k

R28 1k

R29 1k

R30 1k

R31 1k

R32 1k

R33 1k

R34 1k

R35 1k

R36 1k

R37 1k

R38 1k

R39 1k

R40 1k

R41 1k

R42 1k

R43 1k

R44 1k

R45 1k

R46 1k

R47 1k

R48 1k

R49 1k

R50 1k

R51 1k

R52 1k

R53 1k

R54 1k

R55 1k

R56 1k

R57 1k

R58 1k

R59 1k

R60 1k

R61 1k

R62 1k

R63 1k

R64 1k

R65 1k

R66 1k

R67 1k

R68 1k

R69 1k

R70 1k

R71 1k

R72 1k

R73 1k

R74 1k

R75 1k

R76 1k

R77 1k

R78 1k

R79 1k

R80 1k

R81 1k

R82 1k

R83 1k

R84 1k

R85 1k

R86 1k

R87 1k

R88 1k

R89 1k

R90 1k

R91 1k

R92 1k

R93 1k

R94 1k

R95 1k

R96 1k

R97 1k

R98 1k

R99 1k

R100 1k

R101 1k

R102 1k

R103 1k

R104 1k

R105 1k

R106 1k

R107 1k

R108 1k

R109 1k

R110 1k

R111 1k

R112 1k

R113 1k

R114 1k

R115 1k

R116 1k

R117 1k

R118 1k

R119 1k

R120 1k

R121 1k

R122 1k

R123 1k

R124 1k

R125 1k

R126 1k

R127 1k

R128 1k

R129 1k

R130 1k

R131 1k

R132 1k

R133 1k

R134 1k

R135 1k

R136 1k

R137 1k

R138 1k

R139 1k

R140 1k

R141 1k

R142 1k

R143 1k

R144 1k

R145 1k

R146 1k

R147 1k

R148 1k

R149 1k

R150 1k

R151 1k

R152 1k

R153 1k

R154 1k

R155 1k

R156 1k

R157 1k

R158 1k

R159 1k

R160 1k

R161 1k

R162 1k

R163 1k

R164 1k

R165 1k

R166 1k

R167 1k

R168 1k

R169 1k

R170 1k

R171 1k

R172 1k

R173 1k

R174 1k

R175 1k

R176 1k

R177 1k

R178 1k

R179 1k

R180 1k

R181 1k

R182 1k

R183 1k

R184 1k

R185 1k

R186 1k

R187 1k

R188 1k

R189 1k

R190 1k

R191 1k

R192 1k

R193 1k

R194 1k

R195 1k

R196 1k

R197 1k

R198 1k

R199 1k

R200 1k

R201 1k

R202 1k

R203 1k

R204 1k

R205 1k

R206 1k

R207 1k

R208 1k

R209 1k

R210 1k

R211 1k

R212 1k

R213 1k

R214 1k

R215 1k

R216 1k

R217 1k

R218 1k

R219 1k

R220 1k

R221 1k

R222 1k

R223 1k

R224 1k

R225 1k

R226 1k

R227 1k

R228 1k

R229 1k

R230 1k

R231 1k

R232 1k

R233 1k

R234 1k

R235 1k

R236 1k

R237 1k

R238 1k

R239 1k

R240 1k

R241 1k

R242 1k

R243 1k

R244 1k

R245 1k

R246 1k

R247 1k

R248 1k

R249 1k

R250 1k

R251 1k

R252 1k

R253 1k

R254 1k

R255 1k

R256 1k

R257 1k

R258 1k

R259 1k

R260 1k

R261 1k

R262 1k

R263 1k

R264 1k

R265 1k

R266 1k

R267 1k

R268 1k

R269 1k

R270 1k

R271 1k

R272 1k

R273 1k

R274 1k

R275 1k

R276 1k

R277 1k

R278 1k

R279 1k

R280 1k

R281 1k

R282 1k

R283 1k

R284 1k

R285 1k

R286 1k

R287 1k

R288 1k

R289 1k

R290 1k

R291 1k

R292 1k

R293 1k

R294 1k

R295 1k

R296 1k

R297 1k

R298 1k

R299 1k

R300 1k

R301 1k

R302 1k

R303 1k



R304 1k

R305 1k

R

www.OLIMEX.com

BOARD LAYOUT:

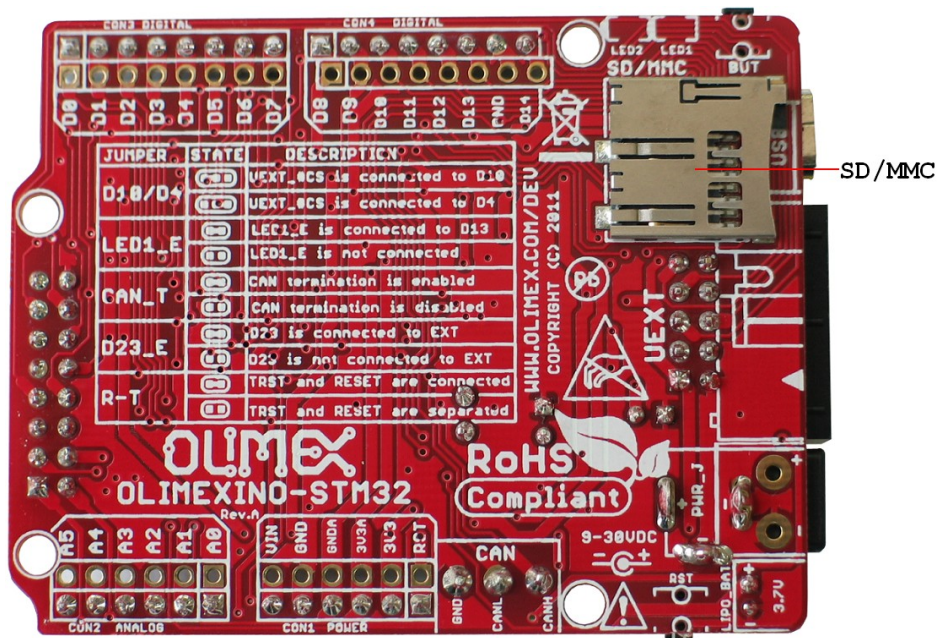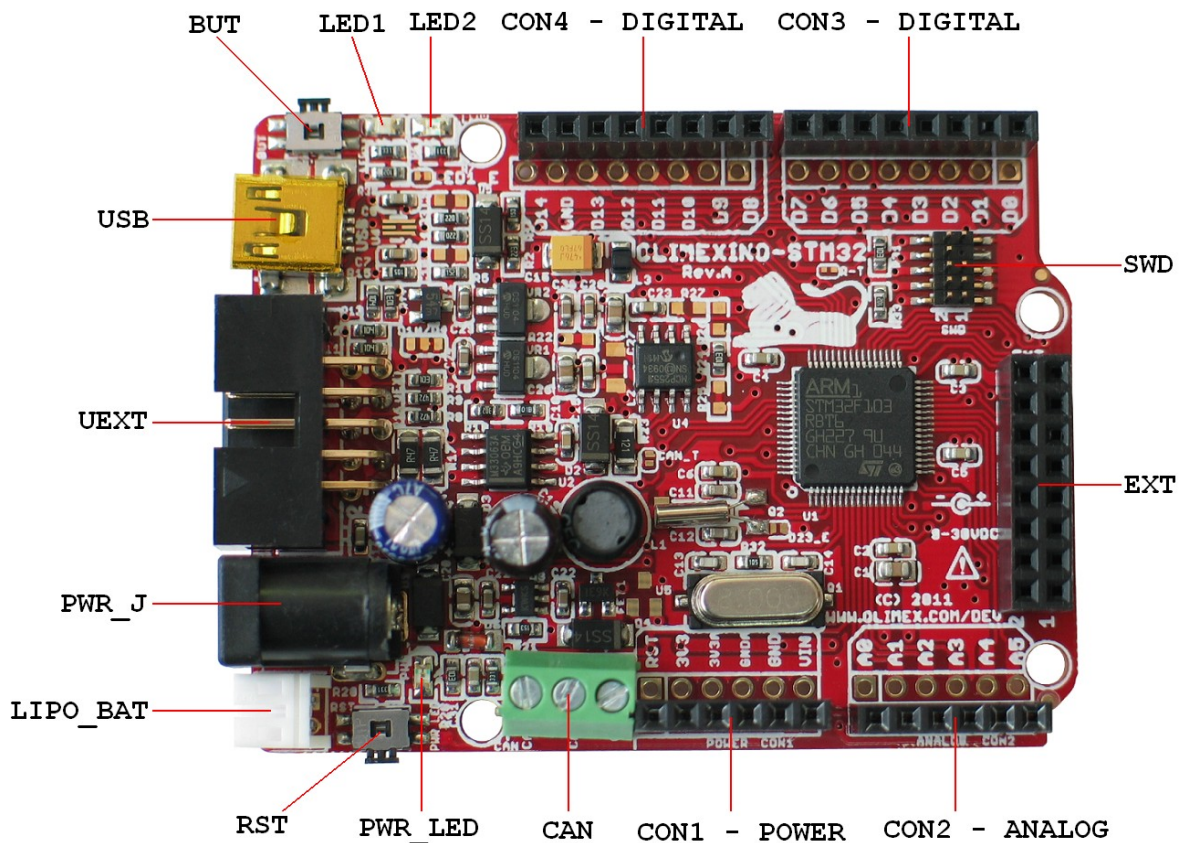

POWER SUPPLY CIRCUIT:

OLIMEXINO-STM32 can be powered from:

- external power supply (9-30) VDC.
- + 5V from USB
- 3.7 V Li-ion battery
- JTAG/SWD programmer/debugger

The programmed board power consumption is about 50 mA with all peripherals enabled.

RESET CIRCUIT:

OLIMEXINO-STM32 reset circuit includes D6 (1N4148), R28 (10kΩ), R29 (330Ω), C31 (100nF), STM32F103RBT6 pin 7 (NRST) and RESET button.

CLOCK CIRCUIT:

Quartz crystal **Q1** 8 MHz is connected to STM32F103RBT6 pin 5 (PD0/OSC_IN) and pin 6 (PD1/OSC_OUT).

Quartz crystal **Q2** 32.768 kHz is connected to STM32F103RBT6 pin 3 (PC14/OSC32_IN) and pin 4 (PC15/OSC32_OUT).

JUMPER DESCRIPTION:

Note that all jumpers on the board are SMD type. You will need to solder/unsolder/cut them in order to reconfigure them.

LED1_E



This jumper, when is closed, enables LED1.

Default state is closed.

LED2_E



This jumper, when is closed, enables LED2.

Default state is closed.

D23_E



This jumper, when is closed, connects STM32F103RBT6 pin (PC15/OSC32_OUT) – signal D23 to EXT pin 1, and when is opened, D23 is not connected to EXT.

Default state is opened.

R-T



This jumper, when is closed, connects TRST and RESET, and when is opened, TRST and RESET are separated.

Default state is opened.

CAN_T



This jumper, when is closed, CAN termination is enabled, and when is opened, CAN termination is disabled.

Default state is opened.

D10/D4



This jumper, when is in position D10, UEXT pin 10 (UEXT_#CS) is connected to STM32F103RBT6 pin 20 (PA4/SPI1_NSS/USART2_CK/ADC4) – signal D10, and when is in position D4, UEXT pin 10 (UEXT_#CS) is connected to STM32F103RBT6 pin 57 (PB5/I2C1_SMBAI/TIM3_CH2/SPI1_MOSI) – signal D4. Note that P10_E's effect also is affected by D10/D4.

Default state is in position D4.

P10_E:



When closed the board provides 3.3V to the UEXT_CCS – UEXT pin.

Default state is closed.

3V3A/5V



This is a new jumper introduced in hardware revision F of the board. It changes the voltage provided to pin #3 of the power shield connector from the default 5V to 3.3VA.

IMPORTANT! Hardware revision F introduced changes to the POWER connector of the Arduino shield. Now there are 5V available at pin #3 of the POWER connector by default!

It was 3.3V in older revisions. Be careful if you use 3.3V shields! You can revert the voltage of the pin back to 3.3V if you change the position of the 3V3A/5V jumper!

Default state is in position 5V.

INPUT/OUTPUT:

Status Led with name **LED1 (green)** connected via jumper LED1_E to STM32F103RBT6 pin 21 (PA5/SPI1_SCK/ADC5) – signal D13(SCK/LED1).

Status Led with name **LED2 (yellow)** connected to STM32F103RBT6 pin 15 (PA1/USART2_RTS/ADC1/TIM2_CH2) – signal D3(LED2).

Power-on LED (red) with name **PWR_LED** – this LED shows that the board is power supplied.

User button with name **BUT** connected to **STM32F103RBT6** pin 40 (PC9/TIM3_CH4) via R33 (1kΩ) and pin 60 (BOOT0) – signal BOOT0.


User button with name **RST** connected to STM32F103RBT6 pin 7 (NRST).

EXTERNAL CONNECTORS DESCRIPTION:

SWD:


Pin #	Signal Name
1	VCC
2	TMS/SWDIO
3	GND
4	TCK/SWCLK
5	GND
6	TDO/SWO
7	Cut off
8	TDI
9	GND
10	RESET

Note that pin 7 of SWD connector is cut off.

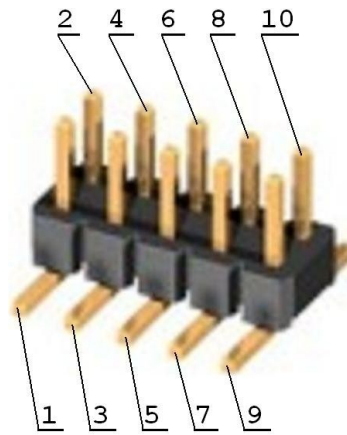


UEXT:

Pin #	Signal Name
1	VCC
2	GND
3	D7(TXD1)
4	D8(RXD1)
5	D29(SCL2)
6	D30(SDA2)
7	D12(MISO1)
8	D11(MOSI1)
9	D13(SCK/LED1)D13(SCK1/LED1)
10	UEXT_#CS

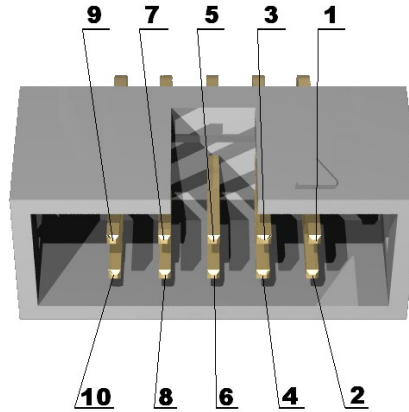


PWR JACK:

Pin #	Signal Name
1	Power input
2	GND

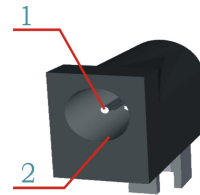


CON1 – POWER:

Pin #	Signal Name
1	RESET
2	3.3V OUTPUT
3	5V OUTPUT (3.3VA if you modify jumper 3V3A/5V)
4	GND
5	GND
6	VIN

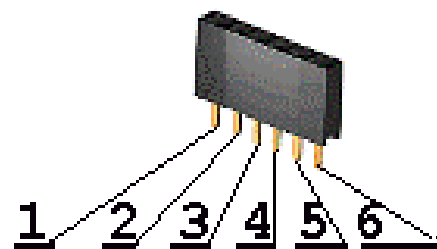


CON2 – ANALOG:

Pin #	Signal Name
1	D15(A0)
2	D16(A1)
3	D17(A2)
4	D18(A3)
5	D19(A4)
6	D20(A5)

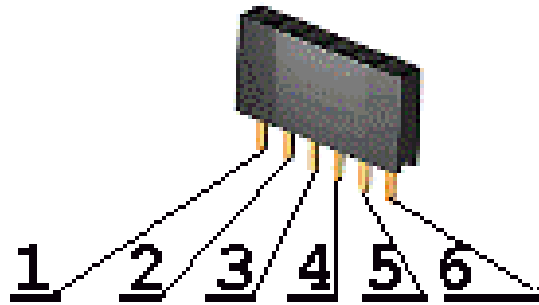


CON3 – DIGITAL:

Pin #	Signal Name
1	D0(RXD2)
2	D1(TXD2)
3	D2
4	D3(LED2)
5	D4
6	D5
7	D6
8	D7(TXD1)

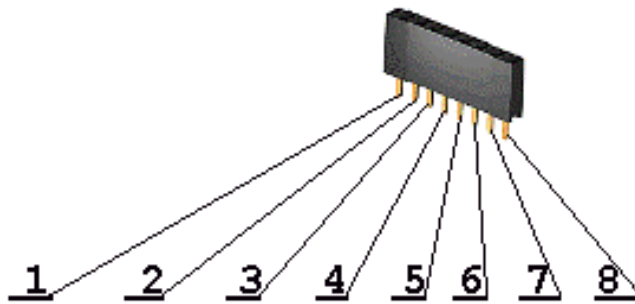


CON4 – DIGITAL:

Pin #	Signal Name
1	D8(RXD1)
2	D9
3	D10(#SS1)
4	D11(MOSI1)
5	D12(MISO1)
6	D13(SCK/LED1)
7	GND
8	D14(CANRX)

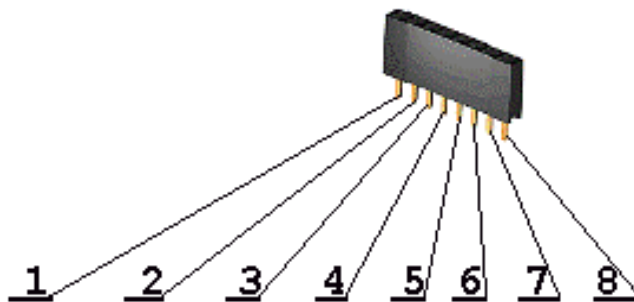


LI BAT:

Pin #	Signal Name
1	VBAT
2	GND

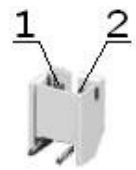


USB:

Pin #	Signal Name
1	+5V_USB
2	D -
3	D +
4	Not connected
5	GND

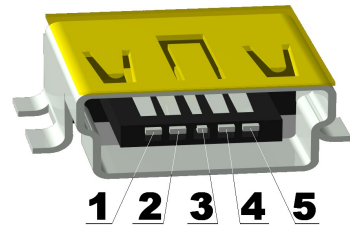


SD/MMC:

Pin #	Signal Name
1	MCIDAT2
2	D25(MMC_CS)
3	D34(MOSI2)
4	MMC_PWR
5	D32(SCK2)
6	GND
7	D33(MISO2)
8	MCIDAT1
9	Not connected
10	Not connected
11	Not connected
12	Not connected

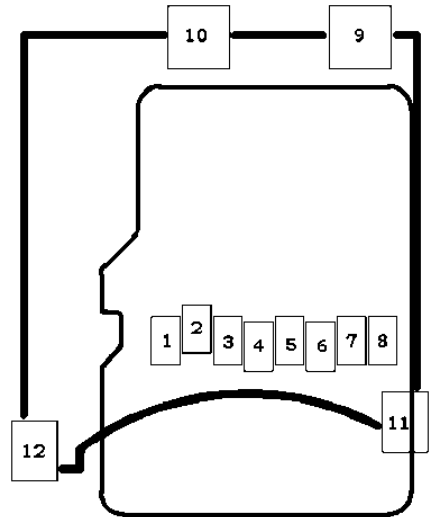

EXT:

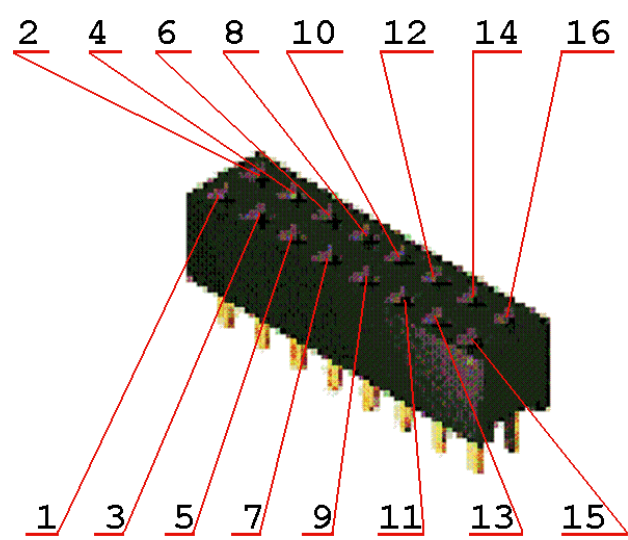

Pin #	Signal Name	Pin #	Signal Name
1	D23_EXT	2	D24(CANTX)
3	D25(MMC_CS)	4	D26
5	D27	6	D28
7	D29(SCL2)	8	D30(SDA2)
9	D31(#SS2)	10	D32(SCK2)
11	D33(MISO2)	12	D34(MOSI2)
13	D35	14	D36
15	D37	16	GND

CAN:

Pin #	Signal Name
1	GND
2	CANL
3	CANH



[illegible]

AVAILABLE DEMO SOFTWARE:

The board comes with a simple program on-board. To get more projects, examples and ready made libraries please visit the OLIMEXINO-STM32's page:
<https://www.olimex.com/Products/Duino/STM32/OLIMEXINO-STM32/>

ORDER CODE:

OLIMEXINO-STM32 – assembled and tested board

How to order?

You can order directly from our web-shop or from any of our distributors.
Check our web <https://www.olimex.com> for more info.

Board revision history:

Revision	Notable Changes
A	<ul style="list-style-type: none">- C6 (100n/0603) is changed to 4.7uF/0603.
B	<ul style="list-style-type: none">- Removed the label "<c> 2011".- Logos added: Open Hardware, Designed by OLIMEX and Made in Bulgaria, 2011 logos- Added divider which includes R34, R35 and C32 with aim to measure the battery.- All tracks which were placed close to board's edges were moved as far as possible away from them.- Some changes in the values of some components were made
C	<ul style="list-style-type: none">- Added closed by default SMD jumpers on LED2 and R10(UEXT_CS)lines- The table with the jumper description is now updated- Some logos and print lines have been re-arranged
D	<ul style="list-style-type: none">- Added again the PWR JACK connector for the external supply in the board design and schematic
E	<ul style="list-style-type: none">- R18 is changed from 3k/1% to 3.01k/1%- C15(tantalum 47uF/6.3V) is removed and replaced by 2 (two) 22uF/6.3V0603 capacitors
F	<ul style="list-style-type: none">- Wires near the edges of the board were moved to the center- By default the board now provides 5V on the Arduino connector (at the 5V pin). Added 3-pin SMD jumper at the bottom to change to 3.3VA.- Different SWD connector used now- Placing new and better USB OTG connector- Placing new and better micro SD card connector

Document revision history:

Revision	Changes	Modified Page#
A	<ul style="list-style-type: none">- At first page "Copyright(c) 2011, OLIMEX Ltd, All rights reserved" is replaces with "Designed by OLIMEX Ltd., 2011"- Updated schematic with board revision A	1
B	<ul style="list-style-type: none">- Updated schematics with board revision B and table	6, 11
C	<ul style="list-style-type: none">- Fixed grammatical errors- Updated schematics with board revision D- Added board revision history- Updated schematics- Added new jumpers description- Updated disclaimer	All
D	<ul style="list-style-type: none">- Removed misleading feature - there is no precision AREF circuit on the board	4
E	<ul style="list-style-type: none">- Schematic and revision changes updated to reflect latest board revision	5, 16
F	<ul style="list-style-type: none">- Updated manual for hardware revision F - the most important change is the 5V output at pin #3 of the Arduino shield connector (it was 3.3VA previously). This can be reverted by modifying the 3V3A/5V jumper.	All
G	<ul style="list-style-type: none">- Added a note about the changes to the output pin of the POWER connector	8

DISCLAIMER

© 2014 Olimex Ltd. Olimex®, logo and combinations thereof, are registered trademarks of Olimex Ltd. Other product names may be trademarks of others and the rights belong to their respective owners.

The information in this document is provided in connection with Olimex products. No license, express or implied or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Olimex products.

The Hardware project is released under the Creative Commons Attribution-Share Alike 3.0 United States License. You may reproduce it for both your own personal use, and for commercial use. You will have to provide a link to the original creator of the project <https://www.olimex.com> on any documentation or website.

You may also modify the files, but you must then release them as well under the same terms. Credit can be attributed through a link to the creator website: <https://www.olimex.com>

The software is released under GPL.

It is possible that the pictures in this manual differ from the latest revision of the board.

The product described in this document is subject to continuous development and improvements. All particulars of the product and its use contained in this document are given by OLIMEX in good faith. However all warranties implied or expressed including but not limited to implied warranties of merchantability or fitness for purpose are excluded. This document is intended only to assist the reader in the use of the product. OLIMEX Ltd. shall not be liable for any loss or damage arising from the use of any information in this document or any error or omission in such information or any incorrect use of the product.

This evaluation board/kit is intended for use for engineering development, demonstration, or evaluation purposes only and is not considered by OLIMEX to be a finished end-product fit for general consumer use. Persons handling the product must have electronics training and observe good engineering practice standards. As such, the goods being provided are not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards.

Olimex currently deals with a variety of customers for products, and therefore our arrangement with the user is not exclusive. Olimex assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

THERE IS NO WARRANTY FOR THE DESIGN MATERIALS AND THE COMPONENTS USED TO CREATE OLIMEXINO-STM32. THEY ARE CONSIDERED SUITABLE ONLY FOR OLIMEXINO-STM32.

For product support, hardware information and error reports mail to: support@olimex.com. Note that we are primarily a hardware company and our software support is limited.

Please consider reading the paragraph below about the warranty of Olimex products.

Warranty and returns:

Our boards have lifetime warranty against manufacturing defects and components.

During development work it is not unlikely that you can burn your programmer or development board. This is normal, we also do development work and we have damaged A LOT of programmers and boards during our daily job so we know how it works. If our board/programmer has worked fine then stopped, please check if you didn't apply over voltage by mistake, or shorted something in your target board where the programmer was connected etc. Sometimes boards might get damaged by ESD shock voltage or if you spill coffee on them during your work when they are powered.

Please note that warranty do not cover problems caused by improper use, shorts, over-voltages, ESD shock etc.

If the board has warranty label it should be not broken. Broken labels void the warranty, same applies for boards modified by the customer, for instance soldering additional components or removing components – such boards will be not be a subject of our warranty.

If you are positive that the problem is due to manufacturing defect or component you can return the board back to us for inspection.

When we receive the board we will check and if the problem is caused due to our fault and we will repair/replace the faulty hardware free of charge, otherwise we can quote price of the repair.

Note that all shipping back and forth have to be covered by the customer. Before you ship anything back you need to ask for RMA. When you ship back please attach to it your shipping address, phone, e-mail, RMA# and brief description of the problem. All boards should be sent back in antistatic package and well packed to prevent damages during the transport.

AMEYA360

Components Supply Platform

Authorized Distribution Brand :



Website :

Welcome to visit www.ameya360.com

Contact Us :

➤ Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd
Minhang District, Shanghai , China

➤ Sales :

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

➤ Customer Service :

Email service@ameya360.com

➤ Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com