



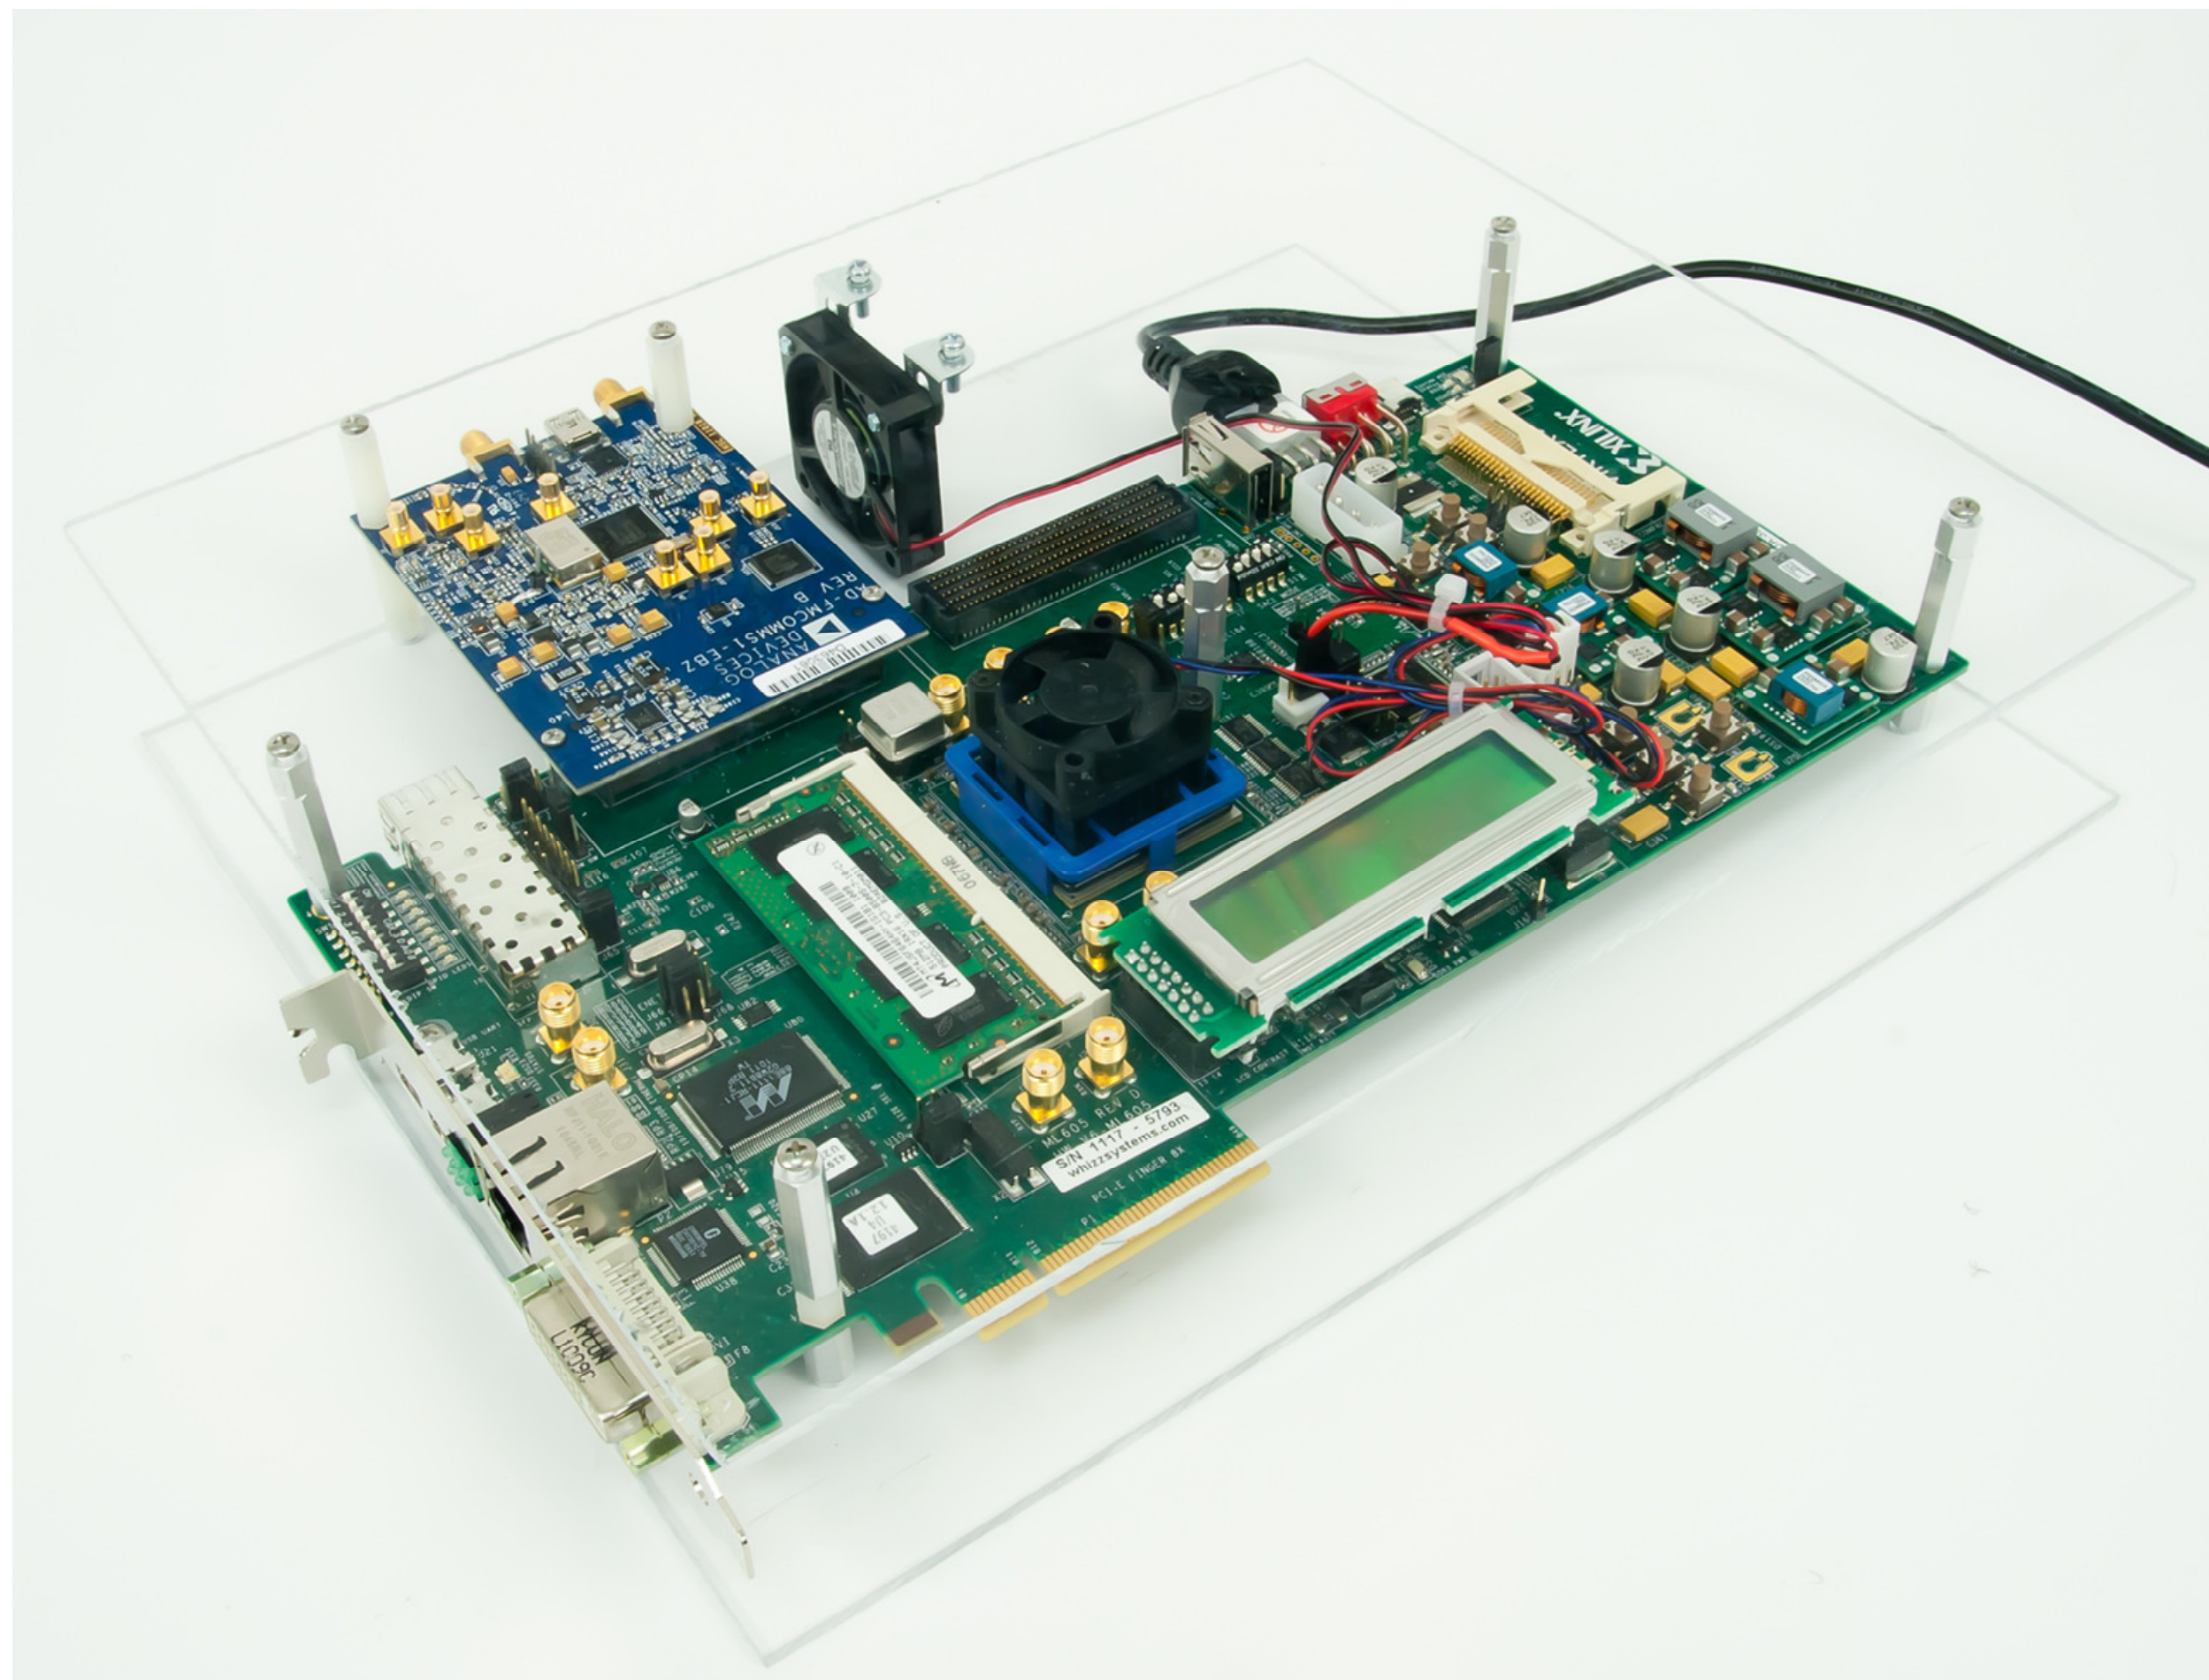

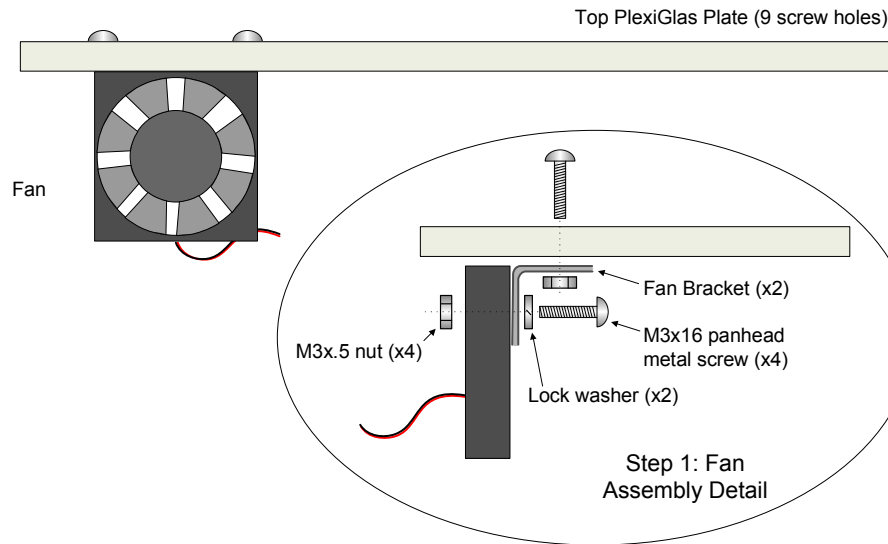

Assembly Instructions (Small Philips Screwdriver needed)

Step 1:

Attach fan to top Plexiglas plate using fan brackets (x2), M3x16 panhead screws (x4), M3x.5 nuts (x4), and lock washers (x2) as shown.

Step 2:

Attach stand-offs to top Plexiglas plate using acrylic screws.

Step 3:

Plug FCOMMS1 board into ML605 board. Attach Fan cable to J33 on ML605 board (near center of board, by FPGA/Fan).

Step 4:


Place top Plexiglas cover upside down on clean surface, and attach FCOMMS/ML605 board to top plate.

Step 5:

Attach bottom Plexiglas plate.

Step 6:

Attach antennas, and attach rubber feet to bottom Plexiglas plate near corners

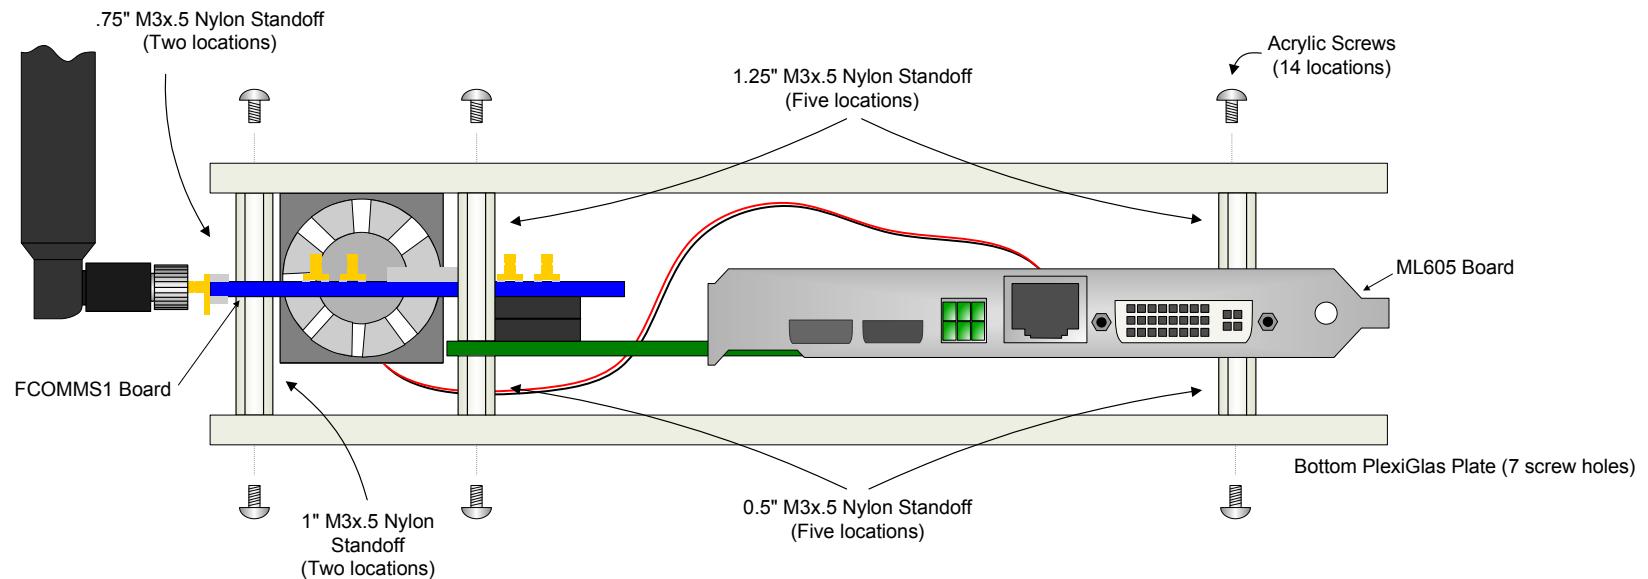

AMEYA360

Components Supply Platform

Authorized Distribution Brand :



Website :

Welcome to visit www.ameya360.com

Contact Us :

➤ Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd
Minhang District, Shanghai , China

➤ Sales :

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

➤ Customer Service :

Email service@ameya360.com

➤ Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com