











**TMP006, TMP006B** 

SBOS518D-MAY 2011-REVISED NOVEMBER 2014

# TMP006/B Infrared Thermopile Sensor in Chip-Scale Package

# **Features**

- Complete Signal-Chain Solution in 1.6-mm x 1.6mm Die-Size Ball Grid Array (DSBGA) Package
- Two-Wire Serial Interface Options:
  - I<sup>2</sup>C and SMBus Compatible
  - TMP006 at 3.3 V
  - TMP006B at 1.8 V
- Pin-Programable Interface Addressing
- Low Supply Current: 240 µA (typ), 1-µA shutdown (max)
- Low Minimum Supply Voltage: 2.2 V

# **Applications**

- Case Temperature
- Comfort Index Measurement
- Motor Case Temperature
- Server Farm Power Management

# 3 Description

The TMP006 and TMP006B are the first in a series of temperature sensors that measure the temperature of an object without the need to make contact with the object. This sensor uses a thermopile to absorb the passive infrared energy emitted from the object being measured and uses the corresponding change in voltage to determine temperature. The thermopile voltage is digitized and reported with the die temperature through serial communication.


Infrared sensor voltage range is specified from -40°C to +125°C to enable use in a wide range of applications. Low power consumption along with low operating voltage makes the device suitable for battery-powered applications. The low package height of the chip-scale format enables standard highvolume assembly methods, and can be useful where limited spacing to the object being measured is available.

#### Device Information<sup>(1)</sup>

PART NUMBER	PACKAGE	BODY SIZE (NOM)		
TMP006	DCDCA (0)	4 60 4 60		
TMP006B	DSBGA (8)	1.60 mm × 1.60 mm		

(1) For all available packages, see the package option addendum at the end of the datasheet.

#### **Simplified Schematic**

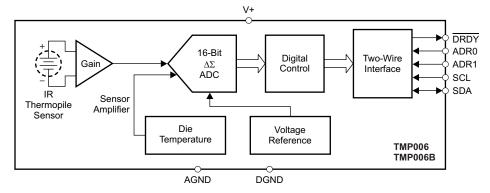



# **Table of Contents**

1	Features 1		8.5 Register Maps	19
2	Applications 1	9	Application and Implementation	<mark>2</mark> 1
3	Description 1		9.1 Application Information	21
4	Revision History2		9.2 Typical Application	21
5	Device Comparison Table 4		9.3 System Examples	24
6	Pin Configuration and Functions 4	10	Power-Supply Recommendations	26
7	Specifications5	11	Layout	27
•	7.1 Absolute Maximum Ratings 5		11.1 Layout Guidelines	
	7.2 Handling Ratings		11.2 Layout Examples	28
	7.3 Recommended Operating Conditions	12	Device and Documentation Support	<mark>3</mark> 1
	7.4 Thermal Information		12.1 Device Support	31
	7.5 Electrical Characteristics		12.2 Documentation Support	31
	7.6 Typical Characteristics		12.3 Related Links	31
8	Detailed Description 8		12.4 Trademarks	31
•	8.1 Overview 8		12.5 Electrostatic Discharge Caution	31
	8.2 Functional Block Diagram		12.6 Glossary	31
	8.3 Feature Description 8	13	Mechanical, Packaging, and Orderable Information	30
	8.4 Device Functional Modes 19		mornium.	

# 4 Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

CI	hanges from Revision C (December 2012) to Revision D	Page
•	Changed document format to latest data sheet standards	1
•	Added Device Comparison, Handling Rating, and Recommended Operating Conditions tables, and Feature Description, Device Functional Modes, Register Maps, Application and Implementation, Power Supply Recommendations, Layout, Device and Documentation Support, and Mechanical, Packaging, and Orderable Information sections	1
•	Changed all instances of WCSP to DSBGA throughout data sheet	1
•	Changed text in first paragraph of Description section	1
•	Changed all instances of "local temperature" to "die temperature" throughout data sheet	<mark>1</mark>
•	Moved histogram from page 1 to Typical Characteristics section	1
•	Added Simplified Schematic title to front-page figure	1
•	Changed simplified schematic	1
•	Deleted Package Information table	4
•	Changed all T <sub>Object</sub> to T <sub>OBJ</sub> throughout data sheet	<u>6</u>
•	Changed x- and y-axis labels in Figure 1	<mark>7</mark>
•	Changed text related to object temperature measurement in first paragraph of Overview section	8
•	Changed Table 3	15
•	Changed all V <sub>OBJECT</sub> to V <sub>SENSOR</sub> throughout datasheet	19
•	Deleted Pointer Register section	
•	Changed Sensor Voltage Register name to Sensor Voltage Result Register	19
•	Changed T <sub>AMBIENT</sub> to T <sub>DIE</sub> throughout data sheet	




Changes from Revision B (February 2012) to Revision C	Page
Added TMP006B device to data sheet	1
Changed Package Information table to include new TMP006B device with the TMP006, and show the different voltage for the two devices	4
Changes from Revision A (July 2011) to Revision B	Page
• Changed Output Error, Calculate object temperature parameter test conditions in Electrical Characteristics table.	6
Changed description of device ID to 0067h in Manufacturer and Device ID Registers section	20
Changed FFh, Reset value bits D2, D1, and D0 values in Figure 17	20
Changed Figure 22	28
Changed Figure 23	
Changed Figure 24	30
Changes from Original (May, 2011) to Revision A	Page
Added specifications for <i>ambient temperature sensor</i> parameter over 0°C to +60°C	6
Revised Table 4	16




# 5 Device Comparison Table

PRODUCT	TWO-WIRE INTERFACE VOLTAGE	PACKAGE DESCRIPTION
TMP006	3.3 V	1.6-mm × 1.6-mm DSBGA-8
TMP006B	1.8 V	1.6-mm x 1.6-mm DSBGA-8

# 6 Pin Configuration and Functions



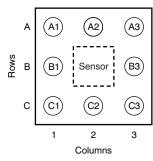

# **Pin Functions**

P	IN	1/0	DESCRIPTION	
NAME	NO.	1/0	DESCRIPTION	
ADR0	C1	Input	Address select pin	
ADR1	B1	Input	Address select pin	
AGND	A2	Power	Analog ground	
DGND	A1	Power	Digital ground	
DRDY	C2	Output	Data ready, active low, open-drain; requires a pullup resistor to V+.	
SCL	В3	Input	Serial clock line for two-wire interface, open-drain; requires a pullup resistor to V+.	
SDA	C3	Input/output	Serial data line for two-wire interface, open-drain; requires a pullup resistor to V+.	
V+	А3	Power	Positive supply (2.2 V to 5.5 V)	



# 7 Specifications

# 7.1 Absolute Maximum Ratings

over operating free-air temperature range (unless otherwise noted)<sup>(1)</sup>

		MIN	MAX	UNIT
Supply voltage, V <sub>S</sub>	V+ pin		7	V
Innut voltage	ADR1 pins	-0.5	$V_{S} + 0.5$	V
Input voltage	SDA, SCL, DRDY, ADR0 pins	-0.5	7	V
Input current			10	mA
Tomporatura	Operating range	-55	+125	°C
Temperature	Junction temperature (T <sub>J max</sub> )		+150	°C

<sup>(1)</sup> Stresses beyond those listed under Absolute Maximum Ratings may cause permanent damage to the device. These are stress ratings only, which do not imply functional operation of the device at these or any other conditions beyond those indicated under Recommended Operating Conditions. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

# 7.2 Handling Ratings

			MIN	MAX	UNIT
T <sub>stg</sub>	Storage temperature range			+150	°C
		Human body model (HBM), per ANSI/ESDA/JEDEC JS-001, all pins <sup>(1)</sup>	-2000	2000	
$V_{(ESD)}$	Electrostatic discharge	Charged device model (CDM), per JEDEC specification JESD22-C101, all pins (2)	-500	500	V
( - )	alsonarge	Machine model	-200	200	

<sup>(1)</sup> JEDEC document JEP155 states that 500-V HBM allows safe manufacturing with a standard ESD control process.

# 7.3 Recommended Operating Conditions

over operating free-air temperature range (unless otherwise noted)

	MIN	NOM	MAX	UNIT
Supply voltage, V <sub>S</sub>	2.5	3.3	5.5	V
Operating temperature range	-40		+125	°C
Die temperature, T <sub>DIE</sub>			125	°C
Object temperature, T <sub>OBJ</sub>	Se	ee note (1)		°C

<sup>(1)</sup> Object temperature is application dependent.

#### 7.4 Thermal Information

	<b>(4)</b>	TMP006 TMP006B	
	THERMAL METRIC <sup>(1)</sup>		UNIT
		8 PINS	
$R_{\theta JA}$	Junction-to-ambient thermal resistance	123.8	
$R_{\theta JC(top)}$	Junction-to-case (top) thermal resistance	69	
$R_{\theta JB}$	Junction-to-board thermal resistance	103	°C/W
ΨЈТ	Junction-to-top characterization parameter	4.7	C/VV
ΨЈВ	Junction-to-board characterization parameter	55	
R <sub>0JC(bot)</sub>	Junction-to-case (bottom) thermal resistance	N/A	

<sup>(1)</sup> For more information about traditional and new thermal metrics, see the IC Package Thermal Metrics application report, SPRA953.

Product Folder Links: TMP006 TMP006B

<sup>(2)</sup> JEDEC document JEP157 states that 250-V CDM allows safe manufacturing with a standard ESD control process.



# 7.5 Electrical Characteristics

At  $T_{DIE} = +25$ °C, V+ = 3.3 V, and conversion time = 1 second, unless otherwise specified.

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
OUTP	UT ERROR					
		$T_{DIE} = 0$ °C to +60°C, V+ = 2.2 V to 5.5 V		±0.5	±1	°C
	Die temperature sensor	$T_{DIE} = -40$ °C to +125°C, V+ = 2.2 V to 5.5 V		±0.5	±1.5	°C
PSRR	Power-supply rejection ratio			0.1		°C/V
	Calculate object temperature <sup>(1)</sup>	$T_{DIE} = +20^{\circ}\text{C to } +60^{\circ}\text{C},$ $T_{OBJ} - T_{DIE} = -10^{\circ}\text{C to } +30^{\circ}\text{C}$		±1	±3	°C
	Field of view	50% responsivity		90		Degrees
TEMP	ERATURE MEASUREMENT				,	
		CR2 = 0, CR1 = 0, CR0 = 0		0.25		Seconds
		CR2 = 0, CR1 = 0, CR0 = 1		0.5		Seconds
	Conversion time	CR2 = 0, CR1 = 1, CR0 = 0		1		Seconds
		CR2 = 0, CR1 = 1, CR0 = 1		2		Seconds
		CR2 = 1, CR1 = 0, CR0 = 0		4		Seconds
		Die temperature sensor		0.03125		°C
	Resolution	Thermopile sensor resolution		156.25		nV
SMBu	s COMPATIBLE INTERFACE				"	
	Logic input high voltage (SCL, SDA)	TMP006 only	2.1			V
$V_{IH}$		TMP006B only	1.4			V
	Logic input low voltage (SCL, SDA)	TMP006 only			0.8	V
$V_{IL}$		TMP006B only			0.4	V
	Hysteresis			100		mV
V <sub>OL</sub>	Output low voltage (SDA)	I <sub>OUT</sub> = 6 mA		0.15	0.4	V
	Output low sink current (SDA)		6			mA
	Logic input current	Forced to 0.4 V	-1		+1	μA
	Input capacitance (SCL, SDA, A0, A1)			3		pF
	Clock frequency		0.001		3.4	MHz
	Interface timeout		25	30	35	ms
DIGIT	AL OUTPUTS				,	
V <sub>OL</sub>	Output low voltage (DRDY)	I <sub>OUT</sub> = 4 mA		0.15	0.4	V
I <sub>OH</sub>	High-level output leakage current	$V_{OUT} = V_{DD}$		0.1	1	μA
	Output low sink current (DRDY)	Forced to 0.4 V	4			mA
POWE	R SUPPLY					
Vs	Specified voltage range	$T_{DIE} = -40^{\circ}C \text{ to } +125^{\circ}C$	2.2		5.5	V
POR	Power-on reset	$T_{DIE} = -40$ °C to +125°C		1.6		V
		Continuous conversion; see Table 7		240	325	μA
		Serial bus inactive, shutdown mode, TMP006 only		0.5	1.0	μΑ
lQ	Quiescent current	Serial bus inactive, shutdown mode, TMP006B only		1.5	5.0	μΑ
		Serial bus active, f <sub>S</sub> = 400 kHz, shutdown mode		90		μA


<sup>(1)</sup> This parameter is tested in a fully-settled setup with no transients, in front of an ideal black body, with specified layout constraints, and after system calibration.

Product Folder Links: TMP006 TMP006B



# 7.6 Typical Characteristics

At  $T_{DIE}$  = +25°C and  $V_{S}$  = 3.3 V, unless otherwise noted.

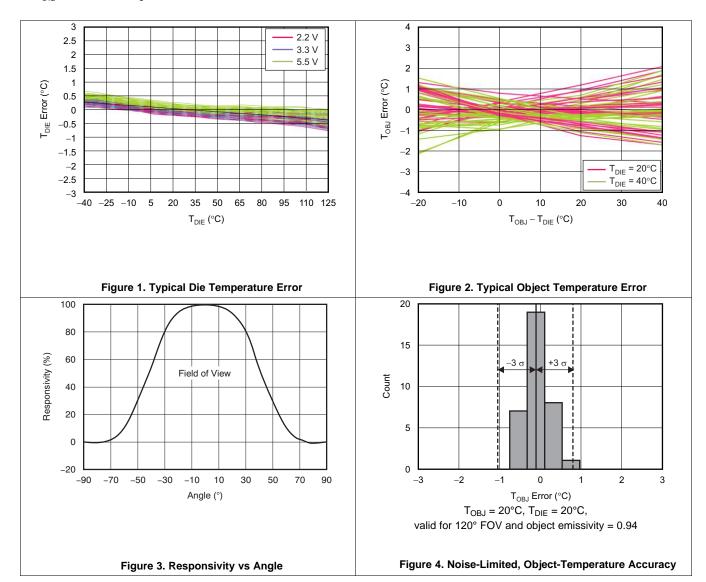



# 8 Detailed Description


#### 8.1 Overview

The TMP006 and TMP006B are digital temperature sensors that are optimal for thermal management and thermal protection applications where remote noncontact sensing is desired. The TMP006 and TMP006B use a two-wire interface (I<sup>2</sup>C and SMBus compatible), and are specified over the die temperature range of –40°C to +125°C. The TMP006 and TMP006B measure object temperatures over a range limited only by the maximum sensor voltage (5.12 mV). The TMP006 and TMP006B contain registers for holding configuration information, temperature measurement results, and sensor voltage measurement. Die temperature and sensor voltage measurements are used to calculate the object temperature. Refer to the *TMP006 User Guide* (SBOU107) for more details.

The TMP006 and TMP006B provide both die temperature and thermopile sensor voltage outputs in a DSBGA. The die temperature sensor in both the TMP006 and TMP006B is integrated on-chip; the thermal path runs through the DSBGA solder balls. The low thermal resistance of the solder balls provides the thermal path to maintain the chip at the temperature of the die environment.

The top side of the DSBGA package must face the object that is being measured with an unobstructed view in order to accurately measure the temperature. Refer to the user guide *TMP006 Layout and Assembly Guidelines* (SBOU108) for more details.

# 8.2 Functional Block Diagram

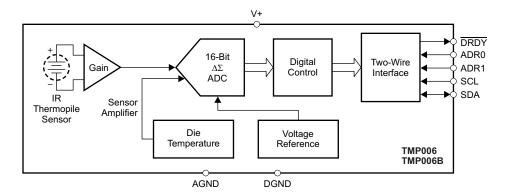

# 8.3 Feature Description

The TMP006 and TMP006B sense the IR radiation emitted by all objects. The spectrum of the radiation depends only on the temperature and is given by Planck's law, as shown in Equation 1:

$$B_{\lambda}(T,\lambda) = \frac{2hc^{2}}{\lambda^{5}} \left( \frac{1}{\frac{hc}{e^{\lambda k_{B}T} - 1}} \right) \text{ watts / cm}^{2} / \mu m$$

where

- h = Planck's constant
- c = speed of light
- $k_B$  = Boltzmann's constant
- $\lambda$  = wavelength in microns

(1)



# **Feature Description (continued)**

The intensity of radiation from the object is determined by the emisivity ( $\epsilon$ ), a material-dependent property that scales the spectral response so that  $0 < \epsilon < 1$ . For an ideal black body, the radiation is at a maximum for a given temperature and  $\epsilon = 1$ . The temperature is measured on the kelvin scale where 0 K is absolute zero, or  $-273.15^{\circ}$ C. Room temperature (25°C) is approximately 298.13 K. The emission spectra for objects at or near room temperature are shown in Figure 5. For these temperatures, the majority of the radiation emitted is in the wavelength range of 3  $\mu$ m to 20  $\mu$ m.

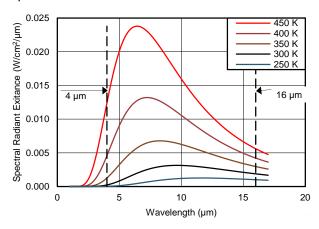


Figure 5. Black Body Emission Spectrum and Response

# 8.3.1 Spectral Responsivity

The TMP006 and TMP006B are optimized to sense IR radiation emitted by objects from approximately 250 K ( $-23^{\circ}$ C) to 400 K ( $127^{\circ}$ C), with maximum sensitivity from approximately 4 µm to 16 µm. The relative spectral response of the TMP006 and TMP006B is shown in Figure 6.

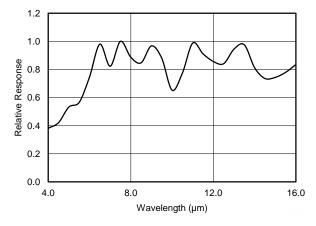


Figure 6. Relative Spectral Response vs Wavelength

9



# **Feature Description (continued)**

#### 8.3.2 Field of View and Angular Response

The TMP006 and TMP006B sense all radiation within a defined field of view (FOV). The FOV (or full-angle of  $\theta$ ) is defined as  $2\Phi$ . These devices contain no optical elements, and thus sense all radiation within the hemisphere to the front of the device. Figure 3 shows the angular dependence of the sensor response and the relative power for a circular object that subtends a half angle of phi ( $\Phi$ ). Figure 7 defines the angle  $\Phi$  in terms of object diameter and distance. Figure 7 assumes that the object is well approximated as a plane that is perpendicular to the sensor axis.

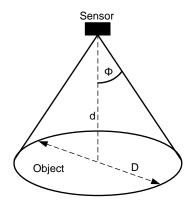


Figure 7. FOV Geometry Definition

In this case, the maximum contribution is from the portion of the object directly in front of the TMP006 or TMP006B ( $\Phi = 0$ ); with the sensitivity per solid angle, dR/d $\Phi$  decreases as  $\Phi$  increases. Approximately 50% of the energy sensed by the TMP006 and TMP006B is within a FOV ( $\theta$ ) = 90°. Therefore, to ensure 90% of the energy is from the object, use an FOV ( $\theta$ ) = 135°.

This discussion is for illustrative purposes only; in practice the angular response ( $dR/d\Phi$ ) of the TMP006 and TMP006B to the object is affected by the object orientation, the number of objects, and the precise placement relative to the TMP006 or TMP006B.

#### 8.3.3 Thermopile Principles and Operation

The TMP006 and TMP006B sense radiation by absorbing the radiation on a hot junction. The thermopile then generates a voltage proportional to the temperature difference between the hot junction,  $T_{hot}$ , and the cold junction,  $T_{cold}$ .

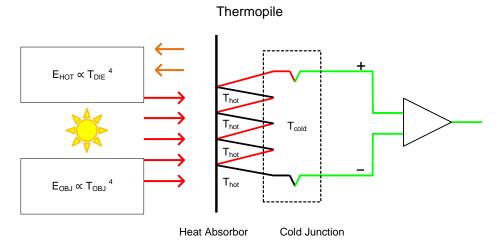


Figure 8. Principle of Thermopile Operation

Submit Documentation Feedback

Copyright © 2011–2014, Texas Instruments Incorporated

(2)



# Feature Description (continued)

The cold junction is thermally grounded to the die, and is effectively TDIE, the die temperature. In thermal equilibrium, the hot junction is determined by the object temperature, T<sub>OBJ</sub>. The energy emitted by the object, E<sub>OBJ</sub>, minus the energy radiated by the die, E<sub>DIE</sub>, determines the temperature of the hot junction. The output voltage, V<sub>OUT</sub>, is therefore determined by the relationship shown in Equation 2:

$$V_{OUT} = V_{SENSOR} = C \times (T_{HOT} - T_{COLD}) \propto (T_{OB,I} 4 - T_{DIF} 4)$$

where

C is a constant depending on the design of the sensing element.

measure a value for V<sub>SENSOR</sub> and for T<sub>DIE</sub>, which are then placed in their respective registers.

Note that the sensor voltage is related to both the object temperature and the die temperature. A fundamental characteristic of all thermopiles is that they measure temperature differentials, not absolute temperatures. The TMP006 and TMP006B contain a highly-accurate, internal temperature sensing element to measure  $T_{DIE}$ Estimate  $T_{OBJ}$  by using  $V_{SENSOR}$  and  $T_{DIE}$ . For each 250-ms conversion cycle, the TMP006 and TMP006B

For each conversion cycle, the device generates an analog-to-digital converter (ADC) value for  $T_{\text{DIE}}$  and  $V_{\text{SENSOR}}$ . Bits CR2 to CR0 determine the number of  $T_{\text{DIE}}$  and sensor ADC results to average before they are loaded into the respective registers for readout.

After power-on reset (POR), the TMP006 and TMP006B start in four conversions per second (CR[2:0] = 010). In general, for a mode with N conversions, the local temperature, T<sub>DIF</sub>, result is updated at the end of the Nth ADC conversion with the value shown in Equation 3:

$$T_{DIE} = \frac{1}{N} \sum_{X=1}^{N} Local Temp Conversion_{X}$$
(3)

Similarly, the sensor voltage result is updated at the end of the Nth sensor ADC conversion with the value shown in Equation 4:

$$V_{SENSOR} = \frac{1}{N} \sum_{X=1}^{N} Sensor Conversion_X$$
 (4)

The total conversion time and averages per conversion can be optimized to select the best combination of update rate versus noise for an application. Additionally, low-power conversion mode is available. In CR settings 101, 110, and 111, the device inserts a standby time before the beginning of the next conversion or conversions.

The method and requirements for estimating T<sub>OBJ</sub> are described in the next section.

Copyright © 2011-2014, Texas Instruments Incorporated



# **Feature Description (continued)**

#### 8.3.4 Object Temperature Calculation

The TMP006 and TMP006B generate a sensor voltage,  $V_{Sensor}$ , in register 00h that is representative of the energy radiated by the object. In an ideal situation, the Stefan-Boltzman law relates the energy radiated by an object to its temperature by the relationship shown in Equation 5:

Energy<sub>Rad</sub> = 
$$\varepsilon \sigma T_{OBJ}^4$$

where

- $\sigma$  = Stefan-Boltzman constant = 5.7 × 10<sup>-12</sup> W/cm<sup>2</sup>/K<sup>4</sup>
- $\varepsilon$  = Emissivity,  $0 < \varepsilon < 1$ , an object dependent factor,  $\varepsilon = 1$  for a perfect black body (5)

A similar relationship holds for the sensing element itself that radiates heat at a rate determined by T<sub>DIE</sub>. The net energy absorbed by the sensor is then given by the energy absorbed from the object minus the energy radiated by the sensor, as shown in Equation 6:

$$V_{SENSOR} \propto E_{ABSORBED} - E_{RADIATED} = \varepsilon \sigma \left( T_{OBJ}^4 - T_{DIE}^4 \right)$$
 (6)

In an ideal situation, the sensor voltage relates to object temperature as shown in Equation 7:

$$T_{OBJ} = \sqrt[4]{T_{DIE}^4 + \frac{V_{SENSOR}}{\varepsilon \sigma}}$$
 (7)

$$T_{OBJ} = \sqrt[4]{T_{DIE}^4 + \left(\frac{f\{V_{OBJ}\}}{S}\right)}$$

where

- S is a system-dependent parameter incorporating the object emissivity (ε), FOV, and sensor characteristics. The parameters S0, A1, and A2 are used in determining S.
- f(V<sub>OBJ</sub>) is a function that compensates for heat flow other than radiation, such as convection and conduction, from nearby objects. The parameters B0, B1, and B2 are used to tune this function to a particular system and environment.

The coefficients affect object temperature measurement as described in Table 1.

**Table 1. Calibration Coefficient Definitions** 

COEFFICIENT	PURPOSE	CALIBRATION	COMMENT
S0	FOV and emissivity of object	Application and object dependent	Default values based on black body with $\epsilon$ = 0.95, and 110° FOV
A1, A2	Device properties	Factory set	Default values based on typical sensor characteristics
С	Device properties	Factory set	Default values based on typical sensor characteristics
B0, B1, B2	Corrects for energy sources	Environment dependent	Calibrate in end-application environment



#### 8.3.5 Calibration

The TMP006 and TMP006B default coefficients are calibrated with a black body of emissivity,  $\epsilon$  = 0.95, and an FOV ( $\theta$ ) = 110°. Use these coefficients for applications where the object emissivity and geometry satisfy these conditions. For applications with different object emissivity or geometry, calibrate the TMP006 or TMP006B to accurately reflect the object temperature and system geometry. Accuracy is affected by device-to-device or object-to-object variation. For the most demanding applications, calibrate each device individually.

As an overview the calibration procedure includes:

- 1. Defining the environmental variation range (die and object temperature range, supply voltage, temperature change speed, sampling rate and so on).
- 2. Making the die temperature measurements and IR sensor voltage measurements over the environmental range.
- 3. Generate an optimal set of coefficients based on the collected data set.

The best temperature precision is available if every device is calibrated individually. Alternatively, if all the units in the application use the same coefficients, then calibrate a statistically significant number of devices.

Recalibration may be required under any or all of the following conditions:

- 1. Board layout is changed.
- 2. Object or objects in the field of view changed.
- 3. Object distance changed.
- 4. Angle between device surface and direction to the object changed.
- 5. Object and local temperature range changed outside the environmental calibration range.
- 6. Object and local temperature transients significantly changed.
- 7. Supply voltage changed more than 1 V.
- 8. Air convection or conduction near the device.

For further information and methods for calibration, refer to user guide SBOU142, TMP007 Calibration Guide

Product Folder Links: TMP006 TMP006B

Copyright © 2011-2014, Texas Instruments Incorporated



# 8.3.6 Sensor Voltage Format

The TMP006 and TMP006B provide 16 bits of data in binary twos complement format. The positive full-scale input produces an output code of 7FFFh and the negative full-scale input produces an output code of 8000h. The output clips at these codes for signals that exceed full-scale. Table 2 summarizes the ideal output codes for different input signals. Figure 9 illustrates code transitions versus input voltage. Full-scale is a 5.12-mV signal. The LSB size is 156.25 nV.

Table 2. Input Signal Versus Ideal Output Code<sup>(1)</sup>

SENSOR SIGNAL	OUTPUT CODE
FS (2 <sup>15</sup> – 1)/2 <sup>15</sup> (5.12 mV)	7FFFh
+FS/2 <sup>15</sup> (156.25 nV)	0001h
0	0
-FS/2 <sup>15</sup> (-156.25 nV)	FFFFh
–FS (–5.12 mV)	8000h

(1) FS = Full-scale value.

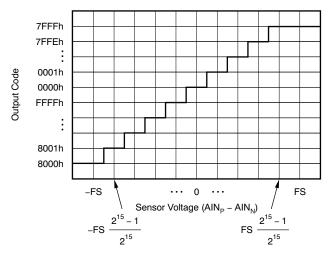


Figure 9. Code Transition Diagram



#### 8.3.7 Temperature Format

The temperature register data format of the TMP006 and TMP006B is reported in a binary twos complement signed integer format, as Table 3 shows, with 1 LSB = 1 / 32°C = 0.03125.

Table of Temperature Bata Format									
TEMPERATURE (°C)	DIGITAL OUTPUT (BINARY)	SHIFTED HEX							
150	0100 1011 0000 0000	12CO							
125	0011 1110 1000 0000	0FA0							
100	0011 0010 0000 0000	0C80							
80	0010 1000 0000 0000	0A00							
75	0010 0101 1000 0000	0960							
50	0001 1001 0000 0000	0640							
25	0000 1100 1000 0000	0320							
0.03125	0000 0000 0000 0100	0001							
0	0000 0000 0000 0000	0000							
-0.03125	1111 1111 1111 1100	FFFF							
-0.0625	1111 1111 1111 1000	FFFE							
-25	1111 0011 0111 0000	FCDC							
-40	1110 1011 1111 1100	FAFF							
<b>–</b> 55	1110 0100 0111 1100	F91F							

**Table 3. Temperature Data Format** 

Converting the integer temperature result of the TMP006 and TMP006B to physical temperature is done by right-shifting the last two LSBs followed by a divide-by-32 of  $T_{REG}$  to obtain the physical temperature result in degrees Celsius.  $T_{REG}$  is the 14-bit signed integer contained in the corresponding register. The sign of the temperature is the same as the sign of the integer read from the TMP006 and TMP006B. In twos complement notation, the MSB is the sign bit. If the MSB is 1, the integer is negative and the absolute value can be obtained by inverting all bits and adding 1. An alternative method of calculating the absolute value of negative integers is  $abs(i) = i \times FFFFh + 1$ .

#### 8.3.8 Serial Interface

The TMP006 and TMP006B initially start up with typical settings consisting of a conversion rate of one conversion per second (as specified in the *Electrical Characteristics*). The internal structure of the digital interface is shown in Figure 10.

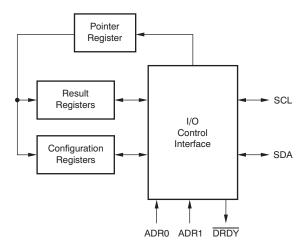


Figure 10. Internal Structure



The TMP006 and TMP006B operate only as a slave device on the two-wire bus. Connections to either bus are made via the open-drain I/O lines, SDA, and SCL. The SDA and SCL pins feature integrated spike-suppression filters and Schmitt triggers to minimize the effects of input spikes and bus noise. The TMP006 and TMP006B support the transmission protocol for fast (1 kHz to 400 kHz) and high-speed (1 kHz to 3.4 MHz) modes. All data bytes are transmitted MSB first.

#### 8.3.8.1 Serial Bus Address

To communicate with the TMP006 or TMP006B, the master must first address slave devices via a slave address byte. The slave address byte consists of seven address bits and a direction bit that indicates the intent to execute a read or write operation.

The TMP006 and TMP006B feature two address pins to allow up to eight devices to be addressed on a single bus. Table 4 describes the pin logic levels used to properly connect up to eight devices. The state of the ADR0 and ADR1 pins is sampled on every bus communication and should be set before any activity on the interface occurs.

ADR1	ADR0	SMBus Address
0	0	1000000
0	1	1000001
0	SDA	1000010
0	SCL	1000011
1	0	1000100
1	1	1000101
1	SDA	1000110
1	SCL	1000111

Table 4. TMP006 and TMP006B Address Pins and Slave Addresses

#### 8.3.8.2 Read and Write Operations

Access a particular register on the TMP006 and TMP006B by writing the appropriate value to the pointer register. The pointer value is the first byte transferred after the slave address byte with the R/W bit low. Every write operation to the TMP006 and TMP006B requires a value for the pointer (see Figure 11). When reading from the TMP006 or TMP006B, the last value stored in the pointer by a write operation is used to determine which register is read by a read operation. To change the register pointer for a read operation, a new value must be written to the pointer. This transaction is accomplished by issuing a slave address byte with the R/W bit low, followed by the pointer byte. No additional data are required. The master can then generate a START condition and send the slave address byte with the R/W bit high to initiate the read command. If repeated reads from the same register are desired, it is not necessary to continually send the pointer bytes because the TMP006 and TMP006B retain the pointer value until it is changed by the next write operation. Note that register bytes are sent MSB first, followed by the LSB.

Product Folder Links: TMP006 TMP006B



# 8.3.8.3 Two-Wire Timing Diagrams

The TMP006 and TMP006B use a two-wire interface (I<sup>2</sup>C and SMBus-compatible). Figure 11 and Figure 12 illustrate the timing for the various operations on the TMP006 and TMP006B. Parameters for Figure 11 are defined in Table 5. Bus definitions are given below.

**Table 5. Two-Wire Timing Diagram Definitions** 

		_	_			
		FAST	MODE	HIGH-SPE	ED MODE	
PARAMETER	TEST CONDITIONS	MIN	MAX	MIN	MAX	UNIT
f <sub>SCL</sub>	SCL operating frequency, V <sub>S</sub> > 1.7 V	0.001	0.4	0.001	3.4	MHz
f <sub>SCL</sub>	SCL operating frequency, V <sub>S</sub> < 1.7 V	0.001	0.4	0.001	2.75	MHz
t <sub>BUF</sub>	Bus free time between STOP and START condition	600		160		ns
t <sub>HDSTA</sub>	Hold time after repeated START condition.  After this period, the first clock is generated.	100		100		ns
t <sub>SUSTA</sub>	Repeated START condition setup time	100		100		ns
t <sub>SUSTO</sub>	STOP condition setup time	100		100		ns
t <sub>HDDAT</sub>	Data hold time	0 <sup>(1)</sup>		0 <sup>(2)</sup>		ns
t <sub>SUDAT</sub>	Data setup time	100		10		ns
t <sub>LOW</sub>	SCL clock low period, V <sub>S</sub> > 1.7 V	1300		160		ns
t <sub>LOW</sub>	SCL clock low period, V <sub>S</sub> < 1.7 V	1300		200		ns
t <sub>HIGH</sub>	SCL clock high period	600		60		ns
t <sub>F</sub>	Clock/data fall time		300			ns
t <sub>R</sub>	Clock/data rise time		300		160	ns
t <sub>R</sub>	Clock/data rise time for SCLK ≤ 100 kHz		1000			ns

<sup>(1)</sup> For cases with fall time of SCL less than 20 ns and/or the rise or fall time of SDA less than 20 ns, the hold time should be greater than 20 ns.

Bus Idle: Both SDA and SCL lines remain high.

**Start Data Transfer:** A change in the state of the SDA line from high to low while the SCL line is high defines a START condition. Each data transfer is initiated with a START condition.

**Stop Data Transfer:** A change in the state of the SDA line from low to high while the SCL line is high defines a STOP condition. Each data transfer terminates with a STOP or a repeated START condition.


**Data Transfer:** The number of data bytes transferred between a START and a STOP condition is not limited and is determined by the master device. The receiver acknowledges the transfer of data.

**Acknowledge:** Each receiving device, when addressed, is obliged to generate an Acknowledge bit. A device that acknowledges must pull down the SDA line during the Acknowledge clock pulse in such a way that the SDA line is stable low during the high period of the Acknowledge clock pulse. Setup and hold times must be taken into account. On a master receive, data transfer termination can be signaled by the master generating a Not-Acknowledge on the last byte that has been transmitted by the slave.

In order for the two-wire bus to operate at frequencies above 400 kHz, the master device must issue a High-speed mode (Hs-mode) master code (0000100X) as the first byte after a START condition to switch the bus to high-speed operation. The TMP006 and TMP006B do not acknowledge this byte, but switch the input filters on SDA and SCL and the output filter on SDA to operate in Hs-mode, allowing transfers at up to 3.4 MHz. After the Hs-mode master code has been issued, the master transmits a two-wire slave address to initiate a data transfer operation. The bus continues to operate in Hs-mode until a STOP condition occurs on the bus. Upon receiving the STOP condition, the TMP006 and TMP006B switch the input and output filter back to fast-mode operation.


<sup>(2)</sup> For cases with a fall time of SCL less than 10 ns and/or the rise or fall time of SDA less than 10 ns, the hold time should be greater than 10 ns.



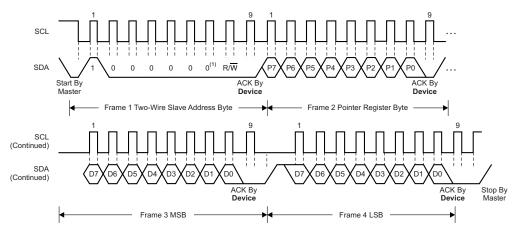

(1) Slave address 1000000 shown. Slave address changes for the TMP006 and TMP006B depend on the ADR1 and ADR0 pin connection. See Table 4 for more details.

Figure 11. Two-Wire Timing Diagram For Write Word Format

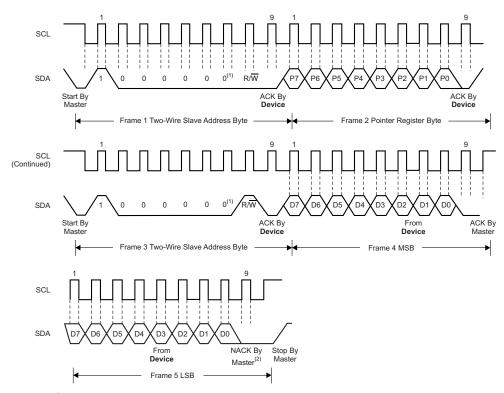

- (1) Slave address 1000000 shown.
- (2) Master must leave SDA high to terminate a two-byte read operation.

Figure 12. Two-Wire Timing Diagram For Two-Byte Read Format



#### 8.4 Device Functional Modes

The TMP006 and TMP006B operate in two modes: continuous and shutdown. A software reset function is also available. Selecting the desired operating mode is done by writing to the configuration register conversion mode select bits MOD[2:0]. The duration of the analog-to-digital (A/D) conversion is determined by the conversion rate bits CR[2:0] and is listed in Table 7. Continuous mode, on the other hand, performs an A/D conversion followed by a low-power delay in order to reduce the average power consumption. Multiple options for the conversion time and delay time are available in order to select the desired power and noise performance. Initiating power-down has an immediate effect; it aborts the current conversion and puts the device into a low-power shutdown mode. RST, or software reset, is also immediate and initializes all memory locations with the respective reset values.

# 8.5 Register Maps

The TMP006 and TMP006B contain data registers that hold configuration information, temperature measurement results, and status information.

POINTER (HEX) REGISTER D15 D14 D13 D12 D11 D10 D9 D7 D5 D4 D3 D2 D0 00h V15 V14 V13 V12 V11 V10 V9 V8 V7 V6 V5 V4 V3 V2 V1 V0 Sensor voltage T7 01h T13 T12 T11 T10 Т9 T8 T6 T5 T4 T3 T2 T1 T0 0 0 Local temperature DRDY 02h Configuration RST MOD3 MOD2 MOD1 CR3 CR2 CR1 ΕN 0 0 0 0 0 0 0 FEh Manufacturer ID ID15 ID14 ID13 ID12 ID11 ID10 ID9 ID8 ID7 ID6 ID5 ID4 ID3 ID2 ID0 FFh Device ID ID15 ID14 ID13 ID12 ID11 ID10 ID9 ID8 ID7 ID6 ID5 ID4 ID3 ID2 ID0

Table 6. Register Map

# 

The sensor voltage register is a 16-bit result register in binary twos complement format. One least significant bit (LSB) is 156.25 nV. The full-scale value is a ±5.12 mV signal. Data from this register (Figure 13) are used in conjunction with data from the Temperature register to calculate the object temperature. Figure 13 summarizes the Sensor Voltage register. The equation for the resultant object temperature is discussed in the *TMP006 User Guide* (SBOU107).

Figure 13. Sensor Voltage Result (V<sub>SENSOR</sub>) Register

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
V15	V14	V13	V12	V11	V10	V9	V8	V7	V6	V5	V4	V3	V2	V1	V0
R-0h															

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

# 8.5.2 Temperature $(T_{DIE})$ Register (address = 01h) [reset = 00000000000000000]

The temperature register of the TMP006 and TMP006B is configured as a 14-bit, read-only register (as shown in Figure 14) that stores the result of the most recent conversion for the die temperature,  $T_{DIE}$ . Following power-up or a software reset, the Temperature Register reads 0°C (0000h) until the first conversion is complete.

Figure 14. Temperature (T<sub>DIE</sub>) Register

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
T13	T12	T11	T10	Т9	T8	T7	T6	T5	T4	Т3	T2	T1	T0	_	
R-0h															

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

# 8.5.3 Configuration Register (address = 02h) [reset = 0111010000000000]

Figure 15 describes the configuration register. This register determines the operational modes, conversion rate, DRDY control, initiates a single conversion, performs a software reset, or puts the device into shutdown mode. This register is read/write, and the pointer address is 02h.

Copyright © 2011–2014, Texas Instruments Incorporated



# Figure 15. Configuration Register

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
RST	MOD2	MOD1	MOD0	CR2	CR1	CR0	EN	DRDY	_		_		_	_	_
R/W- 0h	R/W- 1h	R/W- 1h	R/W- 1h	R/W- 0h	R/W- 1h	R/W- 0h									

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

Bit [15] RST: Software reset bit

0 = Normal operation, this bit self clears

1 = Software reset

Bits [14:12] MOD[2:0]: Mode of operation

000 = Power-down

111 = Sensor and die continuous conversion (MOD)

Bits [11:9] CR[2:0]: ADC conversion rate

See Table 7.

Bit [8] EN: DRDY enable bit

 $0 = \frac{\overline{DRDY}}{\overline{DRDY}} \text{ pin disabled}$   $1 = \overline{DRDY} \text{ pin enabled}$ 

Bit [7] DRDY: Data ready bit

0 = Conversion in progress

1 = Object voltage and ambient temperature results are ready to read. A temperature or sensor voltage read or a write to

the Configuration Register is required to clear the condition.

Bits [6:0] Unused [6:0]

**Table 7. Conversion Rate** 

CR2	CR1	CR0	CONVERSION RATE (conversions/sec)	TOTAL NUMBER OF AVERAGED SAMPLES	AVERAGE I <sub>Q</sub> (μΑ)	PEAK-PEAK NOISE OF THE T <sub>OBJ</sub> RESULT (°C)
0	0	0	4	1	240	0.5
0	0	1	2	2	240	0.35
0	1	0	1	4	240	0.25 (default)
0	1	1	0.5	8	240	0.18
1	0	0	0.25	16	240	0.125

#### 8.5.4 Manufacturer and Device ID Registers

The TMP006 and TMP006B have two identification registers: manufacturer ID (address FEh) shown in Figure 16, and device ID (address FFh) shown in Figure 17. The manufacturer ID reads 5449h and the device ID is 0067h.

# 8.5.4.1 Manufacturer ID Register (address = FEh) [reset = 0101010001001001]

Figure 16. Manufacturer ID Register

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ID15	ID14	ID13	ID12	ID11	ID10	ID9	ID8	ID7	ID6	ID5	ID4	ID3	ID2	ID1	ID0
R-0h	R-1h	R-0h	R-1h	R-0h	R-1h	R-0h	R-0h	R-0h	R-1h	R-0h	R-0h	R-1h	R-0h	R-0h	R-1h

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### 8.5.4.2 Device ID Register (address = FFh) [reset = 0000000001100111]

Figure 17. Device ID Register

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ID15	ID14	ID13	ID12	ID11	ID10	ID9	ID8	ID7	ID6	ID5	ID4	ID3	ID2	ID1	ID0
R-0h	R-1h	R-1h	R-0h	R-0h	R-1h	R-1h	R-1h								

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

Product Folder Links: TMP006 TMP006B



# 9 Application and Implementation

#### NOTE

Information in the following applications sections is not part of the TI component specification, and TI does not warrant its accuracy or completeness. TI's customers are responsible for determining suitability of components for their purposes. Customers should validate and test their design implementation to confirm system functionality.

# 9.1 Application Information

The TMP006 and TMP006B are a complete IR thermopile sensor system on a chip that includes the sensing element, signal conditioner, and ADC. These devices are ideal for applications where the object cannot be placed in thermal contact with a conventional temperature sensor. Common reasons for noncontact temperature sensing are:

- Distance; the object is too far away, or in an inconvenient location for wired connections.
- The object is in motion.
- Direct contact of the object is inconvenient or uncomfortable (for example, skin).
- The object is a fluid (that is, liquid or gas).
- The object is hazardous (for example, acid or flammable).
- The object is in a hazardous state (for example, high voltage).

# 9.2 Typical Application

# 9.2.1 Wide-Range Calibration Example: $T_{OBJ} = 0^{\circ}C$ to $60^{\circ}C$ , Common vs Unit Calibration

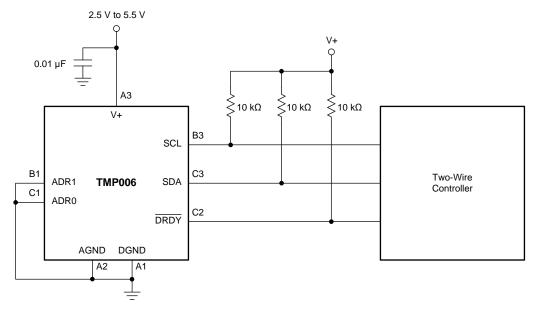


Figure 18. Typical Application Circuit



# **Typical Application (continued)**

#### 9.2.1.1 Design Requirements

For this application, the system must operate over the environment described in Table 8.

**Table 8. Wide-Range Parameters** 

DESIGN PARAMETER	EXAMPLE VALUE	COMMENT
N	32	Number of devices in calibration set
Minimum T <sub>DIE</sub>	0°C	Minimum expected die temperature
Maximum T <sub>DIE</sub>	60°C	Maximum expected die temperature
Minimum T <sub>OBJ</sub>	0°C	Minimum expected objected temperature
Maximum T <sub>OBJ</sub>	60°C	Maximum expected object temperature
ε	0.95	Object emissivity
Field of view	110°	Field of view subtended by object
Conversion rate	1 sample/second	

Select a set of values for  $T_{DIE}$  and  $T_{OBJ}$  to generate the calibration set. At a minimum, include the four extreme points of the temperature ranges desired. In practice, it is best to include a number of intermediate points as well. This example uses the values shown in Table 9, with an X marking the values chosen for measurement.

Table 9. Wide-Range Measurement Values

	T <sub>DIE</sub>									
T <sub>OBJ</sub>	0°C	20°C	40°C	60°C						
0°C	X	X	X	X						
20°C	X	X	X	X						
40°C	X	X	X	X						
60°C	X	X	Х	X						

# 9.2.1.2 Detailed Design Procedure

Before attempting to calibrate the system, it is necessary to establish the stability of the system. Noise is a measure of precision, which is the random deviation from the mean of the distribution. For a Gaussian (or normal) distribution, the precision is typically characterized by the standard deviation (sensor noise),  $\sigma$ .

#### 9.2.1.2.1 Wide-Range Calibration

To begin calibration, select an object temperature ( $T_{OBJ}$ ) and a value for the die temperature ( $T_{DIE}$ ). With these system temperatures stable, take a statistically significant number of samples of  $V_{Sensor}$  (results shown in register 00h).

In this example, 64 samples were taken.

To compensate for first order drift in system temperatures, it is often useful to normalize the data set. For this purpose, for each temperature set, the sensor voltage data (given in register 00h) is normalized by first finding the best fit line of the form shown in Equation 9:

Sensor 
$$(mV) = a \times SampleNo + b$$
 (9)

The normalized data for each data set is then calculated as shown in Equation 10:

$$Sensor_{NORM} (mV) = Sensor_{MEAS} - (a \times SampleNo + b)$$
(10)

The normalized data,  $V_{Sensor\_norm}$ , is centered on zero mean, and is first-order corrected for long-term drift. The standard deviation for each data set is then calculated to estimate the sensor noise,  $\sigma$ . Verify that the data are limited by white noise and no other effects. For a sensor-noise-limited data set,  $v_{SENSOR}$   $\sigma$  is typically < 1  $\mu$ V, and preferably < 0.5  $\mu$ V after first-order correction for drift, as described previously. If this condition is not satisfied, then the calibration accuracy is limited by external system factors (for example, convection or conduction). Repeat this process for each combination of  $T_{OBJ}$  and  $T_{DIE}$  for which the calibration is to be performed. The normalized data are used only for evaluating the suitability of the data set for calibration, and not for the actual calibration itself.



For calibration, the mean value, <V<sub>SENSOR</sub>>, is calculated for each combination of T<sub>OBJ</sub> and T<sub>DIE</sub>, as shown in Table 10. Using the mean value minimizes error introduced by random noise. Based on the means, a set of coefficients is generated based on a user-selected optimization criteria for Equation 7. Common criteria are minimizing the maximum error, minimizing the average error, and so on. For a detailed discussion of optimization methods, see user guide SBOU142, TMP007 Calibration Guide.

Table 10. Mean Values

	T <sub>DIE</sub>										
T <sub>OBJ</sub>	0°C	20°C	40°C	60°C							
0°C	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>							
20°C	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>							
40°C	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>							
60°C	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>	<v<sub>SENSOR&gt;</v<sub>							

#### 9.2.1.2.2 Verifying the Calibration

The next step is to use the generated coefficients to verify the calibration, and determine the accuracy of the system. For common calibration (C), the same coefficients are used for all devices; in unit calibration (U) the coefficients are calculated for each device. Common calibration includes device-to-device variation, and thus is less accurate, but much easier to implement. Unit calibration is more accurate, and eliminates device variation, but requires more effort to implement. The choice depends on the application requirements for accuracy versus implementation effort.

Mean calibration error at each point is defined as shown in Equation 11:

$$\mathsf{E}_{\mathsf{MEAN}} = \frac{1}{\mathsf{N}} {\sum}_{1}^{\mathsf{N}} (\mathsf{T}_{\mathsf{OBJ\_PREDICT}} - \mathsf{T}_{\mathsf{OBJ\_ACTUAL}})$$

where

- T<sub>OBL PREDICT</sub> is the temperature based on the calibration coefficients.
- T<sub>OBJ ACTUAL</sub> is the known object temperature, measured independently.
- N is the number of devices in the calibration set.

(11)

The mean error graph (see Figure 19) provides an efficient method of understanding how the systematic errors vary across the temperature ranges of interest. This graph also provides a means of weighing the benefits and efforts of common versus unit calibration for a particular application.

Note that calibration does not affect the temporal random noise observed, as shown in Figure 20. The standard deviation of the temperature error is independent of the calibration if the random error is dominated by the sensor noise and not external system factors, such as convection and conduction. For common calibration, the total standard deviation increases because of the effects of device-to-device variation. This standard deviation is calculated in the usual way, by substituting  $T_{OBJ\ PREDICT}$  for the mean in the standard deviation formula.


The accuracy is then defined as the mean calibration error plus the random errors from all sources. For this example application, use the criteria shown in Equation 12:

Accuracy = Mean Calibration Error 
$$\pm$$
 3 Standard Deviations

(12)

# INSTRUMENTS

#### 9.2.1.3 Application Curves

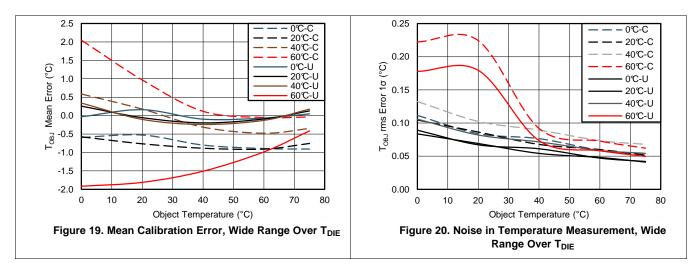

#### System Examples

# 9.3.1 Use of NEP, NETD, and Responsivity in Estimating System Performance

It is often necessary to estimate system performance as part of the design process. A key system parameter is temperature accuracy for a given set of parameters. Table 11 lists example parameters for estimating system performance.

**Table 11. Estimating System Performance Parameters** 

DESIGN PARAMETER	EXAMPLE VALUE	COMMENT
Object distance	10 mm	Distance to object
Object diameter	15 mm	Object size and geometry
ε	0.95	Object emissivity
T <sub>DIE</sub>	23°C	Die temperature
T <sub>OBJ</sub>	30°C	Maximum expected object temperature
FOV	110°	Field of view subtended by object
Responsivity (R <sub>0</sub> )	10.8 V/W	Responsivity for $T_{DIE} = 25^{\circ}C$ , $\theta = 0^{\circ}$
Responsivity (R)	9 V/W	Responsivity for 110° FOV
Sensor rms noise	0.20 μV	RMS sensor noise at T <sub>DIE</sub> = 25°C
NEP	30 nW	Thermal power equivalent to rms sensor noise
Conversion rate	1 SPS	SPS = samples per second

The system accuracy is a function of  $T_{OBJ}$ ,  $T_{DIE}$ ,  $\epsilon$ , and radiation transfer.

The radiation transfer factor is system dependent, and is affected by the object distance and geometry (for example, planar versus curved surfaces, or presence of lenses). For an planar object perpendicular to the detector axis (see Figure 7), the radiation transfer follows the well-known  $\sin^2(\theta)$  result. This expression can be used with a radiation transfer function responsivity value of 9 V/W to estimate system performance.

Because of the angular dependence of the TMP006 and TMP006B detector response, a more accurate representation for the same radiative transfer function geometry is shown in Equation 13:

$$\frac{2}{3}(1-\cos^3\theta)R_0$$

where

 $R_0$  is the responsivity of the detector to a point source at an angle normal to the detector ( $\theta = 0$  in Figure 7.  $R_0$ has a value of ~10.8 V/W at 25°C. (13)

The responsivity value of 9 V/W is based on a system with a 110° FOV.



Using the device-specific radiation transfer expression and R0, the detector response is shown in Equation 14:

$$V_{SENSOR} = \frac{2}{3} \varepsilon_{OBJ} \sigma_B \left( T_{OBJ}^4 - T_{DIE}^4 \right) A_{det} (1 - \cos^3 \theta) R_0$$

#### where

- $\epsilon_{OBJ}$  is the emissivity of the object (0.95).
- B is the Stefan-Boltzmann constant (5.67 x 10<sup>-12</sup> W/cm<sub>2</sub> /K<sup>4</sup>).
- T<sub>OBJ</sub> is the object temperature (273 K + 30°C).
- T<sub>DIE</sub> is the detector temperature (273 K + 23°C).
- $A_{det}$  is the detector active area (1.09 × 10<sup>-3</sup> cm<sup>2</sup>)
- θ is the half-angle subtended by the object as viewed from the detector.
- R<sub>0</sub> is the responsivity (~10.8 V/W for the specified temperatures). (14)

The value of  $\cos \theta$  is shown in Equation 15:

$$\cos\theta = \frac{2r}{\sqrt{4r^2 + D^2}} = 0.800$$

where

- r is the distance between the detector and the object (10 mm).
- D is the diameter of the object (15 mm). (15)

Differentiating with respect to object temperature, a small change in temperature creates a small change in the measured voltage given by Equation 16:

$$\Delta V_{OUT} = \frac{8}{3} \varepsilon_{OBJ} \sigma_B T_{OBJ}^3 A_{det} (1 - \cos^3 \theta) R_0 \Delta T_{OBJ}$$
(16)

Substituting values for the parameters yields Equation 17:

$$\Delta V_{SENSOR} = 2.3 \frac{\mu V}{K} \times T_{OBJ}$$
 (17)

The sensor rms noise at  $T_{DIE}$  = 25°C is ~0.25  $\mu V$ ; thus, the rms variation in temperature measurement is as shown in Equation 18:

$$\Delta T_{OBJ} = \frac{Sensor_{rms \, noise}}{\Delta V_{OUT}} = \frac{0.25 \, \mu V}{2.3 \, \mu V/K} \approx 110 \, \text{mK}$$
(18)

The peak-to-peak noise is approximately six times the rms noise; therefore, estimate an accuracy of approximately ±0.33°C.

This estimate can also be made using the noise-equivalent power (NEP), noting that NEP is the ratio of noise to responsivity, as shown in Equation 19:

$$NEP = \frac{\Delta V_{OUT}}{R_0} = \frac{8}{3} \varepsilon_{OBJ} \sigma_B T_{OBJ}^3 A_{det} \left(1 - \cos^3\theta\right) \Delta T_{OBJ} = \left(213 \frac{nW}{K}\right) \Delta T_{OBJ} \tag{19}$$

Assuming the system is sensor-noise limited, the NEP is ~30 nW at 25°C, as shown in Equation 20:

$$\Delta T_{OBJ} = \frac{30 \text{ nW}}{213 \text{ nW/K}} \approx 140 \text{ mK}$$
(20)

Again, the peak-to-peak noise is approximately 6X the rms noise; therefore estimate an accuracy of approximately ±0.42°C.

The different results from these two techniques is because of estimated values used for some parameters. The purpose of these techniques is not to obtain exact answers, but rather to quickly estimate the feasibility of a system implementation based on basic system parameters. These examples are intended only as guidelines; the specific values for the parameters depend on the specific system details.

Copyright © 2011–2014, Texas Instruments Incorporated



# 10 Power-Supply Recommendations

The TMP006 and TMP006B are designed to operate with a power supply voltage ( $V_S$ ) of between 2.5 V and 5.5 V. This input supply must be well regulated. The die temperature measurement ( $T_{DIE}$ ) dependence on supply voltage is typically 20 m°C/V for  $T_{DIE} > 0$ °C. The power-on reset (POR) has a nominal value of 1.9 V at  $T_{DIE} = 25$ °C. The POR increases with decreasing die temperature. Place the decoupling capacitor (0.01  $\mu$ F recommended) as close as possible to the device without obstructing the field of view.



# 11 Layout

# 11.1 Layout Guidelines

The IR thermopile sensor in the TMP006 and TMP006B is as susceptible to conducted and radiant IR energy from below the sensor on the PCB as it is to the IR energy from objects in its forward-looking field of view. When the area of PCB below the TMP006 or TMP006B is at the same temperature as the die or substrate of the TMP006 or TMP006B, heat is not transferred between the IR sensor and the PCB. However, temperature changes on a closely-placed target object or other events that lead to changes in system temperature can cause the PCB temperature and the TMP006 or TMP006B temperature to drift apart from each other. This drift in temperatures can cause a heat transfer between the IR sensor and the PCB to occur. Because of the small distance between the PCB and the bottom of the sensor, this heat energy will be conducted (as opposed to radiated) through the thin layer of air between the IR sensor and the PCB below it. This heat conduction causes offsets in the IR sensor voltage readings and ultimately leads to temperature calculation errors. To prevent and minimize these errors, the TMP006 and TMP006B layouts must address critical factors:

Thermally isolate the TMP006 and TMP006B from the rest of the PCB and any heat sources on it. Provide a stable thermal environment to reduce the noise in the measurement readings

Figure 21 illustrates the concept of thermally isolating the TMP006 and TMP006B from the PCB and external heat sources such as other components, air currents, and so on.

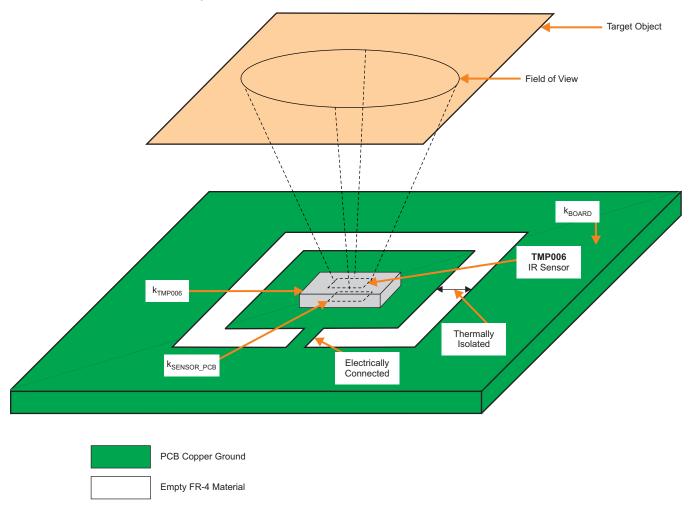


Figure 21. Principle of TMP006 and TMP006B Thermal Isolation



# 11.2 Layout Examples

For more detailed information, refer to SBOU108 — TMP006 Layout and Assembly Guidelines.

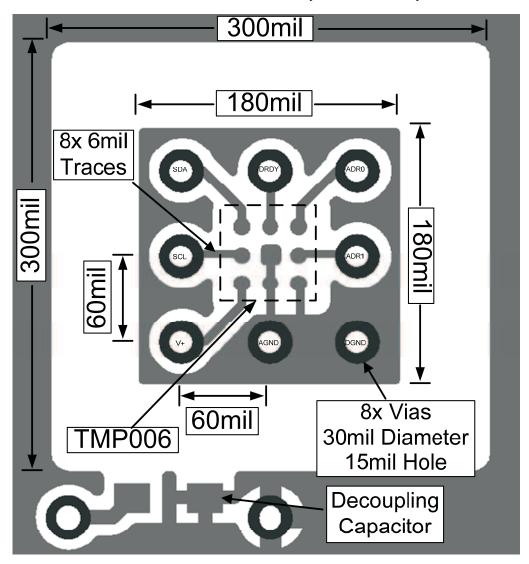


Figure 22. Top Layer



# **Layout Examples (continued)**

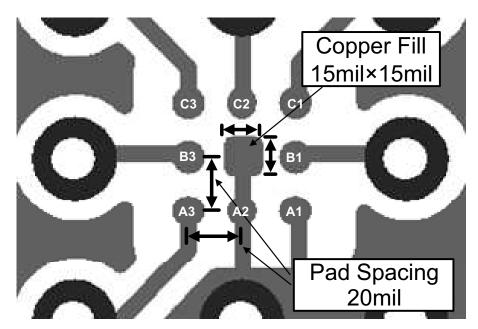


Figure 23. Enlarged View

Use a 12-mil pad and 15-mil solder balls for A1, A2, A3, B1, B3, C1, C2 and C3.



# **Layout Examples (continued)**

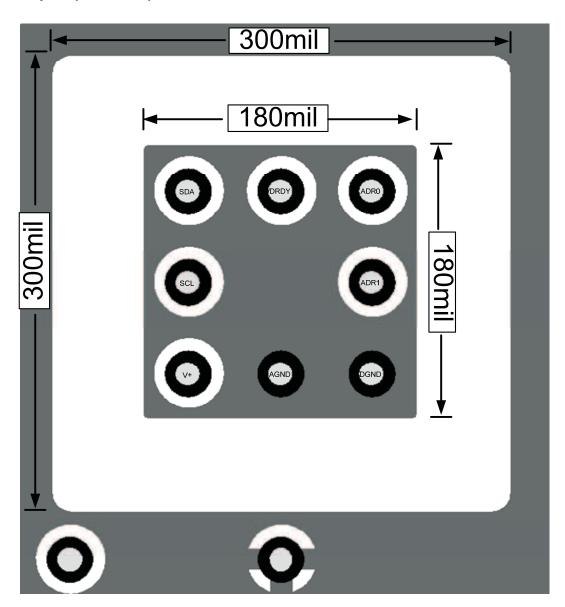


Figure 24. Bottom Layer



# 12 Device and Documentation Support

# 12.1 Device Support

#### 12.1.1 Device Nomenclature

The device performance is characterized by the signal, responsivity, and the noise of the sensor. The sensor noise can be characterized in terms of the raw sensor voltage, or in terms of a reference system with known optical transfer function.

**Responsivity** A measure of the voltage generated by the thermopile as a function of the thermal radiation incident on the device. The responsivity is measured in V/W. Typically incident radiations are in µW and sensor output voltages in µV.

Sensor Noise The noise voltage intrinsic to the sensor given in nV. This parameter is conversion-time dependent.

Noise Equivalent Power (NEP) The smallest thermal power difference that the detector can reliably detect: measured in nW. The NEP is a function of the sensor noise and the responsivity.

Noise Equivalent Temperature Difference (NETD) The smallest temperature difference the detector can reliably detect; measured in milliKelvins (mK). The NETD is a function of the sensor noise, responsivity and the system specific optical path.

> For comparison purposes, NETD is given for a reference system without a lens and with an ideal (nonabsorbing) F/1 lens.

#### 12.2 Documentation Support

#### 12.2.1 Related Documentation

SBOU142 — TMP007 Calibration Guide.

SBOU108 — TMP006 Layout and Assembly Guidelines.

#### 12.3 Related Links

Table 12 lists quick access links. Categories include technical documents, support and community resources, tools and software, and quick access to sample or buy.

Table 12. Related Links

PARTS	PRODUCT FOLDER	PRODUCT FOLDER SAMPLE & BUY		TOOLS & SOFTWARE	SUPPORT & COMMUNITY	
TMP006	Click here	Click here	Click here	Click here	Click here	
TMP006B	Click here	Click here	Click here	Click here	Click here	

# 12.4 Trademarks

All trademarks are the property of their respective owners.

#### 12.5 Electrostatic Discharge Caution

Copyright © 2011-2014, Texas Instruments Incorporated



This integrated circuit can be damaged by ESD. Texas Instruments recommends that all integrated circuits be handled with appropriate precautions. Failure to observe proper handling and installation procedures can cause damage.

ESD damage can range from subtle performance degradation to complete device failure. Precision integrated circuits may be more susceptible to damage because very small parametric changes could cause the device not to meet its published specifications.

#### 12.6 Glossary

SLYZ022 — TI Glossary.

This glossary lists and explains terms, acronyms, and definitions.



# 13 Mechanical, Packaging, and Orderable Information

The following pages include mechanical, packaging, and orderable information. This information is the most current data available for the designated devices. This data is subject to change without notice and revision of this document. For browser-based versions of this data sheet, refer to the left-hand navigation.





9-Sep-2014

#### **PACKAGING INFORMATION**

Orderable Device	Status	Package Type	Package Drawing	Pins	Package Qty	Eco Plan	Lead/Ball Finish	MSL Peak Temp	Op Temp (°C)	Device Marking (4/5)	Samples
TMP006AIYZFR	ACTIVE	DSBGA	YZF	8	3000	Green (RoHS & no Sb/Br)	SNAGCU	Level-2-260C-1 YEAR	-40 to 125	TMP006	Samples
TMP006AIYZFT	ACTIVE	DSBGA	YZF	8	250	Green (RoHS & no Sb/Br)	SNAGCU	Level-2-260C-1 YEAR	-40 to 125	TMP006	Samples
TMP006BIYZFR	ACTIVE	DSBGA	YZF	8	3000	Green (RoHS & no Sb/Br)	SNAGCU	Level-2-260C-1 YEAR	-40 to 125	T006B	Samples
TMP006BIYZFT	ACTIVE	DSBGA	YZF	8	250	Green (RoHS & no Sb/Br)	SNAGCU	Level-2-260C-1 YEAR	-40 to 125	T006B	Samples

(1) The marketing status values are defined as follows:

**ACTIVE:** Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

**OBSOLETE:** TI has discontinued the production of the device.

(2) Eco Plan - The planned eco-friendly classification: Pb-Free (RoHS), Pb-Free (RoHS Exempt), or Green (RoHS & no Sb/Br) - please check http://www.ti.com/productcontent for the latest availability information and additional product content details.

TBD: The Pb-Free/Green conversion plan has not been defined.

**Pb-Free (RoHS):** TI's terms "Lead-Free" or "Pb-Free" mean semiconductor products that are compatible with the current RoHS requirements for all 6 substances, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, TI Pb-Free products are suitable for use in specified lead-free processes.

Pb-Free (RoHS Exempt): This component has a RoHS exemption for either 1) lead-based flip-chip solder bumps used between the die and package, or 2) lead-based die adhesive used between the die and leadframe. The component is otherwise considered Pb-Free (RoHS compatible) as defined above.

Green (RoHS & no Sb/Br): TI defines "Green" to mean Pb-Free (RoHS compatible), and free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material)

- (3) MSL, Peak Temp. The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.
- (4) There may be additional marking, which relates to the logo, the lot trace code information, or the environmental category on the device.
- (5) Multiple Device Markings will be inside parentheses. Only one Device Marking contained in parentheses and separated by a "~" will appear on a device. If a line is indented then it is a continuation of the previous line and the two combined represent the entire Device Marking for that device.
- (6) Lead/Ball Finish Orderable Devices may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead/Ball Finish values may wrap to two lines if the finish value exceeds the maximum column width.



# **PACKAGE OPTION ADDENDUM**

9-Sep-2014

**Important Information and Disclaimer:** The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

# PACKAGE MATERIALS INFORMATION

www.ti.com 28-Sep-2013

# TAPE AND REEL INFORMATION





	Dimension designed to accommodate the component width
	Dimension designed to accommodate the component length
K0	Dimension designed to accommodate the component thickness
W	Overall width of the carrier tape
P1	Pitch between successive cavity centers

QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE



#### \*All dimensions are nominal


All dimensions are nominal												
Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
TMP006AIYZFR	DSBGA	YZF	8	3000	180.0	8.4	1.65	1.65	0.81	4.0	8.0	Q1
TMP006AIYZFT	DSBGA	YZF	8	250	180.0	8.4	1.65	1.65	0.81	4.0	8.0	Q1
TMP006BIYZFR	DSBGA	YZF	8	3000	180.0	8.4	1.65	1.65	0.81	4.0	8.0	Q1
TMP006BIYZFT	DSBGA	YZF	8	250	180.0	8.4	1.65	1.65	0.81	4.0	8.0	Q1

www.ti.com 28-Sep-2013



\*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
TMP006AIYZFR	DSBGA	YZF	8	3000	182.0	182.0	17.0
TMP006AIYZFT	DSBGA	YZF	8	250	182.0	182.0	17.0
TMP006BIYZFR	DSBGA	YZF	8	3000	182.0	182.0	17.0
TMP006BIYZFT	DSBGA	YZF	8	250	182.0	182.0	17.0

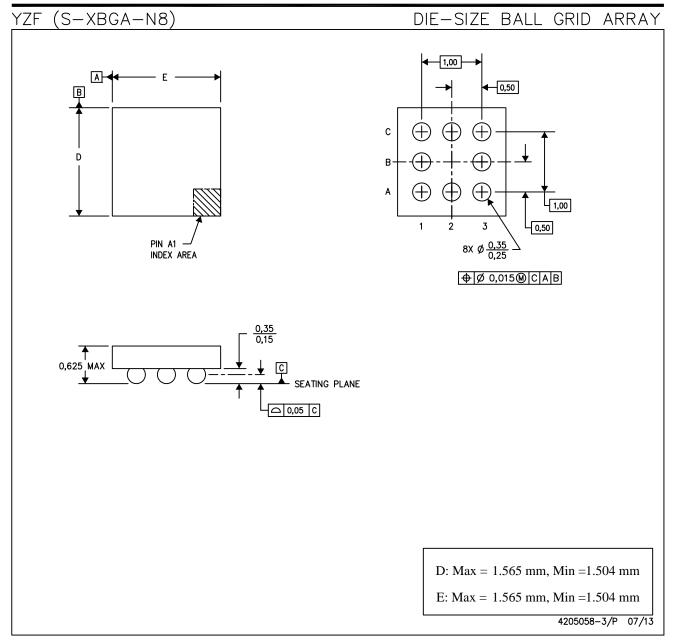

NOTES: A. All linear dimensions are in millimeters. Dimensioning and tolerancing per ASME Y14.5M-1994.

- B. This drawing is subject to change without notice.
- C. NanoFree™ package configuration.

NanoFree is a trademark of Texas Instruments.



#### IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have *not* been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

## Products Applications

Audio www.ti.com/audio Automotive and Transportation www.ti.com/automotive Communications and Telecom Amplifiers amplifier.ti.com www.ti.com/communications **Data Converters** dataconverter.ti.com Computers and Peripherals www.ti.com/computers **DLP® Products** www.dlp.com Consumer Electronics www.ti.com/consumer-apps

DSP **Energy and Lighting** dsp.ti.com www.ti.com/energy Clocks and Timers www.ti.com/clocks Industrial www.ti.com/industrial Interface interface.ti.com Medical www.ti.com/medical logic.ti.com Logic Security www.ti.com/security

Power Mgmt <u>power.ti.com</u> Space, Avionics and Defense <u>www.ti.com/space-avionics-defense</u>

Microcontrollers microcontroller.ti.com Video and Imaging www.ti.com/video

RFID www.ti-rfid.com

OMAP Applications Processors <u>www.ti.com/omap</u> TI E2E Community <u>e2e.ti.com</u>

Wireless Connectivity <u>www.ti.com/wirelessconnectivity</u>

# AMEYA360 Components Supply Platform

# **Authorized Distribution Brand:**

























# Website:

Welcome to visit www.ameya360.com

# Contact Us:

# > Address:

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd Minhang District, Shanghai , China

# > Sales:

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

# Customer Service :

Email service@ameya360.com

# Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com