

# Digital Storage Oscilloscopes

# TBS1000B Series Datasheet



The TBS1000B Digital Storage Oscilloscope Series provides you with affordable performance in a compact design. Packed with standard features - including USB connectivity, 34 automated measurements, limit testing, data logging, frequency counter, TrendPlot™ and a context-sensitive help menu - the TBS1000B Series oscilloscopes helps you get more done, in less time.

#### Key performance specifications

- 200MHz, 150 MHz, 100 MHz, 70 MHz and 50 MHz bandwidth models
- 2-channel models
- Up to 2 GS/s sample rate on all channels
- 2.5k point record length on all channels
- Advanced triggers including pulse and line-selectable video triggers

#### **Key features**

- 7 inch WVGA (800X480) Active TFT Color Display
- 34 automated measurements
- Dual window FFT, simultaneously monitors both the time and frequency domains
- Built-in waveform limit and TrendPlot<sup>™</sup> testing
- Dual channel frequency counter
- Zoom Function
- Automated, extended data logging feature
- Autoset and auto-ranging functions
- Built-in context-sensitive help


- Multiple-language user interface
- Small footprint and lightweight Only 4.9 in. (124 mm) deep and 4.4 lb. (2 kg)

#### Connectivity

- USB 2.0 host port on the front panel for quick and easy data storage
- USB 2.0 device port on rear panel for easy connection to a PC

## Seeing signal details


To properly analyze signals you need to make sure that you can see them in enough detail. The TBS1000B comes standard with a 7-inch high resolution TFT display for a clear view of all of your signals and critical on screen information. The instrument is further enhanced by a user interface inspired by the award winning Tektronix MSO/DPO series of instruments. The interface is easy to use, provides quick access to all of the oscilloscope functions and includes a high resolution "Pan & Zoom" feature enabling you to see even more signal details of up to 10 times normal resolution.

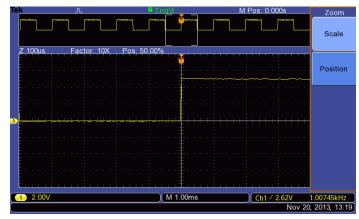

The zoom function shows details in an event of up to 10X the normal view.

# Digital precision for accurate measurements


With up to 200 MHz bandwidth, 2 GS/s maximum sample rate and 3% vertical measurement accuracy the TBS1000B allows you to see the details of your signals. With the Tektronix proprietary sampling technology there are no compromises, you will get the stated real-time sampling rate on all channels, all the time with at least of 10X oversampling. The sampling performance is not reduced when changing horizontal settings or when using multiple channels, enabling you to see the true characteristics of your signals.

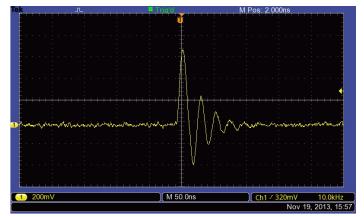

See all the details other oscilloscopes might miss with Tektronix proprietary digital realtime sampling.


# Critical tools for troubleshooting your device

The TBS1000B oscilloscope comes standard with a variety of advanced triggers used to debug today's complex circuitry. Flexible options for utilizing rising or falling edges, pulse widths and video trigger set-ups enable users to quickly isolate their signals of interest.

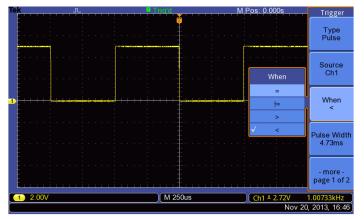


The pulse trigger function can easily capture critical events.

Once signals are captured, the TBS1000B offers advanced math and measurement capabilities making it easy to evaluate signal quality . Users can add, subtract and multiply waveforms or use any one of 34 automated measurements to quickly and reliably calculate important signal characteristics such as frequency, rise time or overshoot.

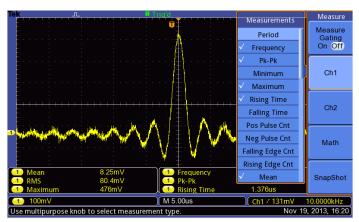

Quickly analyze signals with the standard 34 automated measurements.

A dedicated front panel button provides quick access to the FFT function that is capable of showing both frequency and time domain waveforms simultaneously, which provides a convenient way to see the relationship between signals and the FFT results.

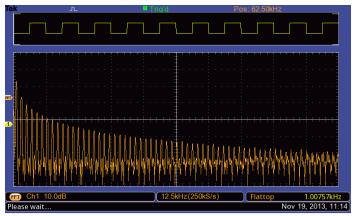

Quickly perform an FFT with a dedicated front panel button.

For accurate frequency measurements the TBS1000B also comes with built-in dual channel frequency counters. Independent control of each counter's trigger level provides an easy way to monitor two different signal frequencies simultaneously.



Dual channel - 6 digit frequency counters come standard with all TBS1000 models.


# Extensive monitoring and analysis tools

Intermittent faults can be hard to evaluate, simply because they do not repeat often making them difficult to capture. The TrendPlot<sup>™</sup> function helps find those faults by plotting measurement values over long periods of time. Select the measurement to capture on either or both channels and then set-up the oscilloscope to continuously monitor those measurements, plot the data on the display and simultaneously save the information to a USB thumb drive. Depending on the oscilloscope setting, you'll be able to capture data for minutes, hours or even days; the only limitation is the size of the thumb drive.



To find intermittent faults the TrendPlot <sup>™</sup> function can monitor measurements for long periods of time


Often, only Pass/Fail data is needed to determine if a signal is good. This can be accomplished easily with the TBS1000B Limit Test feature. The oscilloscope can be set-up to automatically monitor a source signals and output Pass or Fail results by evaluating whether the acquired waveform falls within predefined boundaries. The TBS1000B Limit Test feature allows users to create templates based on one or two independent reference waveforms, providing more flexibility when creating masks for complex signals. If a failure is detected, a series of specific actions can be triggered which include; stopping waveform acquisition, halting Limit Test functions, saving a screen image of the failed waveform, or any combination of the above.

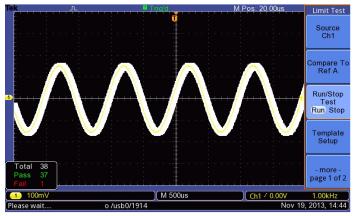

The Limit Test feature provides a guick Pass/Fail comparison between any triggered input signal and a user- defined template.

#### Flexible data transfer

The USB host port on the front panel enables you to save your instrument settings, screenshots, and waveform data onto a USB memory device. This port also supports the built-in Data Logging feature which enables you to set up the oscilloscope to save user-specified triggered waveforms to a USB device for up to 24 hours. You can also select the "Infinite" option for continuous waveform monitoring. In the infinite mode you can save your triggered waveforms to an external USB memory device without a duration limitation until the memory device is full. The oscilloscope will then guide you to insert another USB memory device to continue saving waveforms.

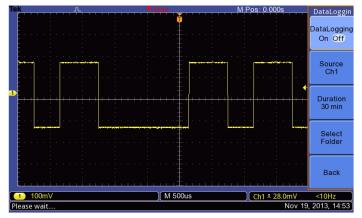

Data logging enables automatic saving of triggered waveforms.

# Designed to make your work easy


The TBS1000B series oscilloscopes are designed with the ease of use and familiar operation you have come to expect from Tektronix.

# Intuitive operation

The intuitive user interface with dedicated per-channel vertical controls. auto-setup, and auto-ranging makes these instruments easy to use, reducing learning time and increasing efficiency.

# Help when you need it, where you need it

The built-in Help menu provides you with important information about your oscilloscope's features and functions. Help is provided in the same languages as the user interface.

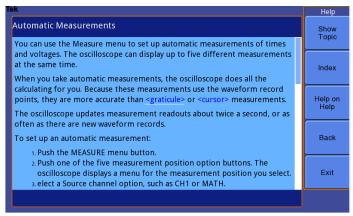

The context-sensitive help system provides important information specific to the task you are working on.

# Performance you can count on

In addition to industry-leading service and support, every TBS1000B series oscilloscope comes backed with a 5-year warranty as standard.

# **Specifications**

All specifications apply to all models unless noted otherwise.

#### **Model overview**

	TBS1052B	TBS1072B	TBS1102B	TBS1152B	TBS1202B
Bandwidth <sup>1</sup>	50 MHz	70 MHz	100 MHz	150 MHz	200 MHz
Channels	2	2	2	2	2
Sample rate on each channel	1.0 GS/s	1.0 GS/s	2 .0 GS/s	2 .0 GS/s	2 .0 GS/s
Record length	2.5k points at all-time bases				

# **Vertical system – Analog channels**

Vertical resolution	8 bits
Input sensitivity range	2 mV to 5 V/div on all models with calibrated fine adjustment
DC gain accuracy	±3%, from 10 mV/div to 5 V/div
Maximum input voltage	300 $V_{RMS}$ CAT II; derated at 20 dB/decade above 100 kHz to 13 $V_{p-p}$ AC at 3 MHz and above
Offset range	2 mV to 200 mV/div: ±1.8 V
	>200 mV to 5 V/div: ±45 V
Bandwidth limit	20 MHz
Input coupling	AC, DC, GND
Input impedance	1 M $\Omega$ in parallel with 20 pF
Vertical zoom	Vertically expand or compress a live or stopped waveform

# Horizontal system — Analog channels

Time base range	2.5 ns to 50 s/div
Time base accuracy	50 ppm
Horizontal zoom	Horizontally expand or compress a live or stopped waveform

<sup>1</sup> Bandwidth is 20 MHz at 2 mV/div

#### **Datasheet**

#### Input/Output ports

**USB** interface USB host port on front panel supports USB flash drives USB device port on back of instrument supports connection to PC and all PictBridge®-compatible printers **GPIB** interface Optional

#### **Data storage**

Nonvolatile storage

Reference waveform display 2.5K point reference waveforms

Waveform storage without

USB flash drive

2.5K point

Maximum USB flash drive size 64 GB

Waveform storage with USB flash drive

96 or more reference waveforms per 8 MB

Setups without USB flash

drive

10 front-panel setups

Setups with USB flash drive

4000 or more front-panel setups per 8 MB

Screen images with USB flash

128 or more screen images per 8 MB (the number of images depends on file format selected)

Save All with USB flash drive 12 or more Save All operations per 8 MB

A single Save All operation creates 3 to 9 files (setup, image, plus one file for each displayed waveform)

#### **Acquisition system**

**Acquisition modes** 

**Peak Detect** High-frequency and random glitch capture. Captures glitches as narrow as 12 ns (typical) at all time base settings from 5 μs/div to

50 s/div

Sample Sample data only

Average Waveform averaged, selectable: 4, 16, 64, 128

Single Sequence Use the Single Sequence button to capture a single triggered acquisition sequence

Roll At acquisition time base settings of >100 ms/div

#### **Trigger system**

External trigger input	Included on all models
Trigger modes	Auto, Normal, Single Sequence
Trigger types	
Edge (Rising/Falling)	Conventional level-driven trigger. Positive or negative slope on any channel. Coupling selections: AC, DC, Noise Reject, HF Reject, LF Reject
Video	Trigger on all lines or individual lines, odd/even or all fields from composite video, or broadcast standards (NTSC, PAL, SECAM)
Pulse Width (or Glitch)	Trigger on a pulse width less than, greater than, equal to, or not equal to, a selectable time limit ranging from 33 ns to 10 s
Trigger source	Two channel models: CH1, CH2, Ext, Ext/5, AC Line
Trigger view	Displays trigger signal while Trigger View button is depressed.
Trigger signal frequency readout	Provides a frequency readout of the trigger source.

#### **Waveform measurements**

^		
(:11	ırso	۱re

Types	Amplitude, Time
Measurements	$\Delta T$ , $1/\Delta T$ , $\Delta V$
Automatic measurements	Period, Frequency, Pos Width, Neg Width, Rise Time, Fall Time, Maximum, Minimum, Peak-Peak, Mean, RMS, Cycle RMS, Cursor RMS, Phase, Pos Pulse Cnt, Neg Pulse Cnt, Rise Edge Cn, Fall Edge Cn, Pos Duty, Neg Duty, Amplitude, Cycle Mean, Cursor Mean, Burst Width, Pos Overshoot, Neg Overshoot, Area, Cycle Area, High, Low, Delay RR, Delay R

### **Waveform math**

Arithmetic	Add, Subtract, Multiply	
Math functions	FFT	
FFT	Windows: Hanning, Flat Top, Rectangular 2048 sample points	
Sources	Two channel models: CH1 - CH2, CH2 - CH1, CH1 + CH2, CH1 × CH2	

#### **Autoset**

Autoset menu Single-button, automatic setup of all channels for vertical, horizontal, and trigger systems, with undo Autoset

Single Cycle, Multicycle, Rising or Falling Edge Square wave Sine wave Single Cycle, Multicycle, FFT Spectrum

FF

Video (NTSC, PAL, SECAM) Field: All, Odd, or Even Line: All or Selectable Line Number

# **Autorange**

Automatically adjust vertical and/or horizontal oscilloscope settings when probe is moved from point to point, or when the signal exhibits large changes.

#### **Frequency counter**

Resolution	6 digits
Accuracy (typical)	+ 51 parts per million including all frequency reference errors and +1 count errors
Frequency range	AC coupled, 10 Hz minimum to rated bandwidth
Frequency counter signal source	Pulse width or edge selected trigger source
	Frequency counter measures selected trigger source at all times in pulse width and edge mode, including when the oscilloscope acquisition is halted due to changes in run status, or acquisition of a single shot event has completed.
	The frequency counter does not measure pulses that do not qualify as legitimate trigger events.
	Pulse Width mode: Counts pulses of enough magnitude inside the 250 ms measurement window that qualify as triggerable events (e.g. all narrow pulses in a PWM pulse train if set to "<" mode and the limit is set to a relatively small number).
	Edge Trigger mode: Counts all pulses of enough magnitude.
Channels	2 channel

# **Datasheet**

# **Display system**

Interpolation	Sin (x)/x
Waveform styles	Dots, vectors
Persistence	Off, 1 s, 2 s, 5 s, infinite
Format	YT and XY

# **Physical characteristics**

-							
Di	m	P	n	ЗI	n	n	c

	mm	in.
Height	158.0	6.22
Width	326.3	12.85
Depth	124.2	4.89

#### **Shipping dimensions**

	mm	in.
Height	266.7	10.5
Width	476.2	18.75
Depth	228.6	9.0

#### Weight

	kg	lb.
Instrument only	2.0	4.3
with accessories	2.2	4.9

#### RM2000B rackmount

	mm	in
Width	482.6	19.0
Height	177.8	7.0
Depth	108.0	4.25

#### **Environmental**

Temperature

Operating 0 to +50 °C -40 to +71 °C Nonoperating

Humidity

Operating and nonoperating Up to 85% RH at or below +40 °C

Up to 45% RH up to +50 °C

Altitude

Operating and nonoperating Up to 3,000 m (9,843 ft.)

Regulatory

Meets Directive 2004/108/EC, EN 61326-2-1 Class A; Australian EMC Framework Electromagnetic compatibility

Safety UL61010-1:2004, CSA22.2 No. 61010-1:2004, EN61010-1:2001, IEC61010-1:2001

# Ordering information

#### **Models**

TBS1052B 50 MHz, 2 Ch, 1 GS/s, TFT DSO TBS1072B 70 MHz, 2 Ch, 1 GS/s, TFT DSO TBS1102B 100 MHz, 2 Ch, 2 GS/s, TFT DSO TBS1152B 150 MHz, 2 Ch, 2 GS/s, TFT DSO TBS1202B 200 MHz, 2 Ch, 2 GS/s, TFT DSO

### Language options

Opt. L1 French overlay Opt. L2 Italian overlay Opt. L3 German overlay Opt. L4 Spanish overlay Opt. L5 Japanese overlay Opt. L6 Portuguese overlay Opt. L7 Simplified Chinese overlay Opt. L8 Traditional Chinese overlay Opt. L9 Korean overlay

# Power plug options

Opt. L10

Opt. A0 North America power plug (115 V, 60 Hz) Opt. A1 Universal Euro power plug (220 V, 50 Hz) Opt. A2 United Kingdom power plug (240 V, 50 Hz) Opt. A3 Australia power plug (240 V, 50 Hz) Opt. A5 Switzerland power plug (220 V, 50 Hz) Japan power plug (100 V, 110/120 V, 60 Hz) Opt. A6 Opt. A10 China power plug (50 Hz) Opt. A11 India power plug (50 Hz) Opt. A12 Brazil power plug (60 Hz)

No power cord

Russian overlay

#### Service options

Opt. A99

Opt. D1 Calibration Data Report

Probes and accessories are not covered by the oscilloscope warranty and Service Offerings. Refer to the datasheet of each probe and accessory model for its unique warranty and calibration terms.

# **Probe option**

TBS1XX2B P2220

Replaces standard probes with P2220 probes (200 MHz passive voltage probes with 1x/ 10x attenuation)

#### Standard accessories

Accessory	Description
Passive probes, one per channel	TPP0051: 50MHz passive probe for: TBS1052B
	TPP0101: 100 MHz passive probe for: TBS1072B, TBS1102B
	TPP0201: 200 MHz passive probe for: TBS1152B, TBS1202B
Power cord	(Please specify plug option)
NIM/NIST	Traceable certificate of calibration
Printed documentation	Installation and safety manual
	(English, Japanese, and Simplified Chinese)
CD with customer documentation	Customer documentation including detailed user manuals (English, French, German, Italian, Japanese, Korean, Portuguese, Russian, Simplified Chinese, Spanish, Traditional Chinese)
5-year warranty	Covers labor and parts for defects in materials and workmanship for 5 years, excluding probes and accessories (probes and accessories are not covered by the oscilloscope warranty and service offerings. refer to the data sheet of each probe and accessory model for its unique warranty and calibration terms)

#### **Recommended accessories**

Accessory	Description
TEK-USB-488	GPIB-to-USB converter
AC2100	Soft carrying case for instrument
HCTEK4321	Hard plastic carrying case for instrument (requires AC2100)
RM2000B	Rackmount kit
077-0444-xx	Programmer manual – English only
077-0772-xx	Service manual – English only
174-4401-xx	USB host to device cable, 3 ft. long

# **Recommended probes**

Probe	Description
TPP0051	10X passive probe, 50 MHz bandwidth
TPP0101	10X passive probe, 100 MHz bandwidth
TPP0201	10X passive probe, 200 MHz bandwidth
P2220	1X/10X passive probe, 200 MHz bandwidth
P6101B	1X passive probe (15 MHz, 300 V RMS CAT II rating)
P6015A	1000X high-voltage passive probe (75 MHz)
P5100A	100X high-voltage passive probe (500 MHz)
P5200A	50 MHz, 50X/500X high-voltage differential probe
P6021A	15 A, 60 MHz AC current probe
P6022	6 A, 120 MHz AC current probe
A621	2000 A, 5 to 50 kHz AC current probe
A622	100 A, 100 kHz AC/DC current probe/BNC
TCP303/TCPA300	150 A, 15 MHz AC/DC current probe/amplifier
TCP305A/TCPA300	50 A, 50 MHz AC/DC current probe/amplifier

Probe	Description
TCP312A/TCPA300	30 A, 100 MHz AC/DC current probe/amplifier
TCP404XL/TCPA400	500 A, 2 MHz AC/DC current probe/amplifier





Tektronix is registered to ISO 9001 and ISO 14001 by SRI Quality System Registrar.



Product(s) complies with IEEE Standard 488.1-1987, RS-232-C, and with Tektronix Standard Codes and Formats.

#### Datasheet

ASEAN / Australasia (65) 6356 3900 Belgium 00800 2255 4835\*
Central East Europe and the Baltics +41 52 675 3777
Finland +41 52 675 3777 Hong Kong 400 820 5835 Japan 81 (3) 6714 3010 Middle East, Asia, and North Africa +41 52 675 3777 People's Republic of China 400 820 5835 Republic of Korea 001 800 8255 2835 **Spain** 00800 2255 4835\* **Taiwan** 886 (2) 2722 9622

Austria 00800 2255 4835\* Brazil +55 (11) 3759 7627 Central Europe & Greece +41 52 675 3777 France 00800 2255 4835\* India 000 800 650 1835 Luxembourg +41 52 675 3777 The Netherlands 00800 2255 4835\* Poland +41 52 675 3777 Russia & CIS +7 (495) 6647564 Sweden 00800 2255 4835\* United Kingdom & Ireland 00800 2255 4835\*

Balkans, Israel, South Africa and other ISE Countries +41 52 675 3777 Canada 1 800 833 9200 Denmark +45 80 88 1401 Germany 00800 2255 4835\* Italy 00800 2255 4835\* **Mexico, Central/South America & Caribbean** 52 (55) 56 04 50 90 **Norway** 800 16098 Portugal 80 08 12370 South Africa +41 52 675 3777 Switzerland 00800 2255 4835\*

USA 1 800 833 9200

\* European toll-free number. If not accessible, call: +41 52 675 3777

Updated 10 April 2013

For Further Information. Tektronix maintains a comprehensive, constantly expanding collection of application notes, technical briefs and other resources to help engineers working on the cutting edge of technology. Please visit www.tektronix.com.

Copyright Tektronix, Inc. All rights reserved. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. TEKTRONIX and TEK are registered trademarks of Tektronix, Inc. All other trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies. 10 Mar 2014

3GW-30004-1



www.tektronix.com	Tektronix

# AMEYA360 Components Supply Platform

# **Authorized Distribution Brand:**

























# Website:

Welcome to visit www.ameya360.com

# Contact Us:

# > Address:

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd Minhang District, Shanghai , China

# > Sales:

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

# Customer Service :

Email service@ameya360.com

# Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com