## **PmodAD2™ Reference Manual**

Revision: August 30, 2011

Note: This document applies to REV A of the board.




1300 NE Henley Court, Suite 3 Pullman, WA 99163 (509) 334 6306 Voice | (509) 334 6300 Fax

#### **Overview**

The PmodAD2 is an analog-to-digital converter module with up to four channels at 12-bit resolution powered by the Analog Devices AD7991.

#### Features include:

- up to four analog to digital converter channels
- up to 12-bit resolution
- on-board 2.048V voltage reference
- ability to choose the voltage reference
- I<sup>2</sup>C interface

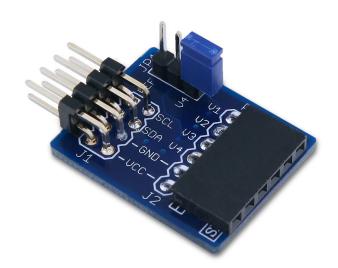

## **Functional Description**

The PmodAD2 uses an 8-pin connector that allows communication via I<sup>2</sup>C. The PmodAD2 also has a 6-pin connector that allows up to four analog inputs or up to three analog inputs and a voltage reference.

#### Interface

All communications with the device must specify a device address and a flag indicating whether the communication is a read or a write. This is followed by the actual data transfer. For details on read and write procedures please see the AD7991 datasheet.

Device configuration is performed by writing to the configuration register within the device. This allows you to choose which channels are converting data, whether or not there is an external reference voltage, and whether or not there is bit trial or sample delay.

To read data from the conversion result, see "Reading from the AD7991/AD7995/AD7999" in the AD7991 datasheet.

#### Interface Connector Signal Description

Connector J1 – I2C Communications			
Pin	Signal	Description	
1, 2	SCL	I2C Clock	
3, 4	SDA	I2C Data	
5, 6	GND	Power Supply Ground	
7, 8	VCC	Power Supply (3.3V)	

The I<sup>2</sup>C interface standard uses two signal lines. These are I<sup>2</sup>C data (SDA) and I<sup>2</sup>C clock (SCL). These signals map to the serial data (SDA) and serial clock (SCL), respectively, on the AD7991.

Doc: 502-217 page 1 of 2



# Analog Inputs and $V_{\text{Ref}}$

The PmodAD2 allows for up to four analog inputs, VIN1 – VIN4. To use the input VIN4, the jumper JP1 must be set to V4.

The configuration register has a REF\_SEL bit that, when enabled, allows a voltage other than the supply voltage to be used as the reference. If REF\_SEL is enabled, and if JP1 is set to REF,  $V_{Ref}$  from the on-board voltage reference generator is 2.048V. If JP1 is set to V4,  $V_{Ref}$  is the voltage at input VIN4.

Connector J2 – Analog Input			
Pin	Signal	Description	
1	VIN1	Analog Input 1	
2	VIN2	Analog Input 2	
3	VIN3	Analog Input 3	
4	VIN4	Analog Input 4	
5	GND	Power Supply Ground	
6	VCC	Power Supply (3.3V)	

www.digilentinc.com page 2 of 2

# AMEYA360 Components Supply Platform

## **Authorized Distribution Brand:**

























## Website:

Welcome to visit www.ameya360.com

#### Contact Us:

### Address:

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd Minhang District, Shanghai , China

#### > Sales:

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

### Customer Service :

Email service@ameya360.com

# Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com