

PIC16F/LF720/721 Flash Memory Programming Specification

This document includes the programming specifications for the following devices:

- PIC16F720
- PIC16LF720
- PIC16F721
- PIC16LF721

1.0 OVERVIEW

The PIC16F/LF720 and PIC16F/LF721 devices are programmed using In-Circuit Serial Programming™ (ICSP™). This programming specification applies to the PIC16F/LF720 and PIC16F/LF721 devices in all packages.

With the exception of memory size and the voltage regulator, all other aspects of the PIC16F/LF720 and PIC16F/LF721 devices are identical.

1.1 Hardware Requirements

PIC16F/LF720 and PIC16F/LF721 devices require one power supply for V_{DD} and one for $\overline{\text{MCLR}}/\text{VPP}$. (See Section 8.0 “Electrical Specifications” for more details.)

1.2 Pin Utilization

Five pins are needed for ICSP™ programming. The pins are listed in Table 1-1.

TABLE 1-1: PIN DESCRIPTIONS DURING PROGRAMMING

Pin Name	During Programming		
	Function	Pin Type	Pin Description
RA1	ICSPCLK	I	Clock Input – Schmitt Trigger Input
RA0	ICSPDAT	I/O	Data Input/Output – Schmitt Trigger Input
$\overline{\text{MCLR}}/\text{VPP}$	Program/Verify mode	P ⁽¹⁾	Program Mode Select/Programming power supply
V _{DD}	V _{DD}	P	Power Supply
V _{SS}	V _{SS}	P	Ground

Legend: I = Input, O = Output, P = Power

Note 1: To activate the Program/Verify mode, high voltage needs to be applied to $\overline{\text{MCLR}}/\text{VPP}$ input. Since the $\overline{\text{MCLR}}/\text{VPP}$ is used for a level source, $\overline{\text{MCLR}}/\text{VPP}$ does not draw any significant current.

PIC16F/LF720/721

2.0 DEVICE PINOUTS

The pin diagrams for the PIC16F/LF720 and PIC16F/LF721 family are shown in Figure 2-1 and Figure 2-2. The pins that are required for programming are listed in Table 1-1 and shown in bold lettering in the pin diagrams.

FIGURE 2-1: 20-PIN DIAGRAM FOR PIC16F/LF720 AND PIC16F/LF721


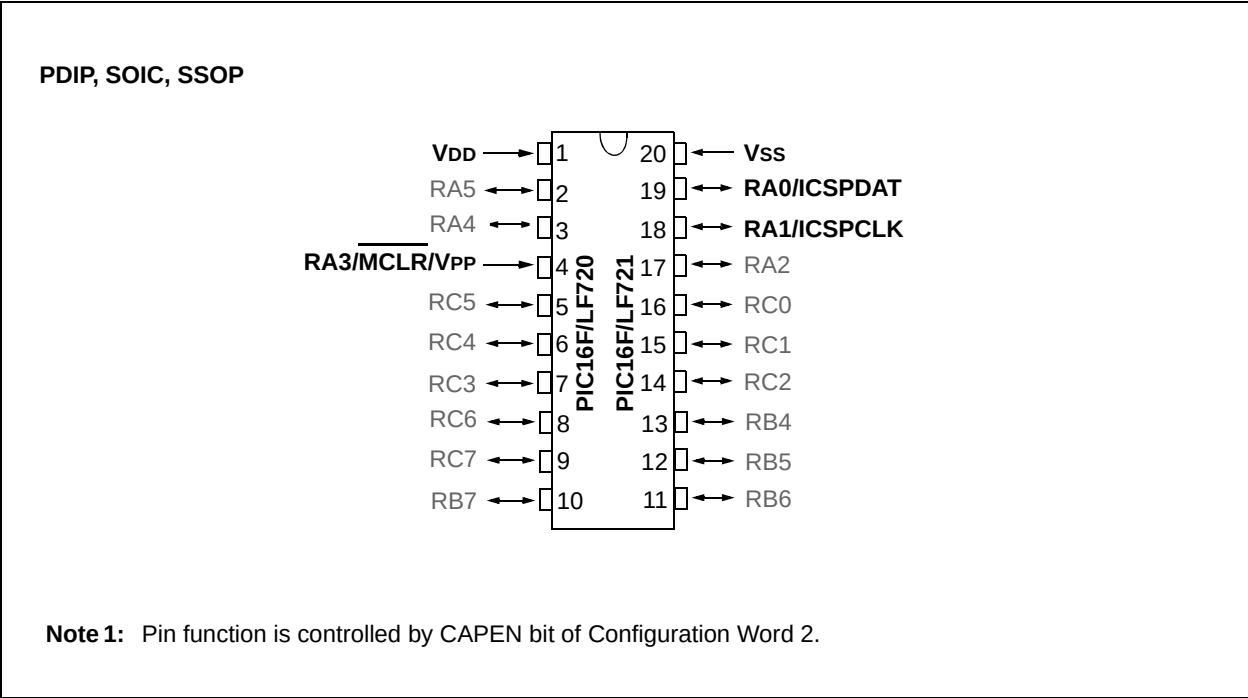



FIGURE 2-2: 20-PIN DIAGRAM FOR PIC16F/LF720 AND PIC16F/LF721

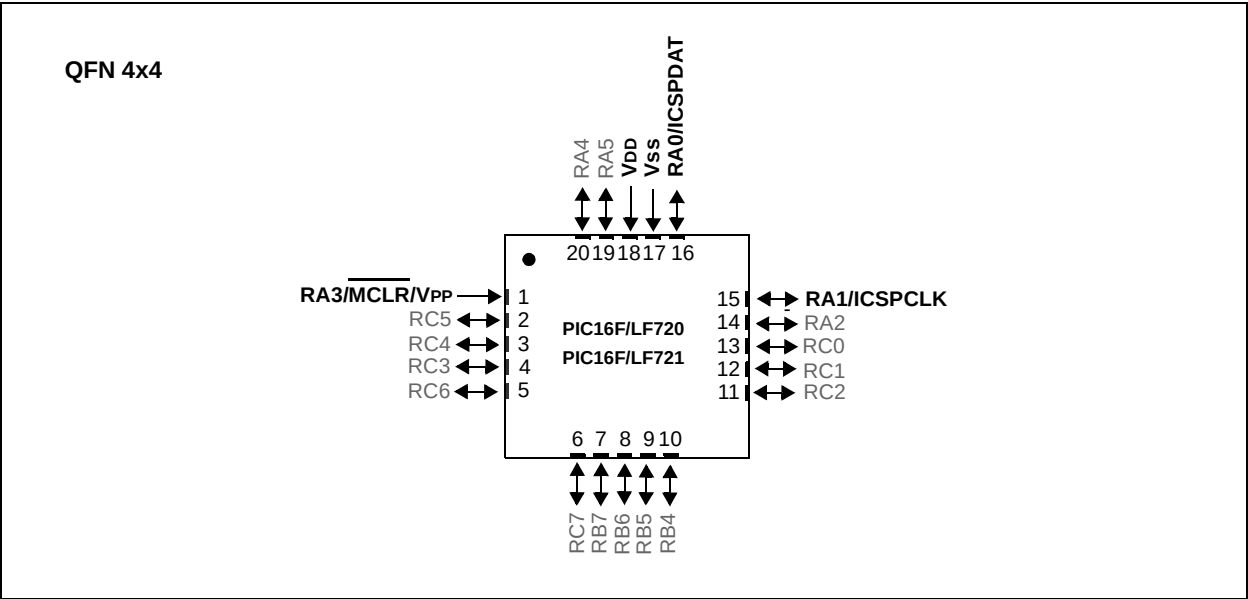

3.0 MEMORY MAP


The memory for the PIC16F/LF720 and PIC16F/LF721 devices is broken into two sections: program memory and configuration memory. The size of the program memory and the configuration memory is different between devices.

FIGURE 3-1: PIC16F720 AND PIC16LF720 PROGRAM MEMORY MAPPING

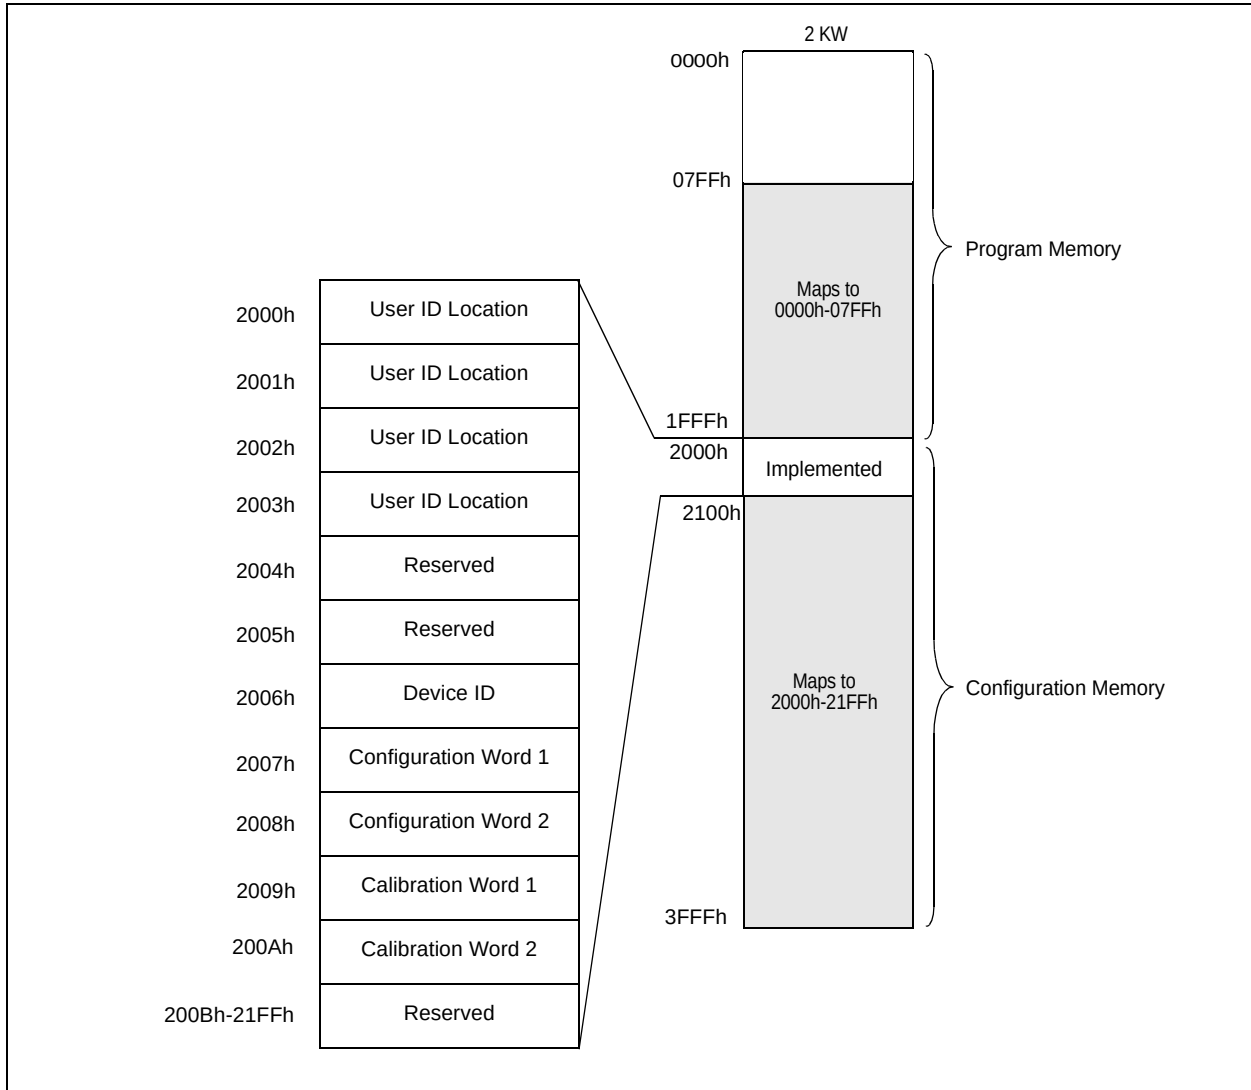

PIC16F/LF720/721

FIGURE 3-2: PIC16F721 AND PIC16LF721 PROGRAM MEMORY MAPPING

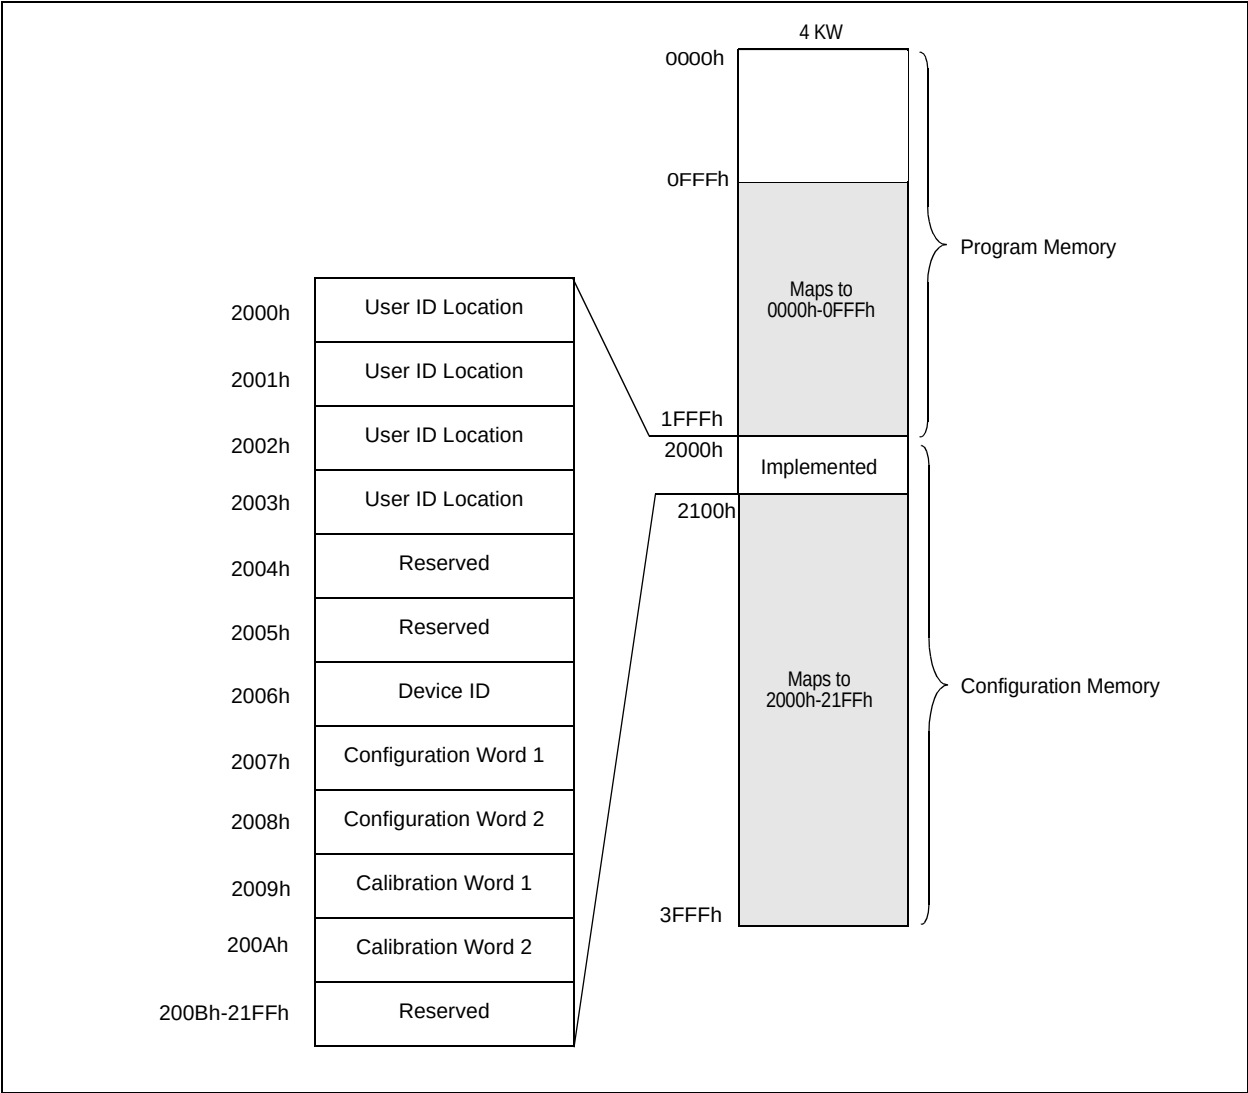

3.1 User ID Location

A user may store identification information (user ID) in four designated locations. The user ID locations are mapped to 2000h-2003h. Each location is 14 bits in length. Code protection has no effect on these memory locations. Each location may be read with code protection enabled or disabled.

Note: MPLAB® IDE only displays the 7 Least Significant bits (LSb) of each user ID location, the upper bits are not read. It is recommended that only the 7 LSbs be used if MPLAB IDE is the primary tool used to read these addresses.

3.2 Device ID

The device ID word for the PIC16F/LF720 and the PIC16F/LF721 is located at 2006h. This location cannot be erased or modified.

REGISTER 3-1: DEVICEID: DEVICE ID REGISTER⁽¹⁾

R-q	R-q	R-q	R-q	R-q	R-q	R-q
DEV8	DEV7	DEV6	DEV5	DEV4	DEV3	DEV2
bit 13						bit 7

R-q	R-q	R-q	R-q	R-q	R-q	R-q
DEV1	DEV0	REV4	REV3	REV2	REV1	REV0
bit 6						bit 0

Legend:	P = Programmable bit	U = Unimplemented bit, read as '0'
R = Readable bit	W = Writable bit	'0' = Bit is cleared
-n = Value at POR	'1' = Bit is set	x = Bit is unknown

bit 13-5 **DEV<8:0>:** Device ID bits
These bits are used to identify the part number.

bit 4-0 **REV<4:0>:** Revision ID bits
These bits are used to identify the revision.

Note 1: This location cannot be written.

TABLE 3-1: DEVICE ID VALUES

DEVICE	DEVICE ID VALUES	
	DEV	REV
PIC16F720	01 1100 0000	x xxxx
PIC16F721	01 1100 0010	x xxxx
PIC16LF720	01 1100 0100	x xxxx
PIC16LF721	01 1100 0110	x xxxx

PIC16F/LF720/721

3.3 Configuration Words

The PIC16F/LF720 and PIC16F/LF721 have two Configuration Words, Configuration Word 1 (2007h) and Configuration Word 2 (2008h). The individual bits within these Configuration Words are used to enable or disable device functions such as the Brown-out Reset, code protection and Power-up Timer.

3.4 Calibration Words

For the PIC16F/LF720 and PIC16F/LF721 devices, the 16 MHz internal oscillator (INTOSC) and the Brown-out Reset (BOR) are factory calibrated and stored in Calibration Words 1 and 2 (2009h and 200Ah).

The Calibration Words do not participate in erase operations. The device can be erased without affecting the Calibration Words.

REGISTER 3-2: CONFIGURATION WORD 1

R/P-1	R/P-1	U-1	U-1	R/P-0	R/P-0	U-1
$\overline{\text{DEBUG}}^{(1)}$	PLLEN	—	—	BOREN1	BOREN0	—
bit 13						bit 7

R/P-1	R/P-1	R/P-1	R/P-1	U-1	R/P-1	R/P-1
$\overline{\text{CP}}$	MCLR $\overline{\text{E}}$	$\overline{\text{PWRT}}\overline{\text{E}}$	WDTEN	—	FOSC1	FOSC0
bit 6						bit 0

Legend:	W = Writable bit	0 = Bit is cleared
R = Readable bit	1 = Bit is set	x = Bit is unknown
-n = Value for blank device	U = Unimplemented bit, read as '1'	

- bit 13 **$\overline{\text{DEBUG}}^{(1)}$** : Debugger Mode bit
0 = Background debugger is enabled
1 = Background debugger is disabled
- bit 12 **PLLEN**: INTOSC PLL Enable bit
0 = INTOSC Frequency is 500 kHz
1 = INTOSC Frequency is 16 MHz (32x)
- bit 11-10 **Unimplemented**: Read as '1'
- bit 9-8 **BOREN<1:0>**: Brown-out Reset Enable bits ⁽²⁾
0x = Brown-out Reset disabled (Preconditioned State)
10 = Brown-out Reset enabled during operation and disabled in Sleep
11 = Brown-out Reset enabled
- bit 7 **Unimplemented**: Read as '1'
- bit 6 **$\overline{\text{CP}}$** : Flash Program Memory Code Protection bit
PIC16F720/721
0 = 0000h to 07FFh/0FFFh code protection on
1 = Code protection off
- bit 5 **MCLR $\overline{\text{E}}$** : RA3/MCLR/VPP Pin Function Select bit
1 = RA3/MCLR/VPP pin function is MCLR; Weak pull-up enabled.
0 = RA3/MCLR/VPP pin function is digital input; MCLR internally disabled; Weak pull-up disabled
- bit 4 **$\overline{\text{PWRT}}\overline{\text{E}}$** : Power-up Timer Enable bit
0 = PWRT enabled
1 = PWRT disabled
- bit 3 **WDTEN**: Watchdog Timer Enable bit
0 = WDT disabled
1 = WDT enabled
- bit 2 **Unimplemented**: Read as '1'
- bit 1-0 **FOSC<1:0>**: Oscillator Selection bits
11 = EC oscillator: CLK0 function on RA4/CLK0 pin, CLKI on RA5/CLKI
10 = EC oscillator: I/O function on RA4/CLK0 pin, CLKI on RA5/CLKI
01 = INTOSC oscillator: CLK0 function on RA4/CLK0 pin, I/O function on RA5/CLKI
00 = INTOSCIO oscillator: I/O function on RA4/CLK0 pin, I/O function on RA5/CLKI

Note 1: Debug bit is ignored when code-protect is enabled ($\overline{\text{CP}} = 0$).

2: Fixed Voltage Reference is automatically enabled whenever the BOR is enabled.

PIC16F/LF720/721

REGISTER 3-3: CONFIGURATION WORD 2

U-1	U-1	U-1	U-1	U-1	U-1	U-1
—	—	—	—	—	—	—
bit 13						bit 7

U-1	U-1	R/P-1	U-1	U-1	R/P-1	R/P-1
—	—	VCAPEN	—	—	WRT1	WRT0
bit 6						bit 0

Legend:	W = Writable bit	0 = Bit is cleared
R = Readable bit	1 = Bit is set	x = Bit is unknown
-n = Value for blank device	U = Unimplemented bit, read as '1'	

bit 13-5 **Unimplemented:** Read as '1'

bit 4 **VCAPEN⁽¹⁾:** Voltage Regulator Capacitor Enable bits
0 = VCAP functionality is enabled on RA2. (VDDCORE is connected to the pad)
1 = All VCAP pin functions are disabled (Erased or Preconditioned State)

bit 3-2 **Unimplemented:** Read as '1'

bit 1-0 **WRT<1:0>:** Flash Memory Self-Write Protection bits

2 kW Flash memory: PIC16F/LF720 :

- 11 = Write protection off
- 10 = 000h to 1FFh write protected, 200h to 7FFh may be modified by PMCON control
- 01 = 000h to 3FFh write protected, 400h to 7FFh may be modified by PMCON control
- 00 = 000h to 7FFh write protected, no addresses may be modified by PMCON control

4 kW Flash memory: PIC16F/LF721:

- 11 = Write protection off
- 10 = 000h to 1FFh write protected, 200h to FFFh may be modified by PMCON control
- 01 = 000h to 7FFh write protected, 800h to FFFh may be modified by PMCON control
- 00 = 000h to FFFh write protected, no addresses may be modified by PMCON control

Note 1: For the PIC16F720/721 only.

4.0 PROGRAM/VERIFY MODE

In Program/Verify mode, the program memory and the configuration memory can be accessed and programmed in serial fashion. ICSPDAT and ICSPCLK are used for the data and the clock, respectively. All commands and data words are transmitted LSb first. Data changes on the rising edge of the ICSPCLK and latched on the falling edge. In Program/Verify mode, both the ICSPDAT and ICSPCLK are Schmitt Trigger inputs. The sequence that enters the device into Program/Verify mode places all other logic into the Reset state. Upon entering Program/Verify mode, all I/Os are automatically configured as high-impedance inputs and the address is cleared.

4.1 Program/Verify Mode Entry and Exit

There are two different methods of entering Program/Verify mode:

- VPP – First entry mode
- VDD – First entry mode

4.1.1 VPP – FIRST ENTRY MODE

To enter Program/Verify mode via the VPP-first method the following sequence must be followed:

1. Hold ICSPCLK and ICSPDAT low. All other pins should be unpowered.
2. Raise the voltage on $\overline{\text{MCLR}}$ from 0V to $V_{\text{IH}}H$.
3. Raise the voltage on VDD from 0V to the desired operating voltage.

The VPP-first entry prevents the device from executing code prior to entering Program/Verify mode. For example, when the Configuration Word has $\overline{\text{MCLR}}$

disabled ($\text{MCLRE} = 0$), the power-up time is disabled ($\text{PWRT} = 0$), the internal oscillator is selected ($\text{FOSC} = 10x$), and RA0 and RA1 are driven by the user application, the device will execute code. Since this may prevent entry, VPP-First Entry mode is strongly recommended. See the timing diagram in Figure 8-2.

4.1.2 VDD – FIRST ENTRY MODE

To enter Program/Verify mode via the VDD-first method, the following sequence must be followed:

1. Hold ICSPCLK and ICSPDAT low.
2. Raise the voltage on VDD from 0V to the desired operating voltage.
3. Raise the voltage on $\overline{\text{MCLR}}$ from VDD or below to $V_{\text{IH}}H$.

The VDD-first method is useful when programming the device, when VDD is already applied, for it is not necessary to disconnect VDD to enter Program/Verify mode. See the timing diagram in Figure 8-1.

4.1.3 PROGRAM/VERIFY MODE EXIT

To exit Program/Verify mode take $\overline{\text{MCLR}}$ to VDD or lower (V_{IL}). See Figures 8-3 and 8-4.

4.2 Program/Verify Commands

The PIC16F/LF720 and PIC16F/LF721 implement 10 programming commands, each six bits in length. The commands are summarized in Table 4-1.

Commands that have data associated with them are specified to have a minimum delay of TDLY between the command and the data. After this delay 16 clocks are required to either clock in or clock out the 14-bit data word. The first clock is for the Start bit and the last clock is for the Stop bit.

TABLE 4-1: COMMAND MAPPING FOR PIC16F/LF720 AND PIC16F/LF721

Command	Mapping						Data/Note
	Binary (MSb ... LSb)					Hex	
Load Configuration	x	0	0	0	0	00h	0, data (14), 0
Load Data For Program Memory	x	0	0	0	1	02h	0, data (14), 0
Read Data From Program Memory	x	0	0	1	0	04h	0, data (14), 0
Increment Address	x	0	0	1	1	06h	
Reset Address	x	1	0	1	1	06h	
Begin Internally Timed Programming	x	0	1	0	0	08h	
Begin Externally Timed Programming	x	1	1	0	0	08h	
End Externally Timed Programming	x	0	1	0	1	0Ah	
Bulk Erase Program Memory	x	0	1	0	0	09h	Internally Timed
Row Erase Program Memory	x	1	0	0	0	11h	Internally Timed

PIC16F/LF720/721


4.2.1 LOAD CONFIGURATION

The Load Configuration command is used to access the configuration memory (User ID Locations, Configuration Words, Calibration Words). The Load Configuration command sets the address to 2000h and loads the data latches with one word of data (see Figure 4-1).

After issuing the Load Configuration command, use the Increment Address command until the proper address is reached. The address is then programmed by issuing either the Begin Internally Timed Programming or Begin Externally Timed Programming command.

The only way to get back to the program memory (address 0) is to exit Program/Verify mode or issue the Reset Address command after the configuration memory has been accessed by the Load Configuration command.


FIGURE 4-1: LOAD CONFIGURATION

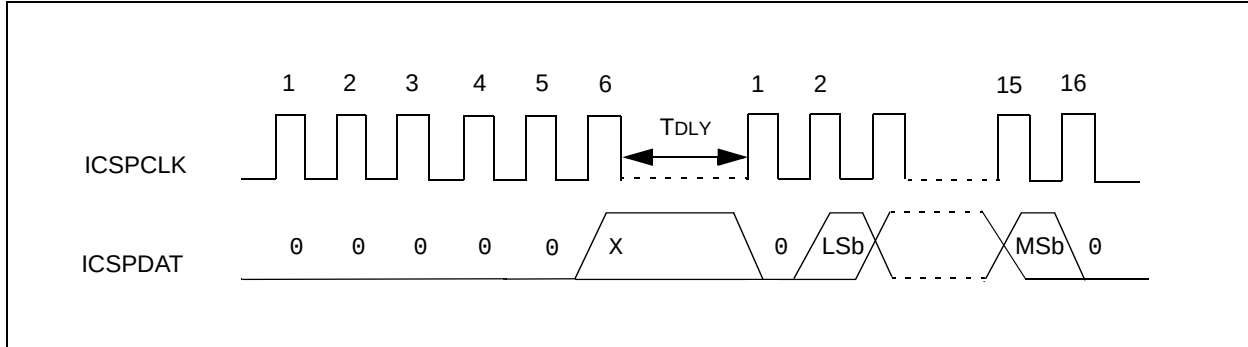

4.2.2 LOAD DATA FOR PROGRAM MEMORY

The Load Data for Program Memory command is used to load one 14-bit word into the data latches. The word programs into program memory after the Begin Internally Timed Programming or Begin Externally Timed Programming command is issued (see Figure 4-2).


FIGURE 4-2: LOAD DATA FOR PROGRAM MEMORY

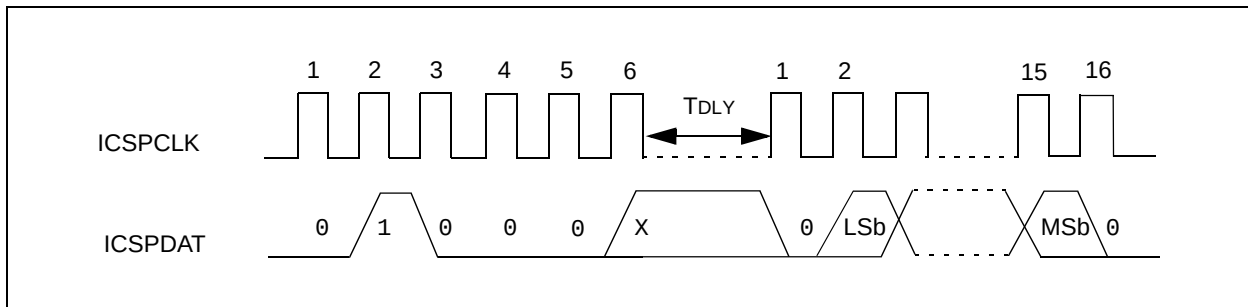

4.2.3 READ DATA FROM PROGRAM MEMORY

The Read Data from Program Memory command will transmit data bits out of the program memory map currently accessed, starting with the second rising edge of the clock input. The ICSPDAT pin will go into Output mode on the first falling clock edge, and it will revert to Input mode (high-impedance) after the 16th falling edge of the clock. If the program memory is code-protected (CP), the data will be read as zeros (see Figure 4-3).

FIGURE 4-3: READ DATA FROM PROGRAM MEMORY

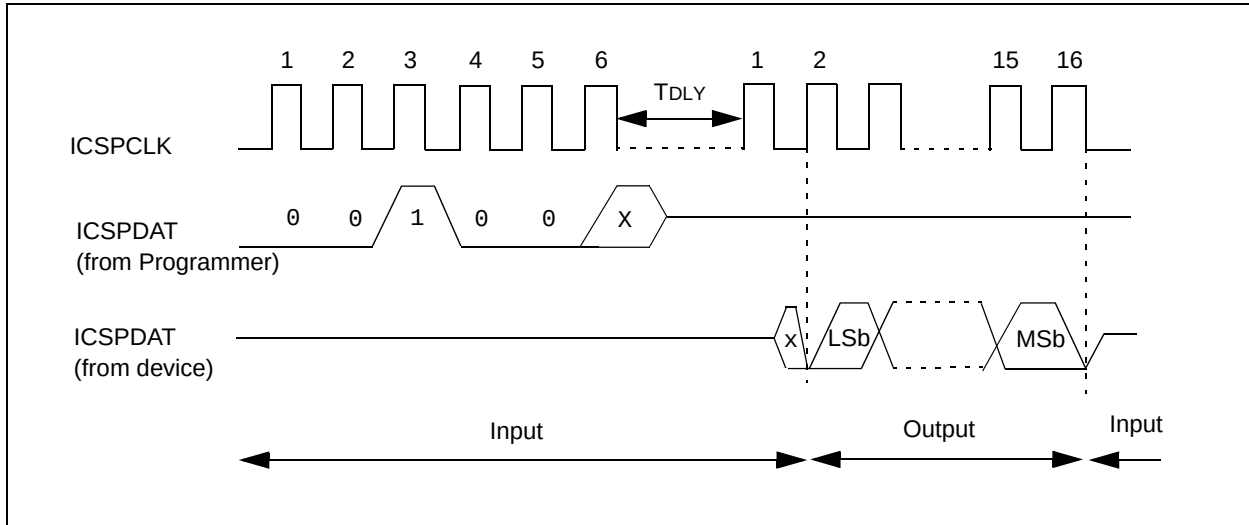


4.2.4 INCREMENT ADDRESS

The address is incremented when this command is received. It is not possible to decrement the address. To reset this counter, the user must use the Reset Address command or exit Program/Verify mode and re-enter it.

If the address is incremented from address 1FFFh, it will wrap-around to location 0000h. If the address is incremented from 3FFFh, it will wrap-around to location 2000h.

FIGURE 4-4: INCREMENT ADDRESS

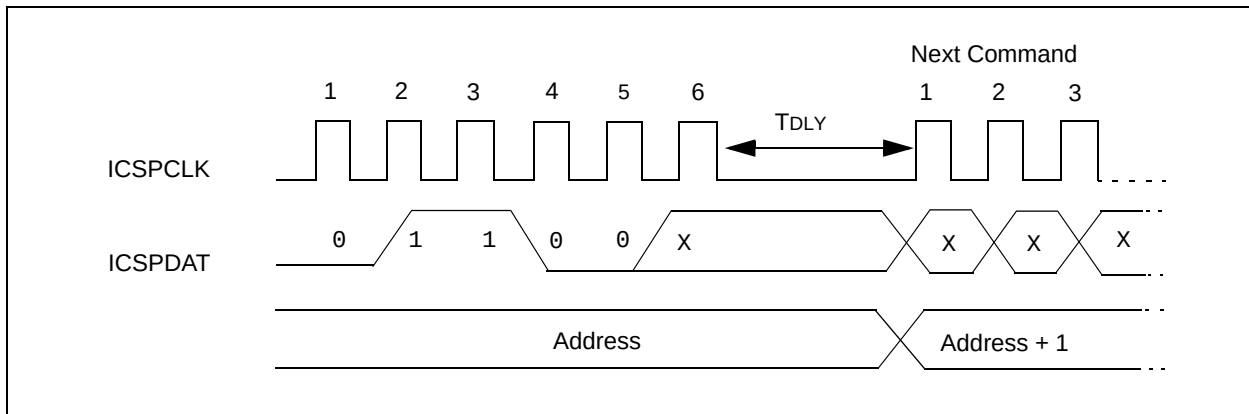


PIC16F/LF720/721

4.2.5 RESET ADDRESS

The Reset Address command will reset the address to 0000h, regardless of the current value. The address is used in program memory or the configuration memory.

FIGURE 4-5: RESET ADDRESS

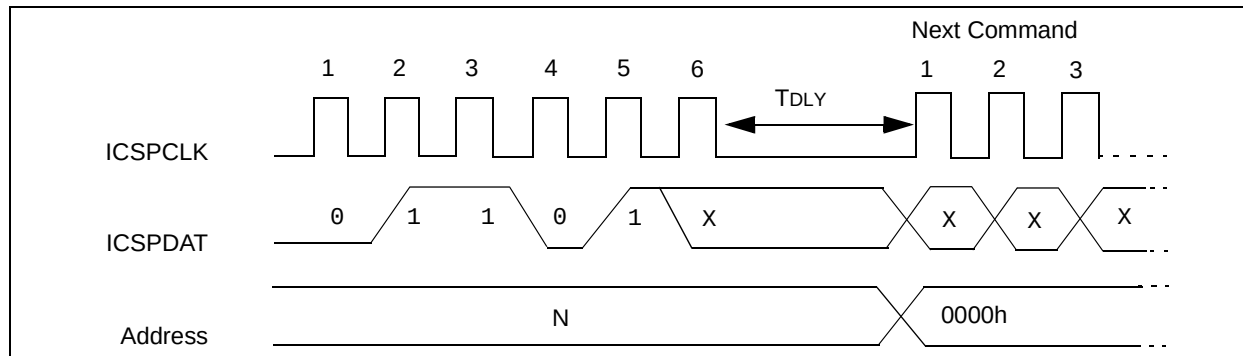


4.2.6 BEGIN INTERNALLY TIMED PROGRAMMING

A Load Configuration or Load Data for Program Memory command must be given before every Begin Programming command. Programming of the addressed memory will begin after this command is received. An internal timing mechanism executes the write. The user must allow for the program cycle time, T_{PINT} , for the programming to complete.

The End Externally Timed Programming command is not needed when the Begin Internally Timed Programming is used to start the programming.

The program memory address that is being programmed is not erased prior to being programmed.

FIGURE 4-6: BEGIN INTERNALLY TIMED PROGRAMMING

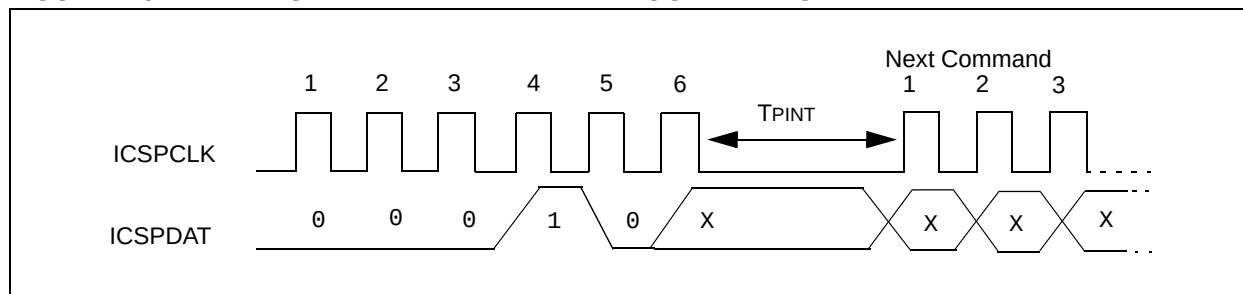


4.2.7 BEGIN EXTERNALLY TIMED PROGRAMMING

A Load Configuration or Load Data for Program Memory command must be given before every Begin Programming command. Programming of the addressed memory will begin after this command is received. To complete the programming, the End Externally Timed Programming command must be sent in the specified time window defined by T_{PEXT} . The program memory address that is being programmed is not erased prior to being programmed.

The Begin Externally Timed Programming command cannot be used for programming the Configuration Words (see Figure 4-7).

FIGURE 4-7: BEGIN EXTERNALLY TIMED PROGRAMMING

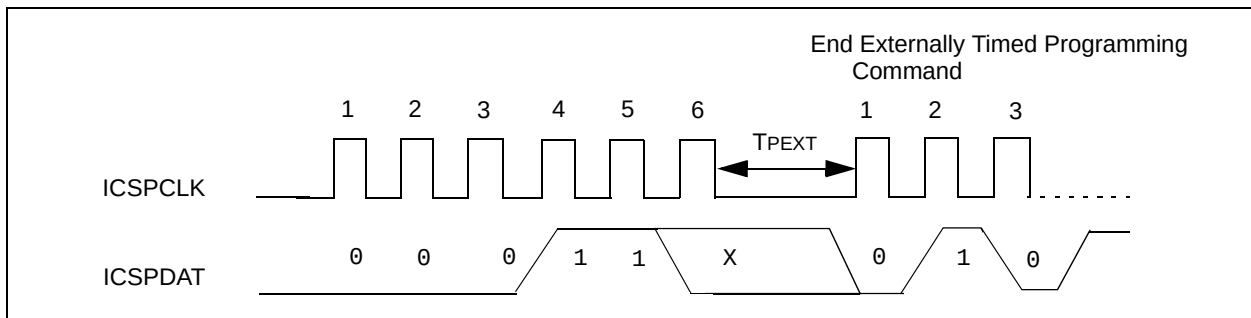


4.2.8 END EXTERNALLY TIMED PROGRAMMING

This command is required after a Begin Externally Timed Programming command is given. This command must be sent within the time window specified by T_{PEXT} after the Begin Externally Timed Programming command is sent.

After sending the End Externally Timed Programming command, an additional delay (T_{DIS}) is required before sending the next command. This delay is longer than the delay ordinarily required between other commands (see Figure 4-8).

FIGURE 4-8: END EXTERNALLY TIMED PROGRAMMING

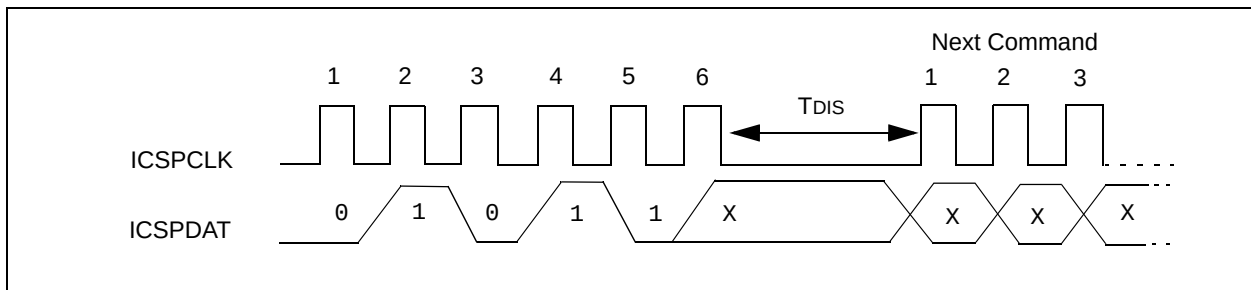

PIC16F/LF720/721

4.2.9 BULK ERASE PROGRAM MEMORY

The Bulk Erase Program Memory command performs two different functions dependent on the current state of the address.

Address 0000h-1FFFh:

- Program Memory is erased
- Configuration words are erased

Address 2000h-2008h:


- Program Memory is erased
- Configuration Words are erased
- User ID Locations are erased

A Bulk Erase Program Memory command should not be issued when the address is greater than 2008h.

After receiving the Bulk Erase Program Memory command, the erase will not complete until the time interval, T_{ERAB} , has expired.

Note: The code protection Configuration bit ($\overline{CP}$) has no effect on the Bulk Erase Program Memory command.

FIGURE 4-9: BULK ERASE PROGRAM MEMORY

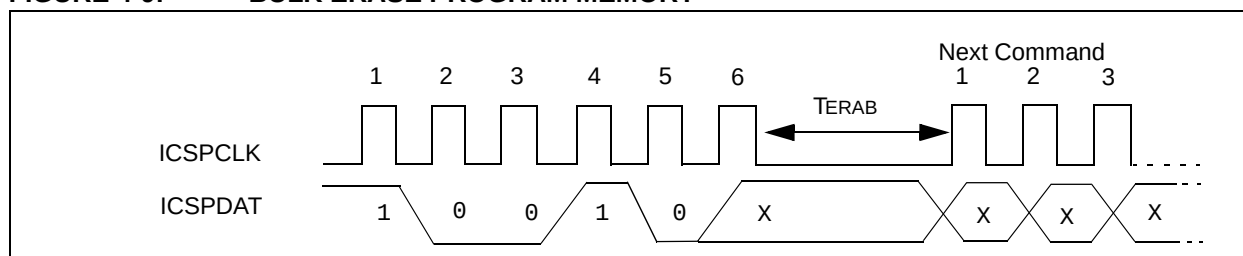


4.2.10 ROW ERASE PROGRAM MEMORY

This command erases the 32-word row of program memory pointed to by $PC<13:5>$. If the program memory array is protected ($\overline{CP} = 0$) or the PC points to the configuration memory ($> 0x2000$), the command is ignored. When the address is 2000h-2008h, the Row Erase Program Memory command will only erase the user ID locations, regardless of the configuration bit $\overline{CP}$ setting.

After receiving the Row Erase Program Memory command, the erase will not be complete until the time interval, T_{ERAR} , has expired.

FIGURE 4-10: ROW ERASE PROGRAM MEMORY

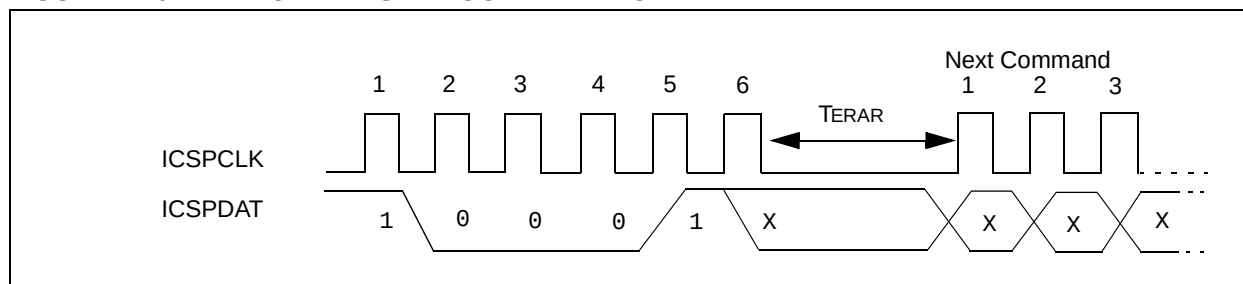


5.0 PROGRAMMING ALGORITHMS

The PIC16F/LF720 and PIC16F/LF721 devices have the capability of storing 32 14-bit words in its data latches. The data latches are internal to the PIC16F/LF720 and PIC16F/LF721 devices and are only used for programming. The data latches allow the user to program up to 32 program words with a single Begin Externally Timed Programming or Begin Internally Timed Programming command. The Load Program Data or the Load Configuration command is used to load a single data latch. The data latch will hold the data until the Begin Externally Timed Programming or Begin Internally Timed Programming command is given.

The data latches are aligned with the 5 LSb of the address. The address at the time the Begin Externally Timed Programming or Begin Internally Timed Programming command is given will determine which location(s) in memory are written. Writes cannot cross a physical 32-word boundary. For example, attempting to write from address 0002h-0021h will result in data being written to 0020h-003Fh.

If more than 32 data latches are written without a Begin Externally Timed Programming or Begin Internally Timed Programming command, the data in the data latches will be overwritten. The following figures show the recommended flowcharts for programming.

FIGURE 5-1: DEVICE PROGRAM/VERIFY FLOWCHART

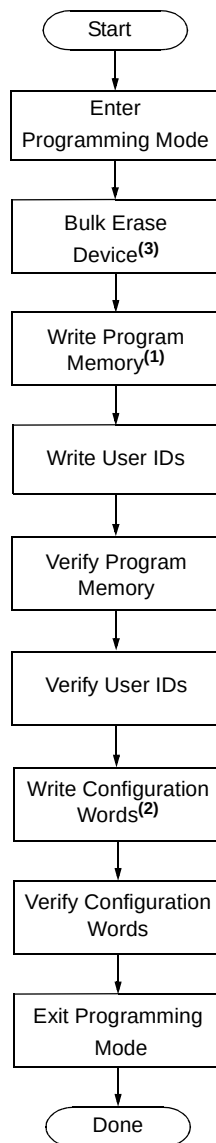


Note 1: See Figure 5-2.

Note 2: See Figure 5-5.

Note 3: See Figure 5-6.

FIGURE 5-2: PROGRAM MEMORY FLOWCHART

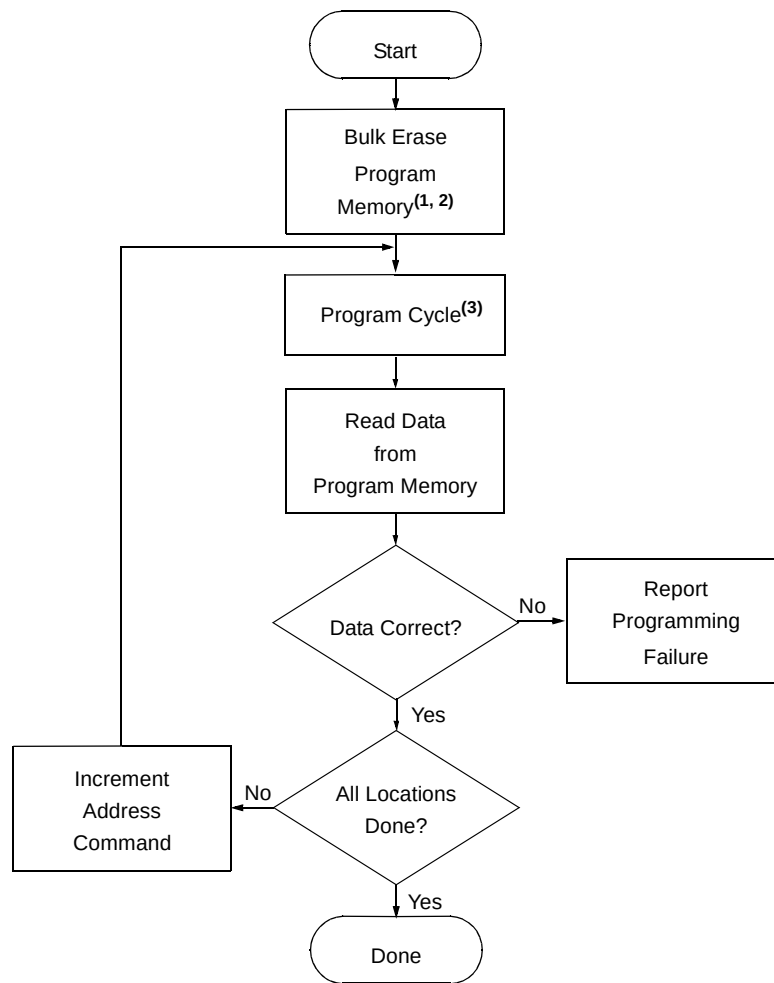

- Note 1:** This step is optional if device has already been erased or has not been previously programmed.
Note 2: If the device is code-protected or must be completely erased, then Bulk Erase device per Figure 5-6.
Note 3: See Figure 5-3 or Figure 5-4.

FIGURE 5-3: ONE-WORD PROGRAM CYCLE

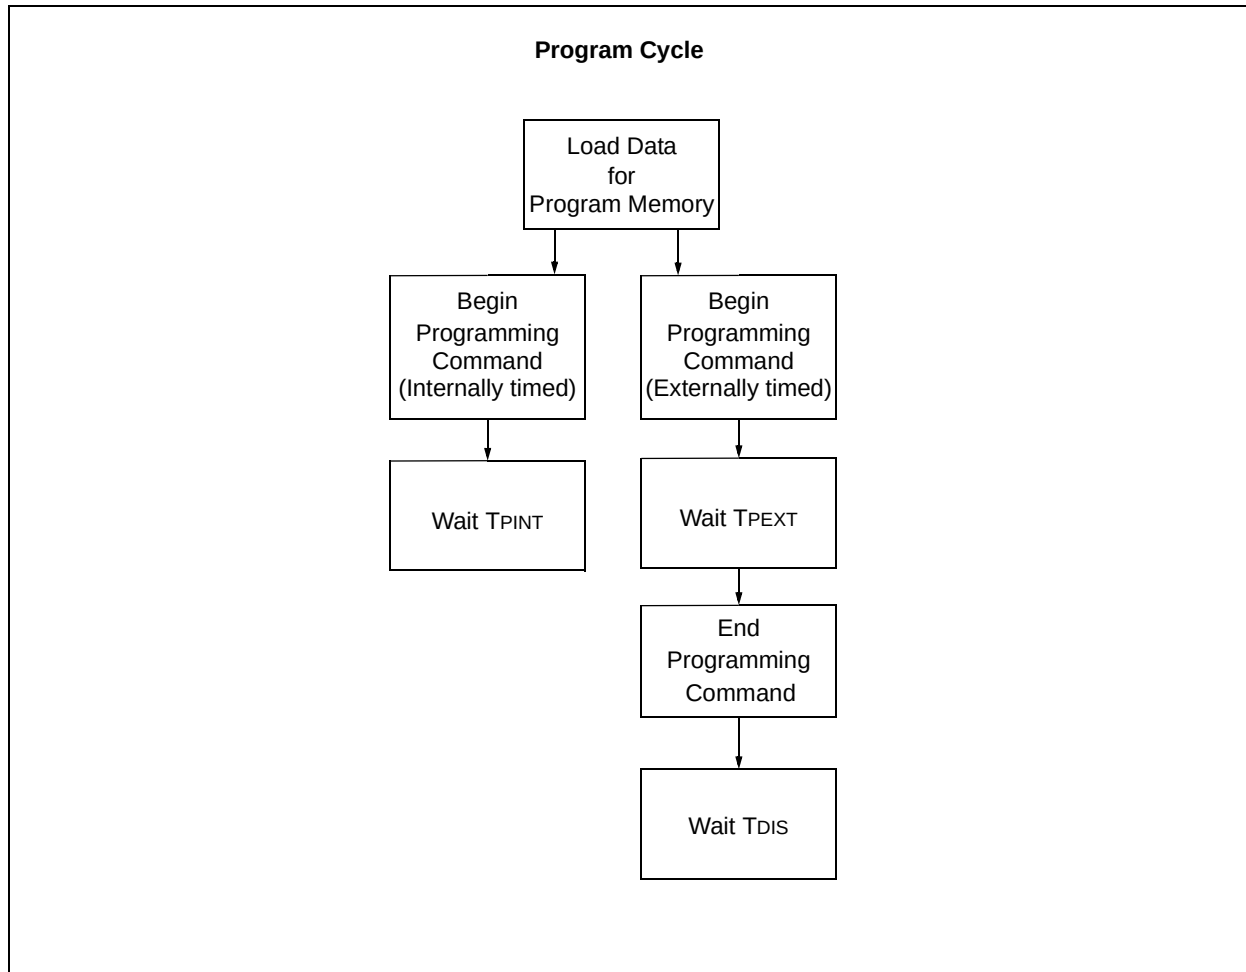


FIGURE 5-4: MULTIPLE-WORD PROGRAM CYCLE

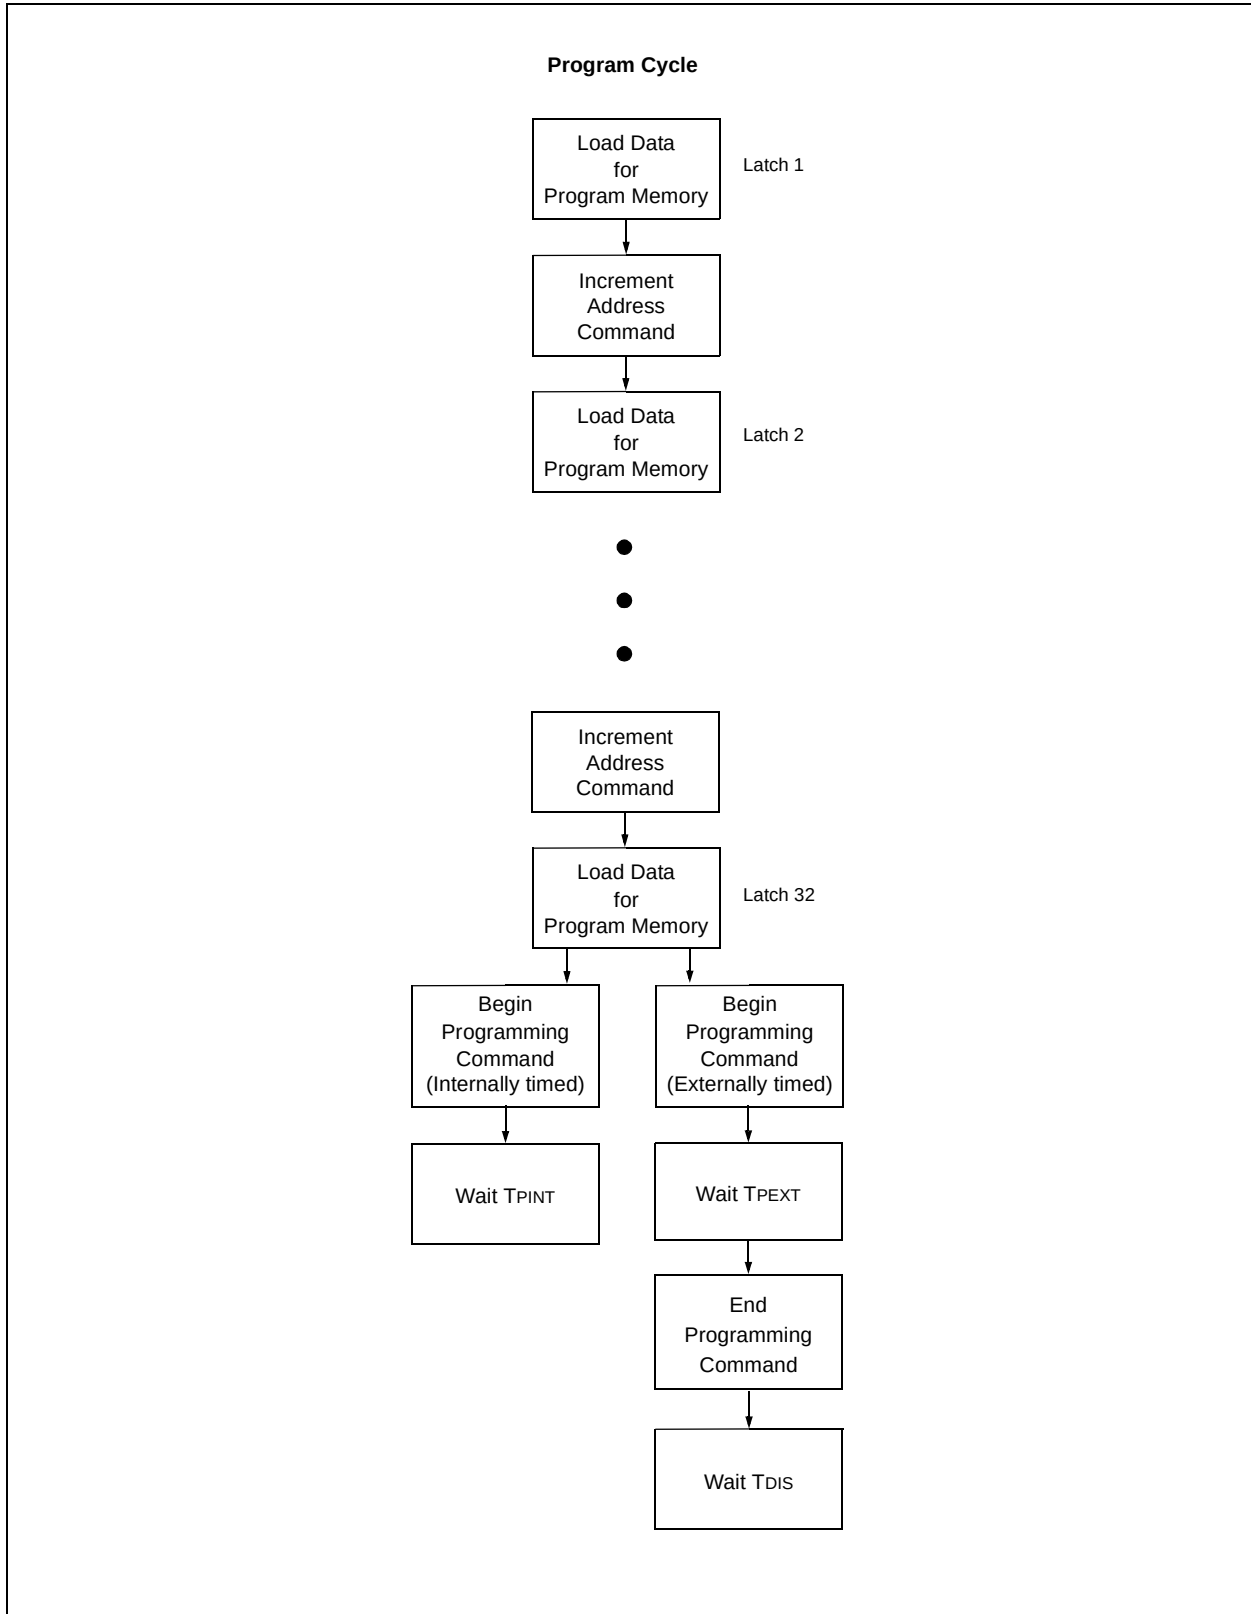


FIGURE 5-5: CONFIGURATION MEMORY PROGRAM FLOWCHART


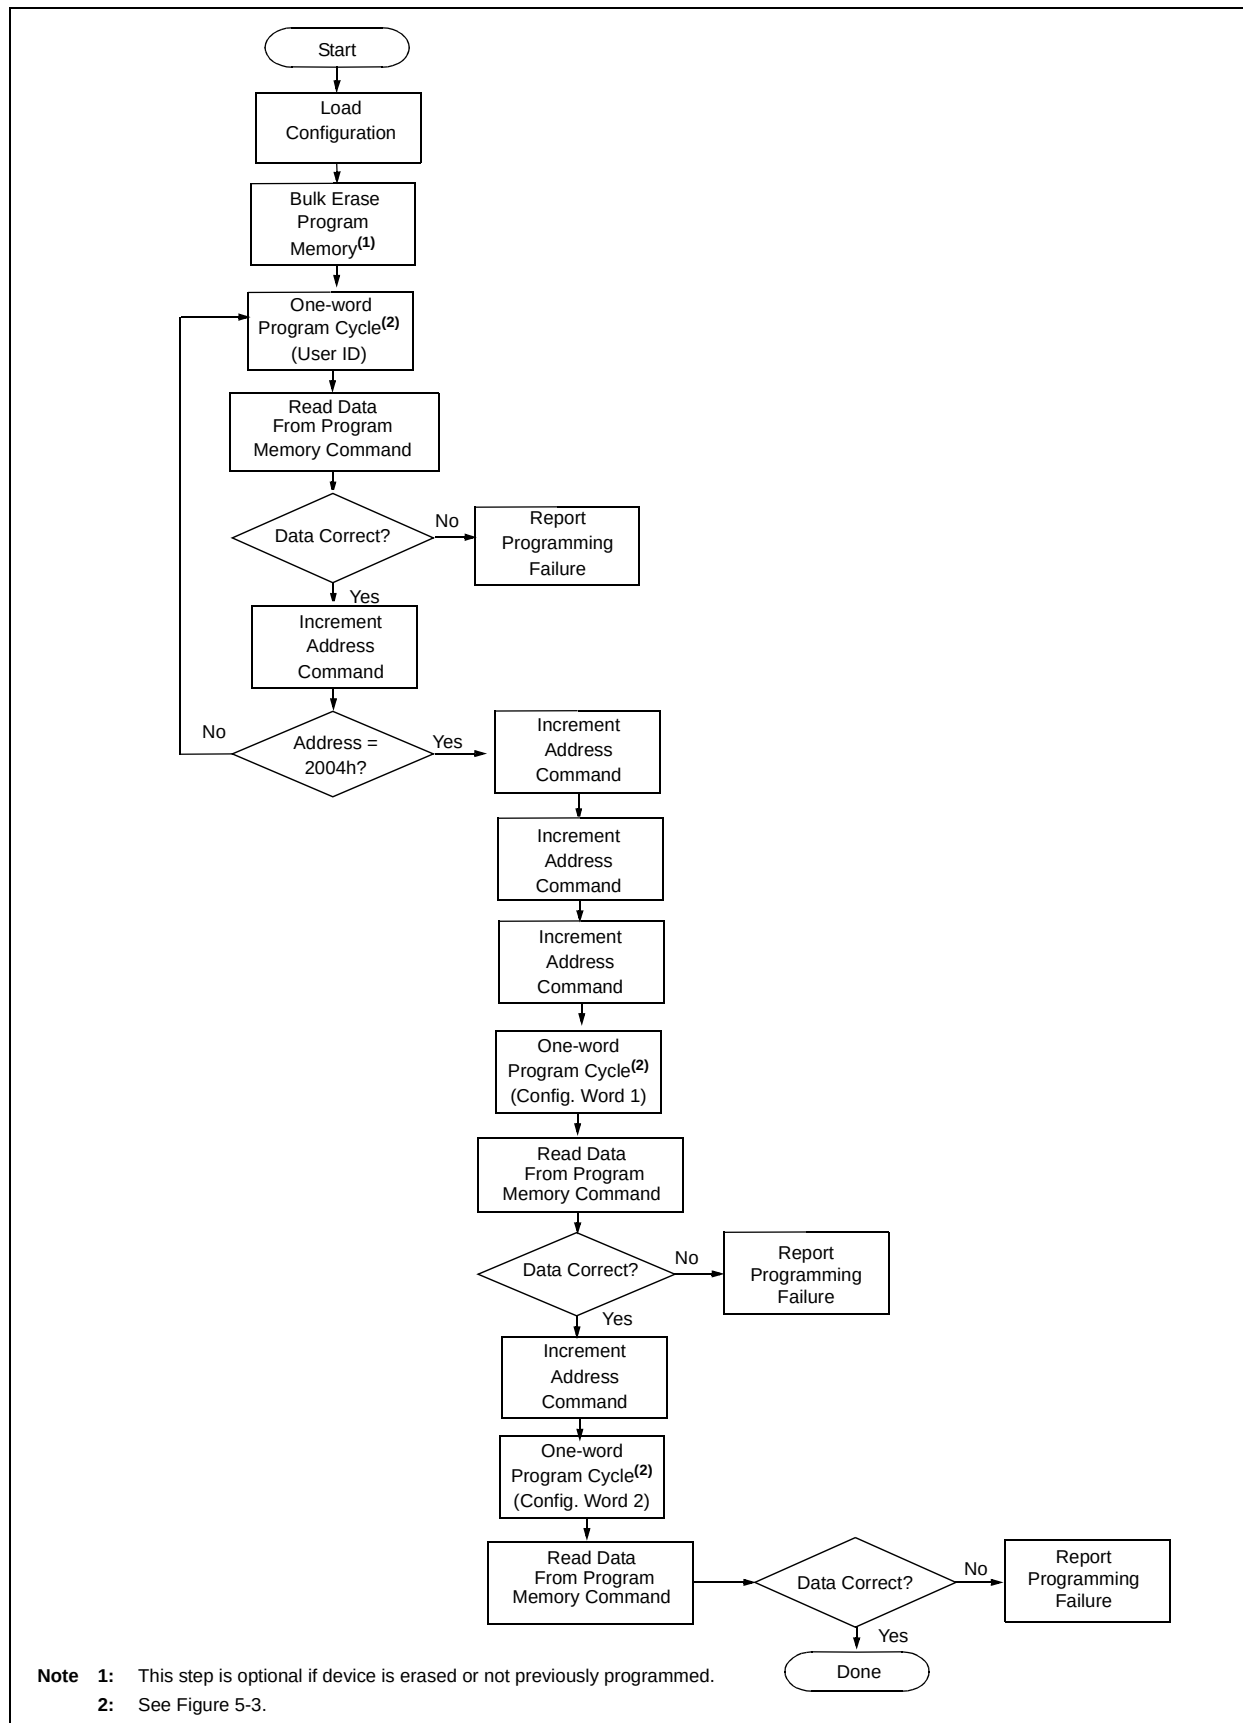


FIGURE 5-6: ERASE FLOWCHART

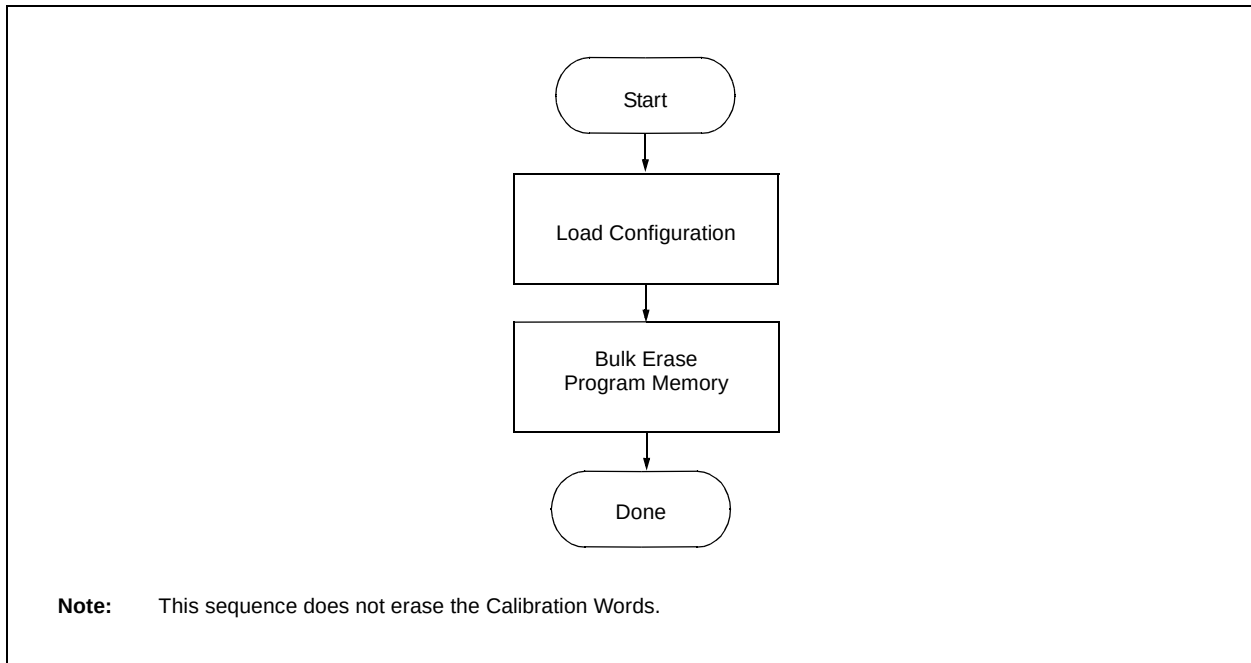

6.0 CODE PROTECTION

Code protection is controlled using the $\overline{\text{CP}}$ bit in Configuration Word 1. When code protection is enabled, all program memory locations 0000h-0FFFh for the PIC16F/LF720 and 0000h-07FFh for the PIC16F/LF721 will read as '0' and further programming of the program memory is disabled. Program memory can still be read by user code during program execution.

The user ID locations and Configuration Words can be programmed and read out regardless of the code protection settings.

6.1 Enabling Code Protection

Code protection is enabled by programming the $\overline{\text{CP}}$ bit in Configuration Word 1 to '0'.

6.2 Disabling Code Protection

The only way to disable code protection is to use the Bulk Erase Program Memory command.

7.0 HEX FILE USAGE

In the hex file there are two bytes per program word stored in the Intel® INH8M hex format. Data is stored LSB first, MSB second. Because there are two bytes per word, the addresses in the hex file are 2x the address in program memory. (Example: The Configuration Word 1 is stored at 2007h on the PIC16F/LF720 and PIC16F/LF721. In the hex file this will be at location 400Eh-400Fh).

7.1 Configuration Word

To allow portability of code, it is strongly recommended that the programmer is able to read the Configuration Words and user ID locations from the hex file. If the Configuration Words information was not present in the hex file, a simple warning message may be issued. Similarly, while saving a hex file, Configuration Words and user ID information should be included.

7.2 Device ID and Revision

If a device ID is present in the hex file at 400Ch-400Dh (2006h on the part), the programmer should verify the device ID (excluding the revision) against the value read from the part. On a mismatch condition, the programmer should generate a warning message.

7.3 Checksum Computation

The checksum is calculated by two different methods, dependent on the setting of the $\overline{CP}$ Configuration bit.

TABLE 7-1: CONFIGURATION WORD MASK VALUES

Device	Config. Word 1 Mask	Config. Word 2 Mask
PIC16F720	337Bh	0013h
PIC16LF720	337Bh	0003h
PIC16F721	337Bh	0013h
PIC16LF721	337Bh	0003h

7.3.1 CODE PROTECTION DISABLED

With the code protection disabled, the checksum is computed by reading the contents of the PIC16F/LF720 and PIC16F/LF721 program memory locations and adding up the program memory data, starting at address 0000h, up to the maximum user addressable location, 0FFFh for the PIC16F/LF720 and 07FFh for the PIC16F/LF721. Any Carry bit exceeding 16 bits are neglected. Additionally, the relevant bits of the Configuration Words are added to the checksum. All unused Configuration bits are masked to '0'. See Table 7-1 for Configuration Word Mask Values.

Example 7-1 through Example 7-4 shown below are for a blank device and for a device with 00AAh at the first and last program memory locations.

EXAMPLE 7-1: CHECKSUM COMPUTED WITH CODE PROTECTION DISABLED (PIC16F720), BLANK DEVICE

PIC16F720	Sum of Memory addresses 0000h-07FFh ⁽¹⁾	F800h
	Configuration Word 1 ⁽²⁾	3FFFh
	Configuration Word 1 mask ⁽³⁾	337Bh
	Configuration Word 2 ⁽²⁾	3FFFh
	Configuration Word 2 mask ⁽³⁾	0013h
	Checksum	= F800h + (3FFFh and 337Bh) + (3FFFh and 0013h)
		= F800h + 337Bh + 0013h
		= 2B8Eh
Note 1: Sum of Memory addresses = (Total number of program memory address locations) x (3FFFh) = F800h, truncated to 16 bits.		
2: Configuration Word 1 and 2 = all bits are '1'; thus, code-protect is disabled.		
3: Configuration Word 1 and 2 Mask = all bits are set to '1', except for unimplemented bits that are '0'.		

PIC16F/LF720/721

EXAMPLE 7-2: CHECKSUM COMPUTED WITH CODE PROTECTION DISABLED (PIC16LF720), 00AAh AT FIRST AND LAST ADDRESS

PIC16LF720	Sum of Memory addresses 0000h-07FFh ⁽¹⁾	7956h
	Configuration Word 1 ⁽²⁾	3FFFh
	Configuration Word 1 mask ⁽³⁾	337Bh
	Configuration Word 2 ⁽²⁾	3FFFh
	Configuration Word 2 mask ⁽⁴⁾	0003h
	Checksum	= 7956h + (3FFFh and 337Bh) + (3FFFh and 0003h)
		= 7956h + 337Bh + 0003h
		= ACD4h

Note 1: Total number of program memory address locations: 07FFh + 1 = 0800h. Then, 0800h - 2 = 07FEh. Thus, [(07FEh x 3FFFh) + (2 x 00AAh)] = 7956h, truncated to 16 bits.

2: Configuration Word 1 and 2 = all bits are '1'; thus, code-protect is disabled.

3: Configuration Word 1 Mask = all Configuration Word bits are set to '1', except for unimplemented bits that are '0'.

4: On the PIC16LF720 device, the VCAPEN bit is not implemented in Configuration Word 2; thus, all unimplemented bits are '0'.

EXAMPLE 7-3: CHECKSUM COMPUTED WITH CODE PROTECTION DISABLED (PIC16F721), BLANK DEVICE

PIC16F721	Sum of Memory addresses 0000h-0FFFh ⁽¹⁾	F000h
	Configuration Word 1 ⁽²⁾	3FFFh
	Configuration Word 1 mask ⁽³⁾	337Bh
	Configuration Word 2 ⁽²⁾	3FFFh
	Configuration Word 2 mask ⁽³⁾	0013h
	Checksum	= F000h + (3FFFh and 337Bh) + (3FFFh and 0013h)
		= F000h + 337Bh + 0013h
		= 56F6h

Note 1: Sum of Memory addresses = (Total number of program memory address locations) x (3FFFh) = F800h, truncated to 16 bits.

2: Configuration Word 1 and 2 = all bits are '1'; thus, code-protect is disabled.

3: Configuration Word 1 and 2 Mask = all bits are set to '1', except for unimplemented bits that are '0'.

EXAMPLE 7-4: CHECKSUM COMPUTED WITH CODE PROTECTION DISABLED (PIC16LF721), 00AAh AT FIRST AND LAST ADDRESS

PIC16LF721	Sum of Memory addresses 0000h-0FFFh ⁽¹⁾	7156h
	Configuration Word 1 ⁽²⁾	3FFFh
	Configuration Word 1 mask ⁽³⁾	337Bh
	Configuration Word 2 ⁽²⁾	3FFFh
	Configuration Word 2 mask ⁽⁴⁾	0003h
	Checksum	=7156h + (3FFFh and 337Bh) + (3FFFh and 0003h)
		= 7156h + 337Bh + 0003h
		= A4D4h

Note 1: Total number of program memory address locations: 0FFFh + 1 = 1000h. Then, 1000h - 2 = 0FFEh. Thus, [(0FFEh x 3FFFh) + (2 x 00AAh)] = 7156h, truncated to 16 bits.

2: Configuration Word 1 and 2 = all bits are '1'; thus, code-protect is disabled.

3: Configuration Word 1 Mask = all Configuration Word bits are set to '1', except for unimplemented bits that are '0'.

4: On the PIC16LF721 device, the VCAPEN bit is not implemented in Configuration Word 2; thus, all unimplemented bits are '0'.

PIC16F/LF720/721

7.3.2 CODE PROTECTION ENABLED

With the program code protection enabled, the checksum is computed in the following manner: the Least Significant nibble of each user ID is used to create a 16-bit value. The masked value of user ID location 2000h is the Most Significant nibble. This Sum of user IDs is summed with the Configuration Words (all unimplemented Configuration bits are masked to '0').

Example 7-5 through Example 7-8 shown below are for a blank device and for a device with 00AAh at the first and last program memory locations. Also, see Table 7-1 for Configuration Word mask values with code protection enabled.

EXAMPLE 7-5: CHECKSUM COMPUTED WITH CODE PROTECTION ENABLED (PIC16F720), BLANK DEVICE

PIC16F720	Configuration Word 1 ⁽²⁾	3FBFh
	Configuration Word 1 mask ⁽³⁾	337Bh
	Configuration Word 2 ⁽²⁾	3FFFh
	Configuration Word 2 mask ⁽³⁾	0013h
	User ID (2000h) ⁽¹⁾	0001h
	User ID (2001h) ⁽¹⁾	0007h
	User ID (2002h) ⁽¹⁾	000Ah
	User ID (2003h) ⁽¹⁾	000Fh
	Sum of User IDs ⁽⁴⁾	$= (0001h \text{ and } 000Fh) \ll 12 + (0007h \text{ and } 000Fh) \ll 8 +$ $(000Ah \text{ and } 000Fh) \ll 4 + (000Fh \text{ and } 000Fh)$ $= 1000h + 0700h + 00A0h + 000Fh$ $= 17AFh$
	Checksum	$= (3FBFh \text{ and } 337Bh) + (3FFFh \text{ and } 0013h) + \text{Sum of User IDs}$ $= 333Bh + 0013h + 17AFh$ $= 4AFDh$

Note 1: User ID values in this example are random values.

2: Configuration Word 1 and 2 = all bits are '1', except the code-protect enable bit.

3: Configuration Word 1 and 2 Mask = all Configuration Word bits are set to '1', except for unimplemented bits which read '0'.

4: $\ll$ = shift left, thus the LSb of the first user ID value is the MSb of the sum of user IDs and so on until the LSb of the last user ID value becomes the LSb of the sum of user IDs.

EXAMPLE 7-6: CHECKSUM COMPUTED WITH CODE PROTECTION ENABLED (PIC16F721), BLANK DEVICE

PIC16F721	Configuration Word 1 ⁽²⁾	3FBFh
	Configuration Word 1 mask ⁽³⁾	337Bh
	Configuration Word 2 ⁽²⁾	3FFFh
	Configuration Word 2 mask ⁽³⁾	0013h
	User ID (2000h) ⁽⁴⁾	0001h
	User ID (2001h) ⁽⁴⁾	0007h
	User ID (2002h) ⁽⁴⁾	000Ah
	User ID (2003h) ⁽⁴⁾	000Fh
	Sum of User IDs ⁽⁴⁾	$= (0001h \text{ and } 000Fh) \ll 12 + (0007h \text{ and } 000Fh) \ll 8 +$ $(000Ah \text{ and } 000Fh) \ll 4 + (000Fh \text{ and } 000Fh)$ $= 1000h + 0700h + 00A0h + 000Fh$ $= 17AFh$
	Checksum	$= (3FBFh \text{ and } 337Bh) + (3FFFh \text{ and } 0013h) + \text{Sum of User IDs}$ $= 333Bh + 0013h + 17AFh$ $= 4AFDh$

Note 1: User ID values in this example are random values.

2: Configuration Word 1 and 2 = all bits are '1', except the code-protect enable bit.

3: Configuration Word 1 and 2 Mask = all Configuration Word bits are set to '1', except for unimplemented bits which read '0'.

4: $\ll$ = shift left, thus the LSb of the first user ID value is the MSb of the sum of user IDs and so on until the LSb of the last user ID value becomes the LSb of the sum of user IDs.

PIC16F/LF720/721

EXAMPLE 7-7: CHECKSUM COMPUTED WITH CODE PROTECTION ENABLED (PIC16LF720), 00AAh AT FIRST AND LAST ADDRESS

PIC16LF720	Configuration Word 1 ⁽²⁾	3FBFh
	Configuration Word 1 mask ⁽³⁾	337Bh
	Configuration Word 2 ⁽²⁾	3FFFh
	Configuration Word 2 mask ^{(3), (5)}	0003h
	User ID (2000h) ⁽¹⁾	0009h
	User ID (2001h) ⁽¹⁾	0008h
	User ID (2002h) ⁽¹⁾	000Dh
	User ID (2003h) ⁽¹⁾	0005h
	Sum of User IDs ⁽⁴⁾	$= (0009h \text{ and } 000Fh) \ll 12 + (0008h \text{ and } 000Fh) \ll 8 +$ $(000Dh \text{ and } 000Fh) \ll 4 + (0005h \text{ and } 000Fh)$ $= 9000h + 0800h + 00D0h + 0005h$ $= 98D5h$
	Checksum	$= (3FBFh \text{ and } 337Bh) + (3FFFh \text{ and } 0003h) + \text{Sum of User IDs}$ $= 333Bh + 0003h + 98D5h$ $= CC13h$

Note 1: User ID values in this example are random values.

2: Configuration Word 1 and 2 = all bits are '1', except the code-protect enable bit.

3: Configuration Word 1 and 2 Mask = all Configuration Word bits are set to '1', except for unimplemented bits which read '0'.

4: $\ll$ = shift left, thus the LSb of the first user ID value is the MSb of the sum of user IDs and so on until the LSb of the last user ID value becomes the LSb of the sum of user IDs.

5: On the PIC16LF720 device, the VCAPEN bit is not implemented in Configuration Word 2; thus, all unimplemented bits are '0'.

EXAMPLE 7-8: CHECKSUM COMPUTED WITH CODE PROTECTION ENABLED (PIC16LF721), 00AAh AT FIRST AND LAST ADDRESS

PIC16LF721	Configuration Word 1 ⁽²⁾	3FBFh
	Configuration Word 1 mask ⁽³⁾	337Bh
	Configuration Word 2 ⁽²⁾	3FFFh
	Configuration Word 2 mask ^{(3), (5)}	0003h
	User ID (2000h) ⁽¹⁾	0009h
	User ID (2001h) ⁽¹⁾	0008h
	User ID (2002h) ⁽¹⁾	000Dh
	User ID (2003h) ⁽¹⁾	0005h
	Sum of User IDs ⁽⁴⁾	$= (0009h \text{ and } 000Fh) \ll 12 + (0008h \text{ and } 000Fh) \ll 8 +$ $(000Dh \text{ and } 000Fh) \ll 4 + (0005h \text{ and } 000Fh)$ $= 9000h + 0800h + 00D0h + 0005h$ $= 98D5h$
	Checksum	$= (3FBFh \text{ and } 337Bh) + (3FFFh \text{ and } 0003h) + \text{Sum of User IDs}$ $= 333Bh + 0003h + 98D5h$ $= CC13h$

Note 1: User ID values in this example are random values.

2: Configuration Word 1 and 2 = all bits are '1', except the code-protect enable bit.

3: Configuration Word 1 and 2 Mask = all Configuration Word bits are set to '1', except for unimplemented bits which read '0'.

4: $\ll$ = shift left, thus the LSb of the first user ID value is the MSb of the sum of user IDs and so on until the LSb of the last user ID value becomes the LSb of the sum of user IDs.

5: On the PIC16LF721 device, the VCAPEN bit is not implemented in Configuration Word 2; thus, all unimplemented bits are '0'.

PIC16F/LF720/721

8.0 ELECTRICAL SPECIFICATIONS

Refer to device specific data sheet for absolute maximum ratings.

TABLE 8-1: AC/DC CHARACTERISTICS TIMING REQUIREMENTS FOR PROGRAM/VERIFY MODE

AC/DC CHARACTERISTICS			Standard Operating Conditions (unless otherwise stated)				
			Operating Temperature		+10°C ≤ TA ≤ +40°C		
Sym.	Characteristics		Min.	Type.	Max.	Units	Conditions/ Comments
Supply Voltages and currents							
VDD	VDD						
	Read/Write and Row Erase operations	PIC16F720	2.1	—	5.5	V	
		PIC16F721					
		PIC16LF720	2.1	—	3.6	V	
	PIC16LF721						
	Bulk Erase operations	PIC16F720	2.7	—	5.5	V	
PIC16F721							
PIC16LF720		2.7	—	3.6	V		
PIC16LF721							
IDD1	Current on VDD, Idle		—	—	1.0	mA	
IDDA	Current on VDD, program cycle or Bulk Erase in progress		—	—	5.0	mA	
VIHH	VPP						
	High voltage on MCLR/VPP for Program/Verify mode entry		8.0	—	9.0	V	
TVHHR	MCLR rise time (VDD to VIHH) for Program/Verify mode entry		—	—	1.0	μs	
IPP	Current on MCLR/VPP				600	μA	
I/O pins							
VIH	(ICSPCLK, ICSPDAT) input high level		0.8 VDD	—	—	V	
VIL	(ICSPCLK, ICSPDAT) input low level		—	—	0.2 VDD	V	
VOH	ICSPDAT output high level		VDD-0.7 VDD-0.7 VDD-0.7	—	VDD	V	IOH = 3.5 mA, VDD = 5V IOH = 3 mA, VDD = 3.3V IOH = 2 mA, VDD = 1.8V
VOL	ICSPDAT output low level		VSS	—	VSS+0.6 VSS+0.6 VSS+0.6	V	IOH = 8 mA, VDD = 5V IOH = 6 mA, VDD = 3.3V IOH = 3 mA, VDD = 1.8V
Programming mode entry and exit							
TENTS	Programing mode entry setup time: ICSPCLK, ICSPDAT setup time before VDD or MCLR↑		100	—	—	ns	
TENTH	Programing mode entry hold time: ICSPCLK, ICSPDAT hold time after VDD or MCLR↑		250	—	—	μs	
Serial Program/Verify							
TCKL	Clock Low Pulse Width		100	—	—	ns	
TCKH	Clock High Pulse Width		100	—	—	ns	
TDS	Data in setup time before clock↓		100	—	—	ns	
TDH	Data in hold time after clock↓		100	—	—	ns	
Tco	Clock↑ to data out valid (during a Read Data command)		0	—	80	ns	
TLZD	Clock↓ to data low-impedance (during a Read Data command)		0	—	80	ns	
THZD	Clock↓ to data high-impedance (during a Read Data command)		0	—	80	ns	
TDLY	Data input not driven to next clock input (delay required between command/data or command/command)		1.0	—	—	μs	

TABLE 8-1: AC/DC CHARACTERISTICS TIMING REQUIREMENTS FOR PROGRAM/VERIFY MODE

AC/DC CHARACTERISTICS		Standard Operating Conditions (unless otherwise stated) Operating Temperature $+10^{\circ}\text{C} \leq T_A \leq +40^{\circ}\text{C}$				
Sym.	Characteristics	Min.	Type.	Max.	Units	Conditions/ Comments
TERAB	Bulk Erase cycle time	—	—	5	ms	
TERAR	Row Erase cycle time	—	—	2.5	ms	
TPINT	Internally timed programming operation time	—	—	2.5	ms	Program memory Configuration fuses
		—	—	5	ms	
TPEXT	Externally timed programming pulse	1.0	—	2.1	ms	$10^{\circ}\text{C} \leq T_A \leq +40^{\circ}\text{C}$ Program memory
TDIS	Time delay from program to compare (HV discharge time)	100	—	—	μs	
TEXIT	Time delay when exiting Program/Verify mode	1	—	—	μs	

PIC16F/LF720/721

8.1 AC Timing Diagrams

FIGURE 8-1: PROGRAMMING MODE ENTRY – V_{DD} FIRST

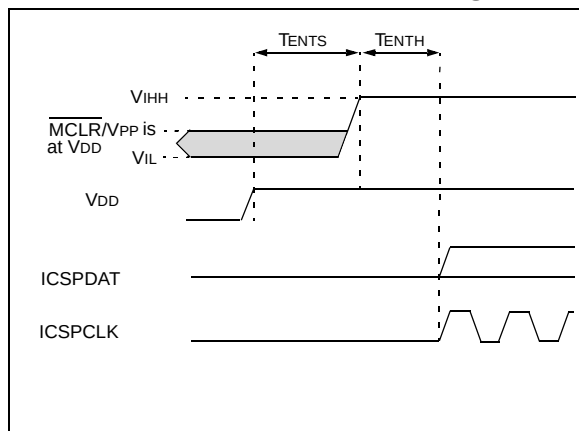


FIGURE 8-2: PROGRAMMING MODE ENTRY – MCLR/VPP FIRST

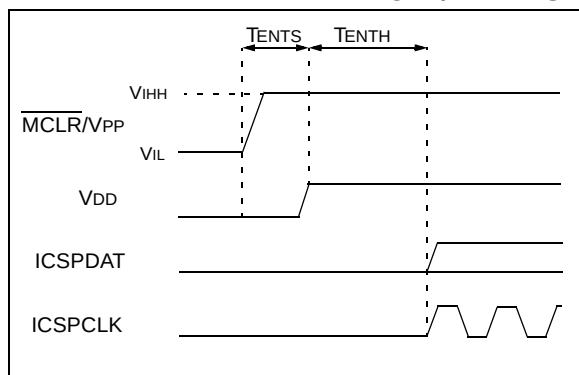


FIGURE 8-3: PROGRAMMING MODE EXIT – MCLR/VPP LAST

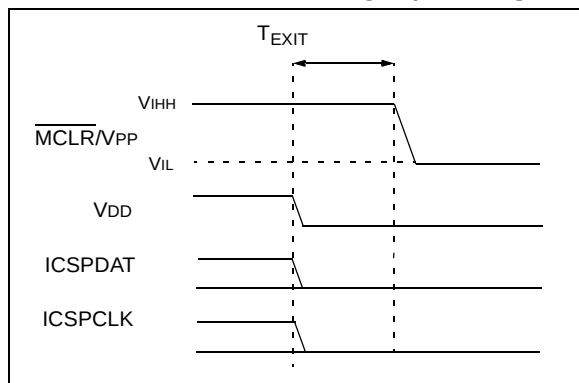


FIGURE 8-4: PROGRAMMING MODE EXIT – V_{DD} LAST

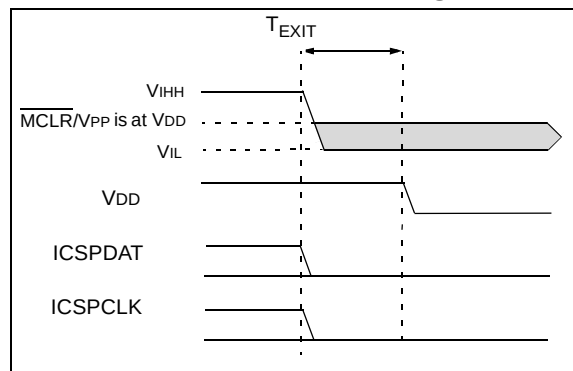


FIGURE 8-5: CLOCK AND DATA TIMING


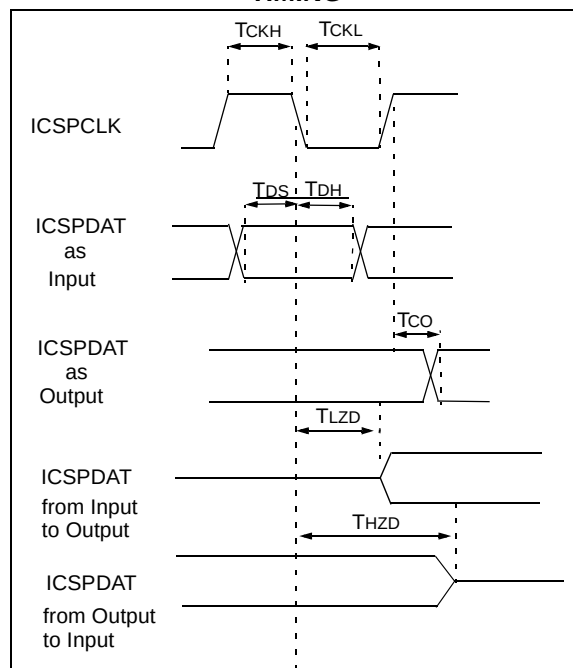


FIGURE 8-6: COMMAND-PAYLOAD TIMING

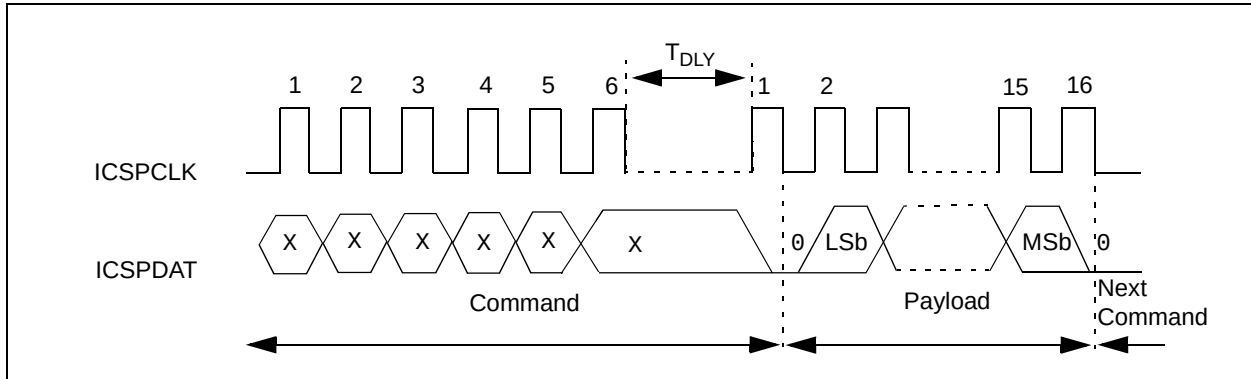

APPENDIX A: REVISION HISTORY

Revision A (12/2009)

Initial release of this document.

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, dsPIC, KEELOQ, KEELOQ logo, MPLAB, PIC, PICmicro, PICSTART, rfPIC and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

FilterLab, Hampshire, HI-TECH C, Linear Active Thermistor, MXDEV, MXLAB, SEEVAL and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, dsSPEAK, ECAN, ECONOMONITOR, FanSense, HI-TIDE, In-Circuit Serial Programming, ICSP, Mindi, MiWi, MPASM, MPLAB Certified logo, MPLIB, MPLINK, mTouch, Octopus, Omniscient Code Generation, PICC, PICC-18, PICDEM, PICDEM.net, PICkit, PICtail, PIC³² logo, REAL ICE, rLAB, Select Mode, Total Endurance, TSHARC, UniWinDriver, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2009, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

 Printed on recycled paper.

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
== ISO/TS 16949:2002 ==

Microchip received ISO/TS-16949:2002 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office

2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://support.microchip.com>
Web Address:
www.microchip.com

Atlanta

Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Boston

Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago

Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Cleveland

Independence, OH
Tel: 216-447-0464
Fax: 216-447-0643

Dallas

Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit

Farmington Hills, MI
Tel: 248-538-2250
Fax: 248-538-2260

Kokomo

Kokomo, IN
Tel: 765-864-8360
Fax: 765-864-8387

Los Angeles

Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608

Santa Clara

Santa Clara, CA
Tel: 408-961-6444
Fax: 408-961-6445

Toronto

Mississauga, Ontario,
Canada
Tel: 905-673-0699
Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office

Suites 3707-14, 37th Floor
Tower 6, The Gateway
Harbour City, Kowloon
Hong Kong
Tel: 852-2401-1200
Fax: 852-2401-3431

Australia - Sydney

Tel: 61-2-9868-6733
Fax: 61-2-9868-6755

China - Beijing

Tel: 86-10-8528-2100
Fax: 86-10-8528-2104

China - Chengdu

Tel: 86-28-8665-5511
Fax: 86-28-8665-7889

China - Hong Kong SAR

Tel: 852-2401-1200
Fax: 852-2401-3431

China - Nanjing

Tel: 86-25-8473-2460
Fax: 86-25-8473-2470

China - Qingdao

Tel: 86-532-8502-7355
Fax: 86-532-8502-7205

China - Shanghai

Tel: 86-21-5407-5533
Fax: 86-21-5407-5066

China - Shenyang

Tel: 86-24-2334-2829
Fax: 86-24-2334-2393

China - Shenzhen

Tel: 86-755-8203-2660
Fax: 86-755-8203-1760

China - Wuhan

Tel: 86-27-5980-5300
Fax: 86-27-5980-5118

China - Xiamen

Tel: 86-592-2388138
Fax: 86-592-2388130

China - Xian

Tel: 86-29-8833-7252
Fax: 86-29-8833-7256

China - Zhuhai

Tel: 86-756-3210040
Fax: 86-756-3210049

ASIA/PACIFIC

India - Bangalore

Tel: 91-80-3090-4444
Fax: 91-80-3090-4080

India - New Delhi

Tel: 91-11-4160-8631
Fax: 91-11-4160-8632

India - Pune

Tel: 91-20-2566-1512
Fax: 91-20-2566-1513

Japan - Yokohama

Tel: 81-45-471- 6166
Fax: 81-45-471-6122

Korea - Daegu

Tel: 82-53-744-4301
Fax: 82-53-744-4302

Korea - Seoul

Tel: 82-2-554-7200
Fax: 82-2-558-5932 or
82-2-558-5934

Malaysia - Kuala Lumpur

Tel: 60-3-6201-9857
Fax: 60-3-6201-9859

Malaysia - Penang

Tel: 60-4-227-8870
Fax: 60-4-227-4068

Philippines - Manila

Tel: 63-2-634-9065
Fax: 63-2-634-9069

Singapore

Tel: 65-6334-8870
Fax: 65-6334-8850

Taiwan - Hsin Chu

Tel: 886-3-6578-300
Fax: 886-3-6578-370

Taiwan - Kaohsiung

Tel: 886-7-536-4818
Fax: 886-7-536-4803

Taiwan - Taipei

Tel: 886-2-2500-6610
Fax: 886-2-2508-0102

Thailand - Bangkok

Tel: 66-2-694-1351
Fax: 66-2-694-1350

EUROPE

Austria - Wels

Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen

Tel: 45-4450-2828
Fax: 45-4485-2829

France - Paris

Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Munich

Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Italy - Milan

Tel: 39-0331-742611
Fax: 39-0331-466781

Netherlands - Drunen

Tel: 31-416-690399
Fax: 31-416-690340

Spain - Madrid

Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

UK - Wokingham

Tel: 44-118-921-5869
Fax: 44-118-921-5820

03/26/09

AMEYA360

Components Supply Platform

Authorized Distribution Brand :



Website :

Welcome to visit www.ameya360.com

Contact Us :

➤ Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd
Minhang District, Shanghai , China

➤ Sales :

Direct +86 (21) 6401-6692
Email amall@ameya360.com
QQ 800077892
Skype ameyasales1 ameyasales2

➤ Customer Service :

Email service@ameya360.com

➤ Partnership :

Tel +86 (21) 64016692-8333
Email mkt@ameya360.com