

2.4 GHz – 2.5 GHz FlexNotch 2 dBi Antenna w/U.FL Cable, 100mm



ORDERING INFORMATION

Order Number	Description
001-0015	2.4 GHz FlexNotch Antenna w/U.FL Cable, 100mm

Table 1 Orderable Part Numbers

KEY FEATURES

- Can be installed on flat or curved surfaces.
- Simple custom options with trimming length.
- Quick and easy Installation
- Flexible, ultra-low profile
- RoHS Compliant
- Adhesive holds to surface during humidity exposure and hot/cold cycles

SPECIFICATIONS

Specification	Value
Typical Peak Gain	+2 dBi
Average Gain	>-1.6 dBi
Impedance	50 ohms
Type	Flexible Notch
Polarization	Linear
VSWR	< 2.5:1, 2400 - 2480 MHz
Frequency	2400 – 2480 MHz
Weight	0.85g
Size	32.0mm x 21.08mm
Antenna Color	Clear Yellow
Adhesive	3M 100MP
Operating Temp	-40°C to +85°C

Table 2 Specifications

PHYSICAL DIMENSIONS (MM)

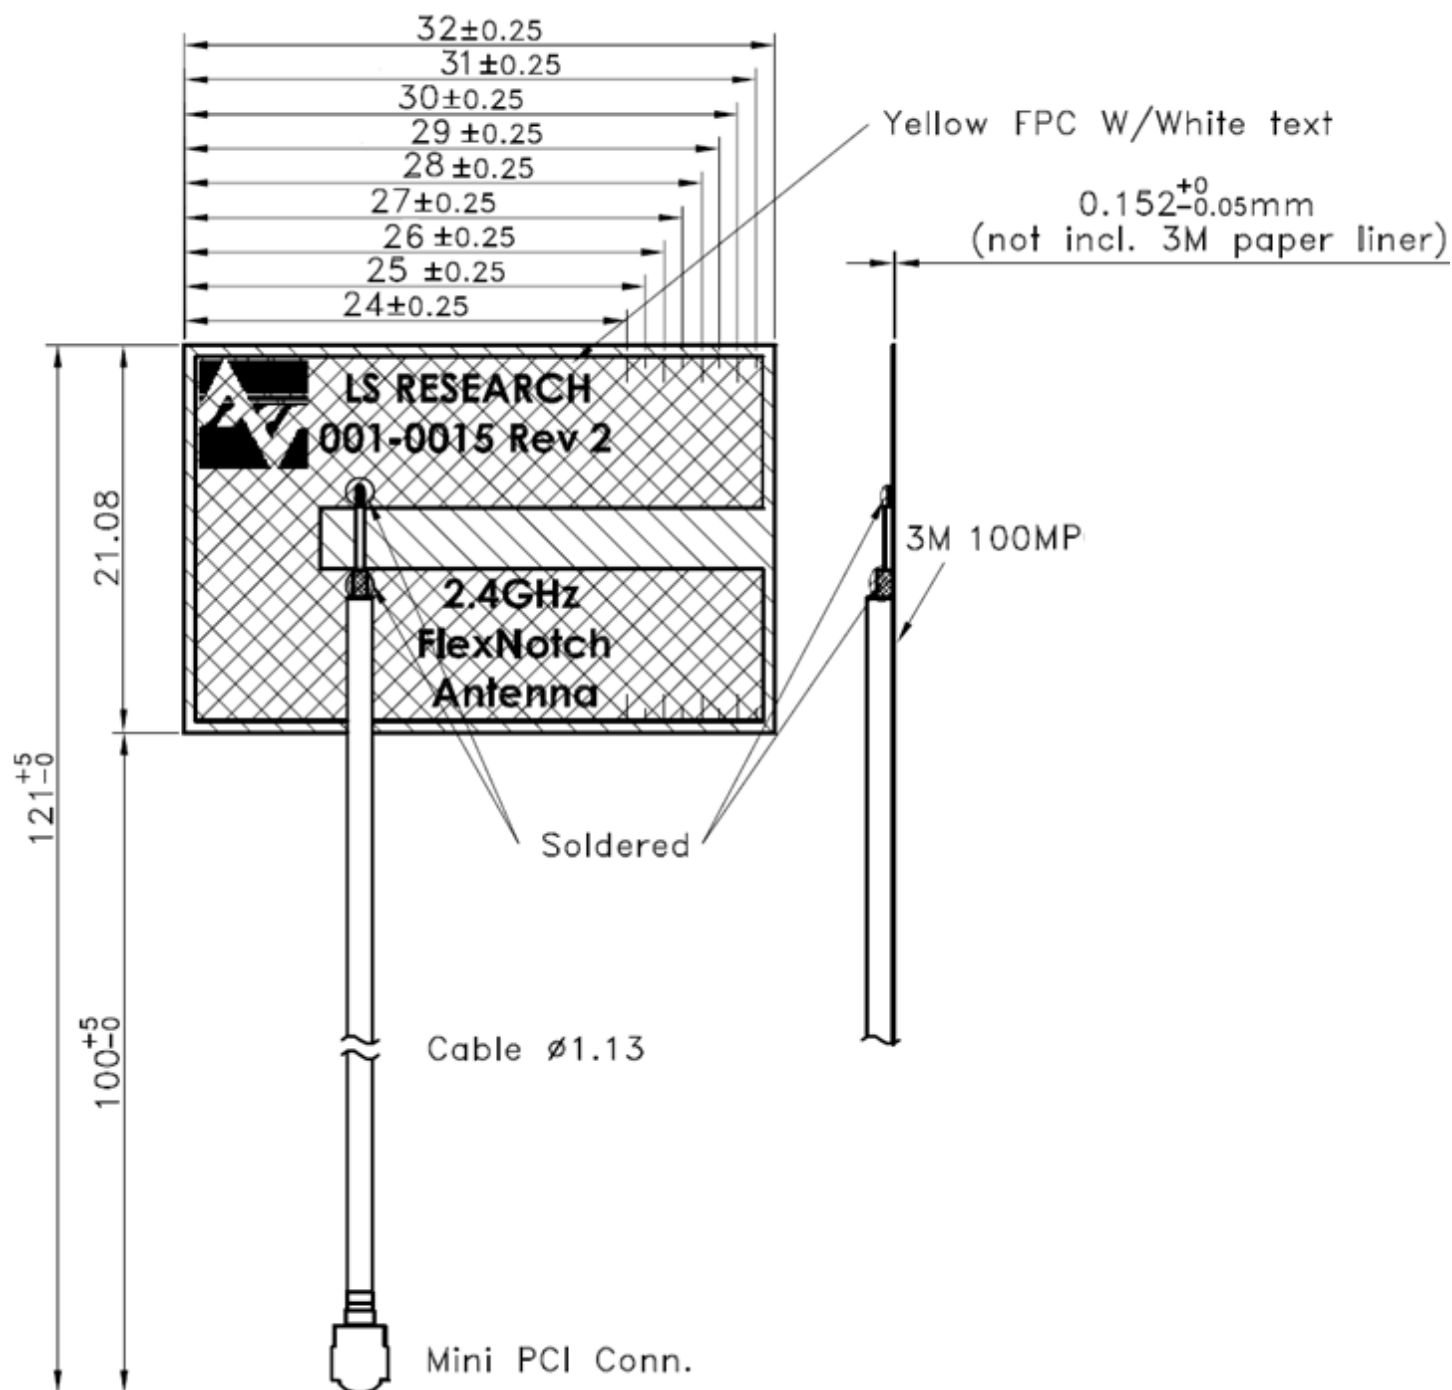


Figure 1 Physical Dimensions

TEST SETUP

Antenna measurements such as VSWR were measured with an Agilent E5071C Vector Network Analyzer. Radiation patterns were measured with an Agilent 5181A Signal Generator and Agilent E4445A Spectrum Analyzer in a 3 meter Anechoic Chamber.

Flat surface measurements were done with the antenna centered on a 1.5 mm thick plate of Polycarbonate.

FLAT SURFACE ANTENNA MEASUREMENTS

VSWR

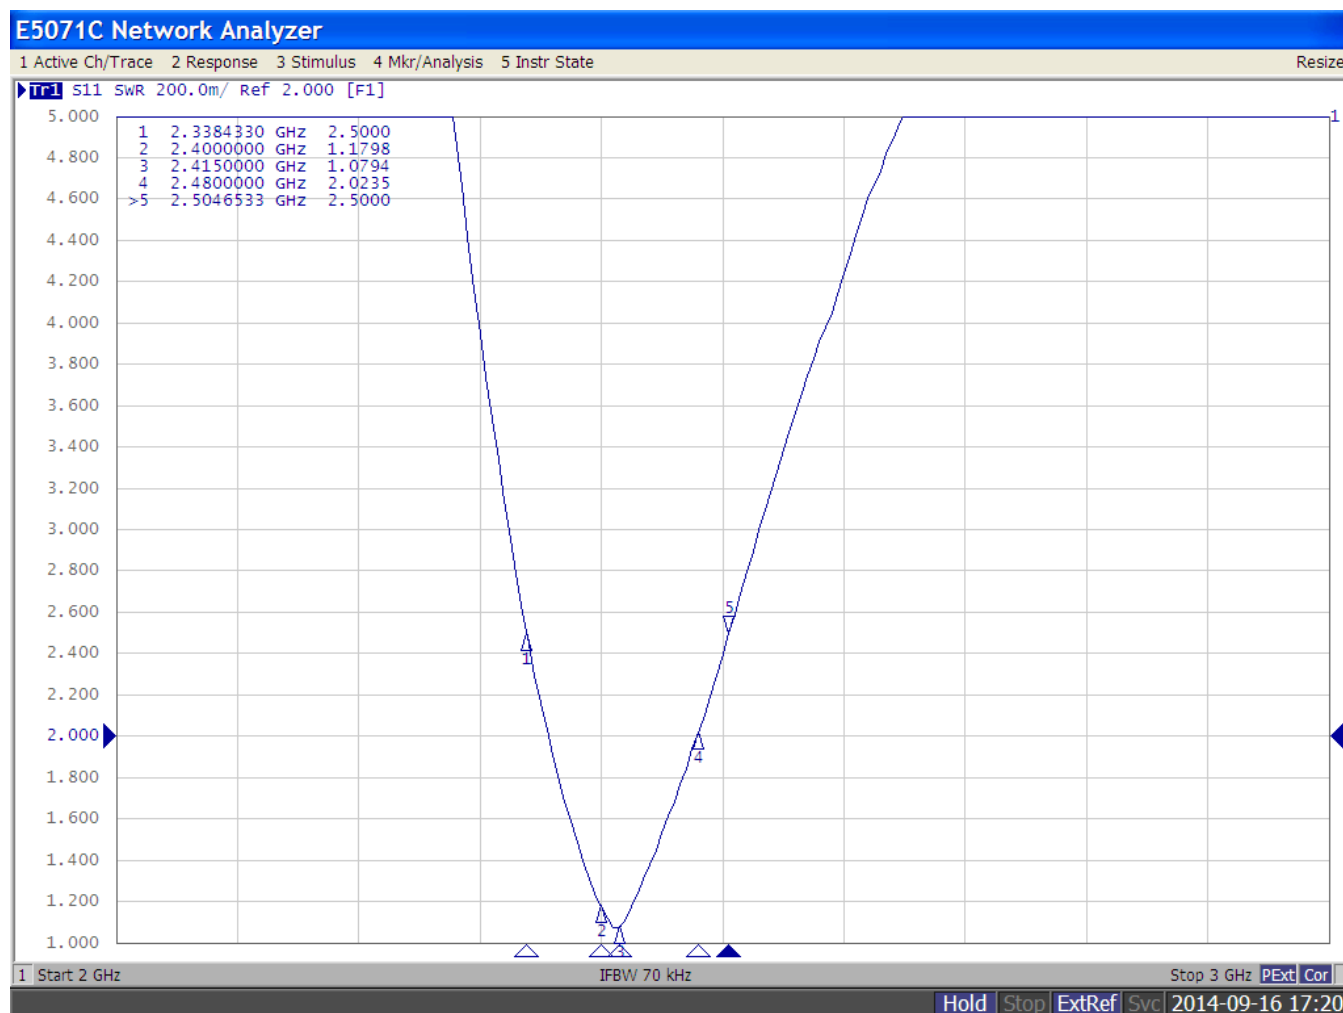


Figure 2 Antenna VSWR measured on a 1.5 mm thick plate of Polycarbonate

FLAT SURFACE ANTENNA RADIATION PERFORMANCE

FlexNotch centered on a 1.5 mm thick plate of Polycarbonate

Antenna Measurement Set-Up

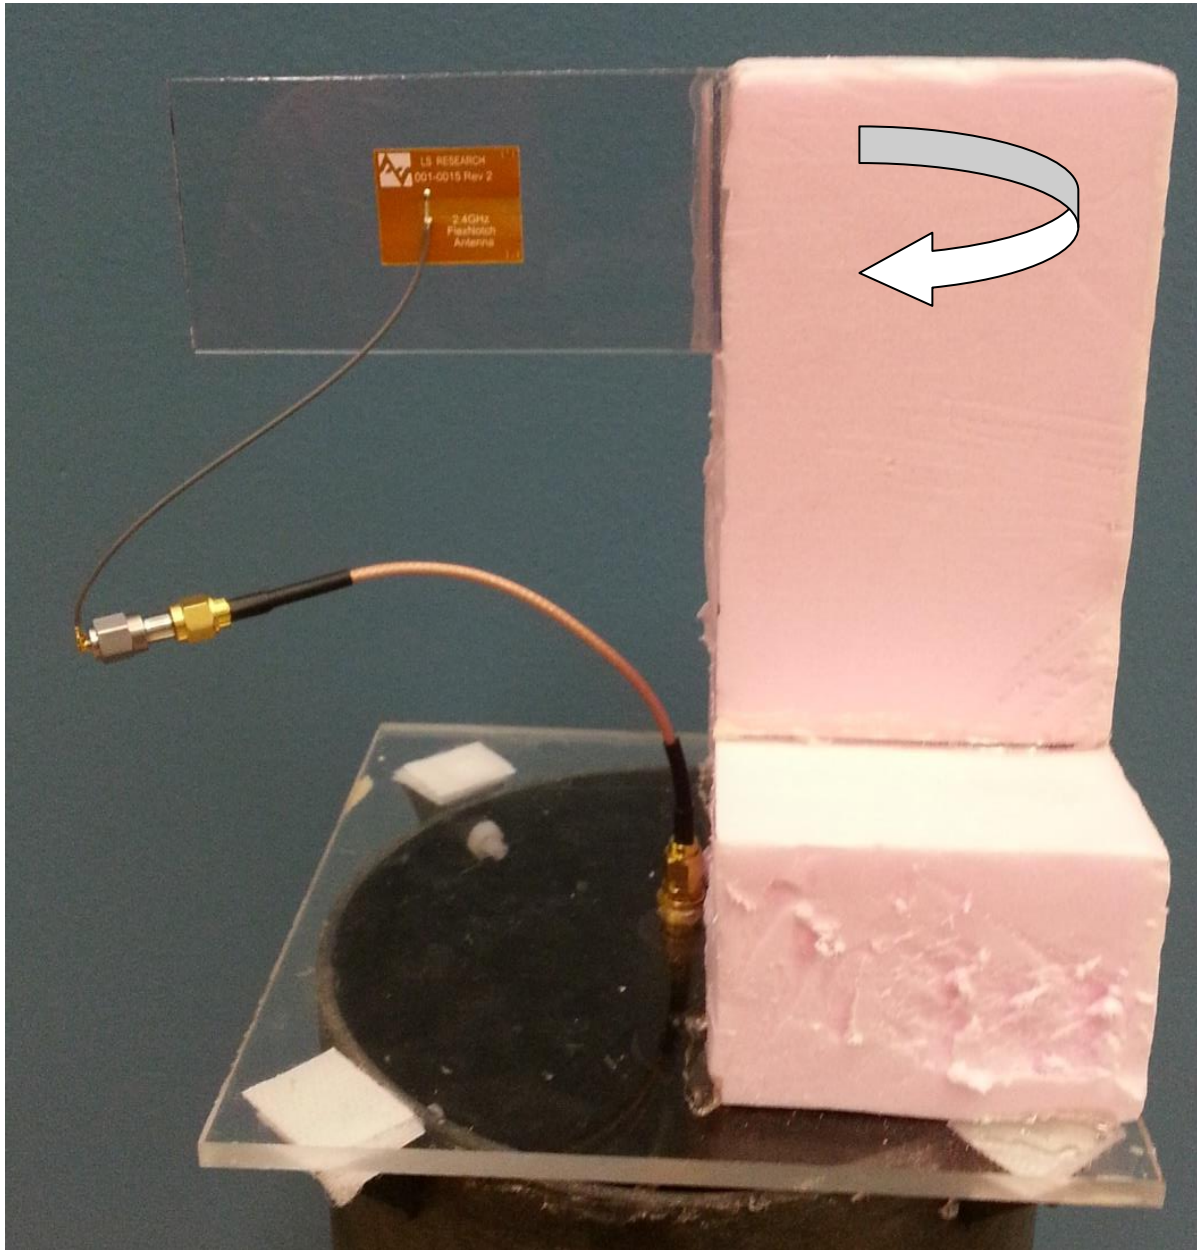


Figure 3 Horizontal Orientation Measurement

Horizontal Orientation at 2440 MHz:

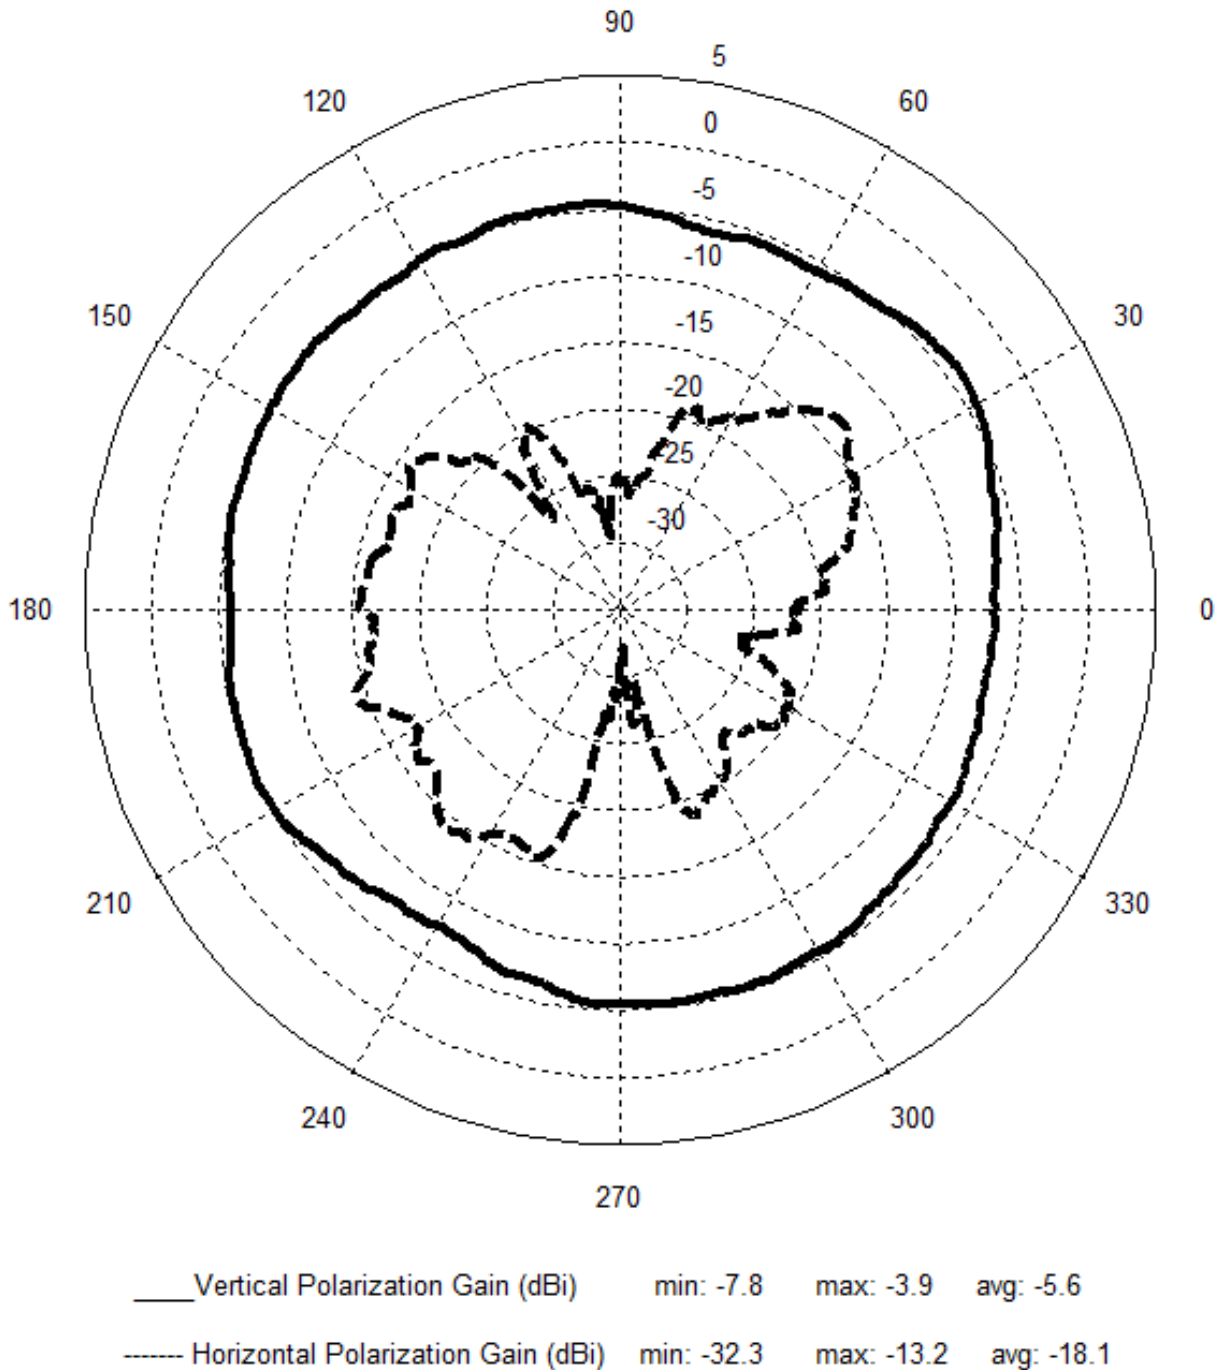


Figure 4 Horizontal Orientation Pattern

Antenna Measurement Set-Up

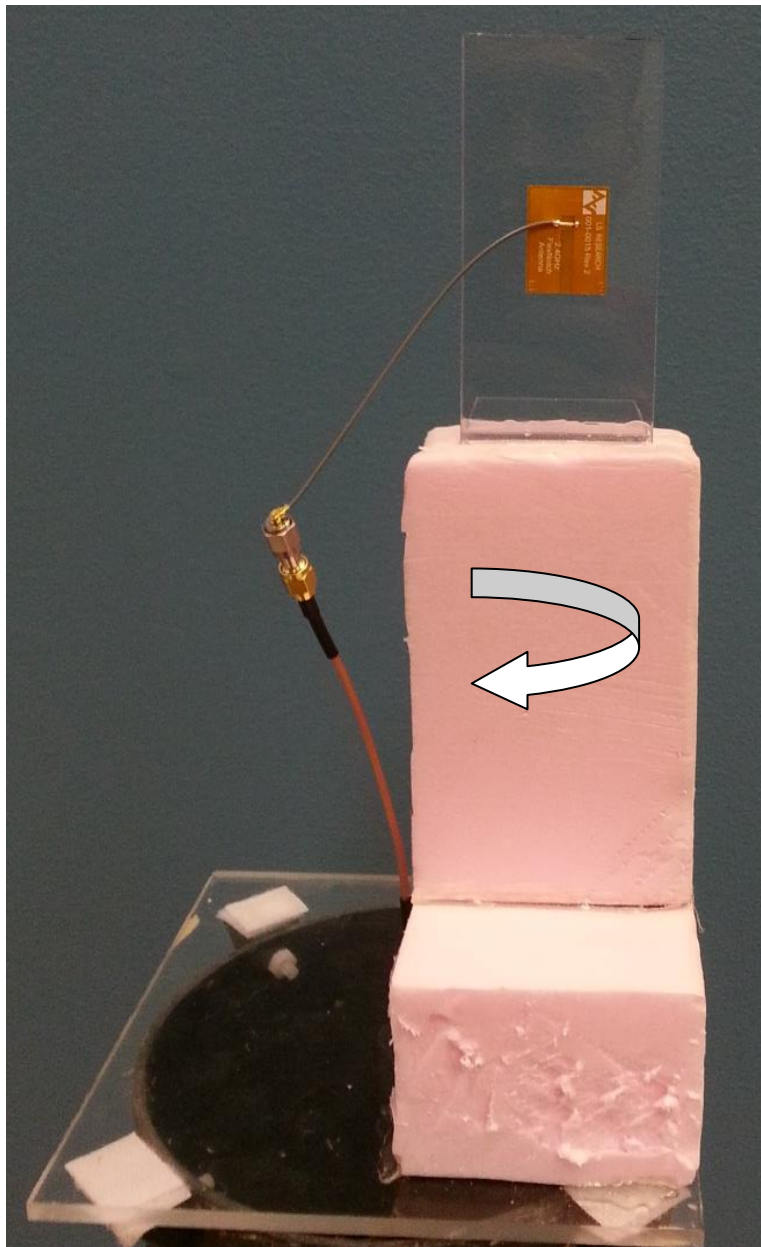


Figure 5 Vertical Orientation Measurement

Vertical Orientation at 2440 MHz:

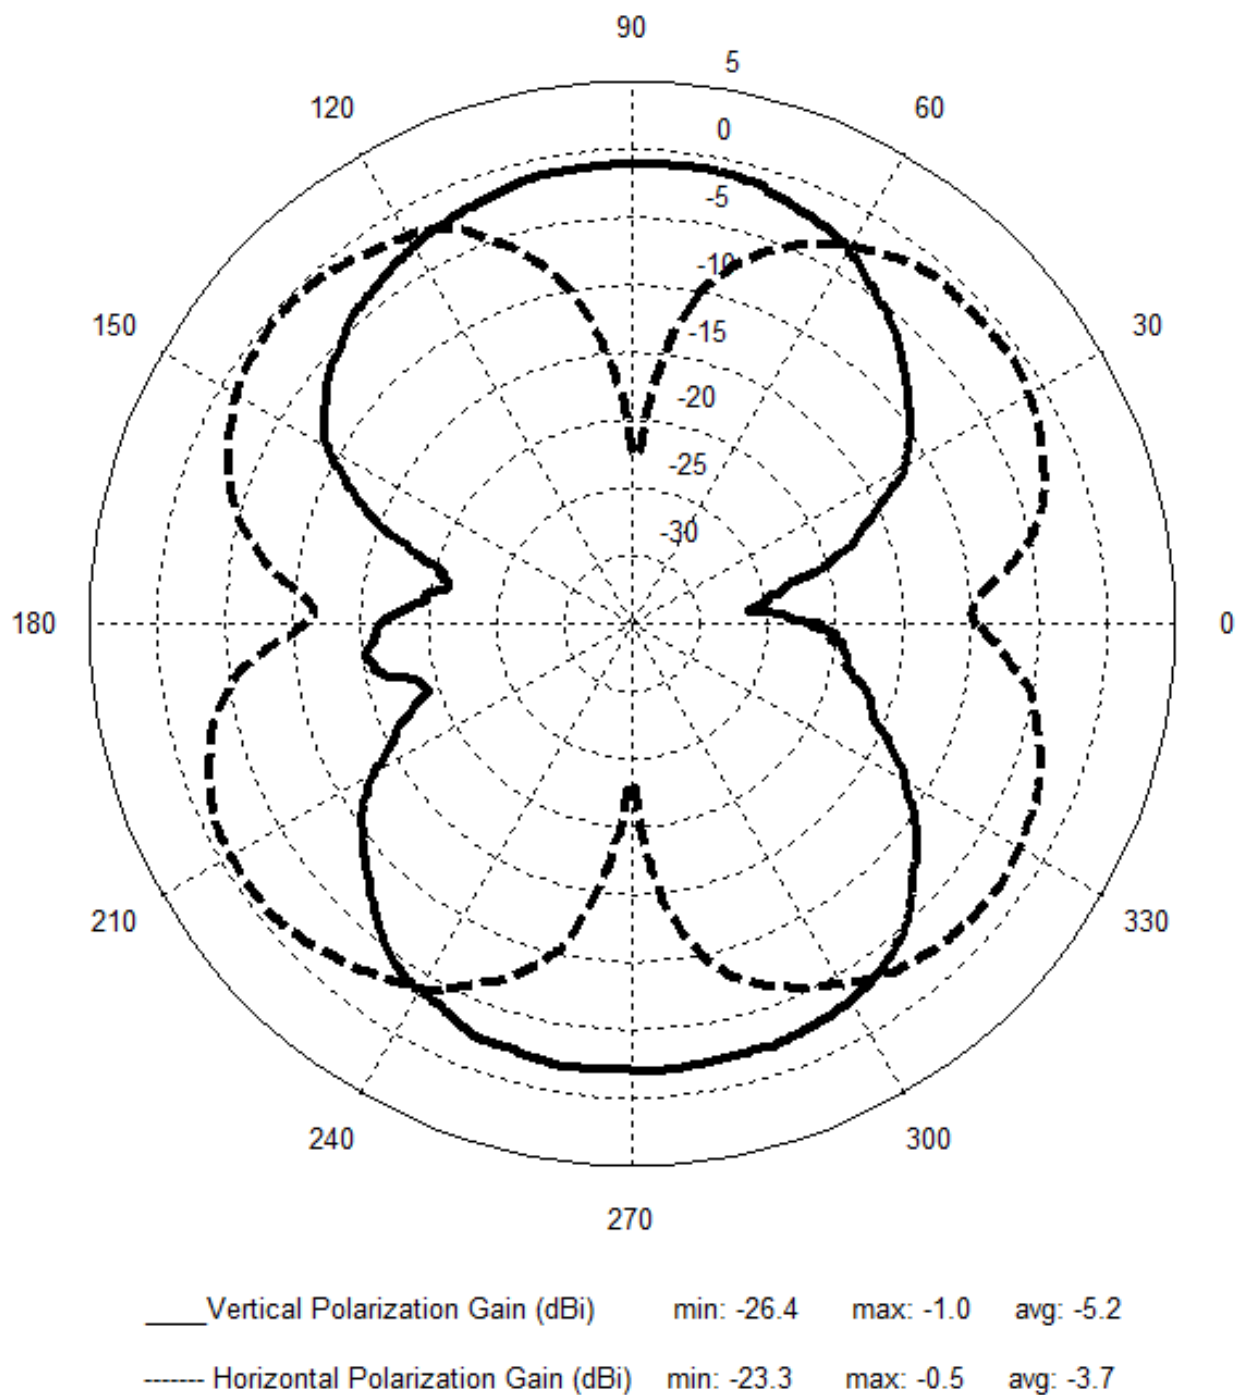


Figure 6 Vertical Orientation Pattern

Antenna Measurement Set-Up

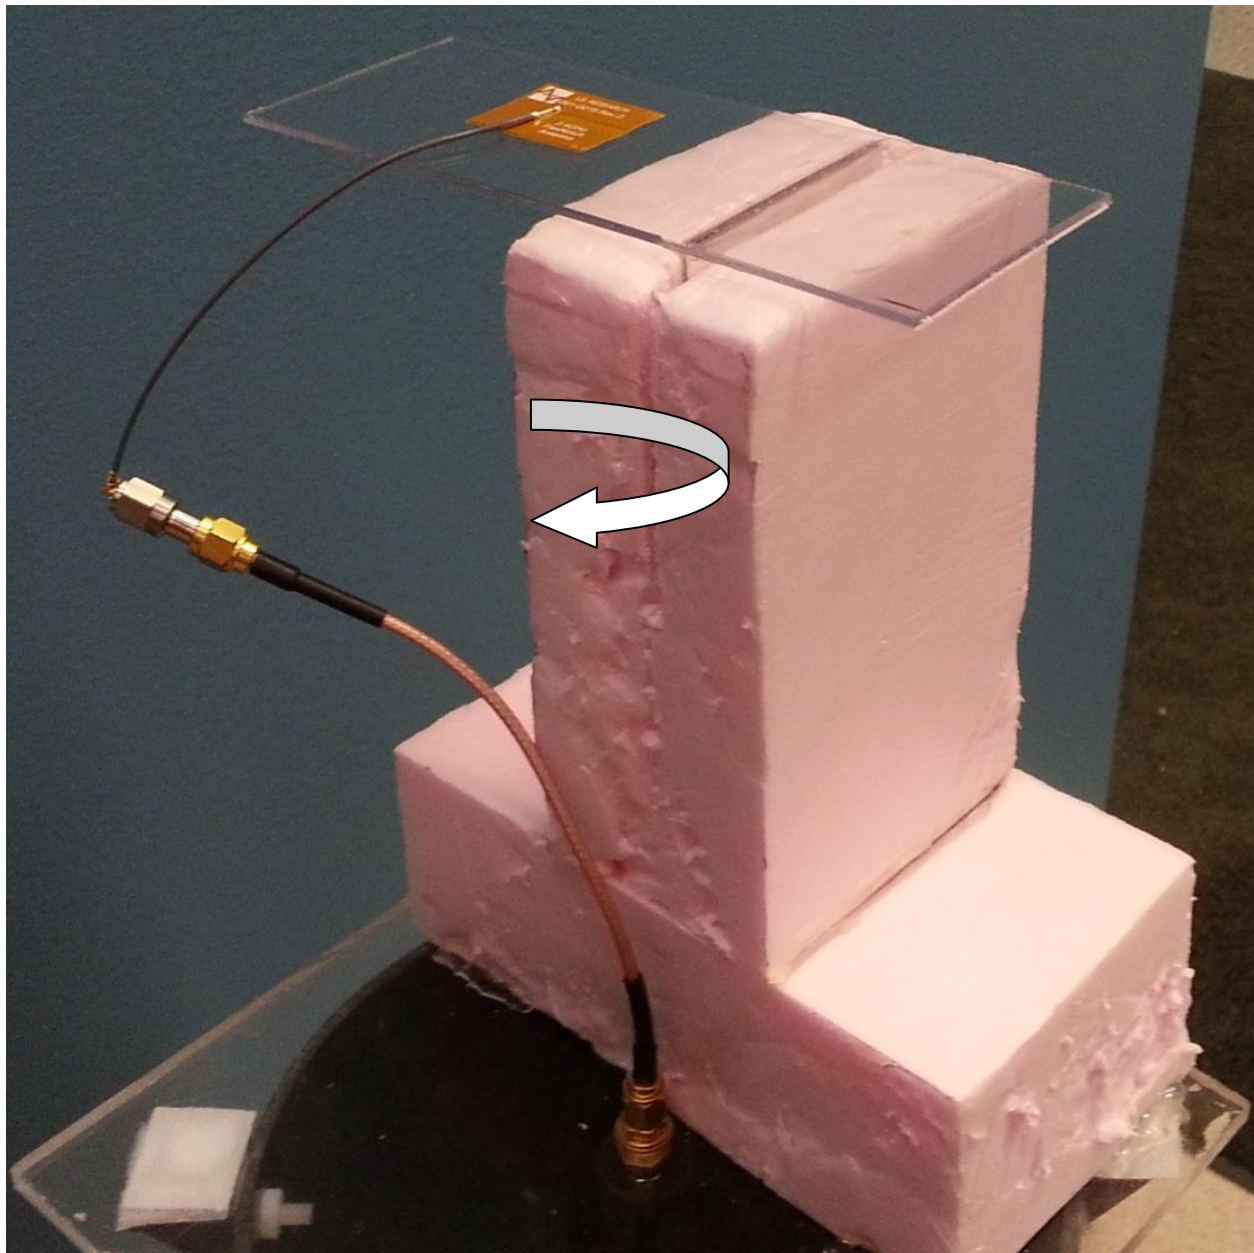


Figure 7 Flat Orientation Measurement

Flat Orientation at 2440 MHz:

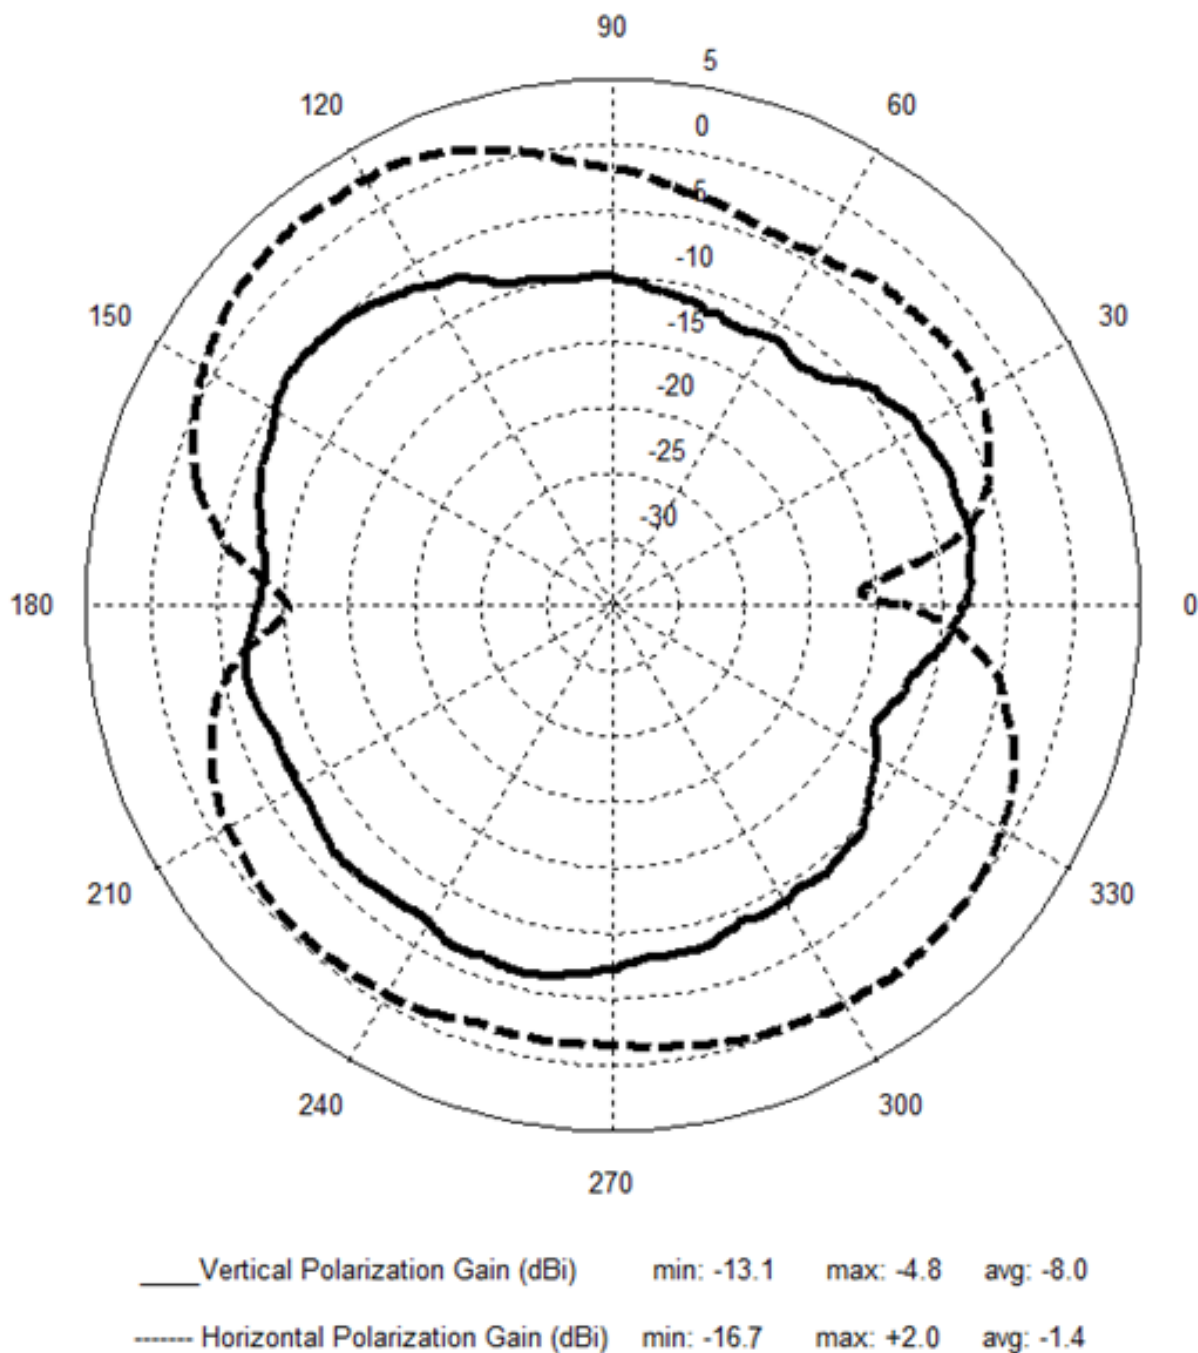


Figure 8 Flat Orientation Pattern

OPTIMAL INSTALLATION GUIDE

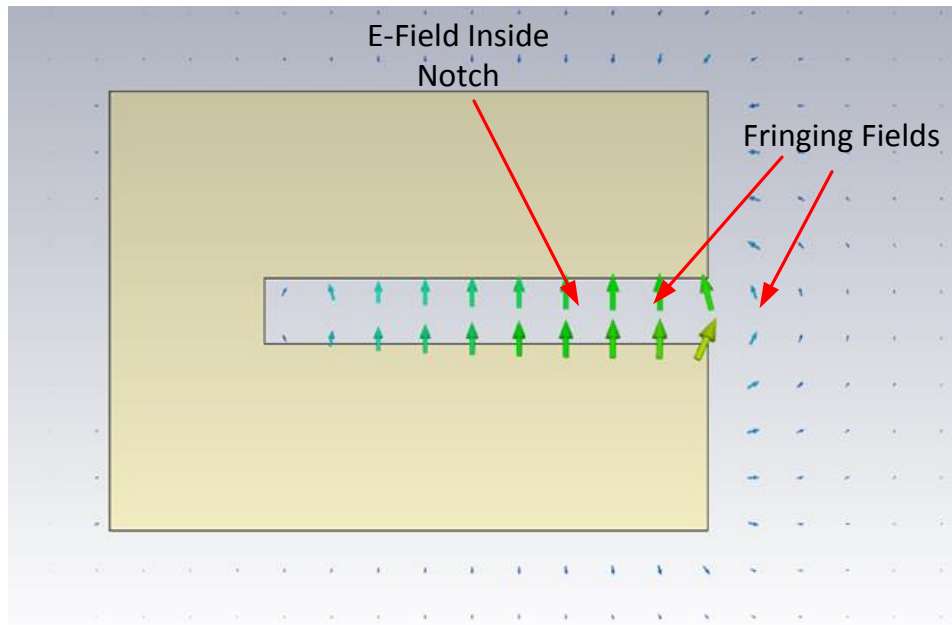


Figure 9 E-Field Radiation from FlexNotch, Taken from CST Simulation

The FlexNotch should be kept clear of any non-metal objects (such as plastics) on top of it by at least 5 mm (see **Figure 10**). Similarly, all four sides of the FlexNotch should be kept clear of any non-metal object by at least 1 mm (See **Figure 11** and **Figure 12**). Mounting the FlexNotch in a situation that does not allow for these clearance recommendations may change the gain characteristics stated in the datasheet, which could impact overall range of the wireless system.

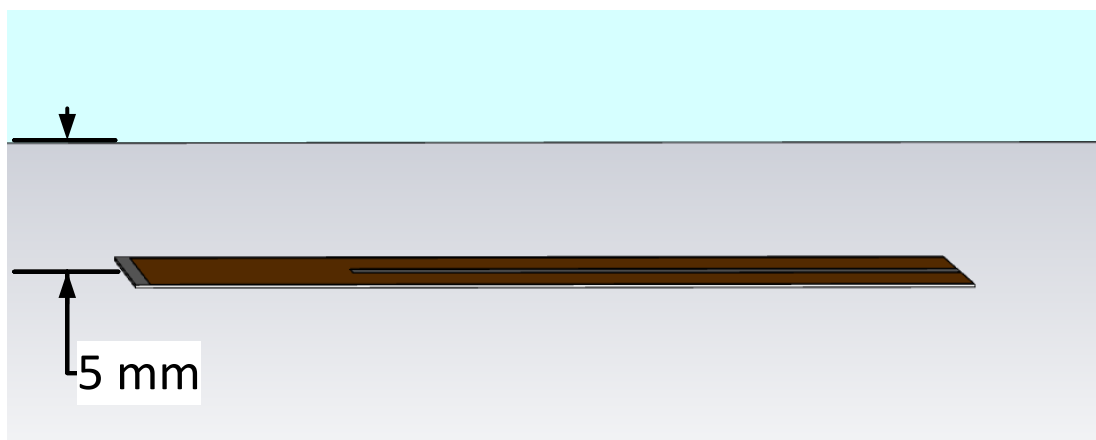


Figure 10 Above FlexNotch Clearance

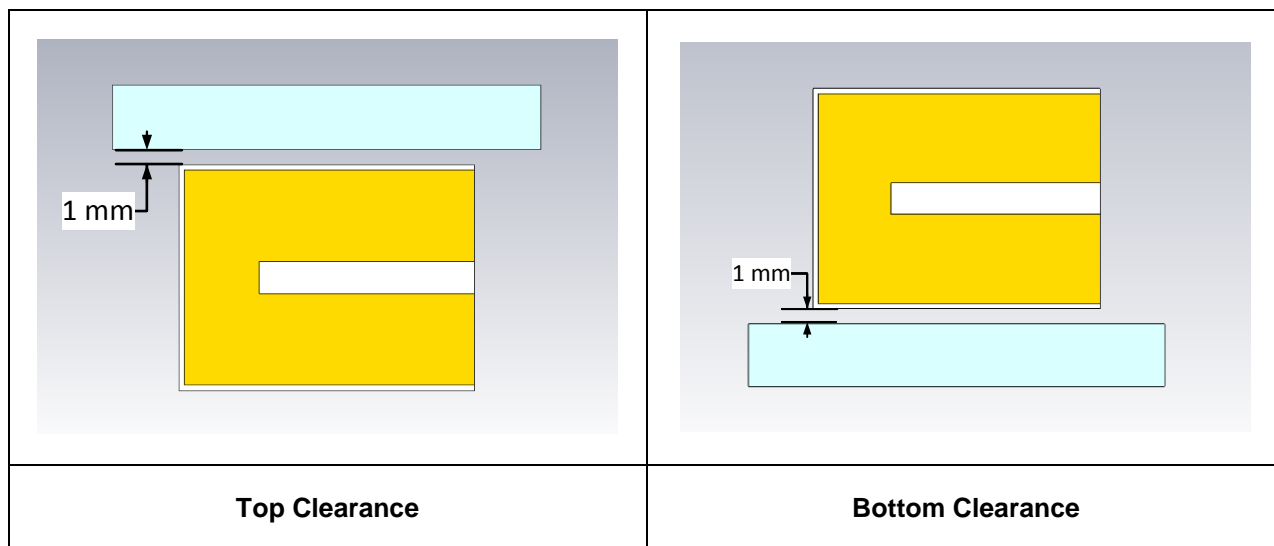


Figure 11 Top and Bottom Clearance

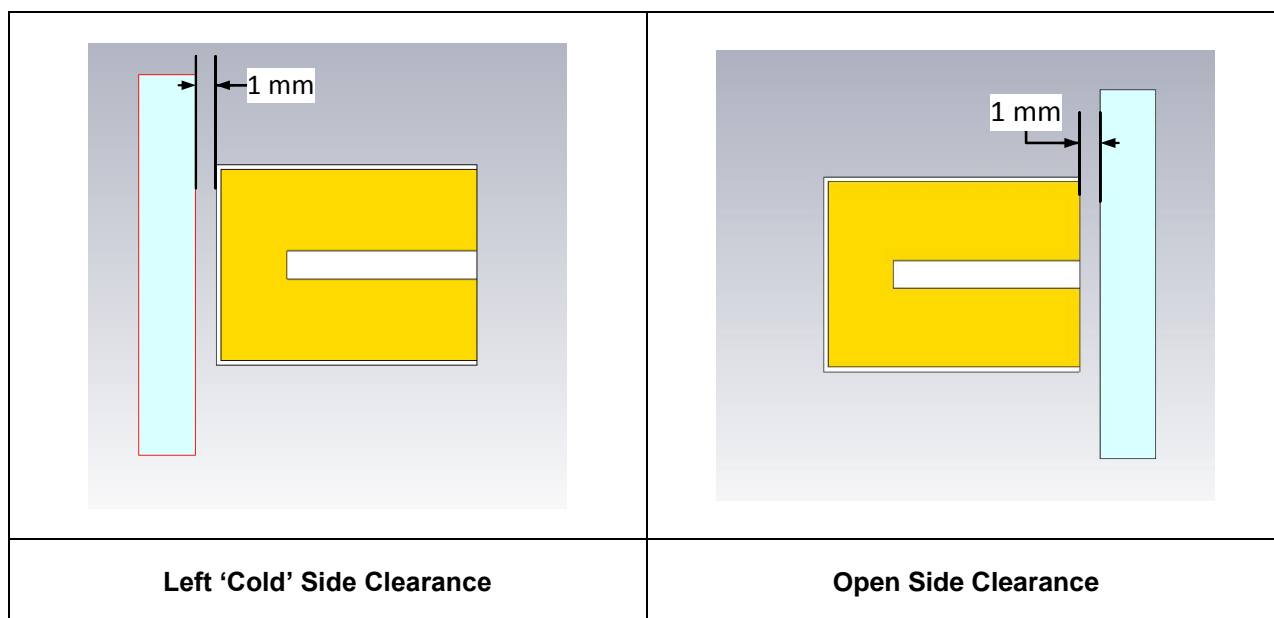


Figure 12 Open Side Clearance

The ideal material for the FlexNotch to be mounted on is 1.5 mm thick polycarbonate; this will result in maximum performance. If the FlexNotch is mounted on a different material, the tuning will change. This can cause a decrease in performance. LSR can retune the FlexNotch for specific implementations and different materials on request.

The coaxial cable feeding the FlexNotch should be routed away from the antenna. Do not run the coaxial cable above the FlexNotch or near the open end of the notch. The cable should be routed perpendicular to the side of the FlexNotch (this is the way the cable comes assembled), around the cold side, or away from the ground wall. All three of these options are shown in **Figure 13**.

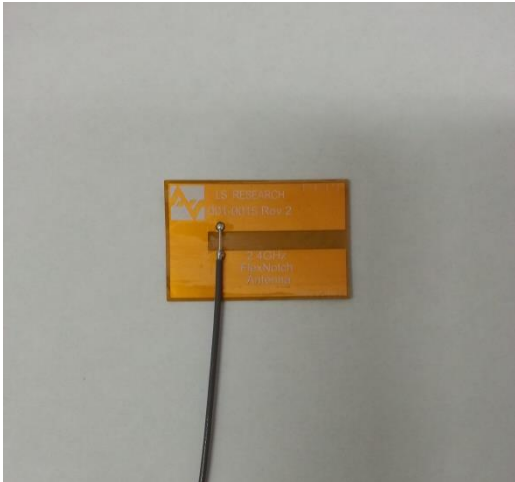
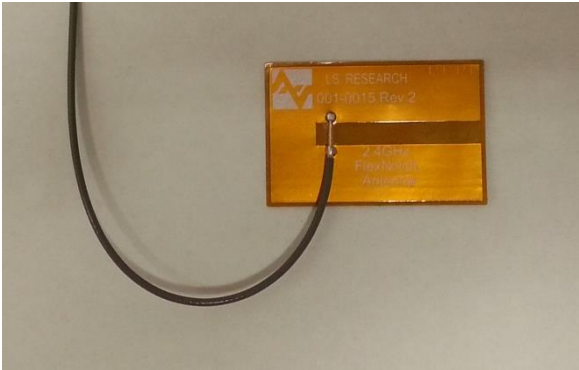
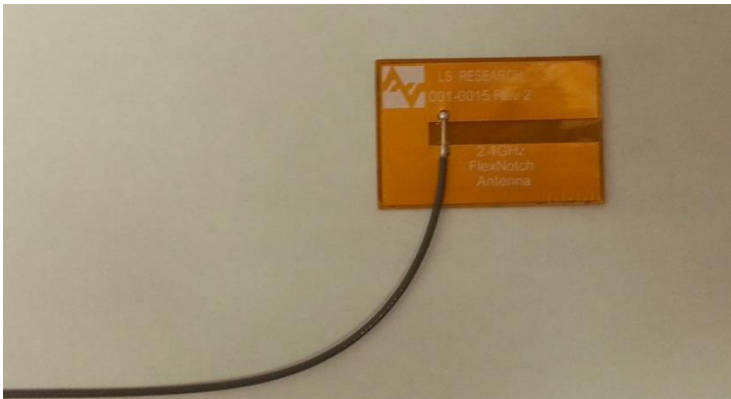
	
<p>Perpendicular to the side</p>	<p>Around the 'Cold' Side</p>
	
<p>Away from the Notch wall</p>	

Figure 13 Recommended Cable Routing

As with any antenna, care should be taken not to place conductive materials or objects near the antenna. The radiated fields from the antenna will induce currents on the conductive surface; as a result those currents then produce their own radiation. These re-radiating fields from the metal will interfere with the fields radiating from the FlexNotch (this is true for any antenna). Other objects, such as an LCD display, placed in close proximity to the antenna may not affect its tuning but it can distort the radiation pattern. Materials that absorb electromagnetic fields should be kept away from the antenna to maximize performance. Common things to keep in mind when placing the antenna:

Wire Routing

Speakers – these generate magnetic fields

Metal Chassis and Frames

Battery Location

Proximity to Human Body

Display Screen – these will absorb radiation

Paint – do not use metallic coating or flakes

Flex Limits of the FlexNotch

One of the unique features of the FlexNotch is its ability to flex. However, due to the adhesive there are limits as to how much the antenna can be flexed and remain secured to the device. The FlexNotch should not be flexed in a convex position with a radius less than 16 mm. Going smaller than this may result in the antenna peeling off the surface over time. Should a tighter radius of curvature be required, it is recommended you contact LSR for assistance.



Figure 14 Convex Mounted

The FlexNotch should not be flexed in a concave position with a radius less than 16 mm. Similar to the restrictions on the convex position, potential exists for the adhesive to peel off over time if the FlexNotch is bent beyond a 16 mm radius. If a tighter radius of curvature is required, it is recommended you contact LSR for assistance. The FlexNotch is not designed to be twisted or crumpled. The adhesive back should lay flush with the surface it is mounted on.

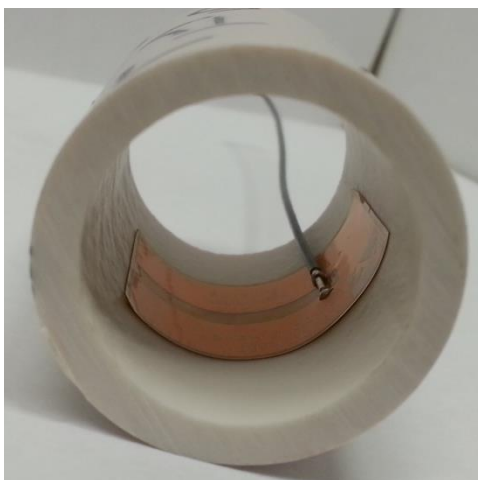


Figure 15 Concave Mounted

Mounting on Metal and Body Loaded Applications

The FlexNotch can tolerate being near conductive surfaces. A 1 mm clearance should be observed between the top, bottom, and cold sides of the FlexNotch from any metal (see **Figure 11**). Metal should be kept away from the open end of the FlexNotch by at least 10 mm. However, any metal in close proximity to the open end will disrupt the radiation pattern and could cause a decrease in antenna gain.

Keep any metal above the FlexNotch away by at least 10 mm; this will prevent the antenna from detuning. However this will still cause some distortion of the radiation pattern. **Do NOT mount the FlexNotch on a metal surface.**

These same guidelines also apply to body worn applications.

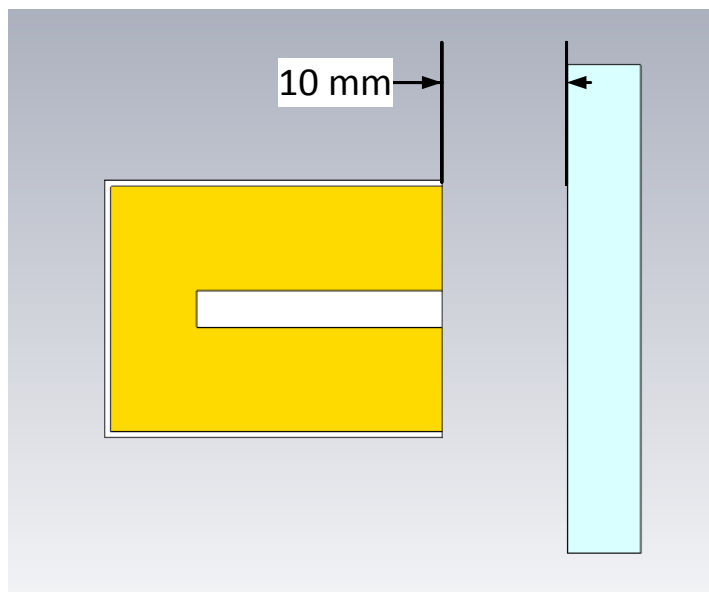


Figure 16 Open Side Metal Clearance

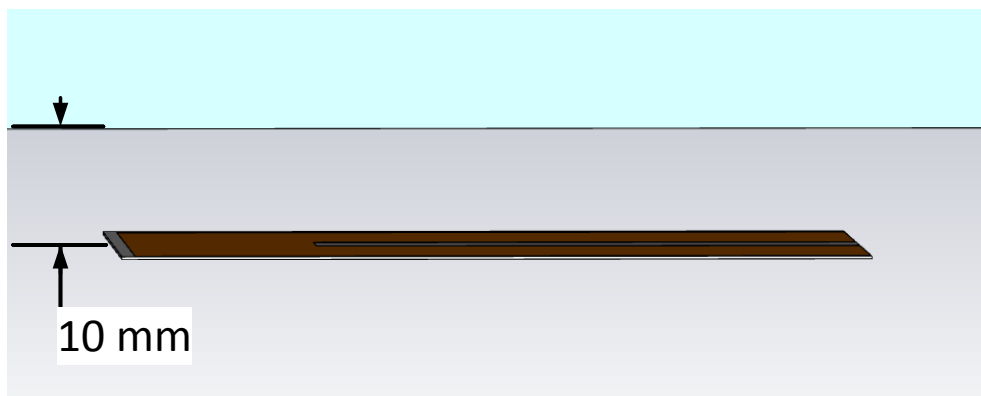



Figure 17 Above Notch Metal Clearance

CUSTOMER SPECIFIC TUNING


LSR will assist with custom tuning of the antenna for your specific end product. Simply send LSR a sample of your enclosure or platform, and LSR will tune an antenna for you. LSR will send the results back indicating which trim mark the antenna should be cut to, to optimize performance. You then trim the antennas at time of assembly to the indicated hash mark, and stick to your product.

PRODUCT REVISION HISTORY

Rev 1: Initial Production Release

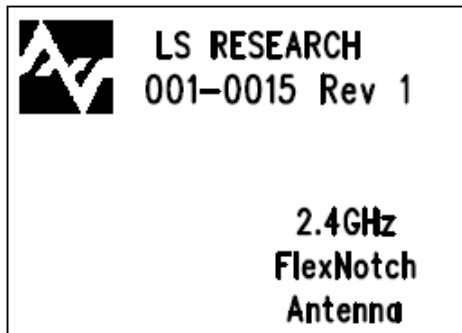

Rev 2:

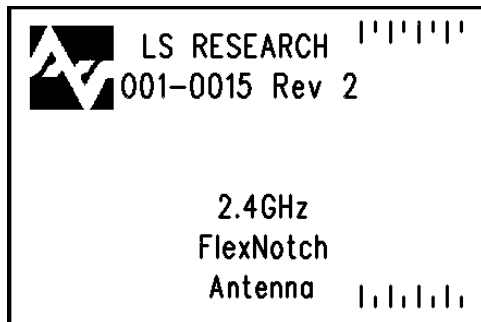

- Added Cut Hash Marks in intervals of 2 mm

CONTACTING LSR

Headquarters

LSR
W66 N220 Commerce Court
Cedarburg, WI 53012-2636
USA
Tel: 1(262) 375-4400
Fax: 1(262) 375-4248

Website

www.lsr.com

Wiki

www.lsr.com/products-wiki

Technical Support

www.lsr.com/products-forum

Sales Contact

sales@lsr.com

The information in this document is provided in connection with LS Research (hereafter referred to as “LSR”) products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of LSR products. EXCEPT AS SET FORTH IN LSR’S TERMS AND CONDITIONS OF SALE LOCATED ON LSR’S WEB SITE, LSR ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL LSR BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF LSR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. LSR makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and product descriptions at any time without notice. LSR does not make any commitment to update the information contained herein. Unless specifically provided otherwise, LSR products are not suitable for, and shall not be used in, automotive applications. LSR’s products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

AMEYA360

Components Supply Platform

Authorized Distribution Brand :



Website :

Welcome to visit www.ameya360.com

Contact Us :

➤ Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd
Minhang District, Shanghai , China

➤ Sales :

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

➤ Customer Service :

Email service@ameya360.com

➤ Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com