
Atmel

USER GUIDE

Atmel Segment LCD1 Xplained Pro

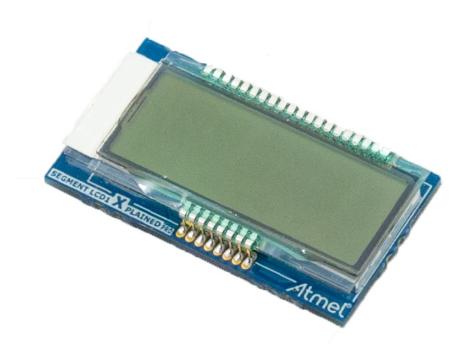

Preface

Atmel® Segment LCD1 Xplained Pro is an extension board to the Atmel Xplained Pro evaluation platform. Segment LCD1 Xplained Pro is designed to kick-start segment LCD development with Atmel microcontrollers that supports segment LCDs.

Table of Contents

Pre	eface		1
1.	Intro 1.1. 1.2.	duction Features Kit overview	3
2.	Getti 2.1. 2.2. 2.3.	ng started 3 Steps to start exploring the Atmel Xplained Pro platform Connecting Segment LCD1 Xplained Pro to the Xplained Pro MCU board Design documentation and related links	5 5
3.	Xplai 3.1. 3.2.	ned Pro Hardware identification system Standard headers and connectors 3.2.1. Xplained Pro segment LCD extension connector	6 6
4.	Hard 4.1. 4.2.	ware user guideHeaders and connectors4.1.1.Segment LCD1 Xplained Pro extension connectorSegment LCD display4.2.1.Segments4.2.2.Backlight	8 8 8 8
5.	Hard 5.1. 5.2.	ware revision history and known issues 1 Identifying product ID and revision 1 Revision 2 1	10
6.	Docu	ment revision history 1	1
7.	Eval u 7.1.	Jation board/kit important notice 1 Evaluation board/kit important notice 1	



1. Introduction

1.1 Features

- Custom Segment LCD with 96 individually controllable segments
 - Five 14-segment alphanumeric characters with delimiters
 - Four stage wireless signal indicator
 - Three stage battery indicator
 - AM, PM, Celsius, Fahrenheit, V, mV, USB, play and Atmel logo indicators.
 - Yellow-green backlight
- Xplained Pro hardware identification system

1.2 Kit overview

Atmel Segment LCD1 Xplained Pro extension board is a small circuit board, with a custom backlit segment LCD display, that is compatible with Xplained Pro MCU boards with a segment LCD connector.

Figure 1.1. Segment LCD1 Xplained Pro top overview


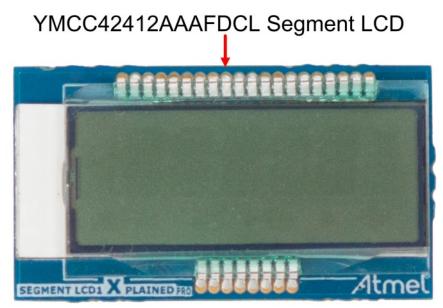




Figure 1.2. Segment LCD1 Xplained Pro bottom overview



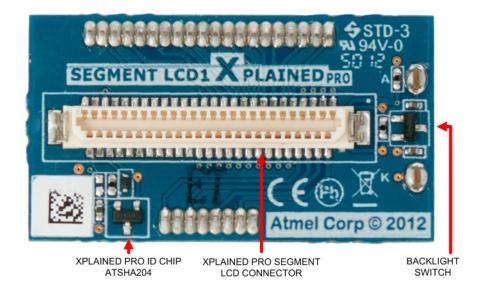

2. Getting started

2.1 3 Steps to start exploring the Atmel Xplained Pro platform

- 1. Download and install Atmel Studio¹.
- 2. Launch Atmel Studio.
- 3. Connect Segment LCD1 Xplained Pro to an Xplained Pro MCU board and connect a USB cable to DEBUG USB port on the Xplained Pro MCU board.

2.2 Connecting Segment LCD1 Xplained Pro to the Xplained Pro MCU board

Segment LCD1 Xplained Pro has been designed to be used with Xplained Pro MCU boards that contains a segment LCD connector. Please refer to the user guide of your Xplained Pro MCU board to find out if it has segment LCD support.

Once the Xplained Pro MCU board is powered the green power LED will be lit and Atmel Studio will auto detect which Xplained Pro MCU- and extension board(s) that is connected. You will be presented with relevant information like datasheets and kit documentation. You also have the option to launch Atmel Software Framework (ASF) example applications. The target device is programmed and debugged by the on-board Embedded Debugger. No external programmer or debugger tool is needed.

2.3 Design documentation and related links

The following list contains links to the most relevant documents and software for the Segment LCD1 Xplained Pro.

- 1. Xplained Pro products² Atmel Xplained Pro is a series of small-sized and easy-to-use evaluation kits for 8- and 32-bit Atmel microcontrollers. It consists of a series of low cost MCU boards for evaluation and demonstration of features and capabilities of different MCU families.
- 2. Segment LCD1 Xplained Pro User Guide ³ PDF version of this User Guide.
- 3. Segment LCD1 Xplained Pro Design Documentation ⁴ Package containing schematics, BOM, assembly drawings, 3D plots, layer plots etc.
- 4. Atmel Studio ⁵ Free Atmel IDE for development of C/C++ and assembler code for Atmel microcontrollers.

⁵ http://www.atmel.com/atmelstudio



¹ http://www.atmel.com/atmelstudio

² http://www.atmel.com/XplainedPro

³ http://www.atmel.com/Images/Atmel-42076-Segment-LCD1-Xplained-Pro_User-Guide.pdf

⁴ http://www.atmel.com/Images/Atmel-42076-Segment-LCD1-Xplained-Pro_User-Guide.zip

3. Xplained Pro

Xplained Pro is an evaluation platform that provides the full Atmel microcontroller experience. The platform consists of a series of Microcontroller (MCU) boards and extension boards that are integrated with Atmel Studio, have Atmel Software Framework (ASF) drivers and demo code, support data streaming and more. Xplained Pro MCU boards support a wide range of Xplained Pro extension boards that are connected through a set of standardized headers and connectors. Each extension board has an identification (ID) chip to uniquely identify which boards are mounted on a Xplained Pro MCU board. This information is used to present relevant user guides, application notes, datasheets and example code through Atmel Studio. Available Xplained Pro MCU and extension boards can be purchased in the Atmel Web Store¹.

3.1 Hardware identification system

All Xplained Pro compatible extension boards have an Atmel ATSHA204 crypto authentication chip mounted. This chip contains information that identifies the extension with its name and some extra data. When an Xplained Pro extension board is connected to an Xplained Pro MCU board the information is read and sent to Atmel Studio. The Atmel Kits extension, installed with Atmel Studio, will give relevant information, code examples and links to relevant documents. Table 3.1, "Xplained Pro ID chip content" shows the data fields stored in the ID chip with example content.

Data Field	Data Type	Example Content
Manufacturer	ASCII string	Atmel'\0'
Product Name	ASCII string	Segment LCD1 Xplained Pro'\0'
Product Revision	ASCII string	02'\0'
Product Serial Number	ASCII string	177402020000010'\0'
Minimum Voltage [mV]	uint16_t	3000
Maximum Voltage [mV]	uint16_t	3600
Maximum Current [mA]	uint16_t	30

Table 3.1. Xplained Pro ID chip content

3.2 Standard headers and connectors

3.2.1 Xplained Pro segment LCD extension connector

Xplained Pro MCU boards that have a microcontroller that supports segment LCDs contain a 51-pin segment LCD extension connector. This connector is implemented with HIROSEs DF-9 series. Xplained Pro MCU boards use the male version DF9-51P-1V(69) and Xplained Pro extension boards use the female counterpart DF9-51S-1V(69). This header has a standardized pin-out as shown in Table 3.2, "Xplained Pro segment LCD extension connector definition".

Note

All pins are not connected on all Xplained Pro MCU boards, how many pins that are used depend on how many segments and common terminals the target MCU supports.

Table 3.2. Xplained Pro segment LCD extension connector definition

Description	Function	Pin	Pin	Function	Description
Common terminal 3	COM3	1	2	COM2	Common terminal 2
Common terminal 1	COM1	3	4	COM0	Common terminal 0
Segment 0	SEG0	5	6	SEG1	Segment 1
Segment 2	SEG2	7	8	SEG3	Segment 3
Segment 4	SEG4	9	10	SEG5	Segment 5
Segment 6	SEG6	11	12	SEG7	Segment 7
Segment 8	SEG8	13	14	SEG9	Segment 9
Segment 10	SEG10	15	16	SEG11	Segment 11

¹ http://store.atmel.com/



Description	Function	Pin	Pin	Function	Description
Segment 12	SEG12	17	18	SEG13	Segment 13
Segment 14	SEG14	19	20	SEG15	Segment 15
Segment 16	SEG16	21	22	SEG17	Segment 17
Segment 18	SEG18	23	24	SEG19	Segment 19
Segment 20	SEG20	25	26	SEG21	Segment 21
Segment 22	SEG22	27	28	SEG23	Segment 23
Segment 24	SEG24	29	30	SEG25	Segment 25
Segment 26	SEG26	31	32	SEG27	Segment 27
Segment 28	SEG28	33	34	SEG29	Segment 29
Segment 30	SEG30	35	36	SEG31	Segment 31
Segment 32	SEG32	37	38	SEG33	Segment 33
Segment 34	SEG34	39	40	SEG35	Segment 35
Segment 36	SEG36	41	42	SEG37	Segment 37
Segment 38	SEG38	43	44	SEG39	Segment 39
Not Connected	NC	45	46	NC	Not Connected
Backlight Anode	Backlight V+	47	48	Backlight V-	Backlight Cathode
Backlight Control	Backlight CTRL	49	50	ID	Xplained Pro ID line
Ground	GND	51			

4. Hardware user guide

4.1 Headers and connectors

4.1.1 Segment LCD1 Xplained Pro extension connector

Segment LCD1 Xplained Pro implements one segment LCD extension connector which makes it possible to connect the board to any Xplained Pro MCU board with segment LCD support. Segment LCD1 Xplained Pro requires 4 common terminals and segment terminal 0 through 23 to control all segments. The complete pinmapping for the connector is described in Table 4.1, "Segment LCD1 Xplained Pro Extension Connector".

Description	Function	Pin	Pin	Function	Description
Common terminal 3	COM3	1	2	COM2	Common terminal 2
Common terminal 1	COM1	3	4	COM0	Common terminal 0
Segment 0	SEG0	5	6	SEG1	Segment 1
Segment 2	SEG2	7	8	SEG3	Segment 3
Segment 4	SEG4	9	10	SEG5	Segment 5
Segment 6	SEG6	11	12	SEG7	Segment 7
Segment 8	SEG8	13	14	SEG9	Segment 9
Segment 10	SEG10	15	16	SEG11	Segment 11
Segment 12	SEG12	17	18	SEG13	Segment 13
Segment 14	SEG14	19	20	SEG15	Segment 15
Segment 16	SEG16	21	22	SEG17	Segment 17
Segment 18	SEG18	23	24	SEG19	Segment 19
Segment 20	SEG20	25	26	SEG21	Segment 21
Segment 22	SEG22	27	28	SEG23	Segment 23
	NC	29	30	NC	
	NC	31	32	NC	
	NC	33	34	NC	
	NC	35	36	NC	
	NC	37	38	NC	
	NC	39	40	NC	
	NC	41	42	NC	
	NC	43	44	NC	
	NC	45	46	NC	
Backlight Anode	Backlight V+	47	48	Backlight V-	Backlight Cathode
Backlight Control	Backlight CTRL	49	50	ID	Xplained Pro ID line
Ground	GND	51			

Table 4.1. Segment LCD1 Xplained Pro Extension Connector

4.2 Segment LCD display

Segment LCD1 Xplained Pro features an LCD module with 4 common and 24 segment terminals. These 96 segments form several symbols and five 14-segment characters. The LCD module runs at 1/4 duty cycle and 1/3 bias and has yellow-green backlighting.

4.2.1 Segments

Figure 4.1, "YMCC42412AAAFDCL segments" and Table 4.2, "YMCC42412AAAFDCL segments" shows the relation between the common terminals, segment terminals and the segments on the display.



Figure 4.1. YMCC42412AAAFDCL segments

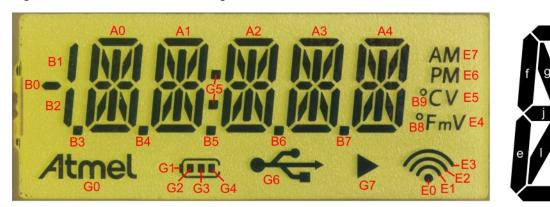


Table 4.2. YMCC42412AAAFDCL segments

	COM0	COM1	COM2	COM3	Comments
SEG0	G1	G2	G4	G3	Atmel logo, 4 stage battery-, Dot-point-, usb-
SEG1	G0	G6	G7	G5	and play indicator
SEG2	E7	E5	E3	E1	4 stage wireless-, AM-, PM- Volt- and milli volt
SEG3	E6	E4	E2	E0	indicator
SEG4	A0-h	A0-i	A0-k	A0-n	
SEG5	B3	A0-f	А0-е	A0-d	1 at 14 accment observator
SEG6	A0-a	A0-b	A0-c	B4	1st 14-segment character.
SEG7	A0-g	A0-j	A0-I	A0-m	
SEG8	A1-h	A1-i	A1-k	A1-n	
SEG9	B2	A1-f	A1-e	A1-d	and 14 ecoment character
SEG10	A1-a	A1-b	A1-c	B5	2nd 14-segment character
SEG11	A1-g	A1-j	A1-I	A1-m	
SEG12	A2-h	A2-i	A2-k	A2-n	
SEG13	B1	A2-f	A2-e	A2-d	3rd 14-segment character
SEG14	A2-a	A2-b	A2-c	B6	Signature Segment character
SEG15	A2-g	A2-j	A2-I	A2-m	
SEG16	A3-h	A3-i	A3-k	A3-n	
SEG17	B0	A3-f	А3-е	A3-d	4th 14-segment character.
SEG18	А3-а	A3-b	А3-с	B7	4th 14-segment character.
SEG19	A3-g	A3-j	A3-I	A3-m	
SEG20	A4-h	A4-i	A4-k	A4-n	
SEG21	B8	A4-f	A4-e	A4-d	5th 14-segment character. Celsius and
SEG22	A4-a	A4-b	A4-c	B9	Fahrenheit indicator.
SEG23	A4-g	A4-j	A4-I	A4-m	

4.2.2 Backlight

The segment LCD's backlight is disabled by default and can be enabled by driving the BACKLIGHT CTRL pin high. A FET drives the backlight. A PWM signal can be used to control the backlight intensity.



An a

5. Hardware revision history and known issues

5.1 Identifying product ID and revision

The revision and product identifier of Xplained Pro boards can be found in two ways, through Atmel Studio or by looking at the sticker on the bottom side of the PCB.

By connecting a Xplained Pro MCU board to a computer with Atmel Studio running, an information window will pop up. The first 6 digits of the serial number, which is listed under kit details, contain the product identifier and revision. Information about connected Xplained Pro extension boards will also appear in the Atmel Kits window.

The same information can be found on the sticker on the bottom side of the PCB. Most kits will print the identifier and revision in plain text as *A09-nnnn\rr* where *nnnn* is the identifier and *rr* is the revision. Boards with limited space have a sticker with only a QR-code which contains a serial number string.

The serial number string has the following format:

```
"nnnnrrssssssssss"
n = product identifier
r = revision
s = serial number
```

The kit identifier for Segment LCD1 Xplained Pro is 1774.

5.2 Revision 2

Revision 2 of Segment LCD1 Xplained Pro is the initial released version. There are no known issues



6. Document revision history

Doc. Rev.	Date	Comment
А	25/02/2013	First release



7. Evaluation board/kit important notice

7.1 Evaluation board/kit important notice

This evaluation board/kit is intended for use for **FURTHER ENGINEERING**, **DEVELOPMENT**, **DEMONS-TRATION**, **OR EVALUATION PURPOSES ONLY**. It is not a finished product and may not (yet) comply with some or any technical or legal requirements that are applicable to finished products, including, without limitation, directives regarding electromagnetic compatibility, recycling (WEEE), FCC, CE or UL (except as may be otherwise noted on the board/kit). Atmel supplied this board/kit "AS IS," without any warranties, with all faults, at the buyer's and further users' sole risk. The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies Atmel from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge and any other technical or legal concerns.

EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER USER NOR ATMEL SHALL BE LIABLE TO EACH OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAM-AGES.

No license is granted under any patent right or other intellectual property right of Atmel covering or relating to any machine, process, or combination in which such Atmel products or services might be or are used.

Mailing Address: Atmel Corporation, 1600 Technology Drive, San Jose, CA 95110



Atmel Enabling Unlimited Possibilities®

Atmel Corporation 1600 Technology Drive, San Jose, CA 95110 USA

T: (+1)(408) 441.0311

F: (+1)(408) 436.4200

.4200 | www.atmel.com

© 2013 Atmel Corporation. All rights reserved. / Rev.: 42076A-MCU-02/13

Atmel®, Atmel logo and combinations thereof, , Enabling Unlimited Possibilities®, and others are registered trademarks or trademarks of Atmel Corporation or its subsidiaries. Other terms and product names may be trademarks of others.

Disclaimer: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN THE ATMEL TERMS AND CONDITIONS OF SALES LOCATED ON THE ATMEL WEBSITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS AND PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and products descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

AMEYA360 Components Supply Platform

Authorized Distribution Brand :



Website :

Welcome to visit www.ameya360.com

Contact Us :

> Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd Minhang District, Shanghai , China

> Sales :

- Direct +86 (21) 6401-6692
- Email amall@ameya360.com
- QQ 800077892
- Skype ameyasales1 ameyasales2

Customer Service :

Email service@ameya360.com

> Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com