
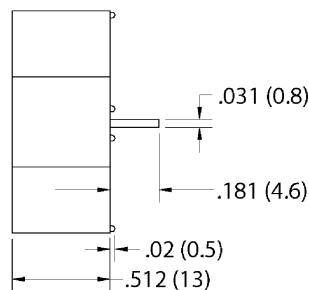


# Product APPLICATION Guide

## MSS300R Speaker/Housing Assembly For IEC60601-1-8 Medical Applications

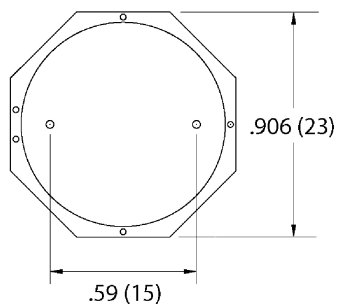

## MSS300R


### KEY FEATURES:

- Designed to Meet IEC 60601-1-8
- 975 Hz Fundamental Frequency
- 4 Harmonic Peaks within  $\pm 15$  dB (1 to 4 kHz)
- 85 dB @ 10 cm Typical with 325 Hz Square Wave Signal
- 8 Ohm; 0.25 Watt Mylar Speaker
- 325 Hz Square Wave Input Drive Signal Required
- RoHS Compliant

Continued

## MSS300R (Con't)

### Frequency Response (with 325 Hz Square Wave Applied):

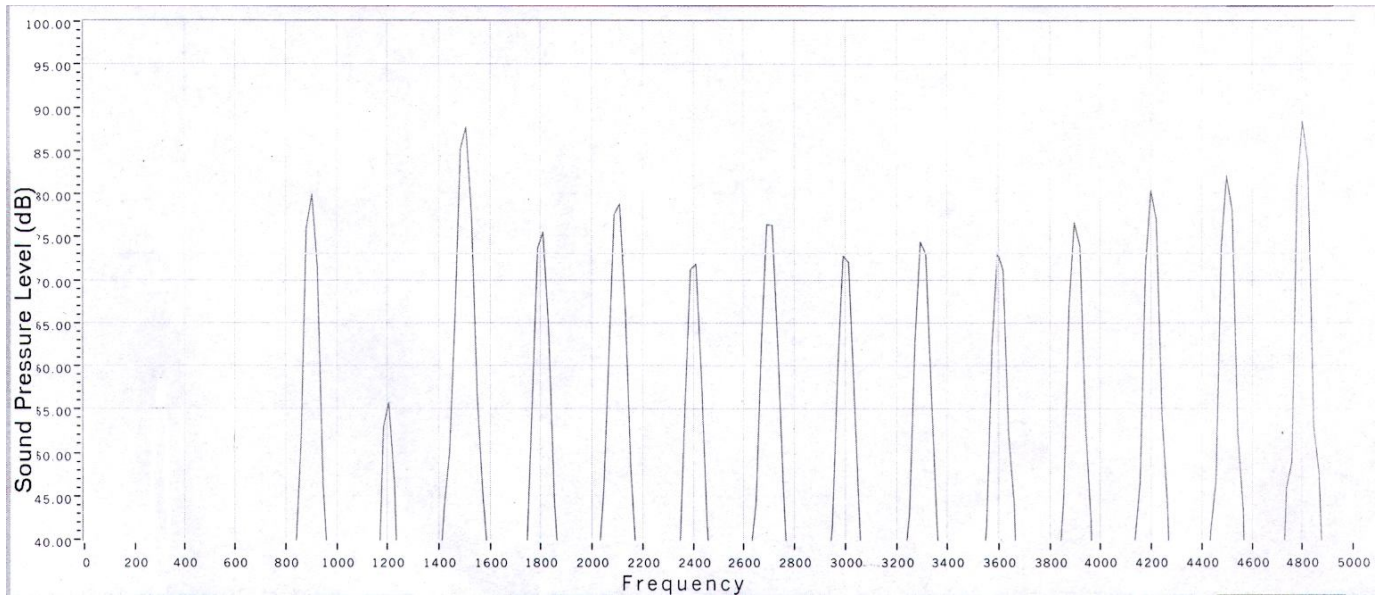

As shown above, the fundamental frequency is below 1 kHz, and there are more than 4 harmonic peaks between 1 and 4 kHz. All harmonic peaks are within  $\pm 15$  dB of the fundamental frequency.

## Specifications

|                           |                                      |                          |  |
|---------------------------|--------------------------------------|--------------------------|--|
| <b>Fundamental Freq:</b>  | 975 $\pm$ 24 Hz.                     | <b>Rated Wattage:</b>    | 0.25 Watts                             |
| <b>No. of Harmonics:</b>  | Min. of 4 (1 to 4 kHz)               | <b>Max Wattage:</b>      | 0.50 Watts                             |
| <b>Sound Level:</b>       | 85 dB @ 10 cm Typical                | <b>Drive Signal:</b>     | 2.8 Vpp; 325 $\pm$ 8 Hz<br>Square Wave |
| <b>Storage Temp:</b>      | -20 $^{\circ}$ C to +55 $^{\circ}$ C | <b>Case Material:</b>    | Valox (UL94-V0)                        |
| <b>Operating Temp:</b>    | -20 $^{\circ}$ C to +55 $^{\circ}$ C | <b>Speaker Material:</b> | Mylar                                  |
| <b>Speaker Impedance:</b> | 8 Ohm (1 Volt; 800 Hz)               |                          |  |

## MSS300R Notes

1. No circuitry is included with this device. The designer must supply the 325 Hz square wave drive signal.
2. Refer to IEC 60601-1-8 for the appropriate beeping rate that is required which depends on the priority of the alarm.
3. Only one frequency (325 Hz) is needed to be applied to this device. The multiple harmonic frequencies are automatically generated acoustically.

Call 317-612-1000 or Visit [www.mallory-sonalert.com](http://www.mallory-sonalert.com) for More Details

# AMEYA360

Components Supply Platform

Authorized Distribution Brand :



Website :

Welcome to visit [www.ameya360.com](http://www.ameya360.com)

Contact Us :

➤ Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd  
Minhang District, Shanghai , China

➤ Sales :

Direct    +86 (21) 6401-6692  
Email     amall@ameya360.com  
QQ        800077892  
Skype     ameyasales1 ameyasales2

➤ Customer Service :

Email     service@ameya360.com

➤ Partnership :

Tel        +86 (21) 64016692-8333  
Email     mkt@ameya360.com