Document Number: MMA8450Q

Rev. 9.1, 04/2012



# 3-Axis, 8-bit/12-bit Digital Accelerometer

The MMA8450Q is a smart low-power, three-axis, capacitive micromachined accelerometer featuring 12 bits of resolution. This accelerometer is packed with embedded functions with flexible user programmable options, configurable to two interrupt pins. Embedded interrupt functions allow for overall power savings relieving the host processor from continuously polling data. The MMA8450Q's Embedded FIFO buffer can be configured to log up to 32 samples of X,Y and Z-axis 12-bit (or 8-bit for faster download) data. The FIFO enables a more efficient analysis of gestures and user programmable algorithms, ensuring no loss of data on a shared I<sup>2</sup>C bus, and enables system level power saving (up to 96% of the total power consumption savings) by allowing the applications processor to sleep while data is logged. There is access to both low pass filtered data as well as high pass filtered data, which minimizes the data analysis required for jolt detection and faster transitions. The MMA8450Q has user selectable full scales of ±2g/±4g/±8g. The device can be configured to generate inertial wakeup interrupt signals from any combination of the configurable embedded functions allowing the MMA8450Q to monitor events and remain in a low power mode during periods of inactivity.

#### **Features**


- 1.71V to 1.89V supply voltage
- ±2g/±4g/±8g dynamically selectable full-scale
- Output Data Rate (ODR) from 400 Hz to 1.563 Hz
- 375 µg/√Hz noise at normal mode ODR = 400 Hz
- 12-bit digital output
- I<sup>2</sup>C digital output interface (operates up to 400 kHz Fast Mode)
- Programmable two interrupt pins for eight interrupt sources
- Embedded four channels of motion detection
  - Freefall or motion detection: 2 channels
  - Pulse Detection: 1 channel
  - Transient (Jolt) Detection: 1 channel
- · Orientation (Portrait/Landscape) detection with hysteresis compensation
- · Automatic ODR change for auto-wake and return-to-sleep
- 32 sample FIFO
- Self-Test
- 10,000g high shock survivability
- RoHS compliant

#### **Typical Applications**

- Static orientation detection (portrait/landscape, up/down, left/right, back/front position identification)
- Real-time orientation detection (virtual reality and gaming 3D user position feedback)
- Real-time activity analysis (pedometer step counting, freefall drop detection for HDD, dead-reckoning GPS backup)
- Motion detection for portable product power saving (auto-sleep and auto-wake for cell phone, PDA, GPS, gaming)
- Shock and vibration monitoring (mechatronic compensation, shipping and warranty usage logging)
- · User interface (menu scrolling by orientation change, tap detection for button replacement

ORDERING INFORMATION							
Part Number	Temperature Range	Package Description	Shipping				
MMA8450QT	-40°C to +85°C	QFN-16	Tray				
MMA8450QR1	-40°C to +85°C	QFN-16	Tape and Reel				



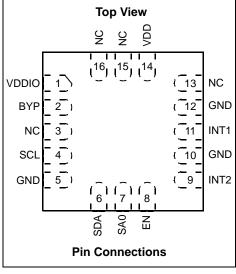



# **Contents**

1	Block	k Diagram and Pin Description	
	1.1	Block Diagram	
	1.2	Pin Description	
	1.3	Soldering Information	
2	Mech	nanical and Electrical Specifications	. 6
	2.1	Mechanical Characteristics	
	2.2	Electrical Characteristics	
	2.3	I <sup>2</sup> C Interface Characteristic	
	2.4	Absolute Maximum Ratings	
3	Term	inology	10
	3.1	Sensitivity	10
	3.2	Zero-g Offset	10
	3.3	Self-Test	
4	Mode	es of Operation	10
5	Func	tionality	11
	5.1	Device Calibration	11
	5.2	8-bit or 12-bit Data	
	5.3	Internal FIFO Data Buffer	11
	5.4	Low Power Mode	11
	5.5	Auto-Wake/Sleep Mode	
	5.6	Freefall and Motion Detection	12
	5.7	Transient Detection	
	5.8	Orientation Detection	
	5.9	Interrupt Register Configurations	14
	5.10		14
6	Regis	ster Descriptions	
	6.1	Data Registers	20
	6.2	32 Sample FIFO	22
	6.3	Portrait/ Landscape Embedded Function Registers	
	6.4	Freefall & Motion Detection Registers	
	6.5	Transient Detection Registers	
	6.6	Tap Detection Registers	35
	6.7	Auto-Sleep Registers	37
	6.8	User Offset Correction Registers	41

#### **Related Documentation**

The MMA8450Q device features and operations are described in a variety of reference manuals, user guides, and application notes. To find the most-current versions of these documents:

1. Go to the Freescale homepage at:

#### http://www.freescale.com/

- 2. In the Keyword search box at the top of the page, enter the device number MMA8450Q.
- 3. In the Refine Your Result pane on the left, click on the Documentation link.

# 1 Block Diagram and Pin Description

# 1.1 Block Diagram

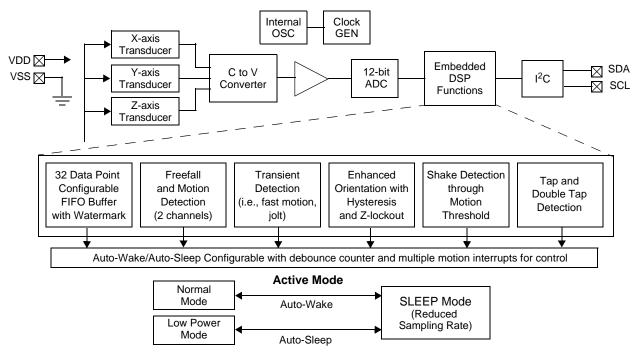


Figure 1. Block Diagram

# 1.2 Pin Description

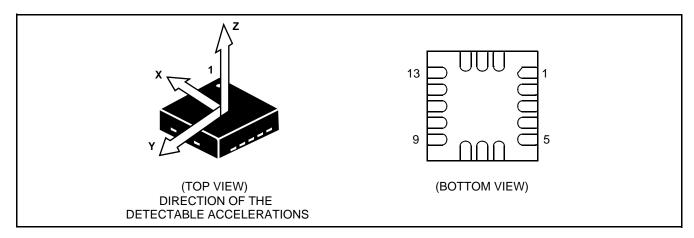


Figure 2. Direction of the Detectable Accelerations

Figure 3 shows the device configuration in the 6 different orientation modes. These orientations are defined as the following: PU = Portrait Up, LR = Landscape Right, PD = Portrait Down, LL = Landscape Left, Back and Front. There are several registers to configure the orientation detection and are described in detail in the register setting section.

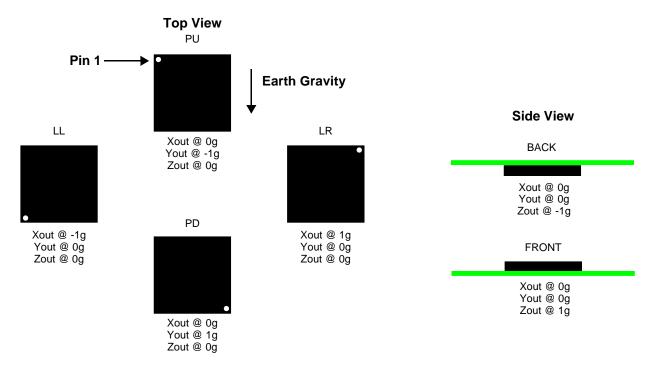


Figure 3. Landscape/Portrait Orientation

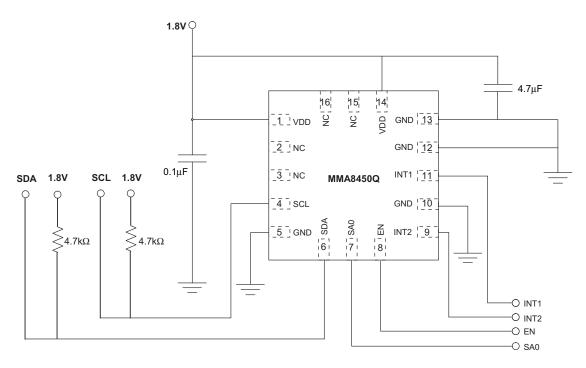


Figure 4. Application Diagram

**Table 1. Pin Description** 

Pin#	Pin Name	Description	Pin Status
1	VDD	Power Supply (1.8 V only)	Input
2	NC/GND	Connect to Ground or Non Connection	Input
3	NC/GND	Connect to Ground or Non Connection	Input
4	SCL	I <sup>2</sup> C Serial Clock	Open Drain
5	GND	Connect to Ground	Input
6	SDA	I <sup>2</sup> C Serial Data	Open Drain
		I <sup>2</sup> C Least Significant Bit of the Device Address (0: \$1C 1: \$1D)	Input
8	EN	Device Enable	Input
0	LIN	(1: I <sup>2</sup> C Bus Enabled; 0: Shutdown Mode)	input
9	INT2	Inertial Interrupt 2	Output
10	GND	Connect to Ground	Input
11	INT1	Inertial Interrupt 1	Output
12	GND	Connect to Ground	Input
13	GND	Connect to Ground	Input
14	VDD	Power Supply (1.8 V only)	Input
15	NC	Internally not connected	Input
16	NC	Internally not connected	Input

When using MMA8450Q in applications, it is recommended that pin 1 and pin 14 (the VDD pins) be tied together. Power supply decoupling capacitors (100 nF ceramic plus 4.7  $\mu$ F bulk, or a single 4.7  $\mu$ F ceramic) should be placed as near as possible to the pins 1 and 5 of the device. The SDA and SCL I<sup>2</sup>C connections are open drain and therefore require a pullup resistor as shown in Figure 4

**Note:** The above application diagram presents the recommended configuration for the MMA8450Q. For information on future products of this product family please review Freescale application note, AN3923, Design Checklist and Board Mounting Guidelines of the MMA8450Q. This application note details the small modifications between the MMA8450Q and the next generation products.

# 1.3 Soldering Information

The QFN package is compliant with the RoHS standard. Please refer to AN4077.

# 2 Mechanical and Electrical Specifications

# 2.1 Mechanical Characteristics

Table 2. Mechanical Characteristics @ VDD = 1.8 V, T = 25°C unless otherwise noted.

Parameter	Test Conditions	Symbol	Min	Тур	Max	Unit	
Full Scale Measurement Range	FS[1:0] set to 01		±1.8	±2	±2.2		
	FS[1:0] set to 10	FS	±3.6	±4	±4.4	g	
	FS[1:0] set to 11	-	±7.2	±8	±8.8	1	
Sensitivity	FS[1:0] set to 01		0.878	0.976	1.074		
	FS[1:0] set to 10	So	1.758	1.953	2.148	mg/digit	
	FS[1:0] set to 11	-	3.515	3.906	4.296	1	
Sensitivity Change vs. Temperature <sup>(1)</sup>	FS[1:0] set to 01	TCSo		±0.05		%/°C	
Typical Zero-g Level Offset (2)	FS[1:0] set to 01						
	FS[1:0] set to 10	0g-Off	±40	±40		mg	
	FS[1:0] set to 11	=					
Typical Zero-g Offset Post Board Mount (2), (3)	FS[1:0] set to 01						
	FS[1:0] set to 10	0g-OffBM		±50		mg	
	FS[1:0] set to 11	=					
Typical Zero-g Offset Change vs. Temperature (2)		TCOff		±0.5		mg/°C	
Non Linearity	FS[1:0] set to 01			±0.25			
Best Fit Straight Line	FS[1:0] set to 10	NL		±0.5		% FS	
	FS[1:0] set to 11	=		±1		-	
Self-test Output Change <sup>(4)</sup>	FS[1:0] set to 01, X-axis			-195			
	FS[1:0] set to 01, Y-axis	Vst		-195		LSB	
	FS[1:0] set to 01, Z-axis	1		+945		1	
Output Noise	Normal Mode ODR = 400 Hz	Noise		375		μg/√Hz	
Operating Temperature Range		Тор	-40		+85	°C	

<sup>1.</sup> Before board mount.

<sup>2.</sup> See appendix for distribution graphs.

<sup>3.</sup> Post board mount offset specification are based on an 8 layer PCB.

<sup>4.</sup> Self-test in one direction only. These are approximate values and can change by  $\pm 100$  counts.

# 2.2 Electrical Characteristics Table 3. Electrical Characteristics @ VDD = 1.8 V, T = 25°C unless otherwise noted. (1)

Parameter	Test Conditions	Symbol	Min	Тур	Max	Unit
Supply Voltage		VDD	1.71	1.8	1.89	V
Low Power Mode	EN = 1, ODR = 1.563 Hz			27		
\$39 CTRL_REG2: MOD[0]=1	EN = 1, ODR = 12.5 Hz	1	_	27		
	EN = 1, ODR = 50 Hz	1	_	27		Ī
	EN = 1, ODR = 100 Hz	I <sub>dd</sub> LP		42		μΑ
	EN = 1, ODR = 200 Hz			72		
	EN = 1, ODR = 400 Hz	1	_	120		
Normal Mode	EN = 1, ODR = 1.563 Hz			42		
\$39 CTRL_REG2: MOD[0]=0	EN = 1, ODR = 12.5 Hz			42		
	EN = 1, ODR = 50 Hz	1 .		42		i
	EN = 1, ODR = 100 Hz	- I <sub>dd</sub>		72		- μA -
	EN = 1, ODR = 200 Hz			132		
	EN = 1, ODR = 400 Hz			225		
Current Consumption in Shutdown Mode	EN = 0	I <sub>dd</sub> Sdn		<1		μА
Supply Current Drain in Standby Mode	EN = 1 and FS[1:0] = 00	I <sub>dd</sub> Stby		3		μА
Digital High Level Input Voltage SCL, SDA, SA0, EN		VIH	0.75*VDD			V
Digital Low Level Input Voltage SCL, SDA, SA0, EN		VIL			0.3*VDD	V
High Level Output Voltage INT1, INT2	I <sub>O</sub> = 500 μA	VOH	0.9*VDD			V
Low Level Output Voltage INT1, INT2	I <sub>O</sub> = 500 μA	VOL			0.1*VDD	V
Low Level Output Voltage SDA	I <sub>O</sub> = 500 μA	VOLS			0.1*VDD	V
Output Data Rate		ODR	0.9*ODR	ODR	1.1*ODR	Hz
Signal Bandwidth		BW		ODR/2		Hz
Boot Time from EN = 1 to Boot Complete		ВТ		1.55		ms
Turn-on time <sup>(1)</sup>	+	+	l	1		1

<sup>1.</sup> Time to obtain valid data from Standby mode to Active mode.

# 2.3 I<sup>2</sup>C Interface Characteristic

#### Table 4. I<sup>2</sup>C Slave Timing Values<sup>(1)</sup>

Parameter	Symbol	I <sup>2</sup> C Stand	lard Mode	Unit
i di dilletei	Symbol	Min	Max	7 0
SCL Clock Frequency				
Pullup = 1 k $\Omega$ Cb = 400 pF	f <sub>SCL</sub>	0	400	kHz
Pullup = 1 k $\Omega$ Cb = 20 pF		0	TBD	kHz
Bus Free Time between STOP and START Condition	t <sub>BUF</sub>	1.3		μs
Repeated START Hold Time	t <sub>HD;STA</sub>	0.6		μs
Repeated START Setup Time	t <sub>SU;STA</sub>	0.6		μs
STOP Condition Setup Time	t <sub>SU;STO</sub>	0.6		μs
SDA Data Hold Time <sup>(2)</sup>	t <sub>HD;DAT</sub>	50 <sup>(3)</sup>	(4)	μs
SDA Valid Time <sup>(5)</sup>	t <sub>VD;DAT</sub>		0.9 <sup>(4)</sup>	μs
SDA Valid Acknowledge Time <sup>(6)</sup>	t <sub>VD;ACK</sub>		0.9 <sup>(4)</sup>	μs
SDA Setup Time	t <sub>SU;DAT</sub>	100 <sup>(7)</sup>		Ns
SCL Clock Low Time	t <sub>LOW</sub>	4.7		μs
SCL Clock High Time	t <sub>HIGH</sub>	4		μs
SDA and SCL Rise Time	t <sub>r</sub>		1000	Ns
SDA and SCL Fall Time (3) (8) (9) (10)	t <sub>f</sub>		300	Ns
Pulse width of spikes on SDA and SCL that must be suppressed by input filter	t <sub>SP</sub>		50	Ns

- 1. All values referred to VIH (min) and VIL (max) levels.
- 2. t<sub>HD:DAT</sub> is the data hold time that is measured from the falling edge of SCL, applies to data in transmission and the acknowledge.
- A device must internally provide a hold time of at least 300 ns for the SDA signal (with respect to the VIH (min) of the SCL signal) to bridge the undefined region of the falling edge of SCL.
- 4. The maximum t<sub>HD;DAT</sub> could be 3.45 μs and 0.9 μs for Standard-mode and Fast-mode, but must be less than the maximum of t<sub>VD;DAT</sub> or t<sub>VD;DAT</sub> or t<sub>VD;DAT</sub> by a transition time. This maximum must only be met if the device does not stretch the LOW period (t<sub>LOW</sub>) of the SCL signal. If the clock stretches the SCL, the data must be valid by the setup time before it releases the clock.
- 5. t<sub>VD:DAT</sub> = time for data signal from SCL LOW to SDA output (HIGH or LOW, depending on which one is worse).
- 6. t<sub>VD:ACK</sub> = time for Acknowledgement signal from SCL LOW to SDA output (HIGH or LOW, depending on which one is worse).
- 7. A Fast-mode I<sup>2</sup>C device can be used in a Standard-mode I<sup>2</sup>C system, but the requirement t<sub>SU;DAT</sub> 250 ns must then be met. This will automatically be the case if the device does not stretch the LOW period of the SCL signal. If such a device does stretch the LOW period of the SCL signal, it must output the next data bit to the SDA line t<sub>r</sub>(max) + t<sub>SU;DAT</sub> = 1000 + 250 = 1250 ns (according to the Standard-mode I<sup>2</sup>C specification) before the SCL line is released. Also the acknowledge timing must meet this setup time
- 8. Cb = total capacitance of one bus line in pF.
- 9. The maximum t<sub>f</sub> for the SDA and SCL bus lines is specified at 300 ns. The maximum fall time for the SDA output stage t<sub>f</sub> is specified at 250 ns. This allows series protection resistors to be connected in between the SDA and the SCL pins and the SDA/SCL bus lines without exceeding the maximum specified t<sub>f</sub>.
- 10.In Fast-mode Plus, fall time is specified the same for both output stage and bus timing. If series resistors are used, designers should allow for this when considering bus timing

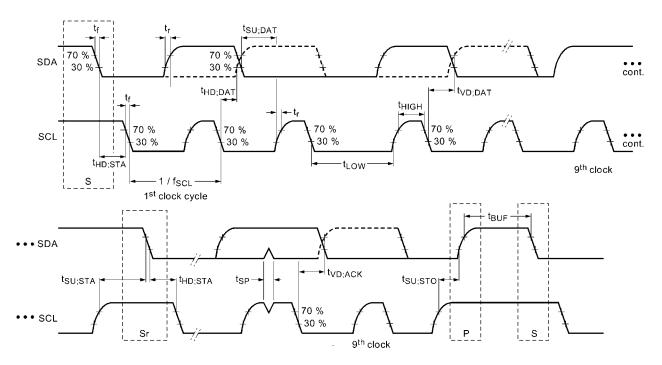


Figure 5. I<sup>2</sup>C Slave Timing Diagram

# 2.4 Absolute Maximum Ratings

Stresses above those listed as "absolute maximum ratings" may cause permanent damage to the device. Exposure to maximum rating conditions for extended periods may affect device reliability.

**Table 5. Maximum Ratings** 

Rating	Symbol	Value	Unit
Maximum Acceleration (all axes, 100 μs)	9 <sub>max</sub>	10,000	g
Supply Voltage	VDD	-0.3 to +2	V
Input voltage on any control pin (SA0, EN, SCL, SDA)	Vin	-0.3 to VDD + 0.3	V
Drop Test	D <sub>drop</sub>	1.8	М
Operating Temperature Range	T <sub>OP</sub>	-40 to +85	°C
Storage Temperature Range	T <sub>STG</sub>	-40 to +125	°C

**Table 6. ESD and Latchup Protection Characteristics** 

Rating	Symbol	Value	Unit
Human Body Model	НВМ	±2000	V
Machine Model	MM	±200	V
Charge Device Model	CDM	±500	V
Latchup Current at T = 85°C	_	±100	mA



This device is sensitive to mechanical shock. Improper handling can cause permanent damage of the part or cause the part to otherwise fail.



This is an ESD sensitive, improper handling can cause permanent damage to the part.

# 3 Terminology

# 3.1 Sensitivity

Sensitivity describes the gain of the sensor and can be determined by applying a g acceleration to it, such as the earth's gravitational field. The sensitivity of the sensor can be determined by subtracting the -1g acceleration value from the +1g acceleration value and dividing by two.

# 3.2 Zero-g Offset

Zero-g Offset describes the deviation of an actual output signal from the ideal output signal if no acceleration is present. A sensor in a steady state on a horizontal surface will measure 0g in X-axis and 0g in Y-axis whereas the Z-axis will measure 1g. The output is ideally in the middle of the dynamic range of the sensor (content of OUT registers 0x00, data expressed as 2's complement number). A deviation from ideal value in this case is called Zero-g offset. Offset is to some extent a result of stress on the MEMS sensor and therefore the offset can slightly change after mounting the sensor onto a printed circuit board or exposing it to extensive mechanical stress.

#### 3.3 Self-Test

Self-Test checks the transducer functionality without external mechanical stimulus. When Self-Test is activated, an electrostatic actuation force is applied to the sensor, simulating a small acceleration. In this case the sensor outputs will exhibit a change in their DC levels which are related to the selected full scale through the device sensitivity. When Self-Test is activated, the device output level is given by the algebraic sum of the signals produced by the acceleration acting on the sensor and by the electrostatic test-force.

# 4 Modes of Operation

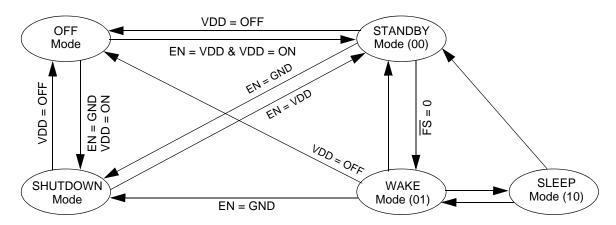


Figure 6. MMA8450Q Mode Transition Diagram

**Table 7. Mode of Operation Description** 

Mode	I <sup>2</sup> C Bus State	VDD	EN	Function Description
OFF	Powered Down	<1.5 V	<vdd +="" 0.3="" td="" v<=""><td>The device is powered off.</td></vdd>	The device is powered off.
SHUTDOWN	I <sup>2</sup> C communication ignored	ON	EN = Low	All analog & digital blocks are shutdown.
STANDBY	I <sup>2</sup> C communication possible	ON	EN = VDD Standby register set	Only POR and digital blocks are enabled. Analog subsystem is disabled. Registers accessible for Read/Write. Device configuration done in this mode.
ACTIVE	I <sup>2</sup> C communication possible	ON	EN = VDD Standby register reset	All blocks are enabled (POR, digital, analog).

All register contents are preserved when transitioning from Active to Standby mode. Some registers are reset when transitioning from Standby to Active. These are all noted in the device memory map register table. For more detail on how to use the Sleep and Wake modes and how to transition between these modes, please refer to the functionality section of this document.

# 5 Functionality

The MMA8450Q is a low-power, digital output 3-axis linear accelerometer packaged in a QFN package. The complete device includes a sensing element and an IC interface able to take the information from the sensing element and to provide a signal to the external world through an I<sup>2</sup>C serial interface. There are many embedded features in this accelerometer with a very flexible interrupt routing scheme to two interrupt pins including:

- 8-bit or 12-bit data, high pass filtered data, 8-bit or 12-bit configurable 32 sample FIFO
- Low power and Auto-Wake/Sleep for conservation of current consumption
- Single and double pulse detection 1 channel
- · Motion detection and Freefall 2 channels
- Transient detection based on a high pass filter and settable threshold for detecting the change in acceleration above a threshold
- · Flexible user configurable portrait landscape detection algorithm addressing many use cases for screen orientation

All functionality is available in 2g, 4g or 8g dynamic ranges. There are many configuration settings for enabling all the different functions. Separate application notes have been provided to help configure the device for each embedded functionality.

#### 5.1 Device Calibration

The IC interface is factory calibrated for sensitivity and Zero-g offset for each axis. The trim values are stored in Non Volatile Memory (NVM). On power-up, the trim parameters are read from NVM and applied to the circuitry. In normal use, further calibration in the end application is not necessary. However, the MMA8450Q allows the user to adjust the Zero-g offset for each axis after power-up, changing the default offset values. The user offset adjustments are stored in 6 volatile registers. For more information on device calibration, refer to Freescale application note, AN3916.

#### 5.2 8-bit or 12-bit Data

The measured acceleration data is stored in the OUT\_X\_MSB, OUT\_X\_LSB, OUT\_Y\_MSB, OUT\_Y\_LSB, OUT\_Z\_MSB, and OUT\_Z\_LSB registers as 2's complement 12-bit numbers. The most significant 8-bits of each axis are stored in OUT\_X (Y, Z)\_MSB, so applications needing only 8-bit results can use these 3 registers and ignore OUT\_X(Y, Z)\_LSB.

When the full-scale is set to 2g, the measurement range is -2g to +1.999g, and each LSB corresponds to 1g/1024 (0.98 mg) at 12-bits resolution. When the full-scale is set to 8g, the measurement range is -8g to +7.996g, and each LSB corresponds to 1g/256 (3.9 mg) at 12-bits resolution. The resolution is reduced by a factor of 16 if only the 8-bit results are used. For more information on the data manipulation between data formats and modes, refer to Freescale application note, AN3922. There is a device driver available that can be used with the Sensor Toolbox demo board (LFSTBEB8450Q) with this application note.

#### 5.3 Internal FIFO Data Buffer

MMA8450Q contains a 32 sample internal FIFO data buffer minimizing traffic across the I<sup>2</sup>C bus. The FIFO can also provide power savings of the system by allowing the host processor/MCU to go into a sleep mode while the accelerometer independently stores the data, up to 32 samples per axis. The FIFO can run at all output data rates. There is the option of accessing the full 12-bit data for accessing only the 8-bit data. When access speed is more important than high resolution the 8-bit data flush is a better option.

The FIFO contains three modes (Fill Buffer Mode, Circular Buffer Mode, and Disabled) described in the F\_SETUP Register 0x13. Fill Buffer Mode collects the first 32 samples and asserts the overflow flag when the buffer is full. It does not collect anymore data until the buffer is read. This benefits data logging applications where all samples must be collected. The Circular Buffer Mode allows the buffer to be filled and then new data replaces the oldest sample in the buffer. The most recent 32 samples will be stored in the buffer. This benefits situations where the processor is waiting for an specific interrupt to signal that the data must be flushed to analyze the event.

The MMA8450Q FIFO Buffer also has a configurable watermark, allowing the processor to be interrupted after a configurable number of samples has filled in the buffer (1 to 32).

For details on the configurations for the FIFO Buffer as well as more specific examples and application benefits, refer to Freescale application note, AN3920.

#### 5.4 Low Power Mode

The MMA8450Q can be set to a low power mode to further reduce the current consumption of the device. When the Low Power Mode is enabled, the device has access to all the configurable sampling rates and features as is available in the Normal power mode. To set the device into Low Power Mode, bit 0 in the System Control Register 2 (0x39) should be set (1) (this bit is cleared (0) for Normal Power Mode). Low Power Mode reduces the current consumption by internally sleeping longer and averaging the data less. The Low Power Mode is an additional feature that is independent of the sleep feature. The sleep feature can also be used to reduce the current consumption by automatically changing to a lower sample rate when no activity is detected.

For more information on how to configure the MMA8450Q in Low Power Mode and the power consumption benefits of Low Power Mode and Auto-Wake/Sleep with specific application examples, refer to Freescale application note, AN3921.

## 5.5 Auto-Wake/Sleep Mode

The MMA8450Q can be configured to transition between sample rates (with their respective current consumption) based on five of the interrupt functions of the device. The advantage of using the Auto-Wake/Sleep is that the system can automatically transition to a higher sample rate (higher current consumption) when needed but spends the majority of the time in the Sleep Mode (lower current) when the device does not require higher sampling rates. Auto-Wake refers to the device being triggered by one of the interrupt functions to transition to a higher sample rate. This may also interrupt the processor to transition from a sleep mode to a higher power mode.

Sleep Mode occurs after the accelerometer has not detected an interrupt for longer than the user definable timeout period. The device will transition to the specified lower sample rate. It may also alert the processor to go into a lower power mode to save on current during this period of inactivity.

The Interrupts that can wake the device from sleep are the following: Tap Detection, Orientation Detection, Motion/Freefall1, Motion/Freefall2, and Transient Detection. The FIFO can be configured to hold the data in the buffer until it is flushed if the FIFO Gate bit is set in Register 0x3A but the FIFO cannot wake the device from sleep.

The interrupts that can keep the device from falling asleep are the same interrupts that can wake the device with the addition of the FIFO. If the FIFO interrupt is enabled and data is being accessed continually servicing the interrupt then the device will remain in the wake mode. Refer to AN3921, for more detailed information for configuring the Auto-Wake/Sleep and for application examples of the power consumption savings.

### 5.6 Freefall and Motion Detection

MMA8450Q has flexible interrupt architecture for detecting Freefall and Motion with the two Motion/Freefall interrupt functions available. With two configurable interrupts for Motion and Freefall, one interrupt can be configured to detect a linear freefall while the other can be configured to detect a spin motion. The combination of these two events can be routed to separate interrupts or to the same interrupt pin to detect tumble which is the combination of spin with freefall. For details on the advantages of having the two embedded functions of Freefall and Motion detection with specific application examples with recommended configuration settings, refer to Freescale application note AN3917.

#### 5.6.1 Freefall Detection

The detection of "Freefall" involves the monitoring of the X, Y, and Z axes for the condition where the acceleration magnitude is **below** a user specified threshold for a user definable amount of time. Normally the usable threshold ranges are between ±0 mg and ±500 mg.

#### 5.6.2 Motion Detection

There are two programmable functions for motion (MFF1 and MFF2). Motion is configured using the high-g mechanism. Motion is often used to simply alert the main processor that the device is currently in use. When the acceleration exceeds a set threshold the motion interrupt is asserted. A motion can be a fast moving shake or a slow moving tilt. This will depend on the threshold and timing values configured for the event. The motion detection function can analyze static acceleration changes or faster jolts. For example, to detect that an object is spinning, all three axes would be enabled with a threshold detection of > 2g. This condition would need to occur for a minimum of 100 ms to ensure that the event wasn't just noise. The timing value is set by a configurable debounce counter. The debounce counter acts like a filter to determine whether the condition exists for configurable set of time (i.e., 100 ms or longer).

#### 5.7 Transient Detection

The MMA8450Q has a built in high pass filter. Acceleration data goes through the high pass filter, eliminating the offset (DC) and low frequencies. The high pass filter cutoff frequency can be set by the user to four different frequencies which are dependent on the Output Data Rate (ODR). A higher cutoff frequency ensures the DC data or slower moving data will be filtered out, allowing only the higher frequencies to pass. The embedded Transient Detection function uses the high pass filtered data allowing the user to set the threshold and debounce counter.

Many applications use the accelerometer's static acceleration readings (i.e., tilt) which measure the change in acceleration due to gravity only. These functions benefit from acceleration data being filtered from a low pass filter where high frequency data is considered noise. However, there are many functions where the accelerometer must analyze dynamic acceleration. Functions such as tap, flick, shake and step counting are based on the analysis of the change in the acceleration. It is simpler to interpret these functions dependent on dynamic acceleration data when the static component has been removed. The Transient Detection function can be routed to either interrupt pin through bit 5 in CTRL\_REG5 Register (0x3C). Registers 0x2B – 0x2E are the dedicated Transient Detection configuration registers. For details on the benefits of the embedded Transient Detection function along with specific application examples and recommended configuration settings, please refer to Freescale application note, AN3918.

#### 5.8 Orientation Detection

The MMA8450Q incorporates an advanced algorithm for orientation detection (ability to detect all 6 orientations including portrait/landscape) with a large amount of configuration available to provide extreme flexibility to the system designer. The configurability also allows for the function to work differently for various modes of the end system. For example, the MMA8450Q Orientation Detection allows up to 10 selectable trip angles for Portrait-to-Landscape, up to 10 selectable trip angles for the transition for Landscape-to-Portrait, and 4 selectable front/back trip angles. Typically the desired hysteresis angle is ±15° from a 45° trip reference point, resulting in |30°| and |60°| trip points. The algorithm is robust enough to handle typical process variation and uncompensated board mount offset, however, it may result in slight angle variations.

The MMA8450Q Orientation Detection algorithm confirms the reliability of the function with a configurable Z-lockout angle. Based on known functionality of linear accelerometers, it is not possible to rotate the device about the Z-axis to detect change in acceleration at slow angular speeds. The angle at which the image no longer detects the orientation change is referred to as the "Z-Lockout angle". The MMA8450Q Orientation Detection function has eight selectable1g-lockout thresholds; and there are 8 different settings for the Z-Angle lockout.

The Orientation Detection function also considers when a device is experiencing acceleration above a set threshold not typical of orientation changes (i.e., When a person is jogging or due to acceleration changes from being on a bus or in a car). The screen orientation should not interpret this as a change and the screen should lock in the last known valid position. This added feature, called the 1g Lockout Threshold, enhances the Orientation Detection function and confirms the reliability of the algorithm for the system. The MMA8450Q allows for configuring the 1g Lockout Threshold from 1g up to 1.35g (in increments of 0.05g).

For further information on the highly configurable embedded Orientation Detection Function, including recommendations for configuring the device to support various application use cases, refer to Freescale application note, AN3915.

Figure 7 and Figure 8 show the definitions of the trip angles going from Landscape-to-Portrait and then also from Portrait-to-Landscape.

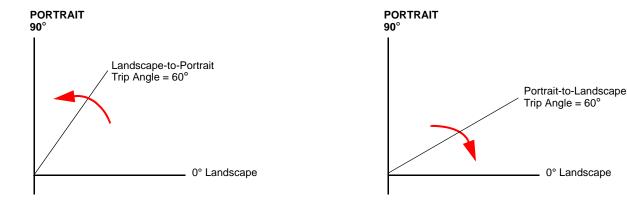


Figure 7. Illustration of Landscape-to-Portrait Transition Figure 8. Illustration of Portrait-to-Landscape Transition

Figure 9 illustrates the Z-angle lockout region. When lifting the device up from the flat position it will be active for orientation detection as low as 25° from flat. This is user configurable. The default angle is 32° but it can be set as low as 25°.

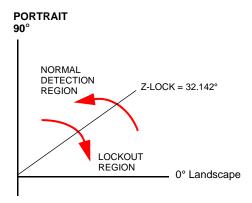


Figure 9. Illustration of Z-Tilt Angle Lockout Transition

# 5.9 Interrupt Register Configurations

There are eight configurable interrupts in the MMA8450Q. These are Auto-Sleep, FIFO, Transient Detect, Orientation Detect, Pulse Detect, Freefall/Motion, and the Data Ready events. These eight interrupt sources can be routed to one of two interrupt pins. The interrupt source must be enabled and configured. If the event flag is asserted because the event condition is detected, the corresponding interrupt pin, INT1 or INT2, will assert.

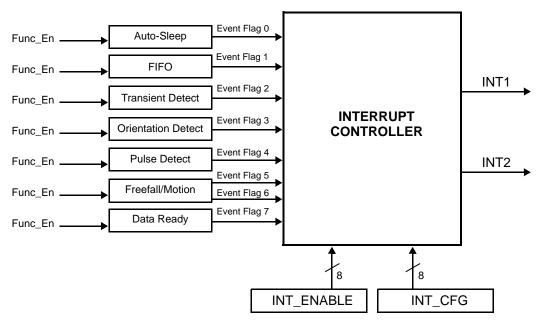


Figure 10. System Interrupt Generation Block Diagram

# 5.10 Serial I<sup>2</sup>C Interface

Acceleration data may be accessed through an I<sup>2</sup>C interface thus making the device particularly suitable for direct interfacing with a microcontroller. The MMA8450Q features an interrupt signal which indicates when a new set of measured acceleration data is available thus simplifying data synchronization in the digital system that uses the device. The MMA8450Q may also be configured to generate other interrupt signals accordingly to the programmable embedded functions of the device for Motion, Freefall, Transient, Orientation, and Tap.

The registers embedded inside MMA8450Q are accessed through an  $I^2C$  serial interface. The EN pin is controlled by the MCU I/O pin to be either high or low, depending on the desired state. To enable the  $I^2C$  interface, the EN pin (pin 8) must be tied high. When EN is tied low, MMA8450Q is put into low power shutdown mode and communications on the  $I^2C$  interface are ignored. The MMA8450Q is always in slave mode. The  $I^2C$  interface may be used for communications between other  $I^2C$  devices when EN is tied low and the MMA8450Q does not clamp the  $I^2C$  bus.

**Table 8. Serial Interface Pin Description** 

Pin Name Pin Description			
EN	Device enable (1: I <sup>2</sup> C mode enabled; 0: Shutdown mode)		
SCL	I <sup>2</sup> C Serial Clock		
SDA I <sup>2</sup> C Serial Data			
SA0	I <sup>2</sup> C least significant bit of the device address		

There are two signals associated with the  $I^2C$  bus; the Serial Clock Line (SCL) and the Serial Data line (SDA). The latter is a bidirectional line used for sending and receiving the data to/from the interface. External 4.7 k $\Omega$  pullup resistors connected to VDD are expected for SDA and SCL. When the bus is free both the lines are high. The  $I^2C$  interface is compliant with fast mode (400 kHz), and normal mode (100 kHz)  $I^2C$  standards (Table 4).

### 5.10.1 I<sup>2</sup>C Operation

The transaction on the bus is started through a start condition (START) signal. START condition is defined as a HIGH to LOW transition on the data line while the SCL line is held HIGH. After START has been transmitted by the Master, the bus is considered busy. The next byte of data transmitted after START contains the slave address in the first 7 bits, and the eighth bit tells whether the Master is receiving data from the slave or transmitting data to the slave. When an address is sent, each device in the system compares the first seven bits after a start condition with its address. If they match, the device considers itself addressed by the Master. The 9th clock pulse, following the slave address byte (and each subsequent byte) is the acknowledge (ACK). The transmitter must release the SDA line during the ACK period. The receiver must then pull the data line low so that it remains stable low during the high period of the acknowledge clock period.

The number of bytes transferred per transfer is unlimited. If a receiver can't receive another complete byte of data until it has performed some other function, it can hold the clock line, SCL low to force the transmitter into a wait state. Data transfer only continues when the receiver is ready for another byte and releases the data line. This delay action is called clock stretching.

A LOW to HIGH transition on the SDA line while the SCL line is high is defined as a stop condition (STOP). A data transfer is always terminated by a STOP. A Master may also issue a repeated START during a data transfer. The MMA8450Q expects repeated STARTs to be used to randomly read from specific registers.

The MMA8450Q's standard slave address is a choice between the two sequential addresses 0011100 and 0011101. The selection is made by the high and low logic level of the SA0 (pin 7) input respectively. The slave addresses are factory programmed and alternate addresses are available at customer request. The format is shown in Table 9.

Table 9. I<sup>2</sup>C Address Selection Table

Slave Address (SA0 = 0)	Slave Address (SA0 = 1)	Comment	
0011100	0011101	Factory Default	

#### Single Byte Read

The MMA8450Q has an internal ADC that can sample, convert and return sensor data on request. The transmission of an 8-bit command begins on the falling edge of SCL. After the eight clock cycles are used to send the command, note that the data returned is sent with the MSB first once the data is received. Figure 11 shows the timing diagram for the accelerometer 8-bit I<sup>2</sup>C read operation. The Master (or MCU) transmits a start condition (ST) to the MMA8450Q, slave address (\$1D), with the R/W bit set to "0" for a write, and the MMA8450Q sends an acknowledgement. Then the Master (or MCU) transmits the address of the register to read and the MMA8450Q sends an acknowledgement. The Master (or MCU) transmits a repeated start condition (SR) and then addresses the MMA8450Q (\$1D) with the R/W bit set to "1" for a read from the previously selected register. The Slave then acknowledges and transmits the data from the requested register. The Master does not acknowledge (NAK) it received the transmitted data, but transmits a stop condition to end the data transfer.

#### Multiple Byte Read

When performing a multibyte read or "burst read", the MMA8450Q automatically increments the received register address commands after a read command is received. Therefore, after following the steps of a single byte read, multiple bytes of data can be read from sequential registers after each MMA8450Q acknowledgment (AK) is received until a NACK is received from the Master followed by a stop condition (SP) signaling an end of transmission.

#### **Single Byte Write**

To start a write command, the Master transmits a start condition (ST) to the MMA8450Q, slave address (\$1D) with the R/W bit set to "0" for a write, the MMA8450Q sends an acknowledgement. Then the Master (MCU) transmits the address of the register to write to, and the MMA8450Q sends an acknowledgement. Then the Master (or MCU) transmits the 8-bit data to write to the designated register and the MMA8450Q sends an acknowledgement that it has received the data. Since this transmission is complete, the Master transmits a stop condition (SP) to the data transfer. The data sent to the MMA8450Q is now stored in the appropriate register.

#### **Multiple Byte Write**

The MMA8450Q automatically increments the received register address commands after a write command is received. Therefore, after following the steps of a single byte write, multiple bytes of data can be written to sequential registers after each MMA8450Q acknowledgment (ACK) is received.

Table 10. I<sup>2</sup>C device Address Sequence

Command	[6:1] Device Address	[0] SA0	[6:0] Device Address	R/W	8-bit Final Value
Read	001110	0	0x1C	1	0x39
Write	001110	0	0x1C	0	0x38
Read	001110	1	0x1D	1	0x3B
Write	001110	1	0x1D	0	0x3A

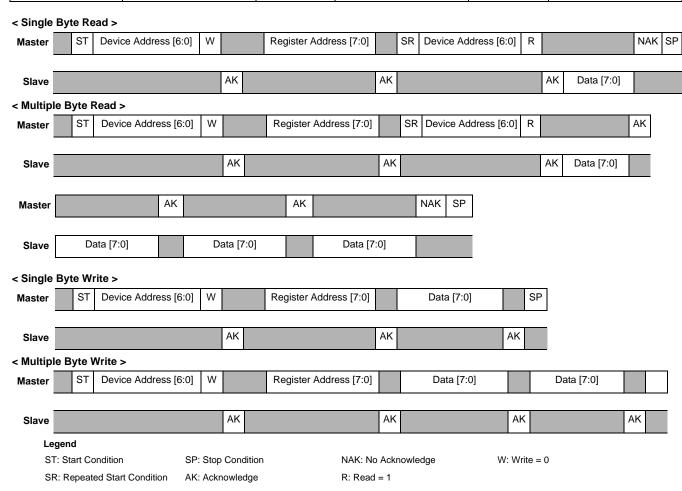


Figure 11. I<sup>2</sup>C Timing Diagram

# 6 Register Descriptions

Table 11 is the memory map of the MMA8450Q. The user has access to all addresses from 0x00 to 0x3F. **Note:** There are no differences between the MSBs located in 0x01, 0x02, 0x03 and 0x06, 0x08, 0x0A.

Table 11. Register Address Map

Name	Туре	Register Address		crement ress	Default	Comr	ment	
STATUS <sup>(1)(2)</sup>	R	0x00	0x	01	00000000	Addresses 0x00, 0x04, same register. Data Rea FIFO status	dy status information or	
OUT_X_MSB <sup>(1)(2)</sup>	R	0x01	0x02	0x01	output	[7:0] are 8 MSBs of Root pointer to 12-bit real-time sample. FIFO 8-bit date		
OUT_Y_MSB <sup>(1)(2)</sup>	R	0x02	0x	03	output	[7:0] are 8 MSBs of 12	2-bit real-time sample	
OUT_Z_MSB <sup>(1)(2)</sup>	R	0x03	0x	00	output	[7:0] are 8 MSBs of 12	2-bit real-time sample	
STATUS <sup>(1)(2)</sup>	R	0x04	0x	05	00000000	Addresses 0x00, 0x04, same register. Data Rea FIFO status	dy status information or	
OUT_X_LSB <sup>(1)(2)</sup>	R	0x05	0x06	0x05	output	[3:0] are 4 LSBs of 12-bit sample.	Root pointer to XYZ FIFO 12-bit data.	
OUT_X_MSB <sup>(1)(2)</sup>	R	0x06	0x	07	output	[7:0] are 8 MSBs of 12	2-bit real-time sample	
OUT_Y_LSB <sup>(1)(2)</sup>	R	0x07	0x	08	output	[3:0] are 4 LSBs of 12	-bit real-time sample	
OUT_Y_MSB <sup>(1)(2)</sup>	R	80x0	0x	09	output	[7:0] are 8 MSBs of 12	2-bit real-time sample	
OUT_Z_LSB <sup>(1)(2)</sup>	R	0x09	0x	0A	output	[3:0] are 4 LSBs of 12	-bit real-time sample	
OUT_Z_MSB <sup>(1)(2)</sup>	R	0x0A	0x	04	output	[7:0] are 8 MSBs of 12-bit real-time sample		
STATUS <sup>(1)(2)</sup>	R	0x0B	0x	0C	00000000	Addresses 0x00, 0x04, 0x0B are aliases to the same register. Data Ready status information or FIFO status information.		
OUT_X_DELTA <sup>(1)(2)</sup>	R	0x0C	0x	0D	output	8-bit AC X-axis data		
OUT_Y_DELTA <sup>(1)(2)</sup>	R	0x0D	0x	0E	output	8-bit AC Y	-axis data	
OUT_Z_DELTA <sup>(1)(2)</sup>	R	0x0E	0x	0B	output	8-bit AC Z	-axis data	
WHO_AM_I <sup>(1)</sup>	R	0x0F	0x	C6	11000110	NVM Programmable	Fixed Device ID No.	
F_STATUS <sup>(1)(2)</sup>	R	0x10	0x	11	00000000	FIFO Status: No FII	FO event Detected	
F_8DATA <sup>(1)(2)</sup>	R	0x11	0x	11	Output	8-bit FIF	O data	
F_12DATA <sup>(1)(2)</sup>	R	0x12	0x	12	Output	12-bit FII	FO data	
F_SETUP <sup>(1)(3)</sup>	R/W	0x13	0x	14	00000000	FIFO :	setup	
SYSMOD <sup>(1)(2)</sup>	R	0x14	0x	15	Output	Current Sys	stem Mode	
INT_SOURCE <sup>(1)(2)</sup>	R	0x15	0x	16	Output	Interrup	t status	
XYZ_DATA_CFG <sup>(1)(4)</sup>	R/W	0x16	0x	17	00000000	Acceleration data eve	ent flag configuration	
HP_FILTER_CUTOFF <sup>(1)(3)</sup>	R/W	0x17	0x	18	00000000	Cutoff frequency is s	et to 4Hz @ 400Hz	
PL_STATUS <sup>(1)(2)</sup>	R	0x18	0x	19	00000000	Landscape/Portrait orientation status		
PL_PRE_STATUS <sup>(1)(2)</sup>	R	0x19	0x	1A	00000000	Landscape/Portrait previous orientation		
PL_CFG <sup>(1)(4)</sup>	R/W	0x1A	0x	1B	10000011	Landscape/Portrait configuration.  1g Lockout offset is set to default value of 1.15g.  Debounce counters are clear during invalid sequence condition.		
PL_COUNT <sup>(1)(3)</sup>	R/W	0x1B	0x	1C	00000000	Landscape/Portrait	debounce counter	
PL_BF_ZCOMP <sup>(1)(4)</sup>	R/W	0x1C	0x	1D	00000010	Back-Front Trip th Z-Lockout an		

Table 11. Register Address Map

. <u></u>					
PL_P_L_THS_REG1 <sup>(1)(4)</sup>	R/W	0x1D	0x1E	00011010	Portrait-to-Landscape Trip Angle is 30°
PL_P_L_THS_REG2 <sup>(1)(4)</sup>	R/W	0x1E	0x1F	00100010	Portrait-to-Landscape Trip Angle is 30°
PL_P_L_THS_REG3 <sup>(1)(4)</sup>	R/W	0x1F	0x20	11010100	Portrait-to-Landscape Trip Angle is 30°
PL_L_P_THS_REG1 <sup>(1)(4)</sup>	R/W	0x20	0x21	00101101	Landscape-to-Portrait Trip Angle is 60°
PL_L_P_THS_REG2 <sup>(1)(4)</sup>	R/W	0x21	0x22	01000001	Landscape-to-Portrait Trip Angle is 60°
PL_L_P_THS_REG3 <sup>(1)(4)</sup>	R/W	0x22	0x23	10100010	Landscape-to-Portrait Trip Angle is 60°
FF_MT_CFG_1 <sup>(1)(4)</sup>	R/W	0x23	0x24	00000000	Freefall/Motion1 configuration
FF_MT_SRC_1 <sup>(1)(2)</sup>	R	0x24	0x25	00000000	Freefall/Motion1 event source register
FF_MT_THS_1 <sup>(1)(3)</sup>	R/W	0x25	0x26	00000000	Freefall/Motion1 threshold register
FF_MT_COUNT_1 <sup>(1)(3)</sup>	R/W	0x26	0x27	00000000	Freefall/Motion1 debounce counter
FF_MT_CFG_2 <sup>(1)(4)</sup>	R/W	0x27	0x28	00000000	Freefall/Motion2 configuration
FF_MT_SRC_2 <sup>(1)(2)</sup>	R	0x28	0x29	00000000	Freefall/Motion2 event source register
FF_MT_THS_2 <sup>(1)(3)</sup>	R/W	0x29	0x2A	00000000	Freefall/Motion2 threshold register
FF_MT_COUNT_2 <sup>(1)(3)</sup>	R/W	0x2A	0x2B	00000000	Freefall/Motion2 debounce counter
TRANSIENT_CFG <sup>(1)(4)</sup>	R/W	0x2B	0x2C	00000000	Transient configuration
TRANSIENT_SRC <sup>(1)(2)</sup>	R	0x2C	0x2D	00000000	Transient event status register
TRANSIENT_THS <sup>(1)(3)</sup>	R/W	0x2D	0x2E	00000000	Transient event threshold
TRANSIENT_COUNT <sup>(1)(3)</sup>	R/W	0x2E	0x2F	00000000	Transient debounce counter
PULSE_CFG <sup>(1)(4)</sup>	R/W	0x2F	0x30	00000000	ELE, Double_XYZ or Single_XYZ
PULSE_SRC <sup>(1)(2)</sup>	R	0x30	0x31	00000000	EA, Double_XYZ or Single_XYZ
PULSE_THSX <sup>(1)(3)</sup>	R/W	0x31	0x32	00000000	X pulse threshold
PULSE_THSY <sup>(1)(3)</sup>	R/W	0x32	0x33	00000000	Y pulse threshold
PULSE_THSZ <sup>(1)(3)</sup>	R/W	0x33	0x34	00000000	Z pulse threshold
PULSE_TMLT <sup>(1)(4)</sup>	R/W	0x34	0x35	00000000	Time limit for pulse
PULSE_LTCY <sup>(1)(4)</sup>	R/W	0x35	0x36	00000000	Latency time for 2nd pulse
PULSE_WIND <sup>(1)(4)</sup>	R/W	0x36	0x37	00000000	Window time for 2nd pulse
ASLP_COUNT <sup>(1)(4)</sup>	R/W	0x37	0x38	00000000	Counter setting for auto-sleep
CTRL_REG1 <sup>(1)(4)</sup>	R/W	0x38	0x39	00000000	ODR = 400 Hz, Standby Mode.
CTRL_REG2 <sup>(1)(4)</sup>	R/W	0x39	0x3A	00000000	ST = Disabled, SLPE = Disabled, MODS = Normal mode.
CTRL_REG3 <sup>(1)(4)</sup>	R/W	0x3A	0x3B	00000000	IPOL, PP_OD
CTRL_REG4 <sup>(1)(4)</sup>	R/W	0x3B	0x3C	00000000	Interrupt enable register
CTRL_REG5 <sup>(1)(4)</sup>	R/W	0x3C	0x3D	00000000	Interrupt pin (INT1/INT2) map configuration
OFF_X <sup>(1)(4)</sup>	R/W	0x3D	0x3E	00000000	X-axis offset adjust
OFF_Y <sup>(1)(4)</sup>	R/W	0x3E	0x3F	00000000	Y-axis offset adjust
OFF_Z <sup>(1)(4)</sup>	R/W	0x3F	0x0F	00000000	Z-axis offset adjust
	1		I	I	

- 1. Register contents are preserved when transition from "ACTIVE" to "STANDBY" mode occurs.
- 2. Register contents are reset when transition from "STANDBY" to "ACTIVE" mode occurs.
- 3. Modification of this register's contents can only occur when device is "STANDBY" mode
- 4. Register contents can be modified anytime in "STANDBY" or "ACTIVE" mode. A write to this register will cause a reset of the corresponding internal system debounce counter.

**Note**: Auto-increment addresses which are not a simple increment are highlighted in **bold**. The auto-increment addressing is only enabled when device registers are read using I<sup>2</sup>C burst read mode. Therefore the internal storage of the auto-increment address is clear whenever a stop-bit is detected.

#### 6.1 Data Registers

The following are the data registers for the MMA8450Q. For more information on data manipulation of the MMA8450Q, refer to application note, AN3922.

#### 0x00, 0x04, 0x0B: STATUS Registers

Alias for DR\_Status (0x0B) or F\_Status (0x10) (Read Only)

FDE (FIFO Data Enable Bit 7, Reg 0x16) Setting	Alias Status
FDE = 0	$0x00 = 0x04 = DR_STATUS (0x0B)$
FDE = 1	$0x00 = 0x04 = F\_STATUS (0x10)$

When FDE bit found in register 0x16 (XYZ\_DATA\_CFG), bit 7 is cleared (the FIFO is not on) register 0x00, 0x04 and 0x0B should all be the same value and reflect the real-time status information of the X, Y and Z sample data. When FDE is set (the FIFO is on) Register 0x00, 0x04 and 0x10 will have the same value and 0x0B will reflect the status of the transient data. The aliases allow the STATUS register to be read easily before reading the current 8-bit, 12-bit, or FIFO sample data using the register address auto-incrementing mechanism.

#### 0X00, 0X04, 0X0B STATUS: Data Status Registers (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ZYXOW	ZOW	YOW	XOW	ZYXDR	ZDR	YDR	XDR

#### **Table 12. STATUS Description**

	X, Y, Z-axis Data Overwrite. Default value: 0						
ZYXOW	0: No data overwrite has occurred						
	1: Previous X, Y, or Z data was overwritten by new X, Y, or Z data before it was read						
	Z-axis Data Overwrite. Default value: 0						
ZOW	0: No data overwrite has occurred						
	1: Previous Z-axis data was overwritten by new Z-axis data before it was read						
	Y-axis Data Overwrite. Default value: 0						
YOW	0: No data overwrite has occurred						
	1: Previous Y-axis data was overwritten by new Y-axis data before it was read						
	X-axis Data Overwrite. Default value: 0						
XOW	0: No data overwrite has occurred						
	1: Previous X-axis data was overwritten by new X-axis data before it was read						
	X, Y, Z-axis new Data Ready. Default value: 0						
ZYXDR	0: No new set of data ready						
	1: A new set of data is ready						
	Z-axis new Data Available. Default value: 0						
ZDR	0: No new Z-axis data is ready						
	1: A new Z-axis data is ready						
	Z-axis new Data Available. Default value: 0						
YDR	0: No new Y-axis data ready						
	1: A new Y-axis data is ready						
	Z-axis new Data Available. Default value: 0						
XDR	0: No new X-axis data ready						
	1: A new X-axis data is ready						

**ZYXOW** is set whenever a new acceleration data is produced before completing the retrieval of the previous set. This event occurs when the content of at least one acceleration data register (i.e., OUT\_X, OUT\_Y, OUT\_Z) has been overwritten. ZYXOW is cleared when the high-bytes of the acceleration data (OUT\_X\_MSB, OUT\_Y\_MSB, OUT\_Z\_MSB) of all the active channels are read.

**ZOW** is set whenever a new acceleration sample related to the Z-axis is generated before the retrieval of the previous sample. When this occurs the previous sample is overwritten. ZOW is cleared anytime OUT\_Z\_MSB register is read.

**YOW** is set whenever a new acceleration sample related to the Y-axis is generated before the retrieval of the previous sample. When this occurs the previous sample is overwritten. YOW is cleared anytime OUT\_Y\_MSB register is read.

**XOW** is set whenever a new acceleration sample related to the X-axis is generated before the retrieval of the previous sample. When this occurs the previous sample is overwritten. XOW is cleared anytime OUT\_X\_MSB register is read.

**ZYXDR** signals that a new sample for any of the enabled channels is available. ZYXDR is cleared when the high-bytes of the acceleration data (OUT\_X\_MSB, OUT\_Y\_MSB, OUT\_Z\_MSB) of all the enabled channels are read.

**ZDR** is set whenever a new acceleration sample related to the Z-axis is generated. ZDR is cleared anytime OUT\_Z\_MSB register is read. In order to enable the monitoring and assertion of this bit, the ZDR bit requires the Z-axis event detection flag to be enabled (bit ZDEFE = 1 inside XYZ\_DATA\_CFG register).

YDR is set whenever a new acceleration sample related to the Y-axis is available. YDR is cleared anytime OUT\_Y\_MSB register is read. In order to enable the monitoring and assertion of this bit, the YDR bit requires the Y-axis event detection flag to be enabled (bit YDEFE = 1 inside XYZ\_DATA\_CFG register).

XDR is set to 1 whenever a new acceleration sample related to the X-axis is available. XDR is cleared anytime OUT\_X\_MSB register is read. In order to enable the monitoring and assertion of this bit, the XDR bit requires the X-axis to event detection flag to be enabled (bit XDEFE = 1 inside XYZ\_DATA\_CFG register).

The ZDR and ZOW flag generation requires the Z-axis event flag generator to be enabled (ZDEFE = 1) in the XYZ\_DATA\_CFG register.

The YDR and YOW flag generation requires the Y-axis event flag generator to be enabled (YDEFE = 1) in the XYZ\_DATA\_CFG register.

The XDR and XOW flag generation requires the X-axis event flag generator to be enabled (XDEFE = 1) in the XYZ\_DATA\_CFG register.

The **ZYXDR** and **ZYXOW** flag generation is requires the Z-axis, Y-axis, X-axis event flag generator to be enabled (ZDEFE = 1, YDEFE = 1, XDEFE = 1) in the XYZ\_DATA\_CFG register.

#### 0x01, 0x02, 0x03: OUT\_MSB 8-Bit XYZ Data Registers

X, Y and Z-axis data is expressed as 2's complement numbers. The most significant 8-bits are stored together in OUT\_X\_MSB, OUT\_Y\_MSB, OUT\_Z\_MSB so applications needing only 8-bit results can use these registers and can ignore the OUT\_X\_LSB, OUT\_Y\_LSB, OUT\_Z\_LSB. The status Register 0x00, OUT\_X\_MSB, OUT\_Y\_MSB, OUT\_Z\_MSB are duplicated in the auto-incrementing address range of 0x00 to 0x03 to reduce reading the status followed by 8-bit axis data to a 4 byte sequence.

#### 0x01 OUT X MSB: X MSB Register (Read Only)

		,					
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
XD11	XD10	XD9	XD8	XD7	XD6	XD5	XD4
x02 OUT_Y_M	SB: Y_MSB Regis	ter (Read Only)					
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
YD11	YD10	YD9	YD8	YD7	YD6	YD5	YD4
x03 OUT_Z_M	SB: Z_MSB Regis	ter (Read Only)	•	•	•		
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ZD11	ZD10	ZD9	ZD8	ZD7	ZD6	ZD5	ZD4

#### 0x05 - 0x0A: OUT\_MSB and OUT\_LSB 12-Bit XYZ Data Registers

X, Y and Z-axis data is expressed as 2's complement numbers. The STATUS (0x04), OUT\_X\_LSB (0x05), OUT\_X\_MSB (0x06), OUT\_Y\_LSB (0x07), OUT\_Y\_MSB (0x08), OUT\_Z\_LSB(0x09), OUT\_Z\_MSB (0x0A) are stored in auto-incrementing address range of 0x04 to 0x0A to reduce reading the status followed by 12-bit axis data to 7 bytes.

0x05 OUT_X_L	SB: X_LSB Regis	ter (Read Only)					
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	XD3	XD2	XD1	XD0
0x06 OUT_X_M	SB: X_MSB Regis	ster (Read Only)					
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
XD11	XD10	XD9	XD8	XD7	XD6	XD5	XD4
0x07 OUT_Y_L	SB: Y_LSB Regis	ter (Read Only)					
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	YD3	YD2	YD1	YD0
0x08 OUT_Y_M	SB: Y_MSB Regis	ster (Read Only)					
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
YD11	YD10	YD9	YD8	YD7	YD6	YD5	YD4
x09 OUT_Z_L	SB: Z_LSB Regist	er (Read Only)					
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	ZD3	ZD2	ZD1	ZD0
0x0A OUT_Z_N	ISB: Z_MSB Regis	ster (Read Only)					
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ZD11	ZD10	ZD9	ZD8	ZD7	ZD6	ZD5	ZD4

The sample data output registers store the current sample data if the FIFO data output register driver is disabled, but if the FIFO data output register driver is enabled, the 12 sample data output registers point to the head of the FIFO buffer which contains the previous 32 X, Y, and Z data samples. This applies for the 8-bit data and the 12-bit data.

When the FDE bit is set to logic 1, the F\_8DATA (0x11) FIFO root data pointer shares the same address location as the OUT\_X\_MSB register (0x01); therefore all 8-bit accesses of the FIFO buffer data must use the I<sup>2</sup>C address 0x01. The F\_12DATA (0x12) FIFO root data pointer shares the same address location as the OUT\_X\_LSB register (0x05); therefore all 12-bit accesses of the FIFO buffer data must use the I<sup>2</sup>C address 0x05. All reads to register addresses 0x02, 0x03, 0x06, 0x07, 0x08, 0x09, and 0x0A returns a value of 0x00.

#### 0x0C - 0x0E: OUT\_X\_DELTA, OUT\_Y\_DELTA, OUT\_Z\_DELTA AC Data Registers

X, Y, and Z-axis 8-bit high pass filtered output data is expressed as 2's complement numbers. The data is obtained from the output of the user definable high pass filter. The data cuts out the low frequency data, which is useful in that the offset data is removed. The value of the high pass filter cutoff frequency is set in Register 0x17.

Note: The OUT\_X\_DELTA, OUT\_Y\_DELTA, OUT\_Z\_DELTA registers store the high pass filtered "delta data" information regardless of the state of the FIFO data output register driver bit. Register 0x0B always reflects the status of the delta data.

#### 0x0C OUT\_X\_DELTA: AC X 8-Bit Data Register (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
XD7	XD6	XD5	XD4	XD3	XD2	XD1	XD0

#### 0x0D OUT\_Y\_DELTA: AC Y 8-Bit Data Register (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
YD7	YD6	YD5	YD4	YD3	YD2	YD1	YD0

#### 0x0E OUT\_Z\_DELTA: AC Z 8-Bit Data Register (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ZD7	ZD6	ZD5	ZD4	ZD3	ZD2	ZD1	ZD0

#### 0x0F: WHO\_AM\_I Device ID Register

This register contains the device identifier which for MMA8450Q is set to **0xC6** by default. The value is factory programmed by a byte of NVM. A custom alternate value can be set by customer request.

#### 0x0F WHO\_AM\_I: Device ID Register (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1	1	0	0	0	1	1	0

# 6.2 32 Sample FIFO

The following registers are used to configure the FIFO. The following are the FIFO registers for the MMA8450Q. For more information on the FIFO please refer to AN3920.

#### 0x10: F\_STATUS FIFO Status Register

The FIFO Status Register is used to retrieve information about the FIFO. This register has a flag for the overflow and watermark. It also has a counter that can be read to obtain the number of samples stored in the buffer.

#### 0x10 F\_STATUS: FIFO STATUS Register (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
F_OVF	F_WMRK_FLAG	F_CNT5	F_CNT4	F_CNT3	F_CNT2	F_CNT1	F_CNT0

#### **Table 13. FIFO Flag Event Description**

F_OVF	F_WMRK_FLAG	Event Description
0	_	No FIFO overflow events detected.
1	_	FIFO event detected; FIFO has overflowed.
_	0	No FIFO watermark events detected.
_	1	FIFO event detected; FIFO sample count is greater than watermark value.

The F\_OVF and F\_WMRK\_FLAG flags remain asserted while the event source is still active, but the user can clear the FIFO interrupt bit flag in the interrupt source register (INT\_SOURCE) by reading the F\_STATUS register.

Therefore the F\_OVF bit flag will remain asserted while the FIFO has overflowed and the F\_WMRK\_FLAG bit flag will remain asserted while the F\_CNT value is greater than the F\_WMRK value.

#### **Table 14. FIFO Sample Count Description**

E CNITIE:01	FIFO sample counter. Default value: 00_0000.
F_CNT[5:0]	(00_0001 to 10_0000 indicates 1 to 32 samples stored in FIFO

**F\_CNT[5:0]** bits indicate the number of acceleration samples currently stored in the FIFO buffer. Count 000000 indicates that the FIFO is empty.

#### 0x11: F\_8DATA 8-Bit FIFO Data

F\_8DATA provides access to the previous (up to) 32 samples of X, Y, and Z-axis acceleration data at 8-bit resolution. Use F\_12DATA to access the same FIFO data at 12-bit resolution. The advantage of F\_8DATA access is much faster download of the sample data, since it is represented by only 3 bytes per sample (OUT\_X\_MSB, OUT\_Y\_MSB, and OUT\_Z\_MSB).

All reads to address 0x01 returns the sensor sampled data in the FIFO buffer, 3 bytes per sample (one byte per axis), with the oldest samples first, in order OUT\_X\_MSB, OUT\_Y\_MSB, and OUT\_Z\_MSB. When all samples indicated by the FIFO\_Status register have been read from the FIFO, subsequent reads will return 0x00. Since the FIFO holds a maximum of 32 samples, a maximum of 3 x 32 = 96 data bytes of samples can be read.

The FIFO will not accumulate more sample data during an access to F\_8DATA until a STOP or repeated START occurs.

#### 0x11 F\_8DATA: 8-Bit FIFO Data Register Points to Register 0x01 (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
XD11	XD10	XD9	XD8	XD7	XD6	XD5	XD4

The host application should initially perform a single byte read of the FIFO status byte (address 0x10) to determine the status of the FIFO and if it is determined that the FIFO contains data sample(s), the FIFO contents can also be read from register address location 0x01 or 0x05.

#### 0x12: F\_12DATA 12-Bit FIFO Data

F\_12DATA provides access to the previous (up to) 32 samples of X, Y, and Z-axis acceleration data, at 12-bit resolution. Use F\_8DATA to access the same FIFO data at 8-bit resolution. The advantage of F\_8DATA access is much faster download of the sample data, since it is represented by only 3 bytes per sample (OUT\_X\_MSB, OUT\_Y\_MSB, and OUT\_Z\_MSB).

When the FDE bit is set to logic 1, the F\_12DATA FIFO root data pointer shares the same address location as the OUT\_X\_MSB register (0x05); therefore all 12-bit accesses of the FIFO buffer data must use the I<sup>2</sup>C register address 0x05. All reads to the register address 0x02, 0x03, 0x06, 0x07, 0x08, 0x09, and 0x0A return a value of 0x00.

All reads from address (0x05) return the sample data, oldest samples first, in order OUT\_X\_LSB OUT\_X\_MSB, OUT\_Y\_LSB, OUT\_Y\_MSB, OUT\_Z\_LSB, and OUT\_Z\_MSB. When all samples indicated by the F\_Status byte have been read from the FIFO, subsequent reads will return 0x00. Since the FIFO holds a maximum of 32 samples, a maximum of 6 x 32 = 192 data bytes can be read.

The FIFO will not accumulate more sample data during an access to F\_12DATA until a STOP or repeated START occurs.

#### 0x12 F\_12DATA: 12-Bit FIFO Data Register Points to Register 0x05 (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	XD3	XD2	XD1	XD0

#### 0x13: F\_SETUP FIFO Setup Register

This setup register is used to configure the options for the FIFO. The FIFO can operate in 3 states which are defined in the Mode Bits. The watermark bits are configurable to set the number of samples of data to trigger the watermark event flag. The maximum number of samples is 32. For more information on the FIFO configuration refer to AN3920.

#### 0x13 F\_SETUP: FIFO Setup Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
F_MODE1	F_MODE0	F_WMRK5	F_WMRK4	F_WMRK3	F_WMRK2	F_WMRK1	F_WMRK0

#### Table 15. F\_SETUP Description

BITS	Description
F_MODE[1:0] <sup>(1)(2)(3)</sup>	FIFO buffer overflow mode. Default value: 0.  00: FIFO is disabled.  01: FIFO contains the most recent samples when overflowed (circular buffer). Oldest sample is discarded to be replaced by new sample.  10: FIFO stops accepting new samples when overflowed.  11: Not Used.  The FIFO is flushed whenever the FIFO is disabled, during an automatic ODR change (Auto-Wake/Sleep), or transitioning from "STANDBY" mode to "ACTIVE" mode.  Disabling the FIFO (F_MODE = 00) resets the F_OVF, F_WMRK_FLAG, F_CNT to zero.  A FIFO overflow event (i.e., F_CNT = 32) will assert the F_OVF flag and a FIFO sample count equal to the sample count watermark (i.e., F_WMRK) asserts the F_WMRK_FLAG event flag.
F_WMRK[5:0] <sup>(2)</sup>	FIFO Event Sample Count Watermark. Default value: 00_0000.  These bits set the number of FIFO samples required to trigger a watermark interrupt. A FIFO watermark event flag (F_WMK_FLAG) is raised when FIFO sample count F_CNT[5:0] value is equal to the F_ WMRK[5:0] watermark.  Setting the F_WMRK[5:0] to 00_0000 will disable the FIFO watermark event flag generation.

- 1. Bit field can be written in ACTIVE mode.
- 2. Bit field can be written in STANDBY mode.
- 3. The FIFO mode (F MODE) cannot be switched between the two operational modes (01and 10) in Active Mode.

A FIFO sample count exceeding the watermark event does not stop the FIFO from accepting new data. The FIFO update rate is dictated by the selected system ODR. In active mode the ODR is set by the DR register in the CTRL\_REG1 register and when Auto-Sleep is active the ODR is set by the ASLP\_RATE field in the CTRL\_REG1 register.

When a byte is read from the FIFO buffer the oldest sample data in the FIFO buffer is returned and also deleted from the front of the FIFO buffer, while the FIFO sample count is decremented by one. It is assumed that the host application shall use the I<sup>2</sup>C multi-read transaction to empty the FIFO.

The FIFO mode can be changed while in the active state. The mode must first be disabled F\_MODE = 00 then the Mode can be changed.

#### 0x14: SYSMOD System Mode Register

The system mode register indicates the current device operating mode. Applications using the Auto-Sleep/Auto-Wake mechanism should use this register to synchronize the application with the device operating mode transitions. The system mode register also indicates the status of the NVM parity error and FIFO gate error flags.

#### 0x14 SYSMOD: System Mode Register (Read Only)

Γ	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
	PERR	FGERR	0	0	0	0	SYSMOD1	SYSMOD0

#### **Table 16. SYSMOD Description**

	NVM Parity Error Flag Bit. Default Value: 0.
PERR	0: No NVM parity error was detected.
	1: NVM parity error detected.
	FIFO Gate Error. Default value: 0.
FGERR	0: No FIFO Gate Error detected.
	1: FIFO Gate Error was detected.
	System Mode. Default value: 00.
SYSMOD	00: Standby mode
	01: Wake mode
	10: Sleep mode

The FIFO Gate is set in Register 0x3A for the device configured for Auto-Wake/Sleep mode to allow the buffer to preserve the data without automatically flushing. If the FIFO buffer is not emptied before the arrival of the next sample, then the FGERR bit in register 0x14 is asserted. The FGERR remains asserted as long as the FIFO buffer remains un-emptied. Emptying the FIFO buffer clears the FGERR bit.

#### 0x15: INT\_SOURCE System Interrupt Status Register

In the interrupt source register the status of the various embedded features can be determined. The bits that are set (logic '1') indicate which function has asserted an interrupt and conversely the bits that are cleared (logic '0') indicate which function has not asserted or has deasserted an interrupt. The interrupts are rising edge sensitive. The bits are set by a low to high transition and are cleared by reading the appropriate interrupt source register.

#### 0x15 INT\_SOURCE: System Interrupt Status Register (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
SRC_ASLP	SRC_FIFO	SRC_TRANS	SRC_LNDPRT	SRC_PULSE	SRC_FF_MT_1	SRC_FF_MT_2	SRC_DRDY

#### Table 17. INT\_SOURCE Description

INT_SOURCE	Description
	Auto-Sleep/Wake interrupt status bit
	Logic '1' indicates that an interrupt event that can cause a "Wake-to-Sleep" or "Sleep-to-Wake" system mode transition
	has occurred.
	Logic '0' indicates that no "Wake-to-Sleep" or "Sleep-to-Wake" system mode transition interrupt event has occurred.
SRC_ASLP	"Wake-to-Sleep" transition occurs when no interrupt occurs for a time period that exceeds the user specified limit
	(ASLP_COUNT). This causes the system to transition to a user specified low ODR setting.
	"Sleep-to-Wake" transition occurs when the user specified interrupt event has woken the system; thus causing the
	system to transition to a user specified high ODR setting.
	Reading the SYSMOD register clears the SRC_ASLP bit.
	FIFO interrupt status bit
	Logic '1' indicates that a FIFO interrupt event such as an overflow event or watermark has occurred. Logic '0' indicates
SRC_FIFO	that no FIFO interrupt event has occurred.
_	FIFO interrupt event generators: FIFO Overflow, or (Watermark: F_CNT = F_WMRK) and the interrupt has been
	enabled.
	This bit is cleared by reading the F_STATUS register.
	Transient interrupt status bit
ODO TRANO	Logic '1' indicates that an acceleration transient value greater than user specified threshold has occurred. Logic '0'
SRC_TRANS	indicates that no transient event has occurred.
	This bit is asserted whenever "EA" bit in the TRANS_SRC is asserted and the interrupt has been enabled.
	This bit is cleared by reading the TRANS_SRC register.
	Landscape/Portrait Orientation interrupt status bit
CDC I NDDDT	Logic '1' indicates that an interrupt was generated due to a change in the device orientation status. Logic '0' indicates
SRC_LNDPRT	that no change in orientation status was detected.
	This bit is asserted whenever "NEWLP" bit in the PL_STATUS is asserted and the interrupt has been enabled.
	This bit is cleared by reading the PL_STATUS register.  Pulse interrupt status bit
	Logic '1' indicates that an interrupt was generated due to single and/or double pulse event. Logic '0' indicates that no
SRC_PULSE	pulse event was detected.
ONO_1 OLOL	This bit is asserted whenever "EA" bit in the PULSE_SRC is asserted and the interrupt has been enabled.
	This bit is cleared by reading the PULSE_SRC register.
	Freefall/Motion1 interrupt status bit
	Logic '1' indicates that the Freefall/Motion1 function interrupt is active.
	Logic '0' indicates that no Freefall or Motion event was detected.
SRC_FF_MT_1	This bit is asserted whenever "EA" bit in the FF_MT_SRC_1 register is asserted and the FF_MT interrupt has been
	enabled.
	This bit is cleared by reading the FF_MT_SRC_1 register.
	Freefall/Motion2 interrupt status bit
	Logic '1' indicates that the Freefall/Motion2 function interrupt is active.
	Logic '0' indicates that no Freefall or Motion event was detected.
SRC_FF_MT_2	This bit is asserted whenever "EA" bit in the FF_MT_SRC_2 register is asserted and the FF_MT interrupt has been
	enabled.
	This bit is cleared by reading the FF_MT_SRC_2 register.
	Data Ready interrupt bit status
	Logic '1' indicates that the X,Y,Z data ready interrupt is active indicating the presence of new data and/or data overrun.
SRC_DRDY	Otherwise if it is a logic '0' the X,Y,Z interrupt is not active.
1	
	This bit is asserted when the ZYXOW and/or ZYXDR is set and the interrupt has been enabled.

#### 0x16: XYZ\_DATA\_CFG Sensor Data Configuration Register

The XYZ\_DATA\_CFG register configures the 3-axis acceleration data and event flag generator based on the ODR.

#### 0x16 XYZ\_DATA\_CFG: Sensor Data Configuration Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
FDE	0	0	0	0	ZDEFE	YDEFE	XDEFE

#### Table 18. XYZ\_DATA\_CFG Description

	FIFO Data Output Register Driver Enable. Default value: 0.
FDE	0: The sample data output registers store the current X, Y, & Z sample data;
	1: The sample data output registers point to the previously stored X, Y, & Z samples data in the FIFO buffer.
ZDEFE	Data Event Flag Enable on new Z-axis data. Default value: 0.
ZDEFE	0: Event detection disabled; 1: Raise event flag on new Z-axis data
YDEFE	Data Event Flag Enable on new Y-axis data. Default value: 0.
IDLIL	0: Event detection disabled; 1: Raise event flag on new Y-axis data
XDEFE	Data Event Flag Enable on new X-axis data. Default value: 0.
ADELL	0: Event detection disabled; 1: Raise event flag on new X-axis data

#### 0x17: HP\_FILTER\_CUTOFF High Pass Filter Register

This register sets the high-pass filter cut frequency for the detection of instantaneous acceleration. The output of this filter is indicated by the OUT\_X\_DELTA, OUT\_Y\_DELTA, and OUT\_Z\_DELTA registers. The filter cut options change based on the data rate selected as shown in Table 19. For details of implementation on the high pass filter, refer to Freescale application note AN3918.

#### 0x17 HP\_FILTER\_CUTOFF: High Pass Filter Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	0	0	SEL1	SEL0

#### Table 19. HP\_FILTER\_CUTOFF Setting Options

SEL1	SEL0	Fc (Hz) @ ODR = 400 Hz	Fc (Hz) @ ODR = 200 Hz	Fc (Hz) @ ODR = 100 Hz	Fc (Hz) @ ODR = 50 Hz	Fc (Hz) @ ODR = 12.5 Hz	Fc (Hz) @ ODR = 1.563 Hz
0	0	4	2	1	0.5	0.125	0.01
0	1	2	1	0.5	0.25	0.063	0.007
1	0	1	0.5	0.25	0.125	0.031	0.004
1	1	0.5	0.25	0.125	0.062	0.016	0.002

#### 6.3 Portrait/ Landscape Embedded Function Registers

For more details on the meaning of the different user configurable settings and for example code refer to Freescale application note AN3915.

#### 0x18: PL\_STATUS Portrait/Landscape Status Register

This status register can be read to get updated information on any change in orientation by reading Bit 7, or on the specifics of the orientation by reading Bit 0 to Bit 4. The interrupt for the Portrait/landscape detection is cleared by reading the status register. For further understanding of Portrait Up, Portrait Down, Landscape Left, Landscape Right, Back and Front please refer to Figure 3

#### 0x18 PL\_STATUS Register (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
NEWLP	LO	_	LAPO[2]	LAPO[1]	LAPO[0]	BAFRO[1]	BAFRO[0]

#### Table 20. PL\_STATUS Register Description

NEWLP	Landscape-Portrait status change flag. Default value: 0.
INCVVLF	0: No change, 1: BAFRO and/or LAPO and/or Z-tilt lockout value has changed
	Z-Tilt Angle Lockout. Default value: 0.
LO	0: Lockout condition has not been detected.
	1: Z-Tilt lockout trip angle has been exceeded. Lockout has been detected.
	Back or Front orientation. Default value: 00.
BAFRO[1:0]	00: Undefined. This is the default power up state.
BAFKO[1.0]	01: Front: Device is in the front facing orientation.
	10: Back: Device is in the back facing orientation.
	Landscape/Portrait orientation. Default value: 000.
	000: Undefined. This is the default power up state.
LAPO[2:0] <sup>(1)</sup>	001: Portrait Up
LAFO[2.0]	010: Portrait Down
	011: Landscape Right
	100: Landscape Left

<sup>1.</sup> The default power up state is BAFRO (Undefined), LAPO (Undefined), and no Lockout for orientation function.

**NEWLP** is set to 1 whenever a change in LO, BAFRO, or LAPO occurs. NEWLP bit is cleared anytime PL\_STATUS register is read.

#### 0x19: PL\_PRE\_STATUS Portrait/Landscape Previous Data Status Register

This register provides the previous orientation data from the previous reading. These register definitions are the same as what has been described in Register 0x18.

#### 0x19 PL\_PRE\_STATUS Register (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
_	LO		LAPO[2]	LAPO[1]	LAPO[0]	BAFRO[1]	BAFRO[0]

#### 0x1A: PL\_CFG Portrait/Landscape Configuration Register

This register configures the behavior of the debounce counters and also sets the Landscape/Portrait 1g lockout mechanism threshold offset.

#### 0x1A PL\_CFG Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
DBCNTM	PL_EN	_	_	_	GOFF[2]	GOFF[1]	GOFF[0]

#### Table 21. PL\_CFG Register Description

	Debounce counter mode selection. Default value: 1.
DBCNTM	0: Decrements debounce whenever condition of interest is no longer valid.
	1: Clears counter whenever condition of interest is no longer valid.
	Portrait-Landscape Detection Enable. Default value: 0.
PL_EN	0: Portrait-Landscape Detection is Disabled.
	1: Portrait-Landscape Detection is Enabled.
	1g lockout threshold offset expressed in steps of 50 mg. Default value: 011 = 1.15g.
0055	The offset specified by the GOFF is added or subtracted from 1g to achieve the optimal 1g lockout threshold.
GOFF	If GOFF = 011, then the resulting 1g lockout threshold is $\pm (1g + 150 \text{ mg})$ .
	000: No offset.

#### 0x1B: PL\_COUNT Portrait Landscape Debounce Register

This register sets the debounce counter for the orientation state transition. The minimum debounce latency is determined by the data rate set by the selected system ODR and PL\_COUNT registers. Any change to the ODR or device mode transitioning from ACTIVE to STANDBY or vice versa resets the internal landscape/portrait internal debounce counters.

#### 0x1B PL\_COUNT Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
DBNCE[7]	DBNCE[6]	DBNCE[5]	DBNCE[4]	DBNCE[3]	DBNCE [2]	DBNCE [1]	DBNCE [0]

The debounce counter scales with the ODR, like many of the debounce counters in the other functional blocks. Table 22 shows the relationship between the ODR, the step per count and the duration.

#### Table 22. PL\_COUNT Relationship with the ODR

Output Data Rate (Hz)	Step	Duration Range
400	2.5 ms	2.5 ms - 0.637s
200	5 ms	5 ms – 1.275s
100	10 ms	10 ms – 2.55s
50	20 ms	20 ms – 5.1s
12.5	80 ms	80 ms – 20.4s
1.56	640 ms	640 ms – 163s

#### 0x1C: PL\_BF\_ZCOMP Back/Front and Z Compensation Register

The Z-Tilt angle compensation bits allow the user to adjust the Z-lockout region from  $25^{\circ}$  up to  $50^{\circ}$ . The default Z-lockout angle is set to the default value of  $32^{\circ}$  upon power up. The Back to Front trip angle is set by default to  $\pm 75^{\circ}$  but this angle also can be adjusted from a range of  $65^{\circ}$  to  $80^{\circ}$  with  $5^{\circ}$  step increments.

#### 0x1C: PL\_BF\_ZCOMP Register (Read/Write)

Ī	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ſ	BKFR[1]	BKFR[0]	_	_	_	ZLOCK[2]	ZLOCK[1]	ZLOCK[0]

#### Table 23. PL\_BF\_ZCOMP Description

ZLOCK	Z-Lock Angle Threshold. Range is from 25° to 50°. Step size is 3.6°.
ZLOCK	Default value: 010 ≥ 32.1°. Maximum value: 111 ≥ 50°.
BKFR	Back Front Trip Angle Threshold. Default: 10 ≥ ±75°. Step size is 5°.
	Range: ±(65° to 80°).

#### Table 24. Back/Front Orientation Definitions

BKFR	Back → Front Transition	Front → Back Transition
00	Z < 80° or Z > 280°	Z > 100° and Z < 260°
01	Z < 75° or Z > 285°	Z > 105° and Z < 255°
10	Z < 70° or Z > 290°	Z > 110° and Z < 250°
11	Z < 65° or Z > 295°	Z > 115° and Z < 245°

#### 0x1D - 0x1F: PL\_P\_L\_THS\_REG1, 2, 3 Portrait-to-Landscape Threshold Registers

The following registers represent the Portrait-to-Landscape trip threshold registers. These registers are used to set the trip angle for the image transition from the Portrait orientation to the Landscape orientation. The angle can be selected from Table 28 and the corresponding values for that angle should be written into the three PL\_P\_L\_THS Registers.

#### 0x1D PL\_P\_L\_THS\_REG1 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
P_L_THS[7]	P_L_THS[6]	P_L_THS[5]	P_L_THS[4]	P_L_THS[3]	P_L_THS[2]	P_L_THS[1]	P_L_THS[0]

#### Table 25. PL\_P\_L\_THS\_REG1 Description

P_L_THS	Portrait-to-Landscape Threshold Register 1. Default value: 30° → 0001_1010.
---------	---

#### 0x1E PL\_P\_L\_THS\_REG2 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
P_L_THS[7]	P_L_THS[6]	P_L_THS[5]	P_L_THS[4]	P_L_THS[3]	P_L_THS[2]	P_L_THS[1]	P_L_THS[0]

#### Table 26. PL\_P\_L\_THS\_REG2 Description

P_L_THS	Portrait-to-Landscape Threshold Register 2. Default value: <b>30°</b> → <b>0010_0010</b> .
---------	--

#### 0x1F PL\_P\_L\_THS\_REG3 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
P_L_THS[7]	P_L_THS[6]	P_L_THS[5]	P_L_THS[4]	P_L_THS[3]	P_L_THS[2]	P_L_THS[1]	P_L_THS[0]

#### Table 27. PL\_P\_L\_THS\_REG3 Description

P\_L\_THS Portrait-to-Landscape Threshold Register 3. Default value: 30°→ 1101\_0100.

#### Table 28. Portrait-to-Landscape Trip Angle Thresholds Lookup Table

Portrait-to-Landscape Trip Angle	PL_P_L_THS_REG1	PL_P_L_THS_REG2	PL_P_L_THS_REG3
15	0x17	0x75	0x77
20	0x18	0x14	0x23
25	0x18	0xF3	0x59
30	30 0x1A		0xD5
35	0x1B	0x92	0x77
40	0x1D	0x92	0x33
45	0x20	0x00	0x00
50	0x23	0x31	0xD9
55	55 0x27		0xB9
60	0x2D	0x41	0xA2

#### 0x20 - 0x22 PL\_L\_P\_THS\_REG1, 2, 3 Landscape-to-Portrait Threshold Registers

The following registers represent the Landscape-to-Portrait trip threshold registers. These registers are used to set the trip angle for the image transition from the Landscape orientation to the Portrait orientation. The angle can be selected from Table 32 and the corresponding values for that angle should be written into the three PL\_LP\_THS Registers.

#### 0x20 PL\_L\_P\_THS\_REG1 Register (Read/Write)

]	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1	L_P_THS[7]	L_P_THS[6]	L_P_THS[5]	L_P_THS[4]	L_P_THS[3]	L_P_THS[2]	L_P_THS[1]	L_P_THS[0]

#### Table 29. PL\_L\_P\_THS\_REG1 Description

L\_P\_THS Landscape-to-Portrait Threshold Register 1. Default value: 60° → 0010\_1101.

#### 0x21 PL\_L\_P\_THS\_REG2 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
L_P_THS[7]	L_P_THS[6]	L_P_THS[5]	L_P_THS[4]	L_P_THS[3]	L_P_THS[2]	L_P_THS[1]	L_P_THS[0]

#### Table 30. PL\_L\_P\_THS\_REG2 Description

L\_P\_THS Landscape-to-Portrait Threshold Register 2. Default value: 60° → 0100\_0001.

#### 0x22 PL\_L\_P\_THS\_REG3 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
L_P_THS[7]	L_P_THS[6]	L_P_THS[5]	L_P_THS[4]	L_P_THS[3]	L_P_THS[2]	L_P_THS[1]	L_P_THS[0]

#### Table 31. PL\_L\_P\_THS\_REG3 Description

L_P_THS	Landscape-to-Portrait Threshold Register 3. Default value: $60^{\circ} \rightarrow 1010\_0010$ .
---------	--

Table 32. Landscape-to-Portrait Trip Angle Thresholds Lookup Table

Landscape-to-Portrait Trip Angle	PL_L_P_THS_REG1	PL_L_P_THS_REG2	PL_L_P_THS_REG3	
30	0x1A	0x22	0xD4	
35	0x1B	0x92	0x77	
40	0x1D	0x92	0x33	
45	0x20	0x00	0x00	
50	0x23	0x31	0xD9	
55	0x27	0x71	0xB9	
60	0x2D	0x41	0xA2	
65	0x35	0x91	0x8F	
70	0x42	0x31	0x81	
75	0x57	0x71	0x77	

### 6.4 Freefall & Motion Detection Registers

For details on how to configure the device for Freefall and/or Motion detection and for sample code, refer to application note AN3917.

**Note:** There are two Freefall and Motion Detection Functions. The registers from 0x27 - 0x2A have the same descriptions as registers 0x23 - 0x26.

#### 0x23: FF\_MT\_CFG\_1 Freefall and Motion Configuration Register 1

#### 0x23 FF\_MT\_CFG\_1 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ELE	OAE	ZHEFE	ZLEFE	YHEFE	YLEFE	XHEFE	XLEFE

#### Table 33. FF\_MT\_CFG\_1 Description

	Event Latch Enable: Event flag is latched into FF_MT_SRC_1 register. Reading of the FF_MT_SRC_1 register clears the EA
ELE	event flag. Default value: 0.
	0: Event flag latch disabled; 1: Event flag latch enabled
OAE	Logical Or/And combination of events flags. Default value: 0.
OAL	0: Logical AND combination of events flags; 1: Logical OR combination of events flags
ZHEFE	Event flag enable on Z High event. Default value: 0.
ZIILIL	0: Event detection disabled; 1: Event detection enabled
ZLEFE	Event flag enable on Z Low event. Default value: 0.
ZLLFL	0: Event detection disabled; 1: Event detection enabled
YHEFE	Event flag enable on Y High event. Default value: 0.
IIIEFE	0: Event detection disabled; 1: Event detection enabled
YLEFE	Event flag enable on Y Low event. Default value: 0.
TLEFE	0: Event detection disabled; 1: Event detection enabled
XHEFE	Event flag enable on X High event. Default value: 0.
VIIELE	0: Event detection disabled; 1: Event detection enabled
XLEFE	Event flag enable on X Low event. Default value: 0.
YLEFE	0: Event detection disabled; 1: Event detection enabled

**OAE** bit allows the selection between Motion (logical OR combination of X, Y, Z-axis event flags) and Freefall (logical AND combination of X, Y, Z-axis event flags) detection.

**ELE** denotes whether the enabled event flag will be latched in the FF\_MT\_SRC\_1 register or the event flag status in the FF\_MT\_SRC\_1 will indicate the real-time status of the event. If ELE bit is set to a logic 1, then the event active "EA" flag is cleared by reading the FF\_MT\_SRC\_1 source register.

**ZHEFE, YHEFE**, **XHEFE** enables the detection of a high g event when the measured acceleration data on X, Y, or Z-axis is higher than the threshold set in FF\_MT\_THS\_1 register.

**ZLEFE, YLEFE** enables the detection of a low g event when the measured acceleration data on X, Y, or Z-axis is lower than the threshold set in FF\_MT\_THS\_1 register.

FF\_MT\_THS\_1 is the threshold register used by the Freefall/Motion function to detect Freefall or Motion events. The unsigned 7-bit FF\_MT\_THS\_1 threshold register holds the threshold for the low g event detection where the magnitude of the X and Y and Z acceleration values are lower than the threshold value. Conversely the FF\_MT\_THS\_1 also holds the threshold for the high g event detection where the magnitude of the X, or Y, or Z-axis acceleration values is higher than the threshold value.

#### 0x24 FF\_MT\_SRC\_1 Register

#### 0x24: FF\_MT\_SRC\_ Freefall and Motion Source Register (0x24) (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
_	EA	ZHE	ZLE	YHE	YLE	XHE	XLE

#### Table 34. FF\_MT\_SRC\_1 Description

EA	Event Active Flag. Default value: 0.
LA	0: No event flag has been asserted; 1: one or more event flags have been asserted.
ZHE	Z High Event Flag. Default value: 0.
2112	0: No Z High event detected, 1: Z High event has been detected
ZLE	Z Low Event Flag. Default value: 0.
266	0: No Z Low event detected, 1: Z Low event has been detected
YHE	Y High Event Flag. Default value: 0.
1112	0: No Y High event detected, 1: Y High event has been detected
YLE	Y Low Event Flag. Default value: 0.
166	0: No Y Low event detected, 1: Y Low event has been detected
XHE	X High Event Flag. Default value: 0.
XIIL	0: No X High event detected, 1: X High event has been detected
XLE	X Low Event Flag. Default value: 0.
, ALL	0: No X Low event detected, 1: X Low event has been detected

This register keeps track of the acceleration event which is triggering (or has triggered, in case of ELE bit in FF\_MT\_CFG\_1 register being set to 1) the event flag. In particular EA is set to a logic 1 when the logical combination of acceleration events flags specified in FF\_MT\_CFG\_1 register is true. This bit is used in combination with the values in INT\_EN\_FF\_MT\_1 and INT\_CFG\_FF\_MT\_1 register to generate the Freefall/Motion interrupts.

An X,Y, or Z high or an X,Y, and Z high event is true when the acceleration value of the X or Y or Z axes is higher than the preset threshold value defined in the FF\_MT\_THS\_1 register.

Conversely X,Y, or Z high or an X,Y, and Z low event is true when the acceleration value of the X and Y and Z axes are lower than the preset threshold value defined in the FF\_MT\_THS\_1 register.

When the ELE bit is set, only the EA bit is latched. The other bits are not latched. To see the events that have been detected, the register must be read immediately. The EA bit will remain high until the source register is read.

#### 0x25: FF\_MT\_THS\_1 Freefall and Motion Threshold 1 Register

#### 0x25 FF\_MT\_THS\_1 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
DBCNTM	THS6	THS5	THS4	THS3	THS2	THS1	THS0

#### Table 35. FF\_MT\_THS\_1 Description

DBCNTM  Debounce counter mode selection. Default value: 0.  0: increments or decrements debounce, 1: increments or clears counter.		
	THS[6:0]	Freefall /Motion Threshold: Default value: 000 0000

The minimum threshold resolution is dependent on the selected acceleration g range and the threshold register has a range of 0 to 127.

#### Therefore:

- If the selected acceleration g range is 8g mode (FS = 11), the minimum threshold resolution is 0.063g/LSB. The maximum value is 8g.
- If the selected acceleration g range is 4g mode (FS = 10), the minimum threshold resolution is 0.0315g/LSB. The
  maximum value is 4g.
- If the selected acceleration g range is 2g mode (FS = 01), the minimum threshold resolution is 0.01575g/LSB. The maximum value is 2g.

When DBCNTM bit is a logic '1', the debounce counter is cleared to 0 whenever the event of interest is no longer true (Figure 12 part b) while if the DBCNTM bit is set a logic '0' the debounce counter is decremented by 1 whenever the event of interest is no longer true (Figure 12 part c) until the debounce counter reaches 0 or the event of interest becomes active.

Decrementing of the debounce counter acts as a median filter enabling the system to filter out irregular spurious events which might impede the detection of the event.

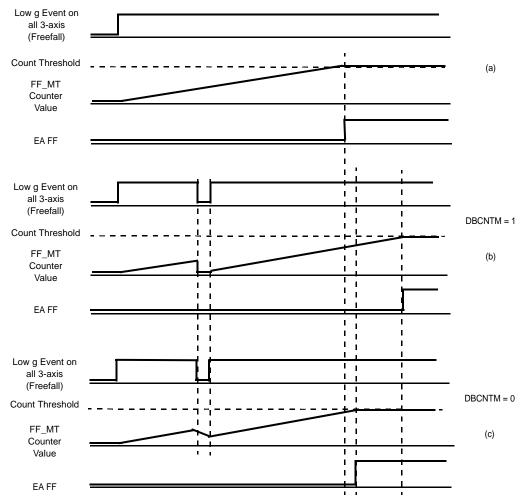


Figure 12. DBCNTM Bit Function

#### 0x26: FF\_MT\_COUNT\_1 Freefall Motion Count 1 Register

This register sets the number of debounce sample counts for the event trigger.

#### 0x26 FF\_MT\_COUNT\_1 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
D7	D6	D5	D4	D3	D2	D1	D0

#### Table 36. FF\_MT\_COUNT\_1 Description

D[7-0]	Count value. Default value: 0000_0000.

D7 - D0 define the number of debounce sample counts for the event trigger. When the debounce counter exceeds the FF\_MT\_COUNT\_1 value, a Freefall/Motion event flag is set. The time step used for the debounce sample count depends on the ODR chosen (Table 37).

Table 37. FF\_MT\_COUNT\_1 and FF\_MT\_COUNT\_2 Relationship with the ODR

Output Data Rate (Hz)	Step	Duration Range
400	2.5 ms	2.5 ms - 0.63s
200	5 ms	5 ms – 1.275s
100	10 ms	10 ms – 2.55s
50	20 ms	20 ms – 5.1s
12.5	80 ms	80 ms – 20.4s
1.56	640 ms	640 ms – 163s

An ODR of 100 Hz and a FF\_MT\_COUNT\_1 value of 15 would result in a debounce response time of 150 ms.

#### 0x27: FF\_MT\_CFG\_2 Freefall and Motion Configuration 2 Register

These registers all have the same descriptions as above for Registers 0x23 - 0x26.

#### 0x27 FF\_MT\_CFG\_2 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ELE	OAE	ZHEFE	ZLEFE	YHEFE	YLEFE	XHEFE	XLEFE

#### 0x28: FF\_MT\_SRC\_2 Freefall and Motion Source 2 Register

#### 0x28 FF\_MT\_SRC\_2 Register (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
_	EA	ZHE	ZLE	YHE	YLE	XHE	XLE

#### 0x29: FF\_MT\_THS\_2 Freefall and Motion Threshold 2 Register

#### 0x29 FF\_MT\_THS\_2 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
DBCNTM	THS6	THS5	THS4	THS3	THS2	THS1	THS0

#### 0x2A: FF\_MT\_COUNT\_2 Freefall and Motion Debounce 2 Register

#### 0x2A FF\_MT\_COUNT\_2 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
D7	D6	D5	D4	D3	D2	D1	D0

# 6.5 Transient Detection Registers

For more information on the uses of the transient function and sample code, refer to application note AN3918.

#### 0x2B: TRANSIENT\_CFG Transient Configuration Register

The transient detection mechanism can be configured to raise an interrupt when the magnitude of the high pass filtered data is greater than a user definable threshold. The TRANSIENT\_CFG register is used to enable the transient interrupt generation mechanism for each of the 3 axes (X, Y, Z) of acceleration.

#### 0x2B TRANSIENT\_ CFG Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
_	_	_	_	ELE	ZTEFE	YTEFE	XTEFE

#### Table 38. TRANSIENT\_ CFG Description

	Transient event flag is latched into the TRANSIENT_SRC register. Reading of the TRANSIENT_SRC register clears the event
ELE	flag. Default value: 0.
	0: event flag latch disabled; 1: Event flag latch enabled
ZTEFE	Event flag enable on Z-axis. Default value: 0.
ZIEFE	0: Event detection disabled; 1: Event detection Enabled
YTEFE	Event flag enable on Y-axis. Default value: 0.
TIEFE	0: Event detection disabled; 1: Event detection Enabled
XTEFE	Event flag enable on X-axis. Default value: 0.
VIELE	0: Event detection disabled; 1: Event detection Enabled

#### 0x2C: TRANSIENT SRC Transient Source Register

The transient source register is read to determine the source of an interrupt. When the ELE bit is set in Register0x2B the "EA" event Active bit in the source register is latched. The other bits in the source register are not latched. The source register must be read immediately following the interrupt to determine the axes the event occurred on. The interrupt for the transient event is cleared by reading the status register.

#### 0x2C TRANSIENT\_SRC Register (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
_	_	_	_	EA	ZTRANSE	YTRANSE	XTRANSE

#### Table 39. TRANSIENT\_SRC Description

EA	Event Active Flag. Default value: 0.		
LA	0: No event flag asserted; 1: one or more event flag has been asserted.		
ZTRANSE	Z transient event. Default value: 0.		
0: No Z event detected, 1: Z event detected			
YTRANSE	Y transient event. Default value: 0.		
TIKANSL	0: No Y event detected, 1: Y event detected		
XTRANSE	X transient event. Default value: 0.		
ATRANSL	0: No X event detected, 1: X event detected		

#### 0x2D: TRANSIENT\_THS Transient Threshold Register

The TRANSIENT\_THS register sets the threshold limit for the high pass filtered acceleration. The value in the TRANSIENT\_THS register corresponds to a g value which is compared against the values of OUT\_X\_DELTA, OUT\_Y\_DELTA, and OUT\_Z\_DELTA. If the acceleration exceeds the threshold limit an event flag is raised and an interrupt is generated if interrupts are enabled.

#### 0x2D TRANSIENT\_THS Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
DBCNTM	THS6	THS5	THS4	THS3	THS2	THS1	THS0

#### Table 40. TRANSIENT\_THS Description

	DBCNTM	Debounce counter mode selection. Default value: 0. 0: increments or decrements debounce; 1: increments or clears counter
Γ	THS[6:0]	Transient Threshold: Default value: 000_0000

The minimum threshold resolution is dependent on the selected acceleration g range and the threshold register has a range of 0 to 127.

#### Therefore:

- If the selected acceleration g range is 8g mode (FS = 11), the minimum threshold resolution is 0.063g/LSB. The maximum is 8g.
- If the selected acceleration g range is 4g mode (FS = 10), the minimum threshold resolution is 0.0315g/LSB. The maximum is 4g.
- If the selected acceleration g range is 2g mode (FS = 01), the minimum threshold resolution is 0.01575g/LSB. The
  maximum is 2g.
- The DBCNTM bit behaves in the same manner described previously for the Motion/Freefall 1.

#### 0x2E: TRANSIENT\_COUNT Transient Debounce Register

The TRANSIENT\_COUNT sets the minimum number of debounce counts continuously matching the condition where the unsigned value of OUT\_X\_DELTA or OUT\_Y\_DELTA or OUT\_Z\_DELTA register is greater than the user specified value of TRANSIENT\_THS.

#### 0x2E TRANSIENT\_COUNT Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
D7	D6	D5	D4	D3	D2	D1	D0

#### Table 41. TRANSIENT\_COUNT Description

D[7-0] Count value. Default value: 0000_0000.
---

The time step for the Transient detection debounce counter is set by the value of the system ODR.

#### Table 42. TRANSIENT\_COUNT Relationship with the ODR

Output Data Rate (Hz)	Step	Duration Range
400	2.5 ms	2.5 ms - 0.637s
200	5 ms	5 ms – 1.275s
100	10 ms	10 ms – 2.55s
50	20 ms	20 ms – 5.1s
12.5	80 ms	80 ms – 20.4s
1.56	640 ms	640 ms – 163s

An ODR of 100 Hz and a TRANSIENT\_COUNT value of 15 would result in a debounce response time of 150 ms.

# 6.6 Tap Detection Registers

For more details of how to configure the tap detection and sample code please refer to Freescale application note, AN3919. The tap detection registers are referred to as "Pulse".

#### 0x2F: PULSE\_CFG Pulse Configuration Register

This register configures the event flag for the tap detection for enabling/disabling the detection of a single and double pulse on each of the axes.

#### 0x2F PULSE\_CFG Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
DPA	ELE	ZDPEFE	ZSPEFE	YDPEFE	YSPEFE	XDPEFE	XSPEFE

#### Table 43. PULSE\_CFG Description

	Double Pulse Abort.
	0: Double Pulse detection is not aborted if the start of a pulse is detected during the time period specified by the PULSE_LTCY
DPA	register.
DI A	1: Setting the DPA bit momentarily suspends the double tap detection if the start of a pulse is detected during the time period
	specified by the PULSE_LTCY register and the pulse ends before the end of the time period specified by the PULSE_LTCY
	register.
	Pulse event flags are latched into the PULSE_SRC register. Reading of the PULSE_SRC register clears the event flag.
ELE	Default value: 0.
	0: Event flag latch disabled; 1: Event flag latch enabled
ZDPEFE	Event flag enable on double pulse event on Z-axis. Default value: 0.
ZDI LI L	0: Event detection disabled; 1: Event detection enabled
ZSPEFE	Event flag enable on single pulse event on Z-axis. Default value: 0.
ZOI LI L	0: Event detection disabled; 1: Event detection enabled
YDPEFE	Event flag enable on double pulse event on Y-axis. Default value: 0.
IDIELE	0: Event detection disabled; 1: Event detection enabled
YSPEFE	Event flag enable on single pulse event on Y-axis. Default value: 0.
TOI LI L	0: Event detection disabled; 1: Event detection enabled
XDPEFE	Event flag enable on double pulse event on X-axis. Default value: 0.
NOT ET E	0: Event detection disabled; 1: Event detection enabled
XSPEFE	Event flag enable on single pulse event on X-axis. Default value: 0.
XOI LI L	0: Event detection disabled; 1: Event detection enabled

#### 0x30: PULSE\_SRC Pulse Source Register

This register indicates a double or single pulse event has occurred. The corresponding axis and event must be enabled in Register 0x2F for the event to be seen in the source register. The interrupt for the pulse event is cleared by reading the status register.

# 0x30 PULSE\_SRC Register (Read Only)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
_	EA	ZDPE	ZSPE	YDPE	YSPE	XDPE	XSPE

#### Table 44. TPULSE\_SRC Description

EA	Event Active Flag. Default value: 0
EA	0: no event flag has been asserted; 1: one or more events have been asserted
ZDPE	Double pulse on Z-axis event. Default value: 0.
ZDIL	0: no event detected; 1: Double Z event detected
ZSPE	Single pulse on Z-axis event. Default value: 0.
ZSFE	0: no event detected; 1: Single Z event detected
YDPE	Double pulse on Y-axis event. Default value: 0.
TOPE	0: no event detected; 1: Double Y event detected
YSPE	Single pulse on Y-axis event. Default value: 0.
1312	0: no event detected; 1: Single Y event detected
XDPE	Double pulse on X-axis event. Default value: 0.
ADFE	0: no event detected; 1: Double X event detected
XSPE	Single pulse on X-axis event. Default value: 0.
ASPE	0: no event detected; 1: Single X event detected

#### 0x31 - 0x33: PULSE\_THSX, Y, Z Pulse Threshold for X, Y & Z Registers

The pulse threshold can be set separately for the X, Y and Z axes. The threshold values range from 0 to 31 counts with steps of 0.258g/LSB at a fixed 8g acceleration range, thus the minimum resolution is always fixed at 0.258g/LSB irrespective of the selected g range.

The PULSE\_THSX, PULSE\_THSY and PULSE\_THSZ registers define the threshold which is used by the system to start the pulse detection procedure. The threshold value is expressed over 5-bits as an unsigned number.

#### 0x31 PULSE\_THSX Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	THSX4	THSX3	THSX2	THSX1	THSX0

#### Table 45. PULSE\_THSX Description

THSX4, THSX0	Pulse Threshold on X-axis. Default value: 0_0000.
--------------	---

#### 0x32 PULSE\_THSY Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	THSY4	THSY3	THSY2	THSY1	THSY0

#### Table 46. PULSE\_THSY Description

THSY4, THSY0	Pulse Threshold on Y-axis. Default value: 0_0000.
--------------	---

#### 0x33 PULSE\_THSZ Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	THSZ4	THSZ3	THSZ2	THSZ1	THSZ0

#### Table 47. PULSE\_THSZ Description

THSZ4, THSZ0	Pulse Threshold on Z-axis. Default value: 0_0000.
--------------	---

#### 0x34: PULSE\_TMLT Pulse Time Window 1 Register

#### 0x34 PULSE\_TMLT Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Tmlt7	Tmlt6	Tmlt5	Tmlt4	Tmlt3	Tmlt2	Tmlt1	Tmlt0

The bits Tmlt7 through Tmlt0 define the maximum time interval that can elapse between the start of the acceleration on the selected axis exceeding the specified threshold and the end when the acceleration on the selected axis must go below the specified threshold to be considered a valid pulse.

The minimum time step for the pulse time limit is defined in Table 48. Maximum time for a given ODR is the minimum time step at the given power mode multiplied by 255. The time steps available are dependent on whether the device is in Normal Power mode or in Low Power mode. Notice in the table below that the time step is twice as long in Low Power mode.

#### Table 48. Time Step for PULSE Time Limit at ODR and Power Mode

Output Data Rate (Hz)	Step at Normal Mode	Step at Low Power Mode
400	0.625 ms	1.25 ms
200	1.25 ms	2.5 ms
100	2.5 ms	5.0 ms
50	5 ms	10 ms
12.5	5 ms	10 ms
1.56	5 ms	10 ms

Therefore an ODR setting of 400 Hz with normal power mode would result in a maximum pulse time limit of (0.625 ms \* 255) ≥ 159 ms.

#### 0x35: PULSE\_LTCY Pulse Latency Timer Register

#### 0x35 PULSE\_LTCY Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Ltcy7	Ltcy6	Ltcy5	Ltcy4	Ltcy3	Ltcy2	Ltcy1	Ltcy0

The bits Ltcy7 through Ltcy0 define the time interval that starts after the first pulse detection. During this time interval, all pulses are ignored. **Note:** This timer must be set for single pulse and for double pulse.

The minimum time step for the pulse latency is defined in Table 49. The maximum time is the time step at the ODR and Power Mode multiplied by 255. Notice that the time step is twice the duration if the device is operating in Low Power mode, as shown below.

Table 49. Time Step for PULSE Latency at ODR and Power Mode

Output Data Rate (Hz)	Step at Normal Mode	Step at Low Power Mode
400	1.25 ms	2.5 ms
200	2.5 ms	5.0 ms
100	5.0 ms	20 ms
50	10 ms	20 ms
12.5	10 ms	20 ms
1.56	10 ms	20 ms

## 0x36: PULSE\_WIND Second Pulse Time Window Register

#### 0x36 PULSE\_WIND Register (Read/Write)

Ī	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ĺ	Wind7	Wind6	Wind5	Wind4	Wind3	Wind2	Wind1	Wind0

The bits Wind7 through Wind0 define the maximum interval of time that can elapse after the end of the latency interval in which the start of the second pulse event must be detected provided the device has been configured for double pulse detection. The detected second pulse width must be shorter than the time limit constraints specified by the PULSE\_TMLT register, but the end of the double pulse need not finish within the time specified by the PULSE\_WIND register.

The minimum time step for the pulse window is defined in Table 50. The maximum time is the time step at the ODR and Power Mode multiplied by 255.

Table 50. Time Step for PULSE Detection Window at ODR and Power Mode

Output Data Rate (Hz)	Step at Normal Mode	Step at Low Power Mode
400	1.25 ms	2.5 ms
200	2.5 ms	5.0 ms
100	5.0 ms	20 ms
50	10 ms	20 ms
12.5	10 ms	20 ms
1.56	10 ms	20 ms

## 6.7 Auto-Sleep Registers

For additional information on how to configure the device for the Auto-Sleep/Wake feature, refer to AN3921.

#### 0x37: ASLP\_COUNT Auto-Sleep Inactivity Timer Register

The ASLP\_COUNT register sets the minimum time period of inactivity required to change current ODR value from the value specified in the DR[2:0] to ASLP\_RATE (Reg 0x38) value provided the SLPE bit is set to a logic '1' in the CTRL\_REG2 register.

#### 0x37 ASLP\_COUNT Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
D7	D6	D5	D4	D3	D2	D1	D0

Table 51. ASLP\_COUNT Description

D[7-0]	Duration value. Default value: 0000 0000

D7-D0 defines the minimum duration time to change current ODR value from **DR** to **ASLP\_RATE**. Time step and maximum value depend on the ODR chosen (see Table 52).

Table 52. ASLP\_COUNT Relationship with ODR

Output Data Rate (ODR)	Duration	Step
400	0 to 81s	320 ms
200	0 to 81s	320 ms
100	0 to 81s	320 ms
50	0 to 81s	320 ms
12.5	0 to 81s	320 ms
1.56	0 to 162s	640 ms

In order to wake the device, the desired function or functions must be enabled and set to "Wake From Sleep". All enabled functions will still function in sleep mode at the sleep ODR. Only the functions that have been selected for "Wake From Sleep" will **wake** the device.

MMA8450Q has 6 functions that can be used to keep the sensor from falling asleep namely, Transient, Orientation, Tap, Motion/FF1 and Motion/FF2 and the FIFO. One or more of these functions can be enabled. In order to wake the device, functions are provided namely, Transient, Orientation, Tap, and the two Motion/Freefall. Note that the FIFO does not wake the device. The Auto-Wake/Sleep interrupt does not affect the wake/sleep, nor does the data ready interrupt. The FIFO gate (bit 7) in Register 0x3A, when set, will hold the last data in the FIFO before transitioning to a different ODR. After the buffer is flushed, it will accept new sample data at the current ODR. See Register 0x3A for the wake from sleep bits.

If the Auto-Sleep bit is disabled, then the device can only toggle between Standby and Wake Mode by writing to the FS0 and FS1 bits in Register 0x38 CTRL\_REG1. If Auto-Sleep interrupt is enabled, transitioning from Active mode to Auto-Sleep mode and vice versa generates an interrupt.

#### 0x38: CTRL\_REG1 System Control 1 Register

#### 0x38 CTRL\_REG1 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ASLP_RATE1	ASLP_RATE0	0	DR2	DR1	DR0	FS1	FS0

Table 53. CTRL\_REG1 Description

ASLP RATE [1:0]	This register configures the Auto-Wake sample frequency when the device is in Sleep Mode.
ASLP_RATE [1.0]	See Table 54 for more information.
DR[2:0] Data rate selection. Default value: 000	
FS[1:0]	Full Scale selection. Default value: 00
F3[1.0]	(00: Standby mode; 01: active mode ±2g; 10: active mode ±4g; 11: active mode ±8g)

Table 54. Sleep Mode Poll Rate Description

ASLP_RATE1	ASLP_RATE0	Frequency (Hz)
0	0	50
0	1	25
1	0	12.5
1	1	1.56

It is important to note that when the device is in Auto-Sleep mode, the system ODR and the data rate for all the system functional blocks are overwritten by the data rate set by the **ASLP\_RATE** field in Register 0x38.

DR[2:0] bits select the output data rate (ODR) for acceleration samples. The default value is 000 for a data rate of 400 Hz.

Table 55. System Output Data Rate Selection

DR2	DR1	DR0	Output Data Rate (ODR)	Time Between Data Samples
0	0	0	400 Hz	2.5 ms
0	0	1	200 Hz	5 ms

#### Table 55. System Output Data Rate Selection

0	1	0	100 Hz	10 ms
0	1	1	50 Hz	20 ms
1	0	0	12.5 Hz	80 ms
1	0	1	1.563 Hz	640 ms

FS[1:0] bits select between standby mode and active mode. The default value is 00 for standby mode.

#### Table 56. Full Scale Selection

FS1	FS0	Mode	g Range		
0	0	Standby	_		
0	1	Active	±2g		
1	0	Active	±4g		
1	1	Active	±8g		

#### 0x39: CTRL\_REG2 System Control 2 Register

#### 0x39 CTRL\_REG2 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ST	BOOT	0	0	0	0	SLPE	MODS

#### Table 57. CTRL\_REG2 Description

ST	Self-Test Enable. Default value: 0.				
	0: Self-Test disabled; 1: Self-Test enabled				
воот	Reboot device content (Software Reset). Default value: 0.				
ВООТ	0: device reboot disabled; 1: device reboot enabled.				
	Auto-Sleep enable. Default value: 0.				
SLPE <sup>(1)</sup>	0: Auto-Sleep is not enabled;				
	1: Auto-Sleep is enabled.				
MODS	Low power mode / Normal mode selection. Default value: 0.				
WODS	0: normal mode; 1: low power mode.				

<sup>1.</sup> When SLPE = 1, the transitioning between sleep mode and wake mode results in a FIFO flush and a reset of internal functional block counters. All functional block status information are preserve except otherwise stated. See Table 58 for more information about the FIFO\_GATE bit in CTRL\_REG3 register.

ST bit activates the Self-Test function. When ST is set to one, an output change will occur to the device outputs (refer to Table 2 and Table 3) thus allowing host application to check the functionality of the entire signal chain.

BOOT bit is used to activate the software reset. The Boot mechanism can be enabled in STANDBY and ACTIVE mode.

When the Boot bit is enabled the Boot mechanism resets all functional block registers and loads the respective internal registers with default NVM values.

The system will automatically transition to standby mode if not already in standby mode before the software reset (re-BOOT process) can occur.

**Note**: The I<sup>2</sup>C communication system is reset to avoid accidental corrupted data access.

#### 0x3A: CTRL\_REG3 Interrupt Control Register

#### 0x3A CTRL\_REG3 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
FIFO_GATE	WAKE_TRANS	WAKE_LNDPRT	WAKE_PULSE	WAKE_FF_MT_1	WAKE_FF_MT_2	IPOL	PP_OD

#### Table 58. CTRL\_REG3 Description

	0: FIFO gate is bypassed. FIFO is flushed upon the system mode transitioning from wake-to-sleep mode or from sleep-to-wake mode.
	1: The FIFO input buffer is blocked when transitioning from "wake-to-sleep" mode or from "sleep-to-wake" mode until the
	FIFO is flushed. Although the system transitions from "wake-to-sleep" or from "sleep-to-wake" the contents of the FIFO
FIFO_GATE	buffer are preserved, new data samples are ignored until the FIFO is emptied by the host application.
	If the FIFO_GATE bit is set to logic 1 and the FIFO buffer is not emptied before the arrival of the next sample, then the
	FGERR bit in the SYS_MOD register (0x14) will be asserted. The FGERR bit remains asserted as long as the FIFO buffer
	remains un-emptied.
	Emptying the FIFO buffer clears the FGERR bit in the SYS_MOD register.
WAKE_TRANS	0: Transient function is bypassed in sleep mode
WARE_IRANS	1: Transient function interrupt can wake up system
WAKE_LNDPRT	0: Orientation function is bypassed in sleep mode
WARE_ENDIRE	1: Orientation function interrupt can wake up system
WAKE_PULSE	0: Pulse function is bypassed in sleep mode
W/WE_I OLOE	1: Pulse function interrupt can wake up system
WAKE_FF_MT_1	0: Freefall/Motion1 function is bypassed in sleep mode
W/ (KE_11 _W11_1	1: Freefall/Motion1 function interrupt can wake up
WAKE_FF_MT_2	0: Freefall/Motion2 function is bypassed in sleep mode
***************************************	1: Freefall/Motion2 function interrupt can wake up system
IPOL	Interrupt polarity active high, or active low. Default value 0.
4-	0: active low; 1: active high
PP_OD	Push-pull/Open Drain selection on interrupt pad. Default value 0.
05	0: push-pull; 1: open drain

**IPOL** bit selects the polarity of the interrupt signal. When IPOL is '0' any interrupt event will signalled with a logical 0. **PP\_OD** bit configures the interrupt pin to Push-Pull or in Open Drain mode. The open drain configuration can be used for connecting multiple interrupt signals on the same interrupt line.

#### 0x3B: CTRL\_REG4 Register (Read/Write)

#### 0x3B CTRL\_REG4 Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
INT_EN_ASLP	INT_EN_FIFO	INT_EN_TRANS	INT_EN_LNDPRT	INT_EN_PULSE	INT_EN_FF_MT_1	INT_EN_FF_MT_2	INT_EN_DRDY

#### Table 59. interrupt Enable Register Description

Interrupt Enable	Description					
INT EN ASLP	Interrupt Enable. Default value: 0.					
INT_EN_ASEF	0: Auto-Sleep/Wake interrupt disabled; 1: Auto-Sleep/Wake interrupt enabled.					
INT_EN_FIFO	Interrupt Enable. Default value: 0.					
	0: FIFO interrupt disabled; 1: FIFO interrupt enabled.					
INT_EN_TRANS	Interrupt Enable. Default value: 0.					
INT_EN_TRANS	0: Transient interrupt disabled; 1: Transient interrupt enabled.					
	Interrupt Enable. Default value: 0.					
INT_EN_LNDPRT	0: Orientation (Landscape/Portrait) interrupt disabled.					
	1: Orientation (Landscape/Portrait) interrupt enabled.					
INT EN PULSE	Interrupt Enable. Default value: 0.					
INT_EN_TOESE	0: Pulse Detection interrupt disabled; 1: Pulse Detection interrupt enabled					
INT_EN_FF_MT_1	Interrupt Enable. Default value: 0.					
	0: Freefall/Motion1 interrupt disabled; 1: Freefall/Motion1 interrupt enabled					
INT_EN_FF_MT_2	Interrupt Enable. Default value: 0.					
	0: Freefall/Motion2 interrupt disabled; 1: Freefall/Motion2 interrupt enabled					
INT EN DRDY	Interrupt Enable. Default value: 0.					
	0: Data Ready interrupt disabled; 1: Data Ready interrupt enabled					

The corresponding functional block interrupt enable bit allows the functional block to route its event detection flags to the system's interrupt controller. The interrupt controller routes the enabled functional block interrupt to the INT1 or INT2 pin.

#### 0x3C: CTRL\_REG5 Interrupt Configuration Register

#### 0x3C CTRL\_REG5 Register (Read/Write)

Ī	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ĺ	INT_CFG_ASLP	INT_CFG_FIFO	INT_CFG_TRANS	INT_CFG_LNDPRT	INT_CFG_PULSE	INT_CFG_FF_MT_1	INT_CFG_FF_MT_2	INT_CFG_DRDY

#### **Table 60. Interrupt Configuration Register Description**

Interrupt Configuration	Description
INT CFG ASLP	INT1/INT2 Configuration. Default value: 0.
INT_CFG_AGEF	0: Interrupt is routed to INT2 pin; 1: Interrupt is routed to INT1 pin
INT CFG FIFO	INT1/INT2 Configuration. Default value: 0.
INT_CFG_FIFO	0: Interrupt is routed to INT2 pin; 1: Interrupt is routed to INT1 pin
INT CFG TRANS	INT1/INT2 Configuration. Default value: 0.
INT_CLO_TIVANS	0: Interrupt is routed to INT2 pin; 1: Interrupt is routed to INT1 pin
INT CFG LNDPRT	INT1/INT2 Configuration. Default value: 0.
INT_CI G_ENDI KI	0: Interrupt is routed to INT2 pin; 1: Interrupt is routed to INT1 pin
INT CFG PULSE	INT1/INT2 Configuration. Default value: 0.
INT_CLG_LGESE	0: Interrupt is routed to INT2 pin; 1: Interrupt is routed to INT1 pin
INT_CFG_FF_MT_1	INT1/INT2 Configuration. Default value: 0.
1141_01 0_11 _1111_1	0: Interrupt is routed to INT2 pin; 1: Interrupt is routed to INT1 pin
INT_CFG_FF_MT_2	INT1/INT2 Configuration. Default value: 0.
1141_01 0_11 _1111_2	0: Interrupt is routed to INT2 pin; 1: Interrupt is routed to INT1 pin
INT_CFG_DRDY	INT1/INT2 Configuration. Default value: 0.
1141_51 6_51651	0: Interrupt is routed to INT2 pin; 1: Interrupt is routed to INT1 pin

The system's interrupt controller shown in Figure 10 uses the corresponding bit field in the CTRL\_REG5 register to determine the routing table for the INT1 and INT2 interrupt pins. If the bit value is logic '0' the functional block's interrupt is routed to INT2, and if the bit value is logic '1' then the interrupt is routed to INT1. One or more functions can assert an interrupt pin; therefore a host application responding to an interrupt should read the INT\_SOURCE (0x15) register to determine the appropriate sources of the interrupt.

## 6.8 User Offset Correction Registers

For more information on how to calibrate the 0g Offset refer to AN3916 Offset Calibration Using the MMA8450Q. The 2's complement offset correction registers values are used to realign the Zero-g position of the X, Y, and Z-axis after device board mount. The resolution of the offset registers is 3.906 mg per LSB. The 2's complement 8-bit value would result in an offset compensation range ±0.5g.

#### 0x3D: OFF\_X Offset Correction X Register

#### 0x3D OFF\_X Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
D7	D6	D5	D4	D3	D2	D1	D0

#### Table 61. OFF\_X Description

D7-D0 X -axis offset trim LSB value. Default value: 0000\_0000.

#### 0x3E: OFF\_Y Offset Correction Y Register

#### 0x3E OFF\_Y Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
D7	D6	D5	D4	D3	D2	D1	D0

#### Table 62. OFF\_Y Description

D7-D0 Y-axis offset trim LSB value. Default value: 0000\_0000.

#### 0x3F: OFF\_Z Offset Correction Z Register

#### 0x3F OFF\_Z Register (Read/Write)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
D7	D6	D5	D4	D3	D2	D1	D0

#### Table 63. OFF\_Z Description

D7-D0	Z-axis offset trim LSB value. Default value: 0000_0000.

# Appendix A

## Table 64. MMA8450Q Register Map

Reg	Name	Definition	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
00	STATUS	Data Status R	ZYXOW	ZOW	YOW	XOW	ZYXDR	ZDR	YDR	XDR
01	OUT_X_MSB	8-bit X Data R	XD11	XD10	XD9	XD8	XD7	XD6	XD5	XD4
02	OUT_Y_MSB	8-bit Y Data R	YD11	YD10	YD9	YD8	YD7	YD6	YD5	YD4
03	OUT_Z_MSB	8-bit Z Data R	ZD11	ZD10	ZD9	ZD8	ZD7	ZD6	ZD5	ZD4
04	STATUS	Data Status R	ZYXOW	ZOW	YOW	XOW	ZYXDR	ZDR	YDR	XDR
05	OUT_X_LSB	12-bit X Data R	0	0	0	0	XD3	XD2	XD1	XD0
06	OUT_X_MSB	12-bit X Data R	XD11	XD10	XD9	XD8	XD7	XD6	XD5	XD4
07	OUT_Y_LSB	12-bit Y Data R	0	0	0	0	YD3	YD2	YD1	YD0
08	OUT_Y_MSB	12-bit Y Data R	YD11	YD10	YD9	YD8	YD7	YD6	YD5	YD4
09	OUT_Z_LSB	12-bit Z Data R	0	0	0	0	ZD3	ZD2	ZD1	ZD0
0A	OUT_Z_MSB	12-bit Z Data R	ZD11	ZD10	ZD9	ZD8	ZD7	ZD6	ZD5	ZD4
0B	STATUS	Data Status R	ZYXOW	ZOW	YOW	XOW	ZYXDR	ZDR	YDR	XDR
0C	OUT_X_DELTA	8-bit Transient X Data R	XD7	XD6	XD5	XD4	XD3	XD2	XD1	XD0
0D	OUT_Y_DELTA	8-bit Transient Y Data R	YD7	YD6	YD5	YD4	YD3	YD2	YD1	YD0
0E	OUT_Z_DELTA	8-bit Transient Z Data R	ZD7	ZD6	ZD5	ZD4	ZD3	ZD2	ZD1	ZD0
0F	WHO_AM_I	ID Register R	_	_	_	_	_	-	_	_
10	F_STATUS	FIFO Status R	F_OVF	F_WMRK_FLAG	F_CNT5	F_CNT4	F_CNT3	F_CNT2	F_CNT1	F_CNT0
11	F_8DATA	8-bit FIFO Data R	XD11	XD10	XD9	XD8	XD7	XD6	XD5	XD4
12	F_12DATA	12-bit FIFO Data R	0	0	0	0	XD3	XD2	XD1	XD0
13	F_SETUP	FIFO Setup R/W	F_MODE1	F_MODE0	F_WMRK5	F_WMRK4	F_WMRK3	F_WMRK2	F_WMRK1	F_WMRK0
14	SYSMOD	System Mode R	PERR	FGERR	0	0	0	0	SYSMOD1	SYSMOD0
15	INT_SOURCE	Interrupt Status R	SRC_ASLP	SRC_FIFO	SRC_TRANS	SRC_LNDPRT	SRC_PULSE	SRC_FF_MT_1	SRC_FF_MT_2	SRC_DRDY
16	XYZ_DATA_CFG	Data Config. R/W	FDE	0	0	0	_	ZDEFE	YDEFE	XDEFE
17	HP_FILTER_CUTOFF	HP Filter Setting R/W	0	0	0	0	0	0	SEL1	SEL0
18	PL_STATUS	PL Status R	NEWLP	LO	-	LAPO[2]	LAPO[1]	LAPO[0]	BAFRO[1]	BAFRO[0]
19	PL_PRE_STATUS	Previous PL Status R	-	LO	-	LAPO[2]	LAPO[1]	LAPO[0]	BAFRO[1]	BAFRO[0]
1A	PL_CFG	PL Configuration R/W	DBCNTM	PL_EN	-	-	-	GOFF[2]	GOFF[1]	GOFF[0]
1B	PL_COUNT	PL Debounce R/W	DBNCE[7]	DBNCE[6]	DBNCE[5]	DBNCE[4]	DBNCE[3]	DBNCE [2]	DBNCE [1]	DBNCE [0]
1C	PL_BF_ZCOMP	PL Back/Front and Z Compensation R/W	BKFR[1]	BKFR[0]	•	-	-	ZLOCK[2]	ZLOCK[1]	ZLOCK[0]
1D	PL_P_L_THS_REG1	Portrait-to-Landscape Threshold Setting 1 R/W	P_L_THS[7]	P_L_THS[6]	P_L_THS[5]	P_L_THS[4]	P_L_THS[3]	P_L_THS[2]	P_L_THS[1]	P_L_THS[0]
1E	PL_P_L_THS_REG2	Portrait-to-Landscape Threshold Setting 2 R/W	P_L_THS[7]	P_L_THS[6]	P_L_THS[5]	P_L_THS[4]	P_L_THS[3]	P_L_THS[2]	P_L_THS[1]	P_L_THS[0]
1F	PL_P_L_THS_REG3	Portrait-to-Landscape Threshold Setting 3 R/W	P_L_THS[7]	P_L_THS[6]	P_L_THS[5]	P_L_THS[4]	P_L_THS[3]	P_L_THS[2]	P_L_THS[1]	P_L_THS[0]
20	PL_L_P_THS_REG1	Landscape-to-Portrait Threshold Setting 1 R/W	L_P_THS[7]	L_P_THS[6]	L_P_THS[5]	L_P_THS[4]	L_P_THS[3]	L_P_THS[2]	L_P_THS[1]	L_P_THS[0]
21	PL_L_P_THS_REG2	Landscape-to-Portrait Threshold Setting21 R/W	L_P_THS[7]	L_P_THS[6]	L_P_THS[5]	L_P_THS[4]	L_P_THS[3]	L_P_THS[2]	L_P_THS[1]	L_P_THS[0]
22	PL_L_P_THS_REG3	Landscape-to-Portrait Threshold Setting 3 R/W	L_P_THS[7]	L_P_THS[6]	L_P_THS[5]	L_P_THS[4]	L_P_THS[3]	L_P_THS[2]	L_P_THS[1]	L_P_THS[0]
23	FF_MT_CFG_1	FF/Motion Config. 1 R/W	ELE	OAE	ZHEFE	ZLEFE	YHEFE	YLEFE	XHEFE	XLEFE
24	FF_MT_SRC_1	FF/Motion Source 1 R	-	EA	ZHE	ZLE	YHE	YLE	XHE	XLE
25	FF_MT_THS_1	FF/Motion Threshold 1 R/W	DBCNTM	THS6	THS5	THS4	THS3	THS2	THS1	THS0
26	FF_MT_COUNT_1	FF/Motion Debounce 1 R/W	D7	D6	D5	D4	D3	D2	D1	D0
27	FF_MT_CFG_2	FF/Motion Config. 2 R/W	ELE	OAE	ZHEFE	ZLEFE	YHEFE	YLEFE	XHEFE	XLEFE
28	FF_MT_SRC_2	FF/Motion Source 2 R	1	EA	ZHE	ZLE	YHE	YLE	XHE	XLE

## Table 64. MMA8450Q Register Map

29	FF_MT_THS_2	FF/Motion Threshold 2 R/W	DBCNTM	THS6	THS5	THS4	THS3	THS2	THS1	THS0
2A	FF_MT_COUNT_2	FF/Motion Debounce 2 R/W	D7	D6	D5	D4	D3	D2	D1	D0
2B	TRANSIENT_CFG	Transient Config. R/W	_	_	_	_	ELE	ZTEFE	YTEFE	XTEFE
2C	TRANSIENT_SRC	Transient Source R	_	-	_	_	EA	ZTRANSE	YTRANSE	XTRANSE
2D	TRANSIENT_THS	Transient Threshold R/W	DBCNTM	THS6	THS5	THS4	THS3	THS2	THS1	THS0
2E	TRANSIENT_COUNT	Transient Debounce R/W	D7	D6	D5	D4	D3	D2	D1	D0
2F	PULSE_CFG	Pulse Config. R/W	DPA	ELE	ZDPEFE	ZSPEFE	YDPEFE	YSPEFE	XDPEFE	XSPEFE
30	PULSE_SRC	Pulse Source R	-	EA	ZDPE	ZSPE	YDPE	YSPE	XDPE	XSPE
31	PULSE_THSX	Pulse X Threshold R/W	0	0	0	THSX4	THSX3	THSX2	THSX1	THSX0
32	PULSE_THSY	Pulse Y Threshold R/W	0	0	0	THSY4	THSY3	THSY2	THSY1	THSY0
33	PULSE_THSZ	Pulse Z Threshold R/W	0	0	0	THSZ4	THSZ3	THSZ2	THSZ1	THSZ0
34	PULSE_TMLT	Pulse First Timer R/W	Tmlt7	Tmlt6	Tmlt5	Tmlt4	Tmlt3	Tmlt2	Tmlt1	Tmlt0
35	PULSE_LTCY	Pulse Latency R/W	Ltcy7	Ltcy6	Ltcy5	Ltcy4	Ltcy3	Ltcy2	Ltcy1	Ltcy0
36	PULSE_WIND	Pulse 2nd Window R/W	Wind7	Wind6	Wind5	Wind4	Wind3	Wind2	Wind1	Wind0
37	ASLP_COUNT	Auto-Sleep Counter R/W	D7	D6	D5	D4	D3	D2	D1	D0
38	CTRL_REG1	Control Reg 1 R/W	ASLP_RATE1	ASLP_RATE0	0	DR2	DR1	DR0	FS1	FS0
39	CTRL_REG2	Control Reg 2 R/W	ST	RST	0	0	0	0	SLPE	MODS
3A	CTRL_REG3	Control Reg3 R/W (Wake Interrupts from Sleep)	FIFO_GATE	WAKE_TRANS	WAKE_LNDPRT	WAKE_PULSE	WAKE_FF_MT_1	WAKE_FF_MT_2	IPOL	PP_OD
3B	CTRL_REG4	Control Reg4 R/W (Interrupt Enable Map)	INT_EN_ASLP	INT_EN_FIFO	INT_EN_TRANS	INT_EN_LNDPRT	INT_EN_PULSE	INT_EN_FF_MT_1	INT_EN_FF_MT_2	INT_EN_DRDY
3C	CTRL_REG5	Control reg5 R/W (Interrupt Configuration)	INT_CFG_ASLP	INT_CFG_FIFO	INT_CFG_TRANS	INT_CFG_LNDPRT	INT_CFG_PULSE	INT_CFG_FF_MT_1	INT_CFG_FF_MT_2	INT_CFG_DRDY
3D	OFF_X	X 8-bit offset	D7	D6	D5	D4	D3	D2	D1	D0
3E	OFF_Y	Y 8-bit offset	D7	D6	D5	D4	D3	D2	D1	D0
3F	OFF_Z	Z 8-bit offset	D7	D6	D5	D4	D3	D2	D1	D0

**Table 65. Accelerometer Output Data** 

12-bit Data	Range ±2g	Range ±4g	Range ±8g
0111 1111 1111	1.999g	+3.998g	+7.996g
0111 1111 1110	1.998g	+3.996g	+7.992g
_	_	_	_
0000 0000 0001	0.001g	+0.002g	+0.004g
0000 0000 0000	0.000g	0.000g	0.000g
1111 1111 1111	-0.001g	-0.002g	-0.004g
_	_	_	_
1000 0000 0001	-1.999g	-3.998g	-7.996g
1000 0000 0000	-2.000g	-4.000g	-8.000g
8- bit Data	Range ±2g	Range ±4g	Range ±8g
0111 1111	1.984g	+3.968g	+7.936g
0111 1110	1.968g	+3.936g	+7.872g
_	_	_	_
0000 0001	+0.016g	+0.032g	+0.064g
0000 0000	0.000g	0.000g	0.000g
1111 1111	-0.016g	-0.032g	-0.064g
_	_	_	_
1000 0001	-1.984g	-3.968g	-7.936g
1000 0000	-2.000g	-4.000g	-8.000g

## **Appendix B**

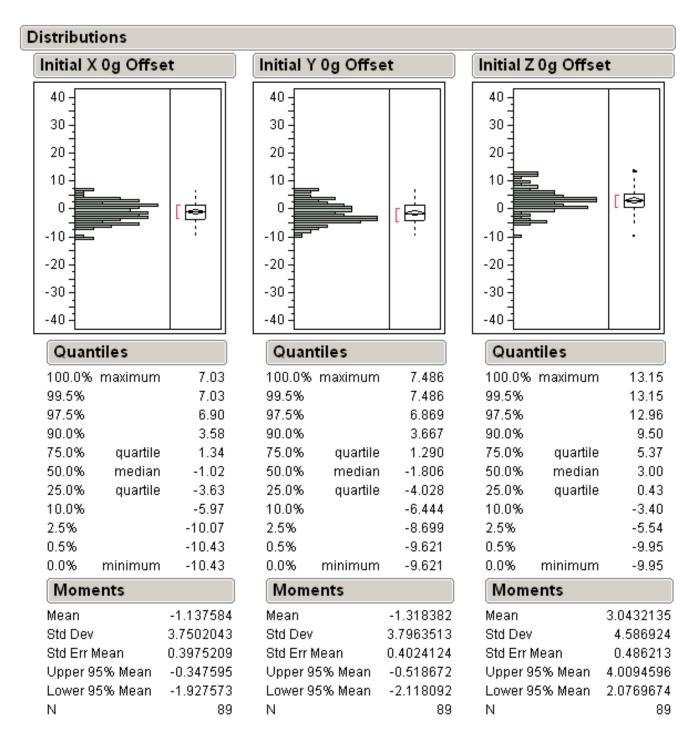


Figure 13. Distribution of Pre Board Mounted Devices Tested in Sockets (1 count = 3.9 mg)

#### Distributions Post BM X 0g Offset Post BM Y 0g Offset Post BM Z 0g Offset 50 50 50 40 40 40 30 30 30 20 20 20 10 10 10 0 0 [ 🖨 0 -10 -10 -10 -20 -20 --20 -30 -30 -30 -40 -40 -40 -50 -50 --50 -Quantiles Quantiles Quantiles 100.0% maximum 8.92 100.0% maximum 8.842 100.0% maximum 20.41 99.5% 8.92 99.5% 8.842 99.5% 20.41 97.5% 7.20 97.5% 7.715 97.5% 18.73 90.0% 4.44 90.0% 4.921 90.0% 9.43 75.0% 1.11 75.0% 75.0% 5.06 quartile quartile 1.774 quartile 50.0% median -1.2450.0% median -1.06750.0% median -0.2925.0% quartile -3.18 25.0% quartile -3.50925.0% quartile -4.2610.0% -5.98-5.611 -7.5110.0% 10.0% 2.5% -9.742.5% -7.0002.5% -16.14 0.5% -10.030.5% -7.0610.5% -21.740.0% -10.03 0.0% -7.061 0.0% -21.74minimum minimum minimum **Moments** Moments Moments Mean -1.055764 Mean -0.779056 Mean 0.2342135 Std Dev Std Dev Std Dev 3.8134703 3.7638495 7.3810254 Std Err Mean Std Err Mean Std Err Mean 0.404227 0.3989673 0.7823871 0.0138074 Upper 95% Mean -0.252448 Upper 95% Mean Upper 95% Mean 1.7890435 Lower 95% Mean -1.85908 Lower 95% Mean -1.57192 Lower 95% Mean -1.320617 Ν 89 Ν 89 Ν 89

Figure 14. Distribution of Post Board Mounted Devices (1 count = 3.9 mg)

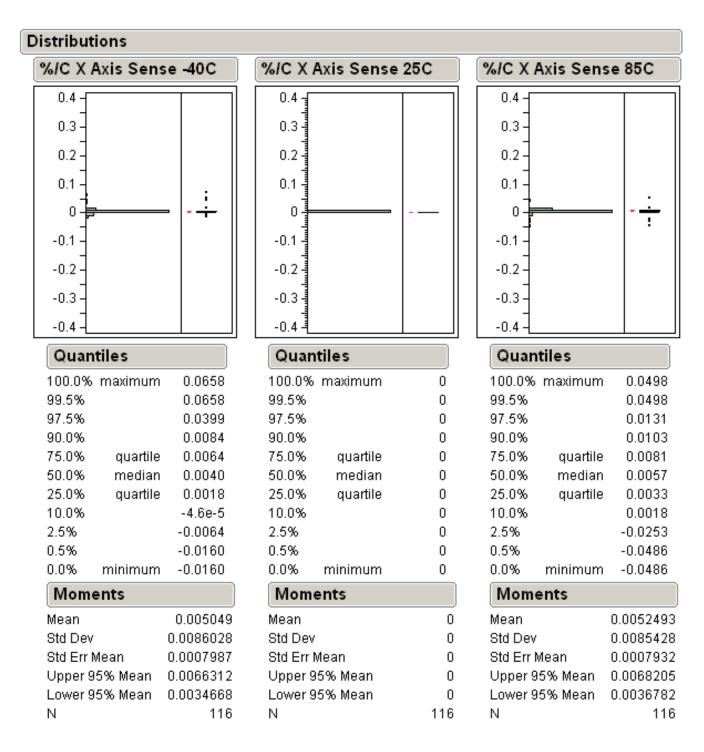


Figure 15. 2g/4g/8g X-axis TCS (%/°C)

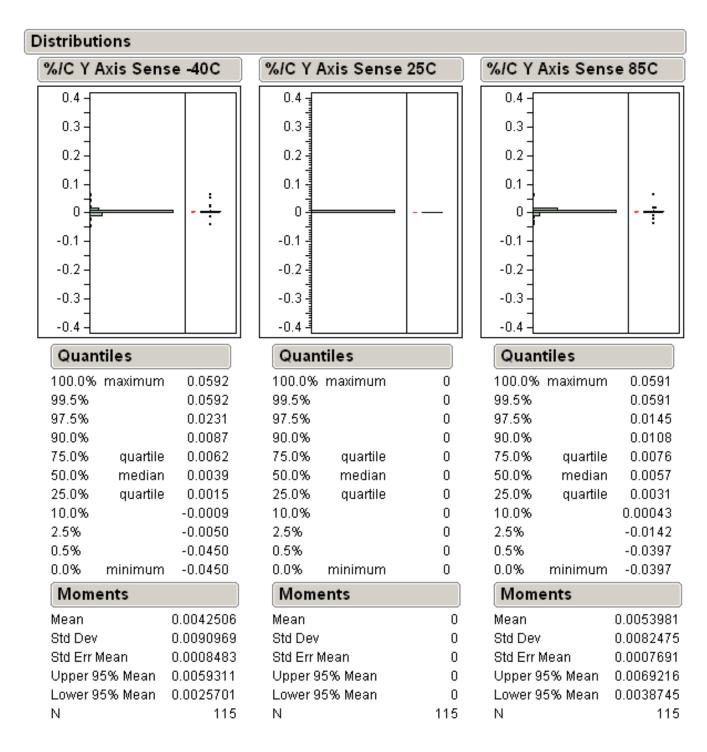


Figure 16. 2g/4g/8g Y-axis TCS (%/°C)

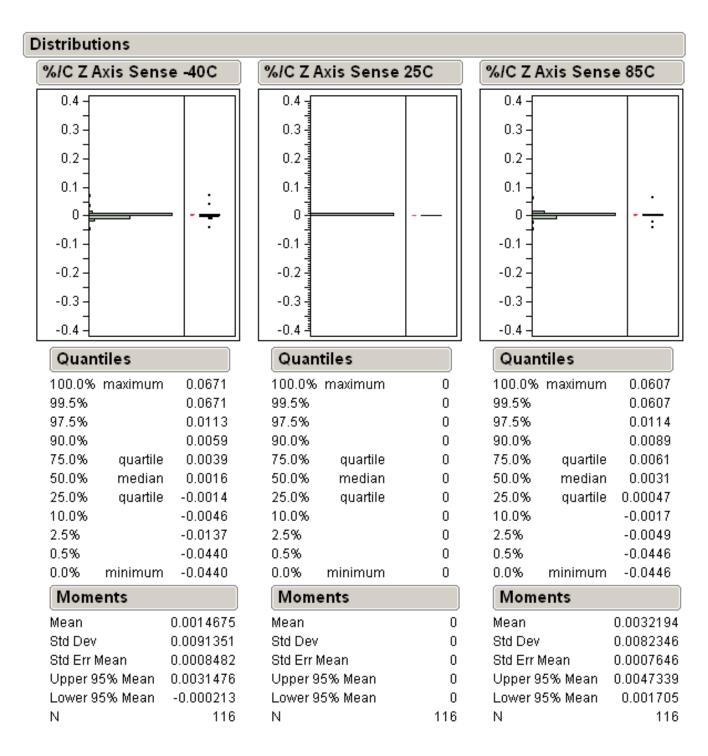


Figure 17. 2g/4g/8g Z-axis TCS (%/°C)

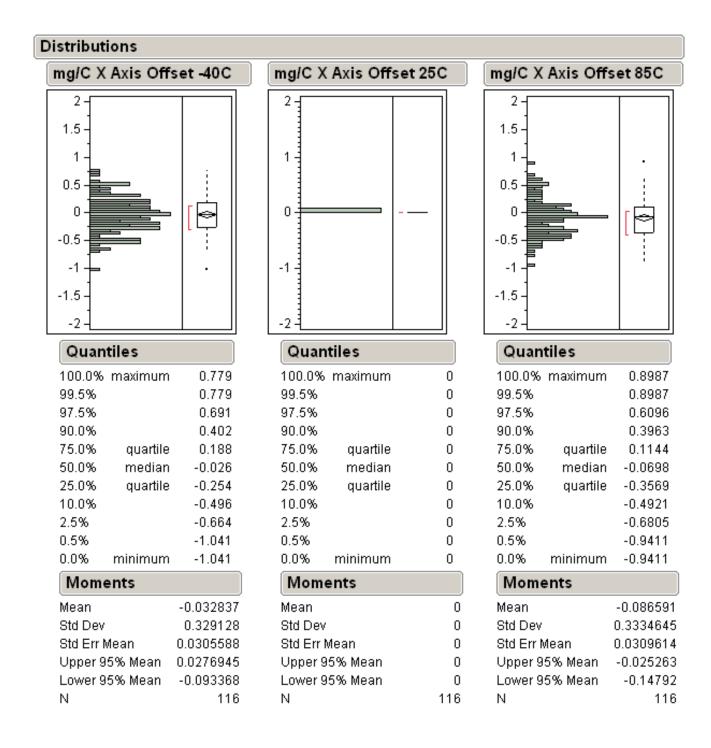


Figure 18. 2g/4g/8g X-axis TCO (mg/°C)


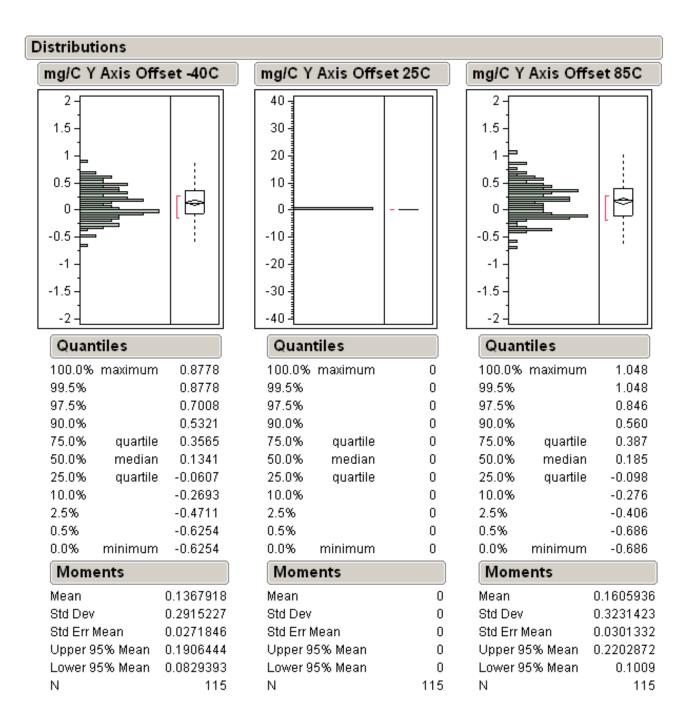


Figure 19. 2g/4g/8g Y-axis TCO (mg/°C)

#### Distributions mg/C Z Axis Offset -40C mg/C Z Axis Offset 25C mg/C Z Axis Offset 85C 2 2 2 1.5 1.5 1.5 1 1 0.5 0.5 -0.5 0 0 Ω -0.5 -0.5 -0.5-1 -1.5 -1.5 -1.5 -2 -2 -2. Quantiles Quantiles Quantiles 100.0% maximum 1.087 100.0% maximum 0 100.0% maximum 1.055 O 99.5% 1.087 99.5% 99.5% 1.055 97.5% 0 0.846 97.5% 97.5% 0.936 90.0% 0.420 90.0% 0 90.0% 0.605 75.0% quartile 0.225 75.0% quartile 0 75.0% quartile 0.366 0 50.0% median 0.046 50.0% median 50.0% median 0.167 0 25.0% quartile -0.168 25.0% quartile 25.0% quartile -0.099 0 10.0% 10.0% -0.50810.0% -0.4232.5% -0.918 2.5% 0 2.5% -0.791 0.5% 0 0.5% -1.5310.5% -1.1970.0% minimum -1.5310.0% minimum 0 0.0% minimum -1.197Moments Moments Moments 0.0139184 0 0.128959 Mean Mean Mean Std Dev 0.3946105 Std Dev 0 Std Dev 0.390181 Std Err Mean Std Err Mean 0 Std Err Mean 0.0362274 0.0366387 Upper 95% Mean Upper 95% Mean 0 Upper 95% Mean 0.0864926 0.2007185 Lower 95% Mean -0.058656 Lower 95% Mean 0 Lower 95% Mean 0.0571995 Ν 116 Ν 116 116

Figure 20. 2g/4g/8g Z-axis TCO (mg/°C)


## **PACKAGE DIMENSIONS**

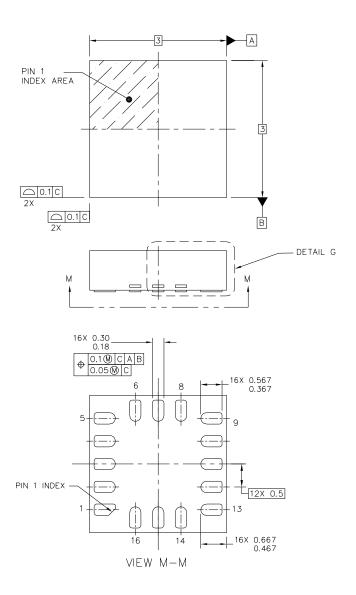

© FREESCALE SEMICONDUCTOR, INC. ALL RIGHTS RESERVED.	MECHANICA	L OUTLINE	PRINT VERSION NO	T TO SCALE
TITLE: QUAD FLAT NO LEAD  COL PACKAGE (QFN-COL)  16 TERMINAL, 0.5 PITCH (3 X 3 X 1.0)		DOCUMENT NO	): 98ASA00063D	REV: A
		CASE NUMBER: 2077-02 20 OCT		20 OCT 2011
16 TERMINAL, U.S PITCH (3 /	STANDARD: NO	N JEDEC		

CASE 2077-02 ISSUE A 16-LEAD QFN

## **PACKAGE DIMENSIONS**

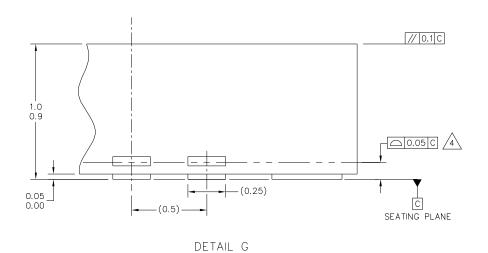

© FREESCALE SEMICONDUCTOR, INC. ALL RIGHTS RESERVED.		L OUTLINE	PRINT VERSION NO	T TO SCALE
TITLE: QUAD FLAT NO LEAD  COL PACKAGE (QFN-COL)		DOCUMENT NO	): 98ASA00063D	REV: A
		CASE NUMBER: 2077-02 20 OCT 2		20 OCT 2011
16 TERMINAL, 0.5 PITCH (3	STANDARD: NO	N JEDEC		

CASE 2077-02 ISSUE A 16-LEAD QFN

#### **PACKAGE DIMENSIONS**

#### NOTES:

- 1. ALL DIMENSIONS ARE IN MILLIMETERS.
- 2. INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M-1994.
- 3. THIS IS NON JEDEC REGISTERED PACKAGE.



/4.\ COPLANARITY APPLIES TO ALL LEADS.

5. MIN. METAL GAP SHOULD BE 0.2MM.

© FREESCALE SEMICONDUCTOR, INC. ALL RIGHTS RESERVED.	MECHANICA	L OUTLINE	PRINT VERSION NO	T TO SCALE
TITLE: QUAD FLAT NO LEAD  COL PACKAGE (QFN-COL)		DOCUMENT NO	): 98ASA00063D	REV: A
		CASE NUMBER: 2077-02 20 OCT 2		20 OCT 2011
16 TERMINAL, 0.5 PITCH (3 )	STANDARD: NO	N JEDEC		

**CASE 2077-02 ISSUE A** 16-LEAD QFN

## **Revision History**

Revision Number	Revision Date	Description of Changes
9	02/01/2012	Corrected Pin Diagram: Pin 8, callout from NC to EN.
9.1	04/13/2012	Page 39, Corrected register name from 0x3C: CTRL_REG5 register to 0x3B: CTRL_REG4.     Updated case outline drawing from 2077-01, Issue 0 to 2077-02, Issue A.

#### How to Reach Us:

Home Page: www.freescale.com

Web Support:

http://www.freescale.com/support

Information in this document is provided solely to enable system and software implementers to use Freescale products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. Freescale does not convey any license under its patent rights nor the rights of others. Freescale sells products pursuant to standard terms and conditions of sale, which can be found at the following address: http://www.reg.net/v2/webservices/Freescale/Docs/TermsandConditions.htm.

Freescale, the Freescale logo, and the Energy Efficient Solutions logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Xtrinsic is a trademarks of Freescale Semiconductor, Inc.

All other product or service names are the property of their respective owners.

© 2012 Freescale Semiconductor, Inc. All rights reserved.

RoHS-compliant and/or Pb-free versions of Freescale products have the functionality and electrical characteristics of their non-RoHS-compliant and/or non-Pb-free counterparts. For further information, see <a href="http://www.freescale.com">http://www.freescale.com</a> or contact your Freescale sales representative.

For information on Freescale's Environmental Products program, go to http://www.freescale.com/epp.



# AMEYA360 Components Supply Platform

## **Authorized Distribution Brand:**

























## Website:

Welcome to visit www.ameya360.com

## Contact Us:

## > Address:

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd Minhang District, Shanghai , China

## > Sales:

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

## Customer Service :

Email service@ameya360.com

## Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com