

TMS320DM6467 ***Evaluation Module***

***Technical
Reference***

TMS320DM6467 Evaluation Module Technical Reference

509535-0001 Rev. A
July 2007

SPECTRUM DIGITAL, INC.
12502 Exchange Drive, Suite 440 Stafford, TX. 77477
Tel: 281.494.4505 Fax: 281.494.5310
sales@spectrumdigital.com www.spectrumdigital.com

IMPORTANT NOTICE

Spectrum Digital, Inc. reserves the right to make changes to its products or to discontinue any product or service without notice. Customers are advised to obtain the latest version of relevant information to verify that the data being relied on is current before placing orders.

Spectrum Digital, Inc. warrants performance of its products and related software to current specifications in accordance with Spectrum Digital's standard warranty. Testing and other quality control techniques are utilized to the extent deemed necessary to support this warranty.

Please be aware that the products described herein are not intended for use in life-support appliances, devices, or systems. Spectrum Digital does not warrant nor is Spectrum Digital liable for the product described herein to be used in other than a development environment.

Spectrum Digital, Inc. assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein. Nor does Spectrum Digital warrant or represent any license, either express or implied, is granted under any patent right, copyright, or other intellectual property right of Spectrum Digital, Inc. covering or relating to any combination, machine, or process in which such Digital Signal Processing development products or services might be or are used.

WARNING

This equipment is intended for use in a laboratory test environment only. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to subpart J of part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures necessary to correct this interference.

Contents

1	Introduction to the TMS320DM6467 Evaluation Module	1-1
	<i>Provides you with a description of the TMS320DM6467 Evaluation Module, key features, and block diagram.</i>	
1.1	Key Features	1-2
1.2	Functional Overview	1-3
1.3	Basic Operation	1-4
1.4	Memory Map	1-5
1.5	Configuration Switch Settings	1-6
1.6	Power Supply	1-6
2	Board Components	2-1
	<i>Describes the operation of the major board components on the TMS320DM6467 Evaluation Module.</i>	
2.1	EMIF Interfaces	2-2
2.2	Peripheral Interfaces	2-2
2.2.1	PCI Interface	2-2
2.2.2	VLINQ Interfaces	2-2
2.2.3	UART Interface	2-3
2.2.4	ATA Interface	2-3
2.3	DDR2 Memory Interface	2-3
2.4	NAND Flash Interface	2-3
2.5	Video Interfaces	2-4
2.5.1	Video Input Port Interfaces	2-4
2.5.2	Video Output Port Interfaces	2-5
2.6	AIC32 Interface	2-6
2.6.1	Audio PLL/VCXO Circuit/PLL1705 Clock Generator	2-7
2.7	Ethernet Interface	2-8
2.8	USB Interface	2-8
2.9	I ² C Interface	2-9
2.9.1	I/O Expander	2-10
2.9.2	I ² C EEPROM	2-10
2.9.3	SPI EEPROM	2-11
2.10	S/PDIF Analog, and Optical Interfaces	2-11
2.10.1	Infrared Sensors	2-11
2.11	Daughter Card Interface	2-12
2.12	CPLD	2-13
2.12.1	CPLD Register 0, I/O Control, 0x3A	2-13
2.12.2	CPLD Register 1, Video Control, 0x3B	2-14
2.12.3	CPLD Register 2, CPLD Revision, 0x3C	2-14
2.13	TMS320DM6467 Core CPU Clock	2-15
2.14	TMS320DM6467 Core Voltage Select	2-15

3	Physical Specifications	3-1
	<i>Describes the physical layout of the TMS320DM6467 Evaluation Module and its connectors.</i>	
3.1	Board Layout	3-3
3.2	Connectors	3-5
3.2.1	J1, HD Component Video In, (Pb)	3-6
3.2.2	J2, HD Component Video In, (Y)	3-6
3.2.3	J3, HD Component Video In, (Pr)	3-6
3.2.4	J4, Ethernet Interface	3-7
3.2.5	J5, S/PDIF Analog Output	3-7
3.2.6	J6, 14 Pin External JTAG Connector	3-8
3.2.7	J7, Composite Video Out	3-8
3.2.8	J8, Emulation Header, 20 Pin ARM	3-9
3.2.9	J10, Component Video Output, (Pr)	3-9
3.2.10	J11, Component Video Output, (Y)	3-10
3.2.11	J12, Component Video Output, (Pb)	3-10
3.2.12	J13, Composite Video In	3-11
3.2.13	J14, USB Connector	3-12
3.2.14	J15, +5V Input	3-12
3.2.15	P1, RS-232 UART	3-13
3.2.16	P2, Video Out	3-14
3.2.17	P3, S/PDIF Out (Optical)	3-14
3.2.18	P4, Headphone Out	3-14
3.2.19	P5, Stereo Line Output Connector	3-15
3.2.20	P6, Stereo Line Input Connector	3-16
3.2.21	P7, S-Video In	3-17
3.2.22	P8, Microphone Connector	3-17
3.2.23	P9, PCI Connector	3-18
3.2.24	U2, IR Interface	3-20
3.2.25	JP1, Downstream VLYNQ Connector	3-21
3.2.26	JP2, ATA Interface Connector	3-22
3.2.27	DC_P1, Ethernet Interface Connector	3-23
3.2.28	DC_P2, Video Expansion Connector	3-24
3.2.29	DC_P3, I/O Expansion Connector	3-26
3.3	LEDs	3-28
3.4	Switches	3-28
3.4.1	SW1, Power On Reset Switch	3-28
3.4.2	SW2, 4 Position User Readable	3-29
3.4.3	SW3, Bootload Configuration Select	3-29
3.4.4	SW4, Power On Switch	3-31
3.4.5	S1, EMU0/1 Select Switch	3-32
3.5	Test Points	3-33
A	Schematics	A-1
	<i>Contains the schematics for the TMS320DM6467 Evaluation Module</i>	
B	Mechanical Information	B-1
	<i>Contains the mechanical information about the TMS320DM6467 Evaluation Module</i>	

About This Manual

This document describes the board level operations of the TMS320DM6467 Evaluation Module (EVM). The EVM is based on the Texas Instruments TMS320DM6467 Processor.

The TMS320DM6467 Evaluation Module is a table top card that allows engineers and software developers to evaluate certain characteristics of the TMS320DM6467 processor to determine if the processor meets the designers application requirements. Evaluators can create software to execute on board or expand the system in a variety of ways.

Notational Conventions

This document uses the following conventions.

The TMS320DM6467 Evaluation Module will sometimes be referred to as the DM6467 EVM or EVM.

Program listings, program examples, and interactive displays are shown in a special italic typeface. Here is a sample program listing.

equations
!rd = !strobe&rw;

Information About Cautions

This book may contain cautions.

This is an example of a caution statement.

A caution statement describes a situation that could potentially damage your software, or hardware, or other equipment. The information in a caution is provided for your protection. Please read each caution carefully.

Related Documents, Application Notes and User Guides

Information regarding this device can be found at the following Texas Instruments website:

<http://www.ti.com>

Table 1: Manual History

Revision	History
A	Alpha Release

Table 2: Board History

PWB Revision	History
A	Alpha Release

Chapter 1

Introduction to the TMS320DM6467 EVM

Chapter One provides a description of the TMS320DM6467 EVM along with the key features and a block diagram of the circuit board.

Topic		Page
1.1	Key Features	1-2
1.2	Functional Overview	1-3
1.3	Basic Operation	1-4
1.4	Memory Map	1-5
1.5	Configuration Switch Settings	1-6
1.6	Power Supply	1-6

1.1 Key Features

The TMS320DM6467 EVM is a PCI based or standalone development platform that enables users to evaluate and develop applications for the TI DaVinci™ processor family. Schematics, list of materials, and application notes are available to ease hardware development and reduce time to market.

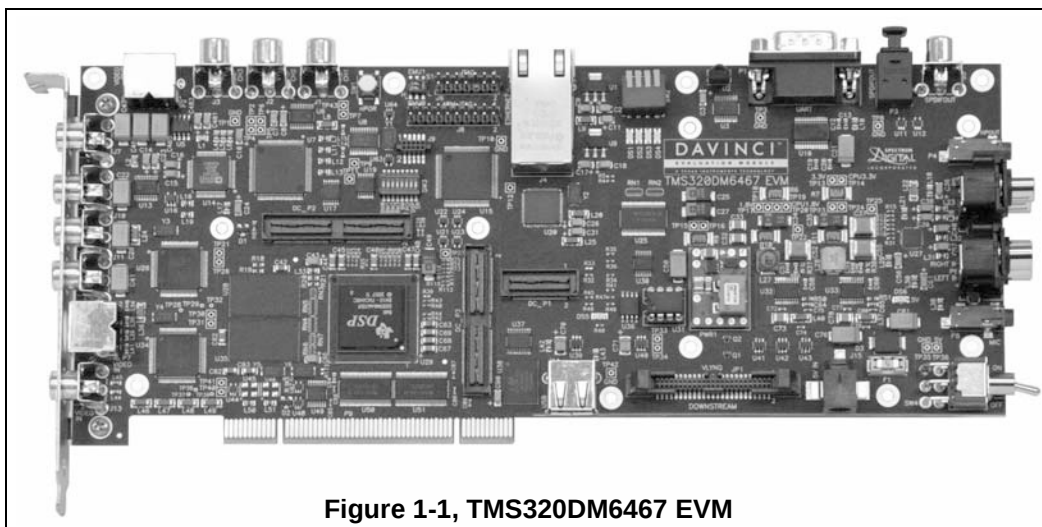



Figure 1-1, TMS320DM6467 EVM

The EVM comes with a full complement of on board devices that suit a wide variety of application environments. Key features include:

- A Texas Instruments TMS320DM6467 multi-CPU processor, ARM926EJ-S, C64x+
- 256 Mbytes of DDR2 DRAM
- 128 Mbytes of NAND Flash memory, I²C EEPROM, SPI EEPROM
- Component HD video output (resolutions up to 720p, 1080i)
- Composite, or S-video output
- Dual TVP5147 video decoders, supports composite and S-video
- TVP7002 provides component HD video input
- AIC32 stereo codec providing analog audio inputs and outputs
- RS-232 UART
- USB 2.0 Host connector
- 10/100/1000 MBS Ethernet Interface
- Configurable boot load options

- External JTAG emulation interface (14 and 20 pins)
- 4 user LEDs and 4 position user switch
- Expansion connectors for daughter card interfaces
- VLYNQ Down Stream Interface
- S/PDIF Interface, analog, and optical
- ATA Hard Disk Interface
- Single voltage power supply (+5V)

1.2 Functional Overview of the TMS320DM6467 EVM

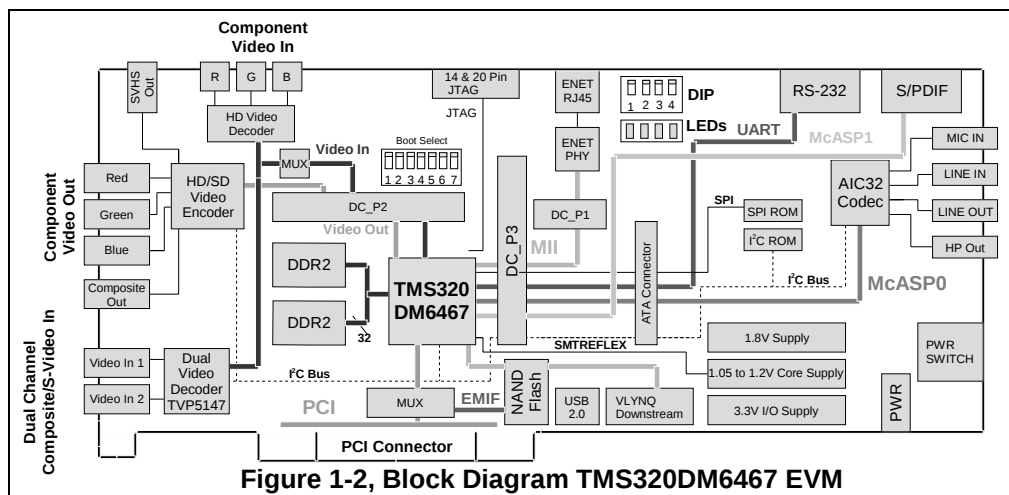

The TMS320DM6467 on the EVM interfaces to on-board peripherals through integrated device interfaces and a 8-bit wide EMIF bus. The DDR2 memory is connected to its own dedicated 32 bit wide bus. The EMIF bus is selectable to be connected to the NAND Flash, and daughter card expansion connectors.

Two on board standard video decoders, one high definition video decoder, and on board standard video and high definition video encoder interface video streams to the TMS320DM6467 processor. Dual TVP5147 decoders, one TVP7002, and an on board ADV7343 six channel encoder are standard on the EVM and directly interface to on chip video ports. On screen display functions are implemented in software on the TMS320DM6467 processor.

An on-board AIC32 codec allows the DSP to transmit and receive analog audio signals. The I²C bus is used for the codec control interface, while the McASP controls the audio stream. Signal interfacing is done through 3.5mm audio jacks and Dual RCA jacks that correspond to microphone input, line input, line output, and headphone outputs.

The EVM includes 4 user LEDs, and 4 position user DIP switch which can be used to provide the user with interactive feedback. These interfaces are implemented via I²C expanders.

VLYNQ, USB II, and ethernet MAC interfaces are integrated peripherals on the DM6467 processor exploiting its system on a chip architecture.

An included +5V external power supply is used to power the board. On-board switching voltage regulators provide the +1.2V CPU core voltage and +3.3V for peripherals and +1.8V for DDR2 memory. The board is held in reset until these supplies are within operating specifications.

Code Composer communicates with the EVM through an embedded emulator or via the 14 pin external JTAG connector.

1.3 Basic Operation

The EVM is designed to work with TI's Code Composer Studio development. Code Composer communicates with the board through the embedded emulator or an external JTAG emulator. To start, follow the instructions in the Quick Start Guide to install Code Composer. This process will install all of the necessary development tools, documentation and drivers.

1.4 Memory Map

The DaVinci family of processors have a large byte addressable address space, some limitations to byte addressing are determined by peripheral interconnection to the TMS320DM6467 device. Program code and data can be placed anywhere in the unified address space. Addresses are multiple sizes depending on hardware implementation. Refer to the appropriate device data sheets for more details.

The memory map shows the address space of a TMS320DM6467 processor on the left with specific details of how each region is used on the right. By default, the internal memory sits at the beginning of the address space. Portions of memory can be remapped in software as L2 cache rather than fixed RAM.

The part incorporates a dual EMIF interface. One dedicated EMIF directly interfaces to the DDR2 memory. The NAND Flash is mapped into CS2 space on the other EMIF. When CS2 is used for daughter card interfacing the daughter card enable pin must be brought high.

Address	TMS320DM6467 EVM
0x00000000	Internal ARM RAM (instruction)
0x00008000	Internal ARM ROM (instruction)
0x00010000	Internal ARM RAM (data)
0x00018000	Internal ARM ROM (data)
0x00818000	L2 RAM/Cache (C64x+)
0x00E00000	L1 P Cache (C64x+)
0x00F00000	L1 D RAM/Cache (C64x+)
0x30000000	PCI Address Space
0x42000000	CS2 - NAND Flash
0x4C000000	VLYNQ
0x80000000	DDR2
0xA0000000	

Figure 1-3, Memory Map, TMS320DM6467 EVM

1.5 Configuration Switch Settings

The EVM has an eight position boot switch that allow users to control the operational state of the processor when it is released from reset. The configuration switch is labeled SW3 on the EVM board.

The switch configures the boot mode that will be used when the CPU starts executing. By default the switches are configured to NAND boot. Refer to the boot load options in Chapter 3 for configuring switch SW3.

1.6 Power Supply

The EVM operates from a single +5V external power supply connected to the main power input (J15), a 2.5 MM. barrel-type plug. Internally, the +5V input is converted into +1.2V, +1.8V and +3.3V using Texas Instruments swift voltage regulators and PTH power module. The +1.2V supply is used for the DSP core while the +3.3V supply is used for the DSP's I/O buffers and other chips on the board. The +1.8 volt supply is used for TMS320DM6467 DDR2 interface, and DDR2 memory.

There are multiple power test points on the EVM. The three main test point pairs provide a convenient mechanism to check the EVM's current for each supply. The table below shows the voltages for each test point and what the supply is used for.

Table 1: Power Test Points

Test Point Pair	Voltage	Voltage Use
TP15 & TP16	+1.2 V	TMS320DM6467 Core
TP23 & TP24	+3.3V	DSP I/O and logic
TP18 & TP19	+1.8 V	DDR2 Memory, DSP I/O, and logic

Chapter 2

Board Components

This chapter describes the operation of the major board components on the TMS320DM6467 EVM.

Topic	Page
2.1 EMIF Interfaces	2-2
2.2 Peripheral Interfaces	2-2
2.2.1 PCI Interface	2-2
2.2.2 VLYNQ Interfaces	2-2
2.2.3 UART Interface	2-3
2.2.4 ATA Interface	2-3
2.3 DDR Memory Interface	2-3
2.4 NAND Flash Interface	2-3
2.5 Video Interfaces	2-4
2.5.1 Video Input Port Interfaces	2-4
2.5.2 Video Output Port Interfaces	2-5
2.6 AIC32 Interface	2-6
2.6.1 Audio PLL/VCXO Circuit/PLL1705 Clock Generator	2-7
2.7 Ethernet Interface	2-8
2.8 USB Interface	2-8
2.9 I ² C Interface	2-9
2.9.1 I/O Expander	2-10
2.9.2 I ² C EEPROM	2-10
2.9.3 SPI EEPROM	2-11
2.10 S/PDIF Analog, and Optical Interfaces	2-11
2.10.1 Infrared Sensors	2-11
2.11 Daughter Card Interface	2-12
2.12 CPLD	2-13
2.12.1 CPLD Register 0, I/O Control, 0x3A	2-13
2.12.2 CPLD Register 1, Video Control, 0x3B	2-14
2.12.3 CPLD Register 2, CPLD Revision, 0x3C	2-14
2.13 TMS320DM6467 CPU Core Clock	2-15
2.14 TMS320DM6467 Core Voltage Select	2-15

2.1 EMIF Interfaces

An 8 bit EMIF with multiple chip selects divide up the address space and allow for asynchronous accesses on the EVM. On board the CS2 is used for NAND Flash. This interface is multiplexed with the PCI interface and daughter card interface. The figure below illustrates this multiplexing. when the board is plugged into the PCI slot the CPLD detects this condition and the EMIF is disabled. Furthermore the EMIF signals to the daughter card are disabled. When the board is not plugged into a PCI slot the EMIF is enabled and the NAN flash is available on CS2 along with the ATA drive.

When pulled high, the EMIF_MODE pin on connector DC_P3 turns the multiplexers for daughter card usage.

2.2 Peripheral Interfaces

The TMS320DM6467 has several peripheral interfaces which allow the user to interface to external devices. These interfaces are outlined in the following sections.

2.2.1 PCI Interface

The EVM supports a 33 Mhz. PCI interface. The board uses CBT multiplexers to interface the PCI slot, EMIF, and daughter card interface to the TMS320DM6467 device. Furthermore the CBT's also provide compatibility with +5 volt PCI interfaces. The board automatically configures the PCI enable signal on the TMS320DM6467 when the board is plugged into a PCI slot. When the PCI interface is enabled the NAND Flash and ATA interface is disabled on board.

2.2.2 VLYNQ Interface

The TMS320DM6467 brings its internal VLYNQ interface out to a 50 pin Samtec FTSH style connector JP1. The VLYNQ interface is implemented as a down stream peripheral and supports four transmit and receive channels.

2.2.3 UART Interface

The internal UART0 on the TMS320DM6467 device is driven to connector P1. The UART's interface is routed through CBT's to a Texas Instruments MAX3243 RS-232 line driver prior to being brought out to a male DB-9 connector, P8. The on board UART signals can be disabled by pulling the UART0_EN signal high via the daughter card connectors.

2.2.4 ATA Interface

The TMS320DM6467 EVM integrates a standard ATA interface on chip. This interface is multiplexed with the PCI and I/O daughter card interfaces. When PCI or daughter card interfaces are enabled the ATA interface is not available for development. The EVM can directly interface to a standard lap top hard disk drive via connector JP2. Power to the drive is controlled via I²C register implemented in the CPLD.

2.3 DDR2 Memory Interface

The TMS320DM6467 device incorporates a dedicated 32 bit wide DDR2 memory bus. The EVM uses two 1 gigabit 16 bit wide memories on this bus, for a total of 256 megabytes of memory for program, data, and video storage. The internal DDR controller uses a PLL to control the DDR memory timing. The interface supports rates up to 300 Mhz., and is clocked on differential edges for optimal performance. Memory refresh for DDR2 is handled automatically by the TMS320DM6467 internal DDR controller.

2.4 NAND Flash Interface

The TMS320DM6467 has 128 megabytes of NAND Flash mapped into the CS2 space. The NAND Flash memory is used primarily for boot loading. The CS2 space is configured as 8 bits wide on the TMS320DM6467 EVM for NAND flash usage.

The NAND and ATA interface are multiplexed with the PCI or daughter card interface. The NAND and ATA interface can be active when the PCI or daughter card interfaces are disabled.

2.5 Video Interfaces


The TMS320DM6467 EVM has a 16 bit divideable video input port and 16 bit dividable output port to support a variety of user applications. Both ports can be used as two eight bit ports when the appropriate interface only requires 8 bits. High definition interfaces require all 16 bits. The EVM incorporates dual TVP5147 decoders or a TVP7002 tied to the input port. An ADV7343 is connected to the output ports providing standard video or component video interfaces.

2.5.1 Video Input Port Interfaces

The TMS320DM6467 EVM supports video capture via the devices dual 8 bit or single 16 bit internal video ports. The EVM incorporates dual Texas Instruments TVP5147s to decode composite video or S-video inputs into the TMS320DM6467 device. P7 is used for the S-video inputs and J13 for the composite inputs on the EVM.

Corresponding High Definition component video can be driven into the TMS320DM6467 video input port via a TVP7002 when the video port on the EVM is configured for 16 bit mode. The component inputs are driven into RCA connectors J1, J2, J3.

User inputs can be driven via daughter card connector DC_P2 when the on board multiplexers are configured for daughter card use. The figure below illustrates the input port configurations. The on board CBT multiplexer input modes are controlled via the CPLD control register 1 as discussed in section 2.12.

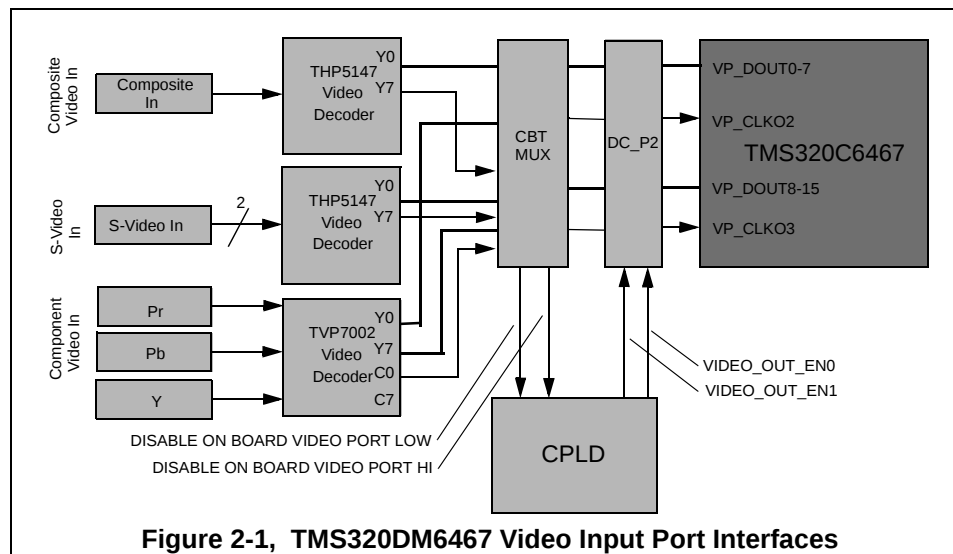

2.5.2 Video Output Port Interfaces

The TMS320DM6467 EVM has a 16 bit wide video output port which directly interface to an ADV7343 encoder. The video output ports are actually two 8 bit ports which are combined into a single 16 bit port for high definition video applications.

The on board encoder can generate composite video, S-video, or component video. The TMS320DM6467's output port is directly interfaced to the video encoder via CBT multiplexers and switches. The on board encoder video inputs can be directly connected via the daughter card interface in two 8 bit sections when the daughter card asserts VIDEO_OUT_EN0 and/or VIDEO_OUT_EN1 high.

For the high definition modes Y0-Y7 and C0-C7 inputs are used on the encoder. To change the on board CBT multiplexer to this mode the CPLD control register 1, bit 6 needs to be programmed to the appropriate mode. The diagram below illustrates the video port output configuration on the EVM.

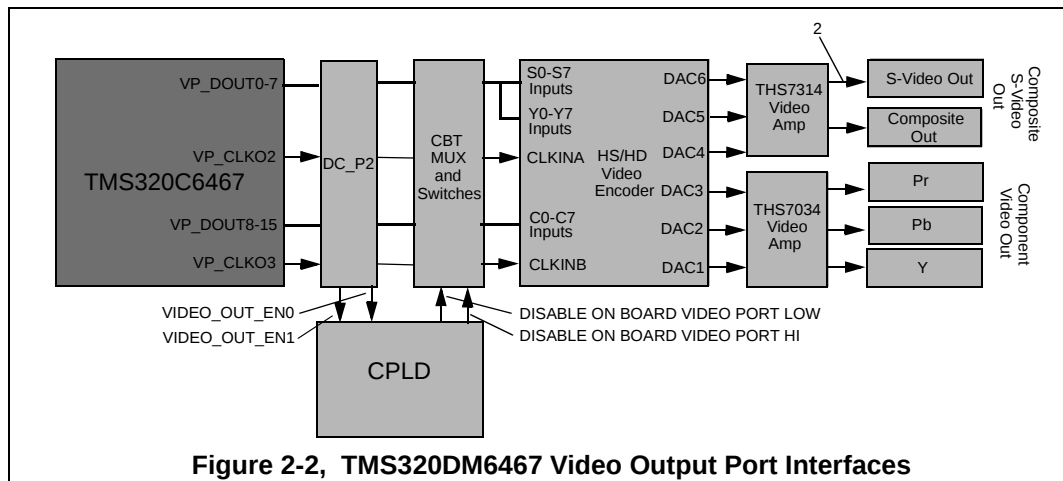


Figure 2-2, TMS320DM6467 Video Output Port Interfaces


2.6 AIC32 Interface

The EVM uses a Texas Instruments TLV320AIC32 stereo codec for input and output of audio signals. The codec samples analog signals on the microphone or line inputs and converts them into digital data so it can be processed by the DSP. When the DSP is finished with the data it uses the codec to convert the samples back into analog signals on the line output so the user can hear the output.

The codec communicates using two serial channels, one to control the codec's internal configuration registers and one to send and receive digital audio samples. The I²C bus is used as the unidirectional control channel. The control channel is generally only used when configuring the codec, it is typically idle when audio data is being transmitted,

The bi-directional data channel interfaces to the on chip McASP0. All audio data flows through the data channel. Many data formats are supported based on the three variables of sample width, clock signal source and serial data format. The EVM examples generally use a 16-bit sample width with the codec in master mode so it generates the frame sync and bit clocks at the correct sample rate for the McASP.

The codec has a programmable clock from a CDCE949 PLL device which is configurable via I²C. The default system clock is generated by the CDCE949. The internal sample rate generate subdivides the default clock to generate common frequencies. The sample rate generator in the AIC32 is set by I²C command codec registers. The figure below shows the codec interface on the TMS320DM6467 EVM.

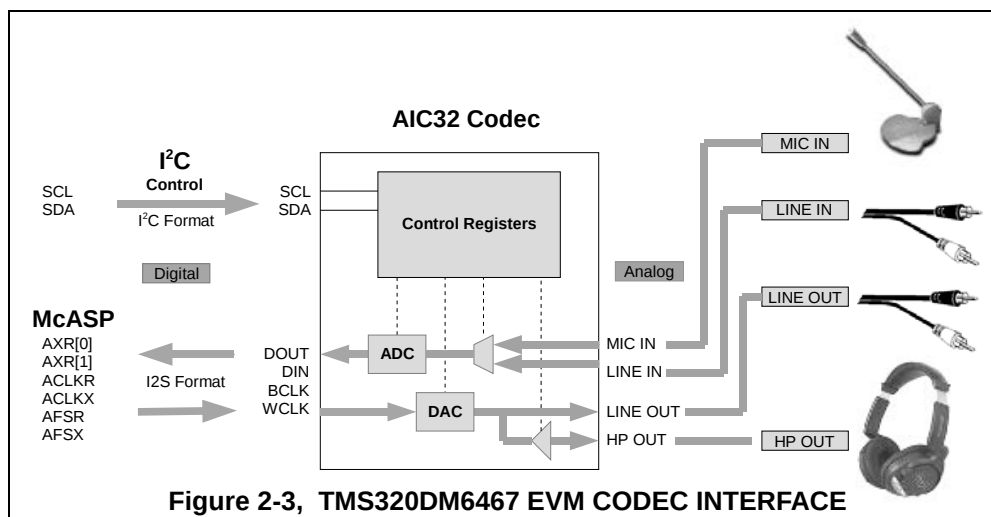


2.6.1 Audio PLL/VCXO Circuit/CDCE949 Clock Generator

The TMS320DM6467 EVM implements a multiple PLL clock generator via the CDCE949 for creating the audio and optional video clocks for the board.

In streaming video applications the audio and video sequences can lose synchronization. The TMS320DM6467 uses a VCXO interpolation circuit to incrementally speed up or slow down the clocks to allow for this synchronization to remain locked.

The PWM0 and timer input TIN0 or CRG0 and CRG0_VCXI are used to control this feature on the EVM. The PWM0 or CRG0 pin drives VCTR on the CDCE949 which is fed back into the timer input pin or the CRG0_VCXI pin on the DM6467.

This device creates the clocks for the AIC32 Codec, daughter card, and optional video clocks. The CDCE949 is programmable via an I²C and support virtually any clock rate by use of its fractional PLL architecture.

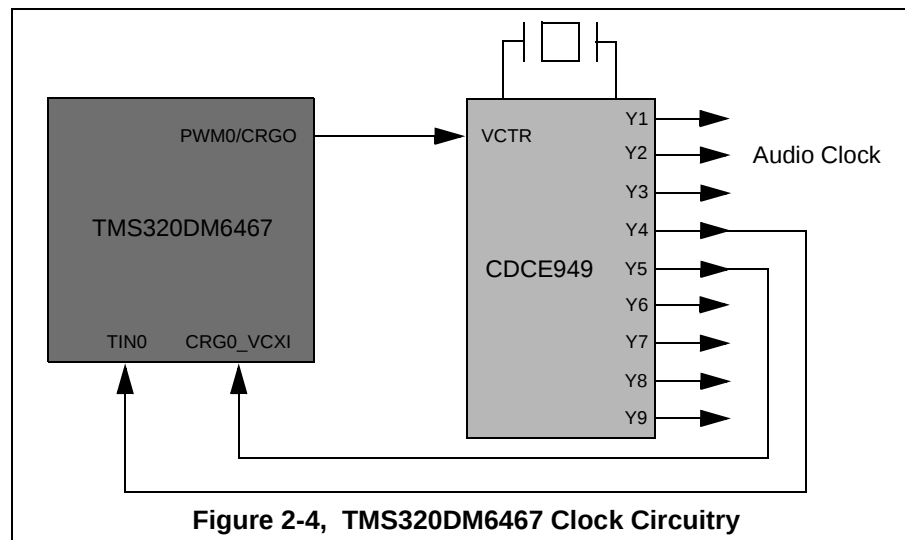


2.7 Ethernet Interface

The TMS320DM6467 integrates an GMII/MII ethernet MAC on chip. This interface is routed to the on board PHY via CBT switches. The EVM uses an Agere ET1011C PHY. The interface is isolated and brought out to a RJ-45 connector with integrated magnetics, J4. The ethernet address is stored in the I²C serial ROM during manufacturing. The on board PHY can be disabled by pulling the MAC_EN pin high on the daughter card connector DC_P1.

The RJ-45 has 2 LEDs integrated into its connector. The green LED indicates the status of the ethernet's link status. When blinking, the yellow LED indicates Re/Tx activity.


2.8 USB Interface

The EVM supports a hostmode USB II connector. The USB power is enabled via the DRV_BUS signal on the EVM. The VBUS power is feed back to the on board CPLD and is available for sampling on the CPU's GPO4 signal. The feedback on GPO4 must be enabled in the CPLD Control Register 0, bit 6. The figure below illustrates this function.

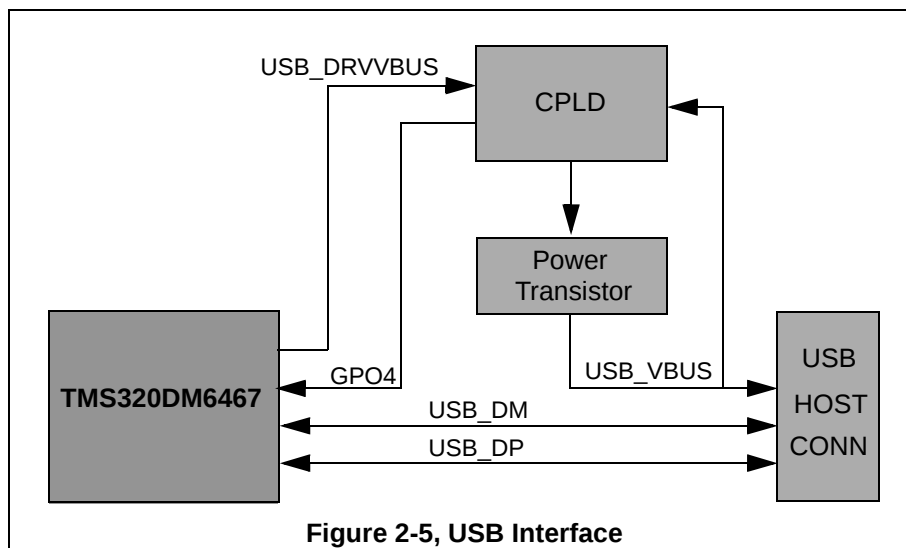

2.9 I²C Interface

The I²C bus on the TMS320DM6467 is ideal for interfacing to the control registers of many devices. On the TMS320DM6467 EVB the I²C bus is used to configure the video decoder, stereo Codec, I/O expanders. An I²C ROM is also interfaced via the serial bus. The format of the bus is shown in the figure below.

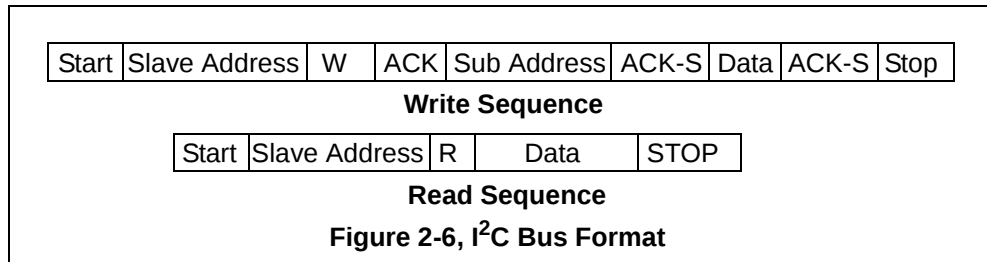

The addresses of the on board peripherals are shown in the table below.

Table 1: I²C Memory Map

Address	Device	R/W
0x18	AIC32	R/W
0x2A	ADV7343	R/W
0x2C	THS7303 - Output	W
0x2E	THS7353 - Input	R
0x38	I/O Expander 0 (LEDs, User Switches)	R/W
0x3A	CPLD Embedded I ² C Register 1	R/W
0x3B	CPLD Embedded I ² C Register 2	R/W
0x3C	CPLD Embedded I ² C Register 3	R/W
0x50	I ² C ROM	R/W
0x5C	TPV5147 II *	R/W
0x5D	TPV5147 I *	R/W
0x5D	TPV7002	R/W
0x6C	CDE949	R/W

* I²C CPLD control bit 4 at location 0x3B is used to enable 1 device at this address at a time.

2.9.1 I/O Expander

The TMS320DM6467 EVM uses an I²C expander to interface to user dip switch and user LEDs. The 8 bit I/O expander, a PCF8574A, at reset is initialized to 0xFF, all ones. The bit definition of the I/O expanders is shown in the table below.

Table 2: U10 I/O Expander

Pin Number	Function	Description
P0	SW4-0	Read only user switch
P1	SW4-1	Read only user switch
P2	SW4-2	Read only user switch
P3	SW4-3	Read only user switch
P4	LED 1	User LED DS1
P5	LED 2	User LED DS2
P6	LED 3	User LED DS3
P7	LED 4	User LED DS4

2.9.2 I²C EEPROM

The TMS320DM6467 EVM incorporates an I²C eeprom that can be used for booting or general purpose storage.

This eeprom is also used to store the ethernet MAC address and the board's revision. The MAC address is also labeled on the board. Care should be taken not to erase these items when user information is stored in the eeprom. Spectrum Digital uses addresses 0x7F00 to 0x7FFF for manufacturing information. This information is shown in the table below.

Table 3: TMS320DM6467 MAC Addresses

Address	Contents
0x7F00	EMAC Address 0 (most significant)
0x7F01	EMAC Address 1
0x7F02	EMAC Address 2
0x7F03	EMAC Address 3
0x7F04	EMAC Address 4
0x7F05	EMAC Address 5
0x7F06	Reserved
0x7F07	Board Revision

2.9.3 SPI EEPROM

The EVM incorporates a 32 Kilobyte SPI ROM. The ROM interfaces via CBTs to the DM6467 SPI interface module. The on board interface can be disabled via the SPI_ENABLE daughter card pin when the pin is pulled high.

2.10 S/PDIF Analog, and Optical Interfaces

The McASP1's AxR[0] pin on the TMS320DM6467 can be configured to operate as a S/PDIF transmitter. The TMS320DM6467 EVM supports both analog and optical interfaces. The analog S/PDIF output pin is routed to a driver and filter circuit before being output on J5. Another driver is used to interface the optical transmitter P3.

2.10.1 Infrared Sensors

The EVM incorporates a TSOP34840 40Khz. infrared receiver. The receiver is an input to the CPLD where it is available in non-modulated bit form on pin GPO1 or in modulated form to UART2 Rx pin in CIR format.

Two control bits in CPLD enable or disable this function. The output pins from the CPLD can also be disabled via the daughter card connector.

2.11 Daughter Card Interfaces

The EVM provides expansion connectors that can be used to accept plug-in daughter cards. The daughter card allows users to build on their EVM platform to extend its capabilities and provide customer and application specific I/O. The expansion connectors are for all major interfaces including memory, peripherals, and video expansion.

The pin outs for this interface are documented in Chapter 3.

The connectors provide access to the DSP's EMIF signals, I/O, host port and video ports to interface with memories, memory mapped devices, peripherals, video encoders, video decoders, audio codecs, and streaming interfaces.

There are three daughter card interfaces, DC_P1, DC_P2, DC_P3. These connectors are described in the table below. Several signals are used to disable the on board peripherals so that they can be used by the expansion connector as documented in Chapter 3.

Table 4: Daughter Card Interfaces

Interface Name	Function
DC_P1	Ethernet Interface Connector
DC_P2	Video Expansion Connector
DC_P3	I/O Expansion Connector

Other than the buffering, most daughter card signals are not modified on the board.

2.12 CPLD

The on board CPLD incorporates glue logic and I²C control registers to minimize logic on the EVM. The CPLD incorporates 3 control registers at addresses 0x3A, 0x3B, and 0x3C. The table below specifies the functions of the I²C control registers.

Table 5: CPLD I²C Control Registers

Address	Register Name
0x3A	I/O Control
0x3B	Video Control
0x3C	Version

2.12.1 CPLD Register 0, I/O Control, 0x3A

The table below shows the bit definitions of CPLD register 0 at address 0x3A on the I²C bus. The bits in this register are used for I/O control.

Table 6: CPLD Register 0, I/O Control, 0x3A

Bit #	Name	Function If 0	Function If 1
0	ATA_RSTn	* ATA Normal	ATA Reset
1	ATA_PWD	* ATA +5V	ATA 0V
2	VSCALEON	* VSCALE[0:1]=High	VSCALE[0:1]=VDDADJ[0:1]
3	VLYNQ_RSTn	* VLYNQ Normal	VLYNQ Reset
4	IR_GPIO	Disable	Put unmodulated IR Output to GPO1
5	IR_UART	Disable	Put modulated IR Output to UART2 RX
6	I ² C_INT	* INT Enable	INT Disable
7	USB_FB	* USB Feedback Enable	USB Feedback Disable

2.12.2 CPLD Register 1, Video Control, 0x3B

The table below shows the bit definitions of CPLD register 1 at address 0x3B on the I²C bus. The bits in this register are used for video control.

Table 7: CPLD Register 1, Video Control 0x3B

Bit #	Name	Function If 0	Function If 1
0	TVP5147_RST	* TVP5147 Normal	TVP5147 Reset
1	TVP5147_PWD	* TVP5147 Normal Mode	TVP5147 Power Down
2	TVP7002_RST	* TVP7002 Normal	TVP7002 Reset
3	TVP7002_PWB	* TVP7002 Normal Mode	TVP7002 Power Down
4	TVP_SELECT	* Select TVP5147	Select TVP7002
5	VID_IN_MODE	* Standard Def In (CV/SV)	High Def In (HD_Y/HD_C)
6	VID_OUT_MODE	* Standard Def Out (ADV_S)	High Def Out (ADV_Y/ADV_C)
7			

2.12.3 CPLD Register 2, CPLD Revision, 0x3C

The table below shows the bit definitions of CPLD register 2 at address 0x3C on the I²C bus. The bits in this register represent the revision of the CPLD.

Table 8: CPLD Register 3, Version, 0x3C

Bit #	Name	R/W	Description
7:0	Version ID	R	Current CPLD Revision

2.13 TMS320DM6467 Core CPU Clock

The TMS320DM6467 EVM uses a 27 Megahertz crystal to generate the input clock and a 24 Mhz crystal to generate some of the peripheral clock sources. The TMS320DM6467 has an internal PLLs which can multiply the input clock to generate higher speed internal clocks. The PLL multipliers are set via software on the TMS320DM6467 device.

2.14 TMS320DM6467 Core Voltage Select

The TMS320DM6467 EVM has the ability to adjust the core voltage between 1.2 volts and 1.05 volts. GPIO6 and GPIO7 from the DM7467 are used to enable these pins when they are enabled during the boot sequence via the boot switch.

Furthermore the CPLD has a voltage scaling control bit that must be enabled to allow the board to operate in voltage scaling mode.

Chapter 3

Physical Description


This chapter describes the physical layout of the TMS320DM6467 EVM and its interfaces.


Topic	Page
3.1 Board Layout	3-3
3.2 Connectors	3-5
3.2.1 J1, HD Component Video In, (Pb)	3-6
3.2.2 J2, HD Component Video In, (Y)	3-6
3.2.3 J3, HD Component Video In, (Pr)	3-6
3.2.4 J4, Ethernet Interface	3-7
3.2.5 J5, S/PDIF Analog Output	3-7
3.2.6 J6, 14 Pin External JTAG Connector	3-8
3.2.7 J7, Composite Video Out	3-8
3.2.8 J8, Emulation Header, 20 Pin ARM	3-9
3.2.9 J10, Component Video Output (Pr)	3-9
3.2.10 J11, Component Video Output (Y)	3-10
3.2.11 J12, Component Video Output (Pb)	3-10
3.2.12 J13, Composite Video In	3-11
3.2.13 J14, USB Connector	3-12
3.2.14 J15, +5V Input	3-12
3.2.15 P1, RS-232 UART Connector	3-13
3.2.16 P2, Video Out	3-14
3.2.17 P3, S/PDIF Out (Optical)	3-14
3.2.18 P4, Headphone Connector	3-14
3.2.19 P5, Stereo Line Output Connector	3-15
3.2.20 P6, Stereo Line Input Connector	3-16
3.2.21 P7, S-Video In	3-17
3.2.22 P8, Microphone Connector	3-17
3.2.23 P9, PCI Connector	3-18

Topic	Page
3.2.24 U2, IR Interface	3-20
3.2.25 JP1, Downstream VLYNQ Connector	3-21
3.2.26 JP2, ATA Interface Connector	3-22
3.2.27 DC_P1, Ethernet Interface Connector	3-23
3.2.28 DC_P2, Video Expansion Connector	3-24
3.2.29 DC_P3, I/O Expansion Connector	3-26
3.3 LEDs	3-28
3.4 Switches	3-28
3.4.1 SW1, Power On Reset Switch	3-28
3.4.2 SW2, 4 Position User Readable	3-29
3.4.3 SW3, Bootload Configuration Select	3-29
3.4.4 SW4, Power On Switch	3-31
3.4.5 S1, EMU0/1 Select Switch	3-32
3.5 Test Points	3-33

3.1 Board Layout

The TMS320DM6467 EVM is a 10.0 x 4.2 inch (254 x 107 mm.) fourteen (14) layer printed circuit board which is powered by an external +5 volt only power supply. Figure 3-1 and Figure 3-2 show the layout of the TMS320DM6467 EVM.

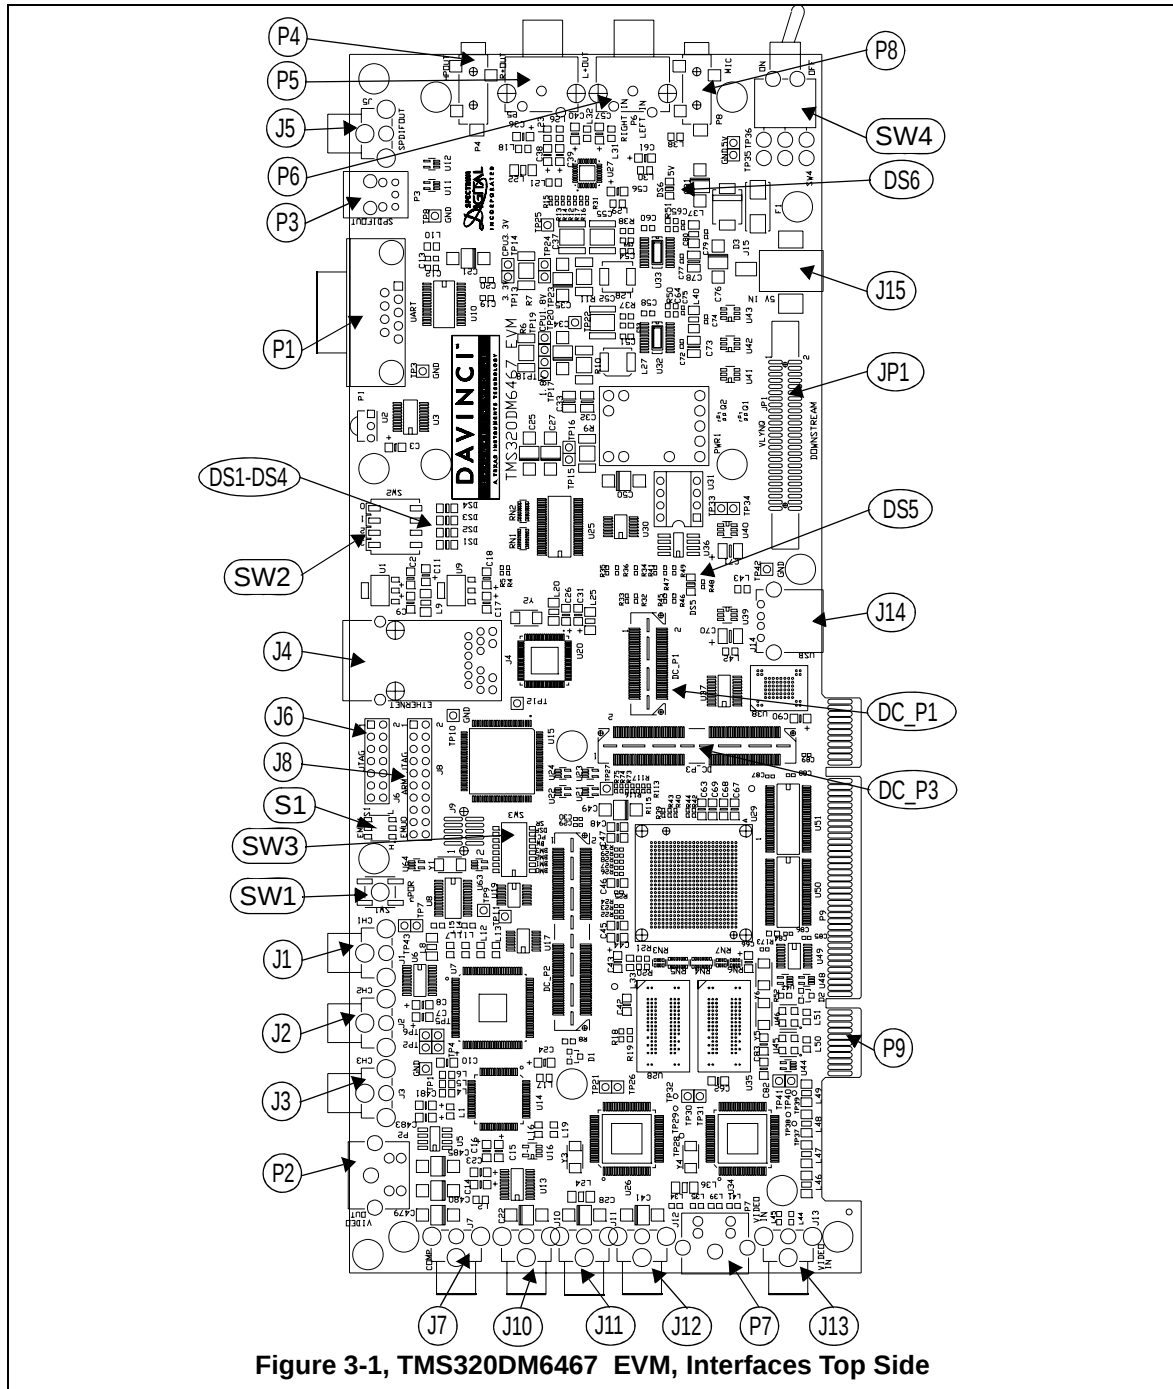

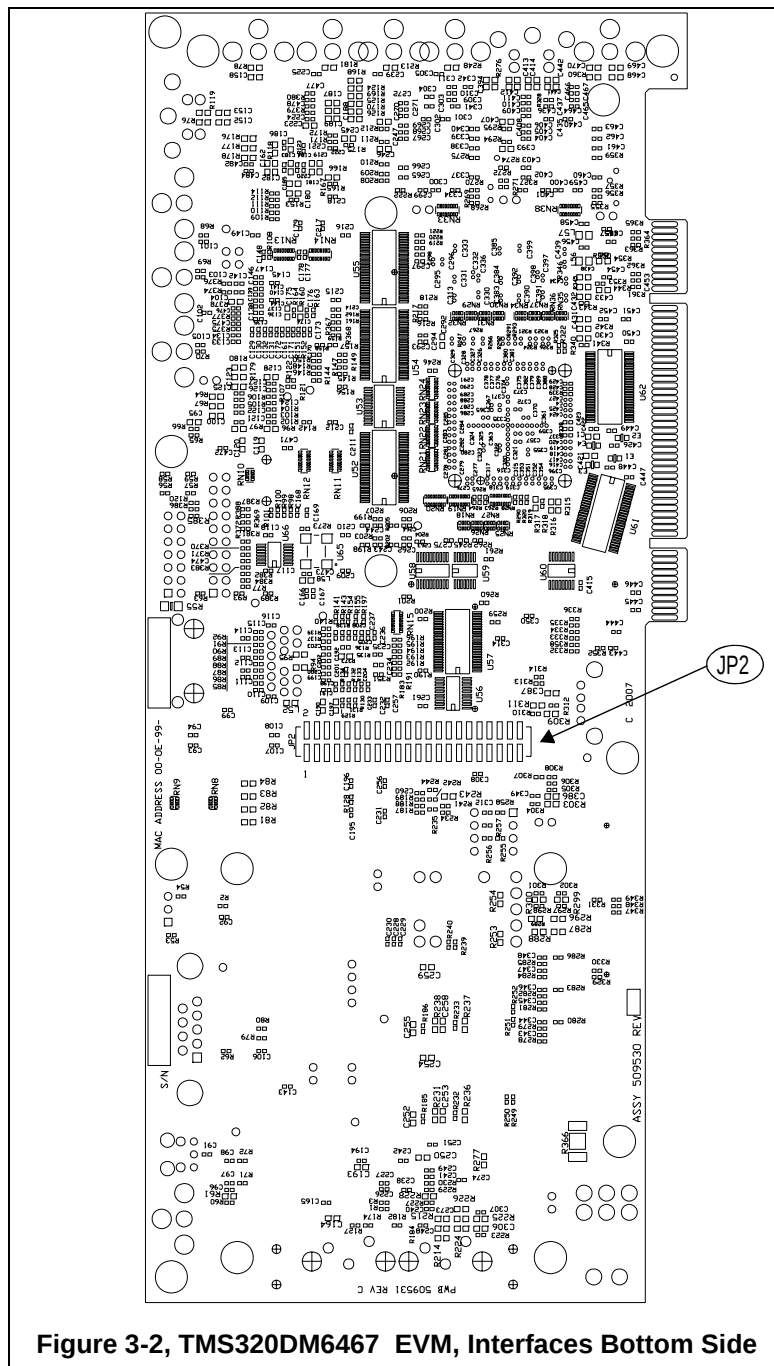

3.2 Connectors


The EVM has twenty nine (29) interfaces to various peripherals. These interfaces are described in the following sections.

Table 1: Connectors

Connector	Size	Function
J1	RCA	HD Video In, Component (Pb)
J2	RCA	HD Video In, Component (Y)
J3	RCA	HD Video In, Component (Pr)
J4	RJ-45	Ethernet
J5	RCA	S/PDIF Analog Out
J6	14	14 Pin TI Emulation Header
J7	RCA	Composite Video Out
J8	20	20 Pin ARM Emulation Header
J10	RCA	HD Video Out Component (Pr)
J11	RCA	HD Video Out Component (Y)
J12	RCA	HD Video Out Component (Pb)
J13	RCA	Composite Video In
J14	4 Pin	USB Host
J15	2.5 mm	+5V In
P1	9 Pin D-sub	RS-232 UART
P2	4 Pin DIN	Composite S-Video Out
P3	RJ-45	S/PDIF Optical Output
P4	3.5 mm	Headphone Out
P5	Dual RCA	Stereo Line In
P6	Dual RCA	Stereo Line Out
P7	4 Pin DIN	S-Video In
P8	3.5 mm	Microphone In
P9	PCI	PCI
U2		IR Interface
JP1	25 x 2	Downstream VLYNQ
JP2	22 x 2	Hard Disk Drive Interface
DC_P1	30 x 2	Ethernet Interface Connector
DC_P2	60 x 2	Video Expansion Connector
DC_P3	60 x 2	I/O Expansion Connector


3.2.1 J1, HD Component Video In, (Pb)

J1 is an RCA input jack used to bring a channel of HD component (Pb) video to the TMS320DM6467 EVM. This signal is input to the TVP7002 codec. The pinout of this connector is shown below.

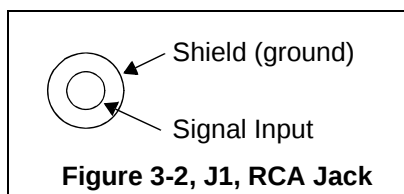


3.2.2 J2, HD Component Video In, (Y)

J2 is an RCA input jack used to bring a channel of HD component (Y) video to the TMS320DM6467 EVM. This signal is input to the TVP7002 codec. The pinout of this connector is shown below.

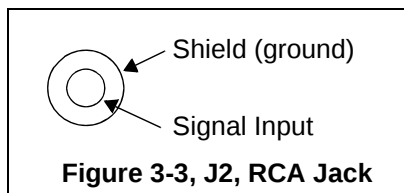

3.2.3 J3, HD Component Video In, (Pr)

J3 is an RCA input jack used to bring a channel of HD component (Pr) video to the TMS320DM6467 EVM. This signal is input to the TVP7002 codec. The pinout of this connector is shown below.

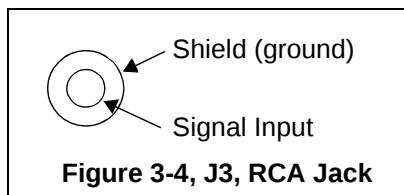

3.2.4 J4, Ethernet Interface

The J4 connector is used to provide an 10/100/1000 Mbps Ethernet interface. This is a standard RJ-45 connector. The cable end pinout for the J4 connector is shown in the table below.

Table 2: J4, Ethernet Interface

Pin #	Signal	Pin #	Signal
1	D0+	2	D0-
3	D1-	4	D2+
5	D2-	6	D1-
7	D3+	8	D3-

Two LEDs are embedded into the connector to report link status (green LED) and transmit/receive status of the PHY (yellow LED).

3.2.5 J5, S/PDIF Analog Output

J5 is an RCA jack used as an analog output from the McASP1 AxR[0] signal on the DSP. This connector brings out the SPDIF signal. Do **NOT** plug into this connector with the power on. The figure below shows this connector as viewed from the card edge.

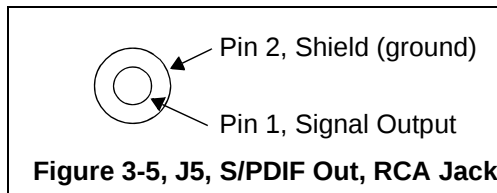


Table 3: J5, S/PDIF, RCA Jack

Pin #	Signal Name
1	S/PDIF Analog output
2	GND

3.2.6 J6, 14 Pin External JTAG Connector


The TMS320DM6467 EVM is supplied with a 14 pin header interface, J6. This is the standard interface used by JTAG emulators to interface to Texas Instruments DSPs. The pinout for the connector is shown in the figure.

TMS	1	2	TRST-	Header Dimensions
TDI	3	4	GND	
PD (+3.3V)	5	6	no pin (key)	
TDO	7	8	GND	
TCK-RET	9	10	GND	Pin-to-Pin spacing, 0.100 in. (X,Y)
TCK	11	12	GND	Pin width, 0.025-in. square post
EMU0	13	14	EMU1	Pin length, 0.235-in. nominal

Figure 3-6, JTAG INTERFACE

3.2.7 J7, Composite Video Out

J7 is an RCA output jack which brings out a composite video signal. The pinout of this connector is shown below.

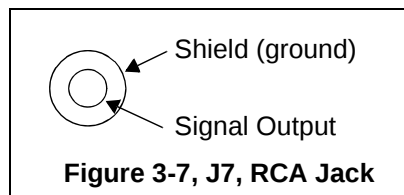

3.2.8 J8, Emulation Header, 20 Pin ARM


The J8 emulation 20 pin header is located on the top side of the board and is used to provide an interface to ARM JTAG emulators. The pinout for the J1 connector is shown in the table below.

Table 4: J8, Emulation Header

Pin #	Signal	Pin #	Signal
1	+3.3 Volts	2	+3.3 Volts
3	TRSTn	4	GND
5	TDI	6	GND
7	TMS	8	GND
9	TCK	10	GND
11	TCK_RET	12	GND
13	TDO	14	GND
15	ARM-RSTn	16	GND
17	NC	18	GND
19	NC	20	GND


3.2.9 J10, Component Video Output, (Pr)

J10 is an RCA jack used to provide High Definition component video (Pr) output to a video monitor. This connector is driven directly by the ADV7343 via an THS7303 driver. The pinout of this connector is shown below.

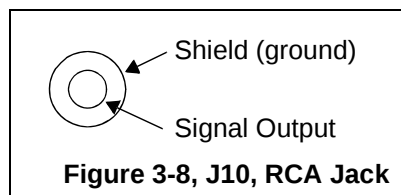


3.2.10 J11, Component Video Output, (Y)

J11 is an RCA jack used to provide High Definition component video (Y) output to a video monitor. This connector is driven directly by the ADV7343 via an THS7303 driver. The pinout of this connector is shown below.

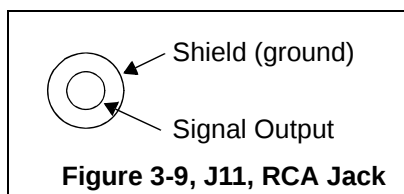

3.2.11 J12, Component Video Output, (Pb)

J12 is an RCA jack used to provide High Definition component video (Pb) output to a video monitor. This connector is driven directly by the ADV7343 via an THS7303 driver. The pinout of this connector is shown below.

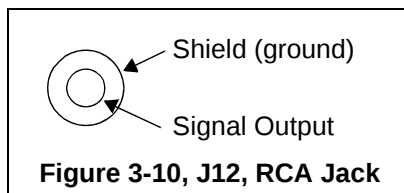

3.2.12 J13, Composite Video In

J13 is an RCA jack used as a video input to the TVP51467 video decoder. This connector brings in a video signal to the TVP5147. Do **NOT** plug into this connector with the power on. The figure below shows this connector as viewed from the card edge.

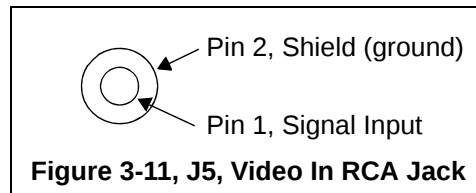


Table 5: J5, Video In, RCA Jack

Pin #	Signal Name
1	Pin 8, TVP5147
2	GND

3.2.13 J14, USB Connector


Connector J14 is a USB connector. Three different connectors can be mounted at location J14. The default connector is USB host. The three tables below show the signals on each possible connector.

Table 6: J14, USB Host Connector

Pins	Signal
1	USB_VBUS
2	USB_DM
3	USB_DP
4	GND

3.2.14 J15, +5V Input

Connector J15 is the input power connector. This connector bring in +5 volts to the EVM. This is a 2.5 mm. jack. The figure below shows this connector as viewed from the card edge.

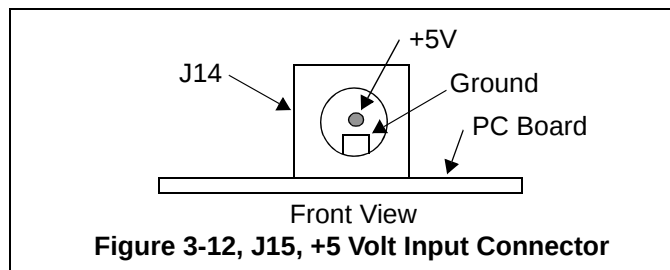

3.2.15 P1, RS-232 UART Connector

The TMS320DM6467 EVM has an RS-232 connector which brings out the UART0 transmit, receive, and control signals to be used as UART. This UART uses the MAX3243 RS-232 line driver and is routed to a male 9 pin D-connector, P1. The pin positions for the P1 connector as viewed from the edge of the printed circuit board are shown below.

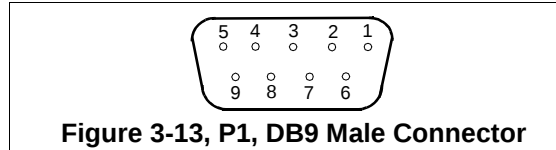


Figure 3-13, P1, DB9 Male Connector

The pin numbers and their corresponding signals are shown in the table below. This corresponds to a DB-9 connector interface used on personal computers.

Table 7: P1, RS-232 UART Pinout

Pin #	Signal Name
1	No Connect
2	RXD
3	TXD
4	No Connect
5	GND
6	No Connect
7	RTS
8	CTS
9	No Connect

3.2.16 P2, Video Out

Connector P2 is a four pin mini din connector which interfaces to an S-video output display device. The ADV7343 drives this output via a THS7314 video driver. This connector brings out the DAC B and DAC C. Do **NOT** plug into this connector with the power on. The figure below shows this connector as viewed from the card edge.

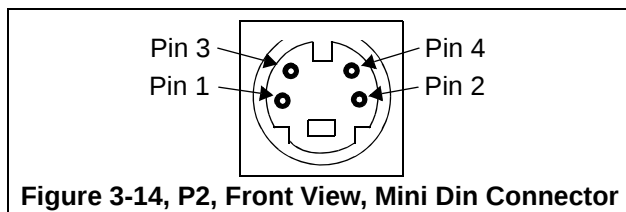


Table 8: P2, Video Out, Mini Din Connector


Pin #	Signal Name
1	Ground
2	Ground
3	Luma
4	Chroma

3.2.17 P3, S/PDIF Out (Optical)

P3 is an optical transmitter connector used as an output from the McASP1 AxR[0] signal on the TMS320DM6467 DSP. This connector brings out an optical S/PDIF signal. Do **NOT** plug into this connector with the power on.

3.2.18 P4, Headphone Connector

Connector P4 is a headphone/speaker jack. It can drive standard headphones or a high impedance speaker directly. The standard 3.5 mm jack is shown in the figure below.

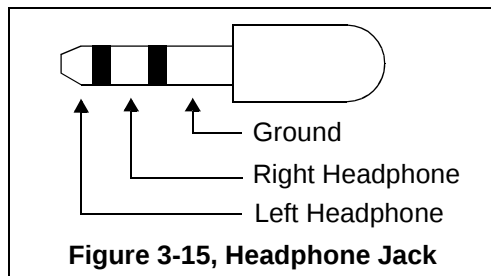

3.2.19 P5, Stereo Line Output Connector

The P5 connector provides a stereo output from the TVL320AIC32 on the EVM. The upper connector is the left channel, and the lower connector is the right channel. A view of the connector from the card edge is shown in the figure below. The signals present on this connector are defined in the following table.

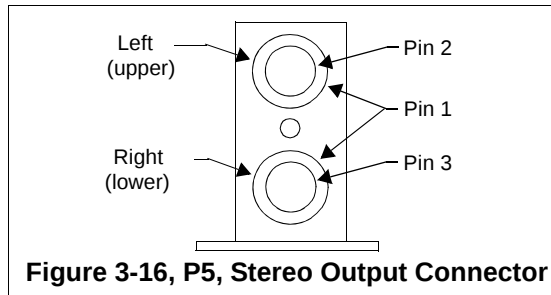


Table 9: P5, Stereo Output Connector

Pin #	Signal
1	Isolated Ground
2	LEFT_LO+
3	RIGHT_LO+

3.2.20 P6, Stereo Line Input Connector

The P6 connector provides a stereo line input to the TVL320AIC32 on the EVM. The upper connector is the left channel, and the lower connector is the right channel. A view of the connector from the card edge is shown in the figure below. The signals present on this connector are defined in the following table.

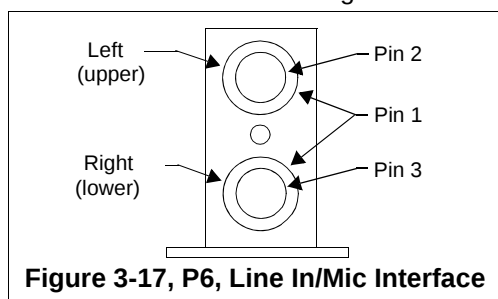


Table 10: P6, Line In/Mic Interface

Pin #	Signal	Input
1	Isolated Ground	Mic
2	LINE1L	Mic
3	LINE2L	Mic

3.2.21 P7, S-Video In

Connector P7 is a four pin mini din S-video connector which interfaces to the TVP5147 encoder. This connector brings in a video signal (LUMA) to pin 9 on the TVP5147. Do **NOT** plug into this connector with the power on. The figure below shows this connector as viewed from the card edge.


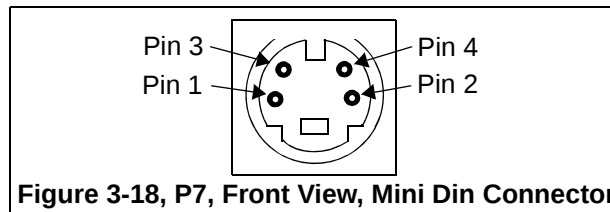


Table 11: P7, Video In, Mini Din Connector

Pin #	Signal Name
1	GND
2	GND
3	LUMA
4	Chroma

3.2.22 P8, Microphone Connector

The input is a 3.5 mm. stereo jack. Both inputs are connected to the microphone so it is monaural. The signals on the plug are shown in the figure below.

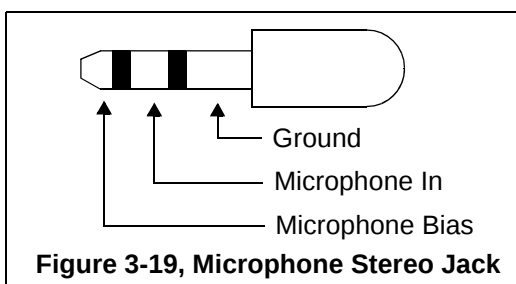

3.2.23 P9, PCI Connector

The P9 connector is a card edge PCI interface. This connector has an “A” and “B” side. Because of the card seating notches the pin numbers are not contiguous. The “B” side is the top component side. The I/O direction field is referenced from the PCI slot.

Table 12: P9, PCI Connector, “A” Side

Pin	Signal	I/O	Description	Pin	Signal	I/O	Description
1	TRST-		Not Used	2	+12 Volts		Not Used
3	TMS		Not Used	4	TDI	I/O	Tied to TDO
5	+5 Volts		+5 Volts Power	6	INTA-	O	Interrupt Out
7	INTC-	O	Interrupt Out	8	+5 Volts		+5 Volts Power
9	Rsvd.0		Not Used	10	+V I/O		Not Used
11	Rsvd.1		Not Used	12	Key.1		Key
13	Key.2		Key	14	+3.3 Vaux		Not Used
15	RST-	I	PCI_Resetn	16	+V I/O	O	Not Used
17	GNT-	O	Grant-	18	GND		Ground
19	PME-			20	AD30	I/O/Z	Address/Data 30
21	+3.3 Volts		Not Used	22	AD28	I/O/Z	Address/Data 28
23	AD26	I/O/Z	Address/Data 26	24	GND		
25	AD24	I/O/Z	Address/Data 24	26	IDSEL	I	Initialization Device Select
27	+3.3 Volts		Not Used	28	AD22	I/O/Z	Address/Data 22
29	AD20	I/O/Z	Address/Data 20	30	GND		Ground
31	AD18	I/O/Z	Address/Data 18	32	AD16	I/O/Z	Address/Data 16
33	+3.3 Volts		Not Used	34	FRAME-	I	Frame
35	GND		Ground	36	TRDY-	I/O/Z	Target Ready
37	GND		Ground	38	STOP-	I/O/Z	Stop Direction
39	+3.3 Volts		Not Used	40	SDONE	O	Done
41	SBO-			42	GND		Ground
43	PAR	I/O/Z	Parity	44	AD15	I/O/Z	Address/Data 15
45	+3.3 Volts		Not Used	46	AD13	I/O/Z	Address/Data 13
47	AD11	I/O/Z	Address/Data 11	48	GND		Ground
49	AD9	I/O/Z	Address/Data 9	50	Key.3		Key
51	Key.4		Key	52	C/BE0		Command/Byte Enable0
53	+3.3 Volts		Not Used	54	AD6	I/O/Z	Address/Data 6
55	AD4	I/O/Z	Address/Data 4	56	GND		Ground
57	AD2	I/O/Z	Address/Data 2	58	AD0	I/O/Z	Address/Data 0
59	+V I/O		Not Used	60	REQ64-		Not Used
61	+5 Volts		+5 Volts Power	62	+5 Volts		+5 Volts Power

The signals on the “B” side of the connector are shown in the table below.

Table 13: P9, PCI Connector, “B” Side

Pin	Signal	I/O	Description	Pin	Signal	I/O	Description
1	-12 Volts		Not Used	2	TCK	I	Not Used
3	GND		Ground	4	TDO	I	Tied to TDO
5	+5 Volts		+5 Volt Power	6	+5 Volts	I	+5 Volt Power
7	INTB-		Interrupt OUT	8	INTD-		Interrupt Out
9	PRSNT1-	O	Power Requirement	10	Rsvd.2		
11	PRSNT2-	O	Power Requirement	12	Key.5		Key
13	Key.6		Key	14	Rsvd.3		
15	GND		Ground	16	CLK		System Clock
17	GND		Ground	18	REQ-		
19	+V I/O		Not Used	20	AD31	I/O/Z	Address/Data 31
21	AD29	I/O/Z	Address/Data 29	22	GND		Ground
23	AD27	I/O/Z	Address/Data 27	24	AD25	I/O/Z	Address/Data 25
25	+3.3 Volts		Not Used	26	C/BE3	I/O/Z	Command/Byte Enable 3
27	AD23	I/O/Z	Address/Data 23	28	GND		Ground
29	AD21	I/O/Z	Address/Data 21	30	AD19	I/O/Z	Address/Data 19
31	+3.3 Volts		Not Used	32	AD17	I/O/Z	Address/Data 17
33	C/BE2-	I/O/Z	Command/Byte Enable 2	34	GND		Ground
35	IRDY-	I	Initiator Ready	36	+3.3 Volts		Not Used
37	DEVSEL-	I/O/Z	Device Select	38	GND		Ground
39	LOCK-	I	Resource Locked	40	PERR-	I/O/Z	Parity Error
41	+3.3 Volts		Not Used	42	SERR-	O	System Error
43	+3.3 Volts		Not Used	44	C/BE1-	I/O/Z	Command/Byte Enable 1
45	AD14	I/O/Z	Address/Data 14	46	GND		Ground
47	AD12	I/O/Z	Address/Data 12	48	AD10	I/O/Z	Address/Data 10
49	M66EN	O	66 Mhz Enable	50	Key.7		Key
51	Key.8		Key	52	AD8	I/O/Z	Address/Data 8
53	AD7	I/O/Z	Address/Data 7	54	+3.3 Volts		Not Used
55	AD5	I/O/Z	Address/Data 5	56	AD3	I/O/Z	Address/Data 3
57	GND		Ground	58	AD1	I/O/Z	Address/Data 1
59	+V I/O		Not Used	60	ACK64-		Not Used
61	+5 Volts		+5 Volt Power	62	+5 Volts		+5 Volt Power

3.2.24 U2, IR Interface

Interface U2 provides an Infrared interface to the TMS320DM6467 EVM. This is a receiver only for consumer remote controls. The view of U2 is shown from a board edge view in the figure below.

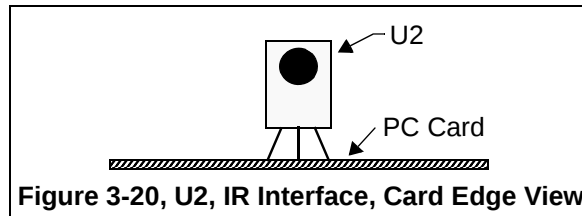


Figure 3-20, U2, IR Interface, Card Edge View

3.2.25 JP1, Downstream VLYNQ Connector

The JP1 is a 50 pin SAMTEC FTSH-125-01-L-DV-EJ-K connector which allows the user to connect the VLYNQ interface to up stream VLYNQ interfaces. The pinout for the JP1 connector is shown in the table below.

Table 14: JP1, VLYNQ Header

Pin #	Signal	Pin #	Signal
1	VLYNQ_SCRUN	2	GROUND
3	VLYNQ_RESETn	4	GROUND
5	VCC_5V	6	GROUND
7	VCC_5V	8	GROUND
9	NC	10	GROUND
11	NC	12	GROUND
13	NC	14	GROUND
15	NC	16	GROUND
17	VLYNQ_RXD3	18	GROUND
19	VLYNQ_RXD2	20	GROUND
21	VLYNQ_RXD1	22	UVLYNQ WS2
23	VLYNQ_RXD0	24	UVLYNQ WS1
25	VLYNQ_CLK	26	UVLYNQ WS0
27	VLYNQ_TXD0	28	UVLYNQ WS1
29	VLYNQ_TXD1	30	UVLYNQ WS2
31	VLYNQ_TXD2	32	GROUND
33	VLYNQ_TXD3	34	GROUND
35	NC	36	GROUND
37	NC	38	GROUND
39	NC	40	GROUND
41	NC	42	GROUND
43	VCC_5V	44	GROUND
45	VCC_5V	46	GROUND
47	NC	48	GROUND
49	NC	50	GROUND

3.2.26 JP2, ATA Interface Connector

The JP1 connector is located on the bottom side of the board and is used to provide an ATA interface to a hard disk drive. This is a 2 x 22 2mm. pin male connector. The pinout for the JP1 connector is shown in the table below.

Table 15: JP2, ATA Interface

Pin #	Signal	Pin #	Signal
1	ATA RESETn	2	GND
3	ATA.DD7	4	ATA.DD8
5	ATA.DD6	6	ATA.DD9
7	ATA.DD5	8	ATA.DD10
9	ATA.DD4	10	ATA.DD11
11	ATA.DD3	12	ATA.DD12
13	ATA.DD2	14	ATA.DD13
15	ATA.DD1	16	ATA.DD14
17	ATA.DD0	18	ATA.DD15
19	GND	20	NC
21	ATA.DMARQ	22	GND
23	ATA.DIOW	24	GND
25	ATA.DIOR	26	GND
27	ATA.IORDY	28	ATA_CSEL, TP34
29	ATA.DMACK	30	GND
31	ATA.INTRQ	32	GND
33	ATA.DA1	34	TP33
35	ATA.DA0	36	ATA.DA2
37	ATA.CS0	38	ATA.CS1
39	ATA.DASPN	40	GND
41	VCC_5V	42	VCC_5V
43	GND	44	NC

3.2.27 DC_P1, Ethernet Interface Connector

The DC_P1 is a high speed SAMTEC connector allows the user to interface to the Ethernet logic on the TMS320DM6467 EVM. The pinout for the DC_P1 connector is shown in the table below.

Table 16: DC_P1, Ethernet Interface Connector

Pin #	Signal	Pin #	Signal
1	MII_MTXD0	2	MII_MTXD1
3	MII_MTXD2	4	MII_MTXD3
5	MII_MTXD4	6	MII_MTXD5
7	MII_MTXD6	8	MII_MTXD7
9	GROUND	10	GROUND
11	MII_MRXD6	12	MII_MRXD7
13	MII_MRXD4	14	MII_MRXD5
15	MII_MRXD2	16	MII_MRXD3
17	MII_MRXD0	18	MII_MRXD1
19	GROUND	20	GROUND
21	NC	22	NC
23	MII_MRXDV	24	NC
25	GROUND	26	MII_MRXR
27	MII_MRCLK	28	MII_MCOL
29	GROUND	30	GROUND
31	MII_MCRS	32	NC
33	GROUND	34	GROUND
35	NC	36	MII_MTCLK
37	NC	38	GROUND
39	GROUND	40	MDIO_MDIO
41	MII_RFTCLK	42	MDIO_MDCLK
43	GROUND	44	GROUND
45	MII_MTXEN	46	MII_GMTCLK
47	NC	48	GROUND
49	MAC_ENABLE *	50	NC
51	NC	52	NC
53	GROUND	54	GROUND
55	VCC_3V3	56	VCC_3V3
57	GROUND	58	GROUND
59	VCC_5V	60	VCC_5V

* The MAC_ENABLE signal disables the on board PHY when pulled to +3.3 volts.

3.2.28 DC_P2, Video Expansion Connector

The DC_P2 is a 120 pin SAMTEC high speed connector allows the user to interface to the video logic on the TMS320DM6467 EVM. The pinout for the pins 1-60 of the DC_P2 connector are shown in the table below.

Table 17: DC_P2, Video Expansion Connector, Pins 1-60

Pin #	Signal	Pin #	Signal
1	NC	2	VPIF_CLKOUT2
3	GROUND	4	GROUND
5	NC	6	NC
7	GROUND	8	GROUND
9	VPIF_DOUT1	10	VPIF_DOUT0
11	VPIF_DOUT3	12	VPIF_DOUT2
13	VPIF_DOUT5	14	VPIF_DOUT4
15	VPIF_DOUT7	16	VPIF_DOUT6
17	GROUND	18	GROUND
19	VPIF_DOUT9	20	VPIF_DOUT8
21	VPIF_DOUT11	22	VPIF_DOUT10
23	VPIF_DOUT13	24	VPIF_DOUT12
25	VPIF_DOUT15	26	VPIF_DOUT14
27	GROUND	28	GROUND
29	VIDEO_OUT_EN1 **	30	VIDEO_OUT_EN0 *
31	GROUND	32	GROUND
33	VPIF_CLKIN3	34	VPIF_CLKIN2
35	GROUND	36	GROUND
37	VPIF_CLKOUT3	38	VPIF_CLKIN2_EN
39	GROUND	40	GROUND
41	PTSI_CLK	42	STSI_CLK
43	GROUND	44	GROUND
45	DC_VOXO_CLK_EN	46	DC_ALT_VOXO_EN
47	DC_VOXO_CLK	48	DC_ALT_VOXO
49	GROUND	50	GROUND
51	UART0_RIN	52	UART0_DCDn
53	UART0_DSRn	54	UART0_DTRn
55	UART0_CTSn	56	UART0_RTSn
57	UART0_TXD	58	UART0_RXD
59		60	UART0_EN

* VIDEO_OUT_EN0 disables on board video port low VPIF_DOUT0 - VPIF_DOUT7 and VPIF_CLKOUT2 when pulled high.

** VIDEO_OUT_EN1 disables on board video port low VPIF_DOUT8 - VPIF_DOUT15 and VPIF_CLKOUT3 when pulled high.

The pinout for the pins 61-120 of the DC_P2 connector are shown in the table below.

Table 18: DC_P2, Video Expansion Connector, Pins 61-120

Pin #	Signal	Pin #	Signal
61	GROUND	62	GROUND
63	UART1_CTSn	64	UART1_RTSn
65	UART1_TXD	66	UART1_RXD
67	GROUND	68	GROUND
69	UART2_CRG_EN_30	70	UART2_EN *****
71	UART2_CTSn	72	UART2_RTsn
73	UART2_TXD	74	UART2_RXD
75	GROUND	76	GROUND
77	I2C_SDA	78	I2C_SCL
79	PWM1	80	PWM0_CRG0
81	GROUND	82	PWM_EN
83	CLKOUT0	84	SYS_RESEtN
85	GROUND	86	NC
87	VIDEO_IN_EN1 ****	88	VIDEO_IN_EN0 ***
89	GROUND	90	GROUND
91	VPIF_CLKIN1	92	VPIF_CLKIN0
93	GROUND	94	GROUND
95	VPIF_DIN1	96	VPIF_DIN0
97	VPIF_DIN3	98	VPIF_DIN2
99	VPIF_DIN5	100	VPIF_DIN4
101	VPIF_DIN7	102	VPIF_DIN6
103	GROUND	104	GROUND
105	VPIF_DIN9	106	VPIF_DIN8
107	VPIF_DIN11	108	VPIF_DIN10
109	VPIF_DIN13	110	VPIF_DIN12
111	VPIF_DIN15	112	VPIF_DIN14
113	GROUND	114	GROUND
115	VCC_3V3	116	VCC_3V3
117	GROUND	118	GROUND
119	VCC_5V	120	VCC_5V

*** VIDEO_IN_EN0 disables on board video input port VPIF_DIN0 - VPIF_DIN7 when pulled high.

**** VIDEO_IN_EN1 disables on board video input port VPIF_DIN8 - VPIF_DIN15 when pulled high.

***** UART2_EN disables on board UART when pulled high.

3.2.29 DC_P3, I/O Expansion Connector

The DC_P3 connector allows the user to interface to the I/O logic on the TMS320DM6467 EVM. The pinout for the pins 1-60 of the DC_P3 connector are shown in the table below.

Table 19: DC_P3, I/O Expansion Connector, Pins 1-60

Pin #	Signal	Pin #	Signal
1	SYS_RESET	2	
3	I2C_DCL	4	
5	GROUND	6	GROUND
7	MCASP0_AHCLKR	8	MCASP0_ACLKR
9	MCASP0_AHCLKX	10	MCASP0_ACLKX
11	MCASP0_AMUTE	12	MCASP0_AFSR
13	MCASP0_AFSX	14	MCASP0_AMUTEIN
15	MCASP0_AXR[3]	16	MCASP0_AXR[2]
17	MCASP0_AXR[1]	18	MCASP0_AXR[0]
19	DC_AUDIO_CLK_OUT	20	AUDIO_CLK_EN
21	GROUND	22	GROUND
23	SPI_MOSI	24	SPI_MISO
25	SPI_SCS1	26	SPI_EN
27	SPI_SCS0	28	SPI_SCLK
29	GROUND	30	GROUND
31	SPI_ENABLE	32	TOUT4
33	TIMER_EN	34	TOUT3
35	TIN0	36	TOUT2
37	TIN1	38	TOUT1
39	TIN2	40	TOUT0
41	GROUND	42	GROUND
43	GPO7	44	GPO6
45	DC_GPIO5	46	GPO4
47	GPO3	48	GPO2
49	GPO1	50	GPO0
51	EMIF_MODE	52	GROUND
53	DC_GPIO10	54	DC_GPIO11_EMCS5n
55	DC_GPIO12_EMCSN4n	56	DC_EMRnW
57	DC_HD30_EMA14	58	DC_HD31_EMA15
59	DC_HD28_EMA12	60	DC_HD29_EMA13

The pinout for the pins 61-120 of the DC_P3 connector are shown in the table below.

Table 20: DC_P3, I/O Expansion Connector, Pins 61-120

Pin #	Signal	Pin #	Signal
61	DC_HD26_EMA10	62	DC_HD27_EMA11
63	DC_HD24_EMA8	64	DC_HD25_EMA9
65	DC_HD22_EMA6	66	DC_HD23_EMA7
67	DC_HD20_EMA4	68	DC_HD21_EMA5
69	DC_HD18_EMA2	70	DC_HD19_EMA3
71	DC_HD16_EMA0	72	DC_HD17_EMA1
73	GROUND	74	GROUND
75	DC_HDS2n_EMCS2n	76	DC_HRWn_EMCS3n
77	DC_HINTn_EMBA0	78	DC_HRDYn_EMA17
79	DC_HHWILn_EMA16	80	DC_HNCT1_EMBA1
81	DC_HDS1n_EM_OEn	82	DC_HCNTL0_EMWENn
83	DC_HASn_EMDQM0n	84	DC_HCSn_EMDQM1n
85	NC	86	NC
87	DC_GPIO19_EMWAIT3	88	DC_GPIO18_EMA23
89	DC_GPIO17_EMA20	90	DC_GPIO16_EMA21
91	ATA_DA2_GPIO13_EMA22	92	XDK_B_EM_WAIT0
93	ATA_IORDY_GPIO21_EMWAIT1	94	ATA_DIOW_GPIO20_EMWAIT2
95	DC_GPIO33_EMA18	96	DC_GPIO32_EMA19
97	GROUND	98	GROUND
99	DC_HD14_EMD14	100	DC_HD15_EMD15
101	DC_HD12_EMD12	102	DC_HD13_EMD13
103	DC_HD10_EMD10	104	DC_HD11_EMD11
105	DC_HD8_EMD8	106	DC_HD9_EMD9
107	DC_HD6_EMD6	108	DC_HD7_EMD7
109	DC_HD4_EMD4	110	DC_HD5_EMD5
111	DC_HD2_EMD2	112	DC_HD3_EMD3
113	DC_HD0_EMD0	114	DC_HD1_EMD1
115	VCC_3V3	116	VCC_3V3
117	GROUND	118	GROUND
119	VCC_5V	120	VCC_5V

3.3 LEDs

The TMS320DM6467 EVM has SIX (6) LEDs. Four of these LEDs (DS1-4) are under user control and addressed over the I²C bus. LED DS5 indicates the presence of +5 volts on the board. LED DS6 indicates the power has been turned on via SW4. The LED functions are summarized in the table below.

Table 21: LEDs

LED #	Use	Color
DS1	User Defined	Green
DS2	User Defined	Green
DS3	User Defined	Green
DS4	User Defined	Green
DS5	Disk Drive Activity	Green
DS6	+5V On	Green

3.4 Switches

The TMS320DM6467 EVM has five (5) switches. These switches are used to create certain actions on the board or to select certain functions on the board. The switch functions are summarized in the table below.

Table 22: Switches

SW #	Function
SW1	Power On Reset Switch
SW2	4 Position User Readable
SW3	Boot Mode/Muxing Configuration
SW4	+5 Volt Power Switch
S1	EMU0/1 Select Switch

3.4.1 SW1, Power On Reset Switch

Switch SW1 is a momentary switch that asserts power on reset to the TMS320DM6467 device, and the on board devices.

3.4.2 SW2, 4 Position User Readable

Switch SW2 is a 4 position bank of user readable switches via the I²C expander. The individual switches can be placed in any position and read by the user software from the expander. See the section on I²C expanders for more information.

3.4.3 SW3, Boot Mode/Muxing Configuration


Switch SW3 is an 8 position switch used to select the source of the bootloader and configuration. Four (4) of the eight (8) positions are used for the boot mode. The selections are shown in the table below.

Table 23: SW3, Bootload Mode Select

Boot Mode Pin	SW3[4:1]	Boot Description
0000	1111	No Boot (Emulation Mode)
0001	1110	Reserved
0010	1101	HPI Boot (16-bit width) (if PCIEN=0)
0010	1101	PCI Boot without auto-initialization (if PCIEN=1)
0011	1100	HPI Boot (32-bit width) (if PCIEN=0)
0011	1100	PCI Boot with auto-initialization (if PCIEN=1)
0100	1011	EMIFA Direct Boot (ROM/NOR) (PCIEN=0)
0101	1010	Reserved
0110	1001	I ² C Boot
0111	1000	NAND Flash Boot (PCIEN=0)
1000	0111	UART0 Boot
1001	0110	Emulation Boot
1010	0101	VLINQ Boot
1011	0100	EMAC Boot
1100	0011	Reserved
1101	0010	Reserved
1110	0001	SPI Boot
1111	0000	Reserved

x = don't care, * these boot modes must be accompanied with FASTBOOT = 1.

The figure below shows the as shipped boot configuration for SW3, booting from Flash ROM.

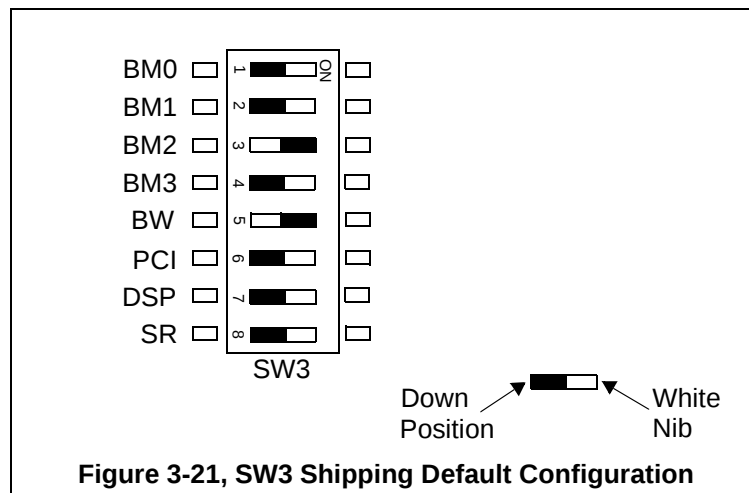

SW3, Position 5, sets the EMIF A data bus width at reset. If the switch is UP or "0" on the "ON" side EMIF A is 8 bit data bus CS2. When the switch is in the DOWN or "1" EMIF A is a 16 bit data bus for CS2. These two positions are shown in the table below.

Table 24: SW3, Position 5, BW

ON Side	Pin	Function
Up	"0"	EMIF A is 8 bit data bus for CS2
Down	"1"	EMIF A is 16 bit data bus for CS2

SW3, Position 6, is the PCI enable switch that configures the DM6467 pin muxing. When the switch has the "ON" side in the "UP" position as shown above pin muxing defaults to EMIF or HPI. If the switch has the "ON" side pushed down PCI pin multiplexing is enabled on the DM6467. These two positions are shown in the table below.

Table 25: SW3, Position 6, PCI

ON Side	Pin	Function
Up	"0"	Pin muxing defaults to EMIF or HPI
Down	"1"	PCI pin multiplexing enabled on DM6467

SW3, Position 7, is the DSP switch that allows the user to control the DSP booting. If the switch has the “ON” side pushed “DOWN” the DSP boots via EMIF A if ARM HPI or PCI boot mode is not enabled. When the switch has the “ON” side “UP” position the DSP is booted via the ARM. These two positions are shown in the table below.

Table 26: SW3, Position 7, DSP

ON Side	Pin	Function
Up	“0”	DSP is booted via the ARM processor
Down	“1”	DSP is booted via EMIF A if ARM HPI or PCI boot mode is not enabled

SW3, Position 8, is the SR switch that allows the user to enable the core voltage adjustment on two of the GPIO pins. If the switch has the “ON” pushed down GPIO pins 6 and 7 are core voltage enabled. When the switch has the “ON” side “UP” GPIO pins 6 and 7 assume their standard function. These two positions are shown in the table below.

Table 27: SW3, Position 8, SR

ON Side	Pin	Function
Up	“0”	GPIO6 and GPIO7 Standard Function
Down	“1”	GPIO6 and GPIO7 Core Voltage Enabled

3.4.4 SW4, Power On Switch

Switch SW4 is toggle switch. when moved to the on position power is supplied to the components on the board.

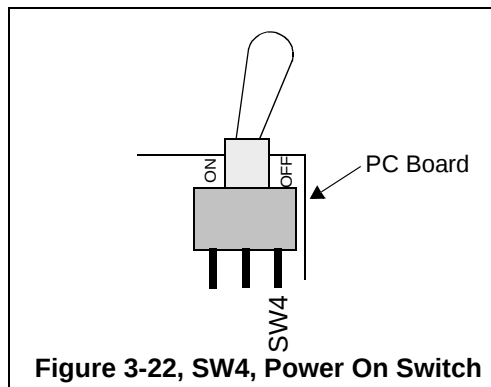


Figure 3-22, SW4, Power On Switch

3.4.5 S1, EMU0/1 Select Switch

S1 is a 2 position DIP switch providing 4 options in selecting the state of the EMU0 and EMU1 pins on the processor. A view of the switch is shown in the figure below. The selection options with this switch are in the table below.

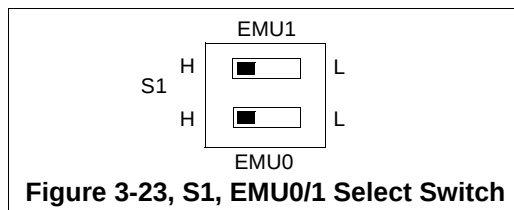


Table 28: S1, EMU0/1 Select

State at Reset EMU0 EMU1		Function
L	L	Emulation Debug ARM JTAG Enabled
L	H	Not Defined
H	L	Not Defined
H	H	Emulation Debug * Both ARM & DSP JTAG Enabled

* is the factory shipped configuration

Table 29: TMS320DM6467 EVM Test Points


Test Point #	Signal	Test Point #	Signal
TP1	GROUND	TP23	VCC_3V3
TP2	TVP7002 HSYNC Output	TP24	3.3 Volt Output
TP3	GROUND	TP25	3.# Volt Power Good
TP4	TVP7002 SYNC Green Output	TP26	TVP5147 (U26) Vertical Sync Output
TP5	TVP7002 VSYNC Output	TP27	ACLKX1
TP6	TVP7002 Frame ID Output	TP28	INTREQ, TVP5147, U26
TP7	CDCE949 VCXO Input	TP29	AVID/GPIO, TVP5147, U26
TP8	GROUND	TP30	TVP5147 (U34) Horizontal Sync Output
TP9	CDCE949 Y6 Clock Output	TP31	TVP5147 (U34) Vertical Sync Output
TP10	GROUND	TP32	GLCO/I2CA, TVP5147, U26
TP11	TVP7002 External Clock Pin	TP33	ATA_CSEL
TP12	ET1011C Enet PHY Interrupt Pin	TP34	Pin 34, JP2
TP13	VCC_3V3	TP35	GROUND
TP14	CPU_3.3V	TP36	VCC_5V
TP15	CPU_1.2V	TP37	INTREQ, TVP5147, U34
TP16	1.2Volt Output from PTH08T240 Module	TP38	AVID/GPIO, TVP5147, U34
TP17	VCC_1V8	TP39	GLCO/I2CA, TVP5147, U34
TP18	VCC_1V8	TP40	GROUND
TP19	1.8 Volt Output	TP41	RSV5
TP20	CPU_1.8V	TP42	GROUND
TP21	TVP5147 (U26) Horizontal Sync Output	TP43	CDCE949 Y9 Clock Output
TP22	1.8 Volt Power good		


Appendix A


Schematics


This appendix contains the schematics for the TMS320DM6467 EVM.


NOTES, UNLESS OTHERWISE SPECIFIED:										SCHEMATIC CONTENTS										REV										DESCRIPTION										DATE										APPROVED																			
1. RESISTANCE VALUES IN OHMS.										SHEET01 - TITLE										A										Initial schematic for layout										04/30/07										RRP																			
2. CAPACITANCE VALUES IN MICROFARADS.										SHEET02 - JTAG EMULATION CONNECTORS										B										Initial schematic updated after initial pcb build										05/25/07										RRP																			
3. LAST REFERENCE DESIGNATORS :										SHEET03 - DSP CLKs/RST/EMU										C										PRE-PRODUCTION RELEASE										07/05/07										RRP																			
4. ALL 0.1 uF AND 0.01uF CAPACITORS ARE DECOUPLING CAPS UNLESS SHOWN OTHERWISE. CAPS MUST BE PLACED CLOSE TO THE IC WITH THE INTEGRATED CIRCUITS THEY SHOULD BE PLACED NEAR.										SHEET04 - DSP SERIAL I/O																																																											
										SHEET05 - DSP USBII																																																											
										SHEET06 - DSP EMIF/PCI																																																											
										SHEET07 - DSP DDR INTERFACE																																																											
										SHEET08 - DSP ADDRESS DECODE																																																											
										SHEET09 - DSP ENET																																																											
										SHEET10 - DSP POWER PINS																																																											
										SHEET11 - DSP DECOUPLING CAPS																																																											
										SHEET12 - BOOT DIP SWITCHES																																																											
										SHEET13 - 12C EXP./SPI EEPROM, 12C ROMS																																																											
										SHEET14 - DDR2 MEMORIES																																																											
										SHEET15 - NAND-FLASH																																																											
										SHEET16 - CONTROL LOGIC																																																											
										SHEET17 - ENET DAUGHTER CARD CONN																																																											
										SHEET18 - ENET DAUGHTER CARD CONN																																																											
										SHEET19 - ENET POWER																																																											
										SHEET20 - ENET OUTPUT CONN																																																											
										SHEET21 - RS232/IR RECEIVER																																																											
										SHEET22 - USBII INTERFACE																																																											
										SHEET23 - ATA INTERFACE																																																											
										SHEET24 - PCI-MUX																																																											
										SHEET25 - PCI-MUX II																																																											
										SHEET26 - PCI-CONNECTOR																																																											
										SHEET27 - VLIQX CONNECTOR																																																											
										SHEET28 - VLIQX																																																											
										SHEET29 - SPDIF																																																											
										SHEET30 - VIDEO CLOCKS																																																											
										SHEET31 - VIDEO INPUT MIXING																																																											
										SHEET32 - TPV7002																																																											
										SHEET33 - TPV5147 COMPOSITE																																																											
										SHEET34 - TPV5147 II S-VIDEO																																																											
										SHEET35 - VIDEO OUTPUT MIXING																																																											
										SHEET36 - ADV343																																																											
										SHEET37 - COMPOSITE/S-VIDEO BUFFERING																																																											
										SHEET38 - COMMENT VIDEO BUFFERING																																																											
										SHEET39 - VIDEO DAUGHTER CARD CONN																																																											
										SHEET40 - I/O DAUGHTER CARD CONN																																																											
										SHEET41 - D/G CORE POWER																																																											
										SHEET42 - POWER 1V8, 3V3																																																											
										SHEET43 - POWER IN, RESET SUPERVISOR																																																											

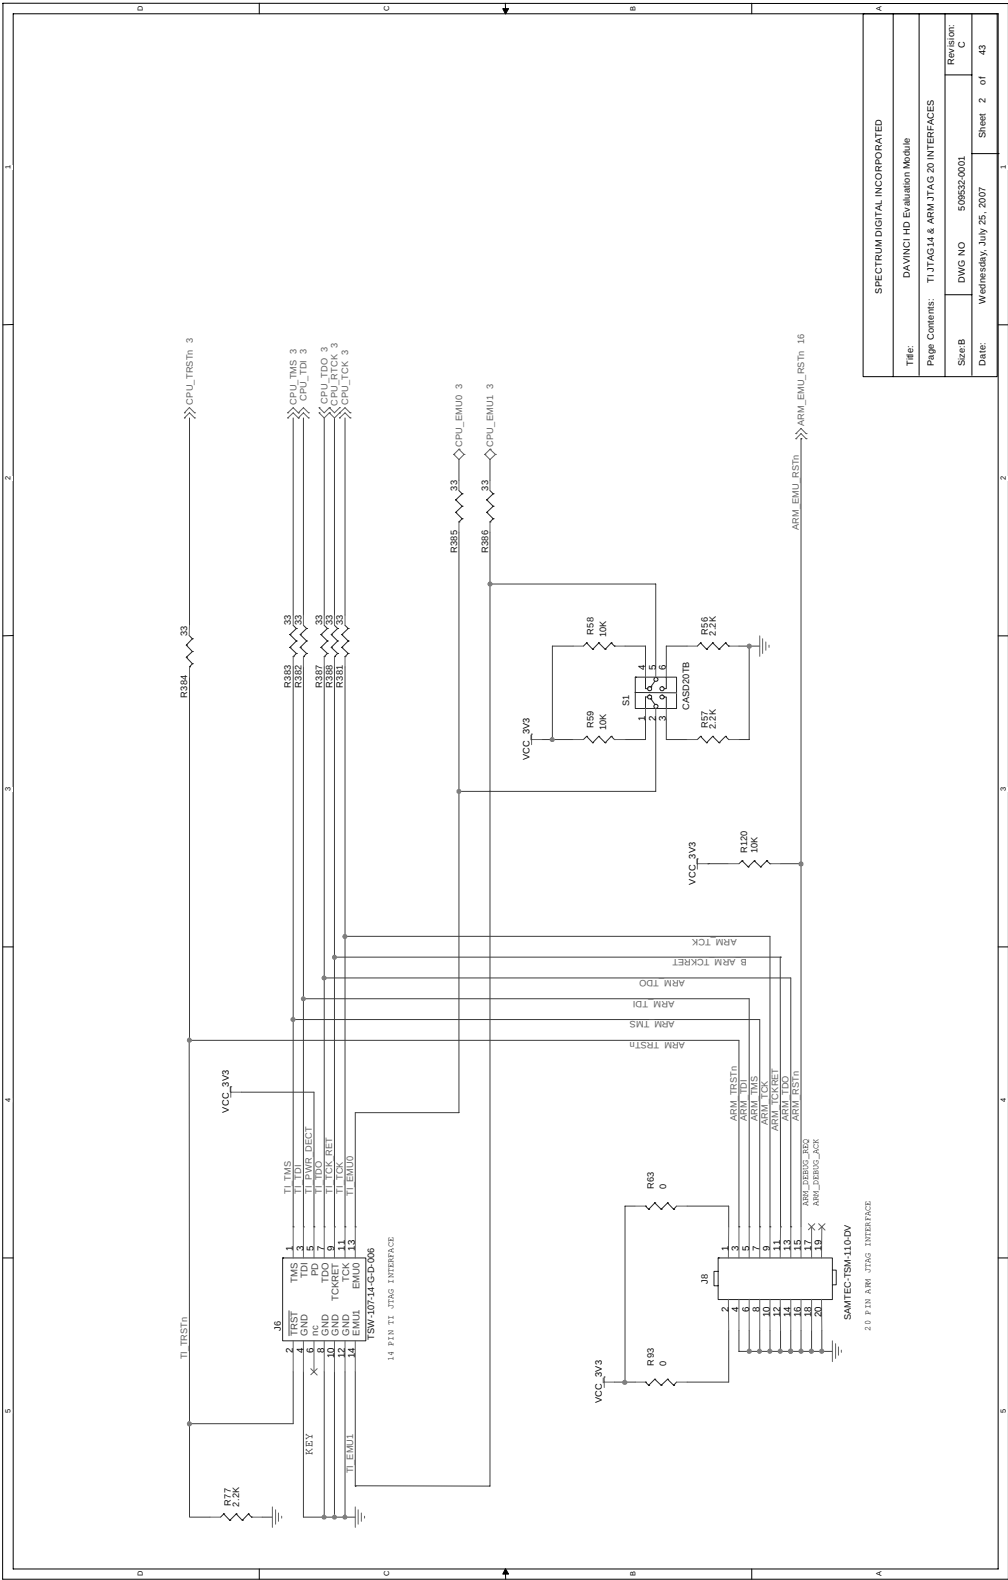


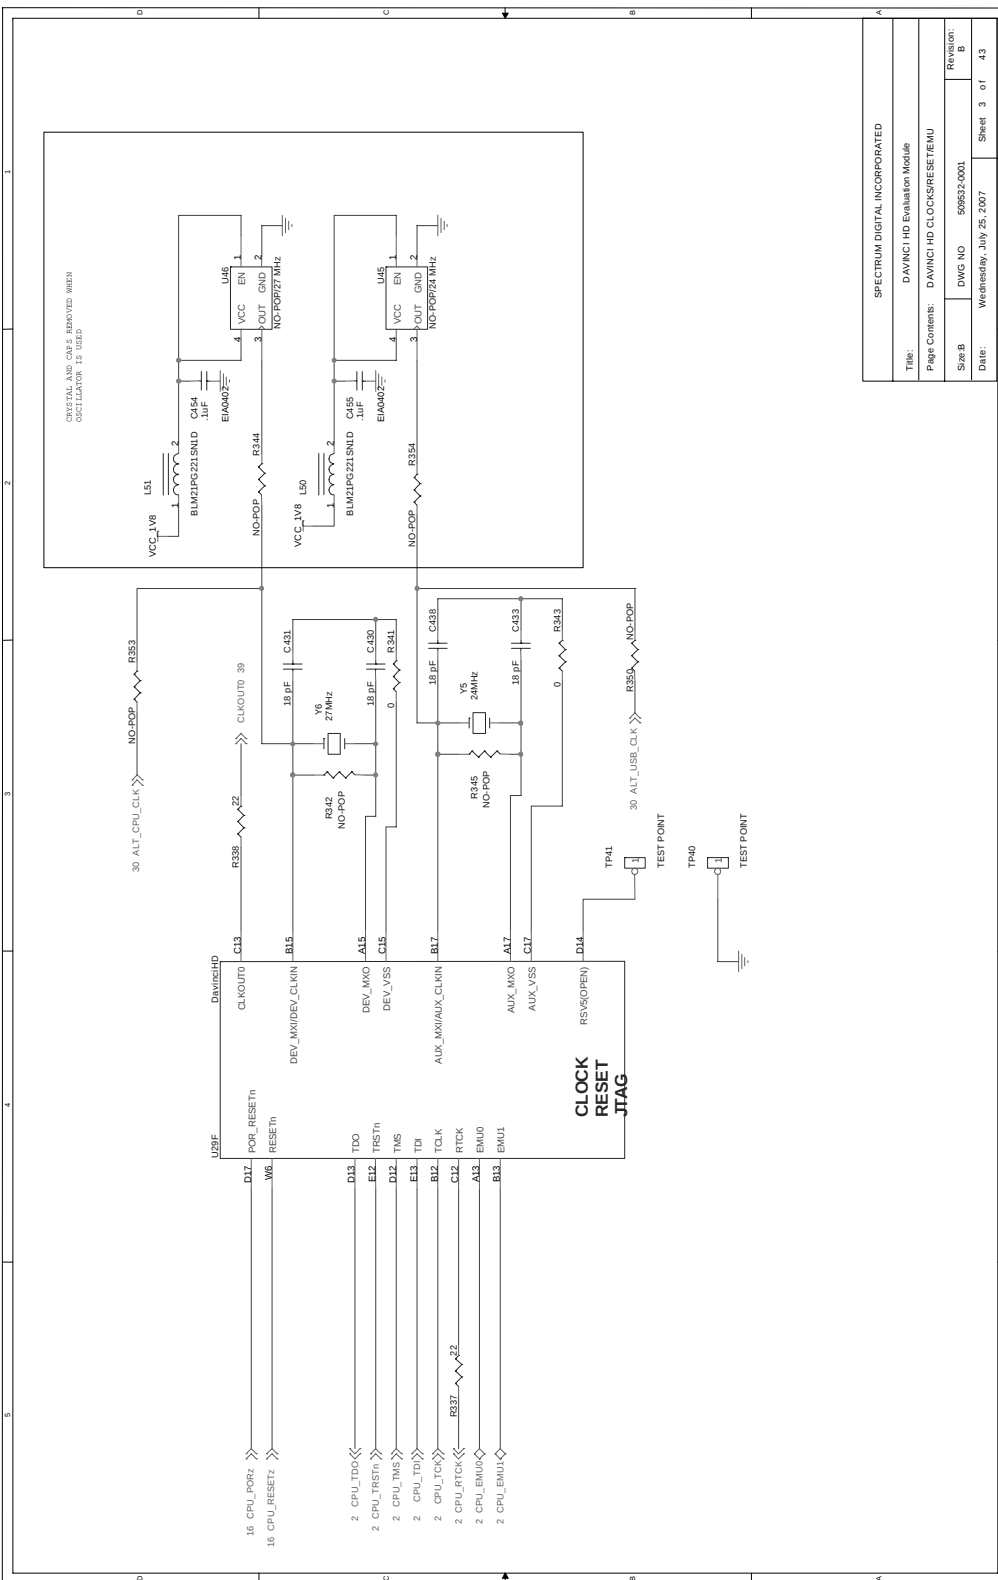


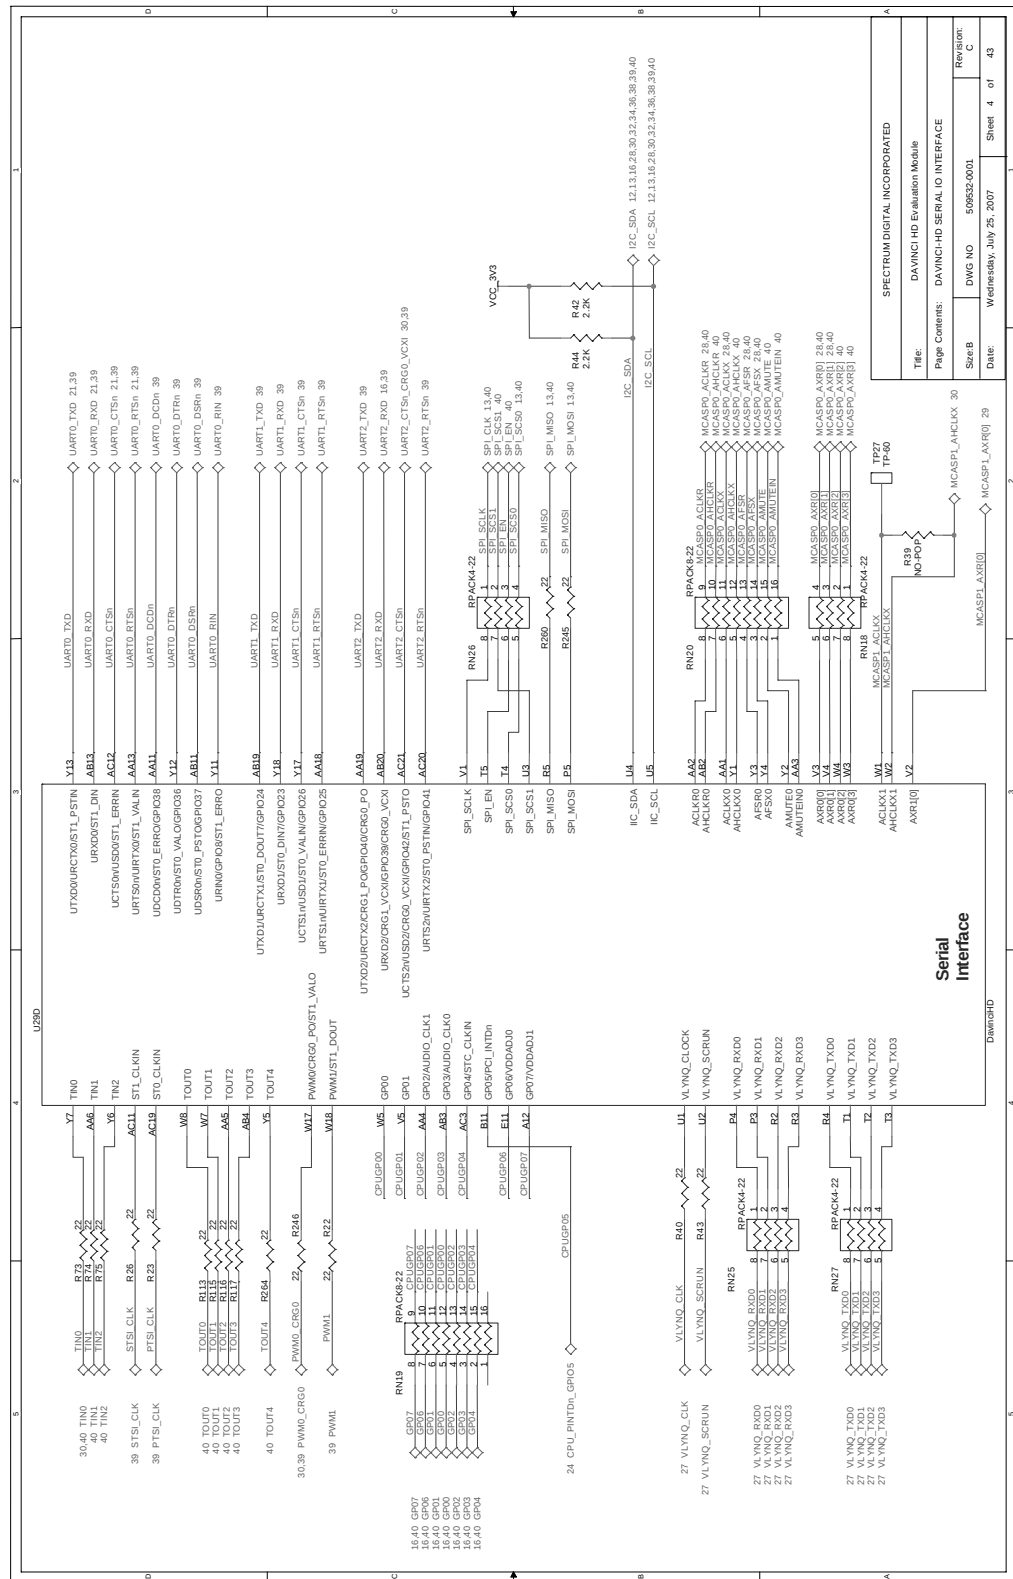


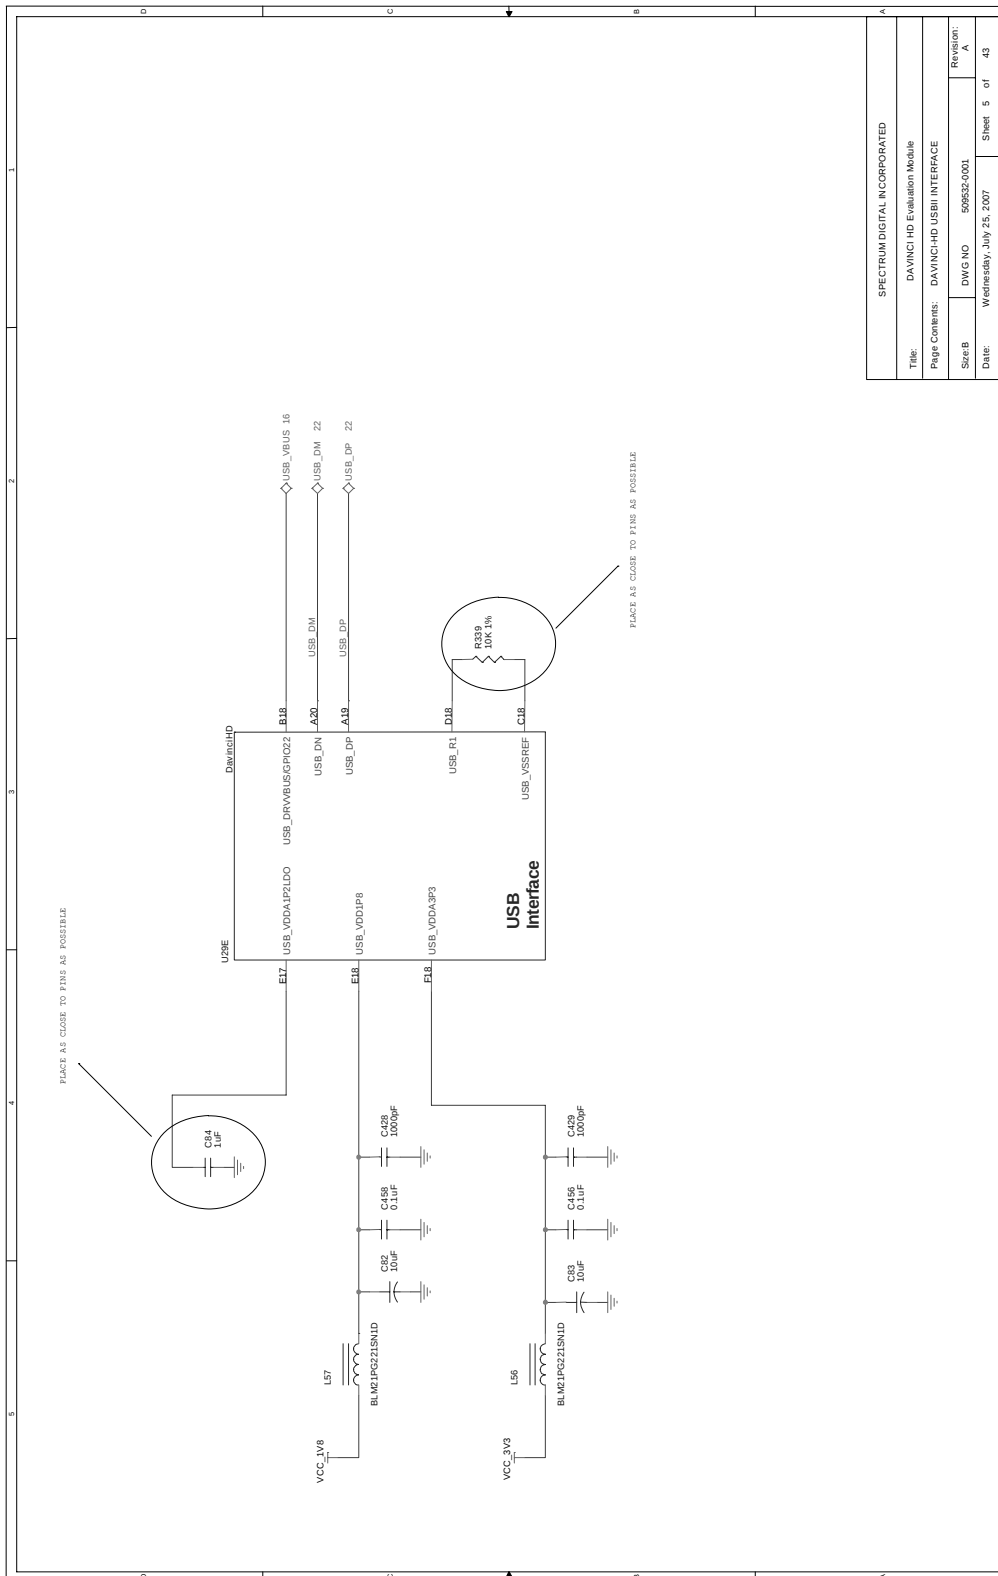


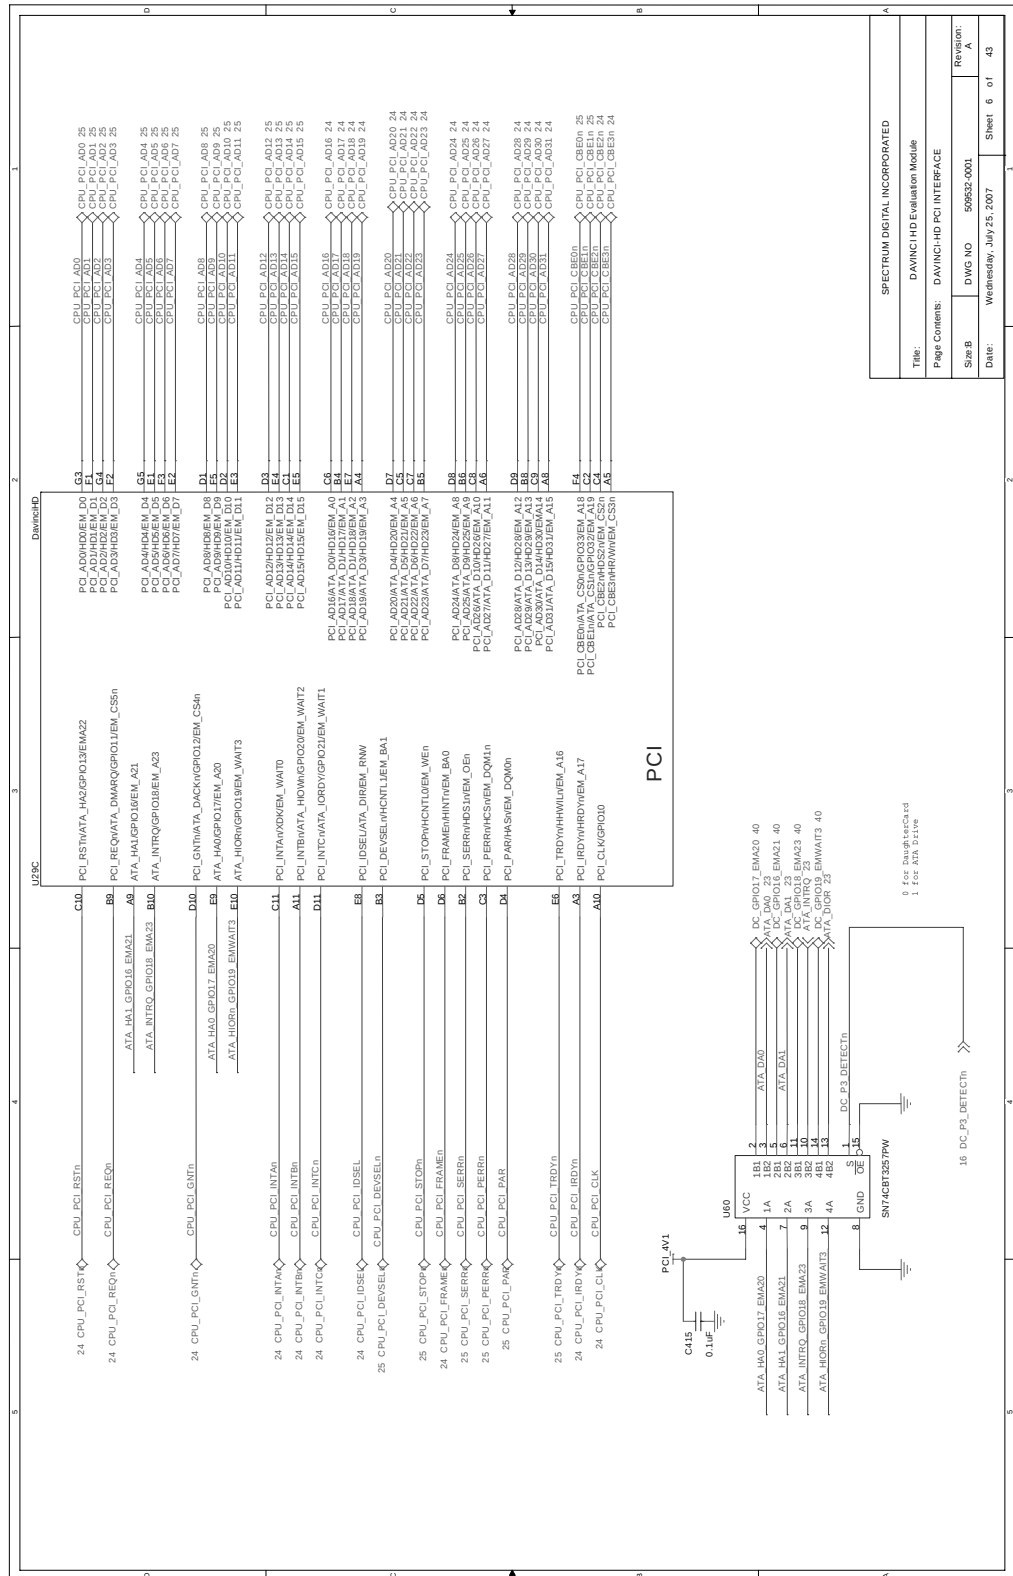


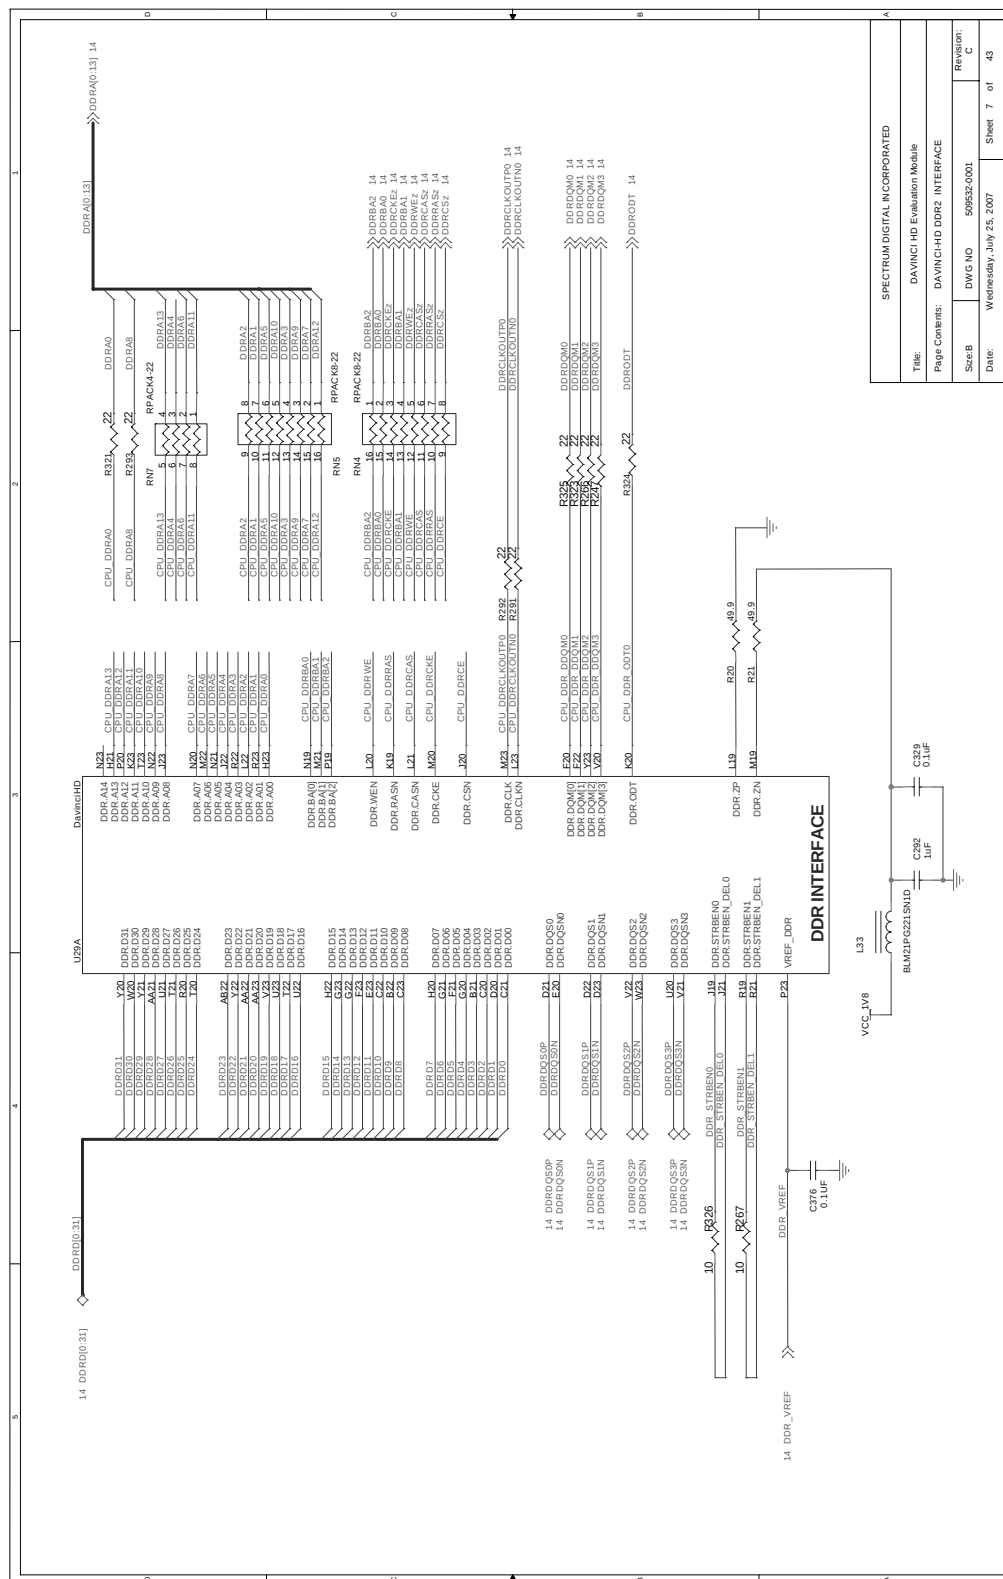


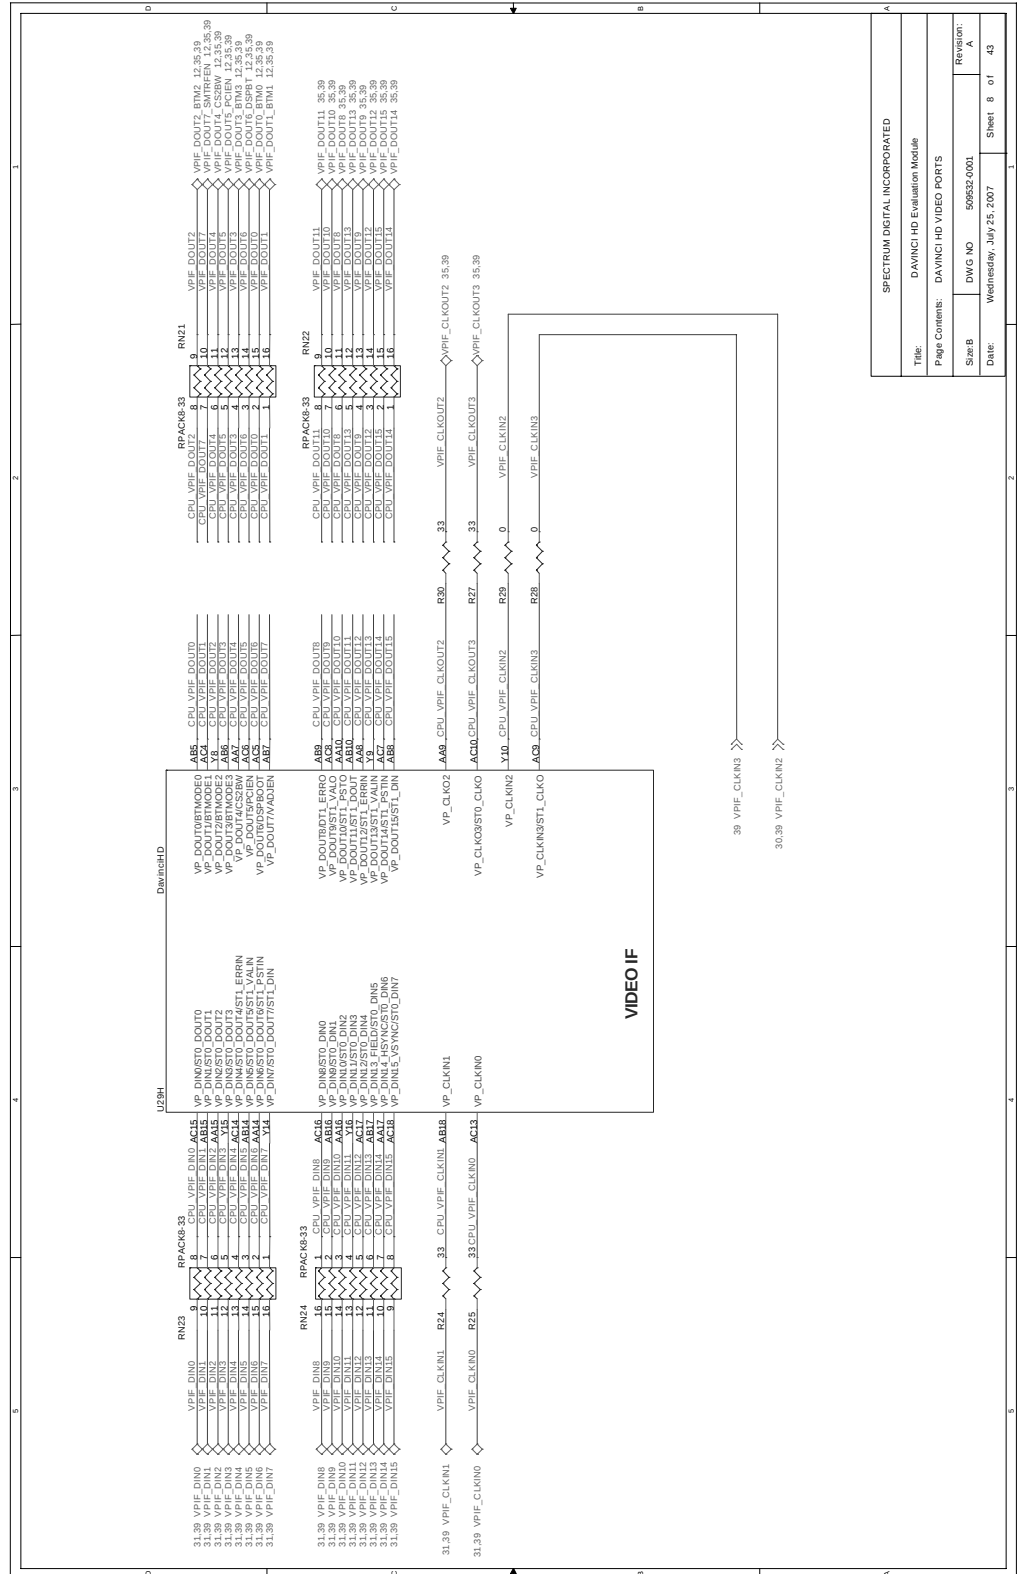

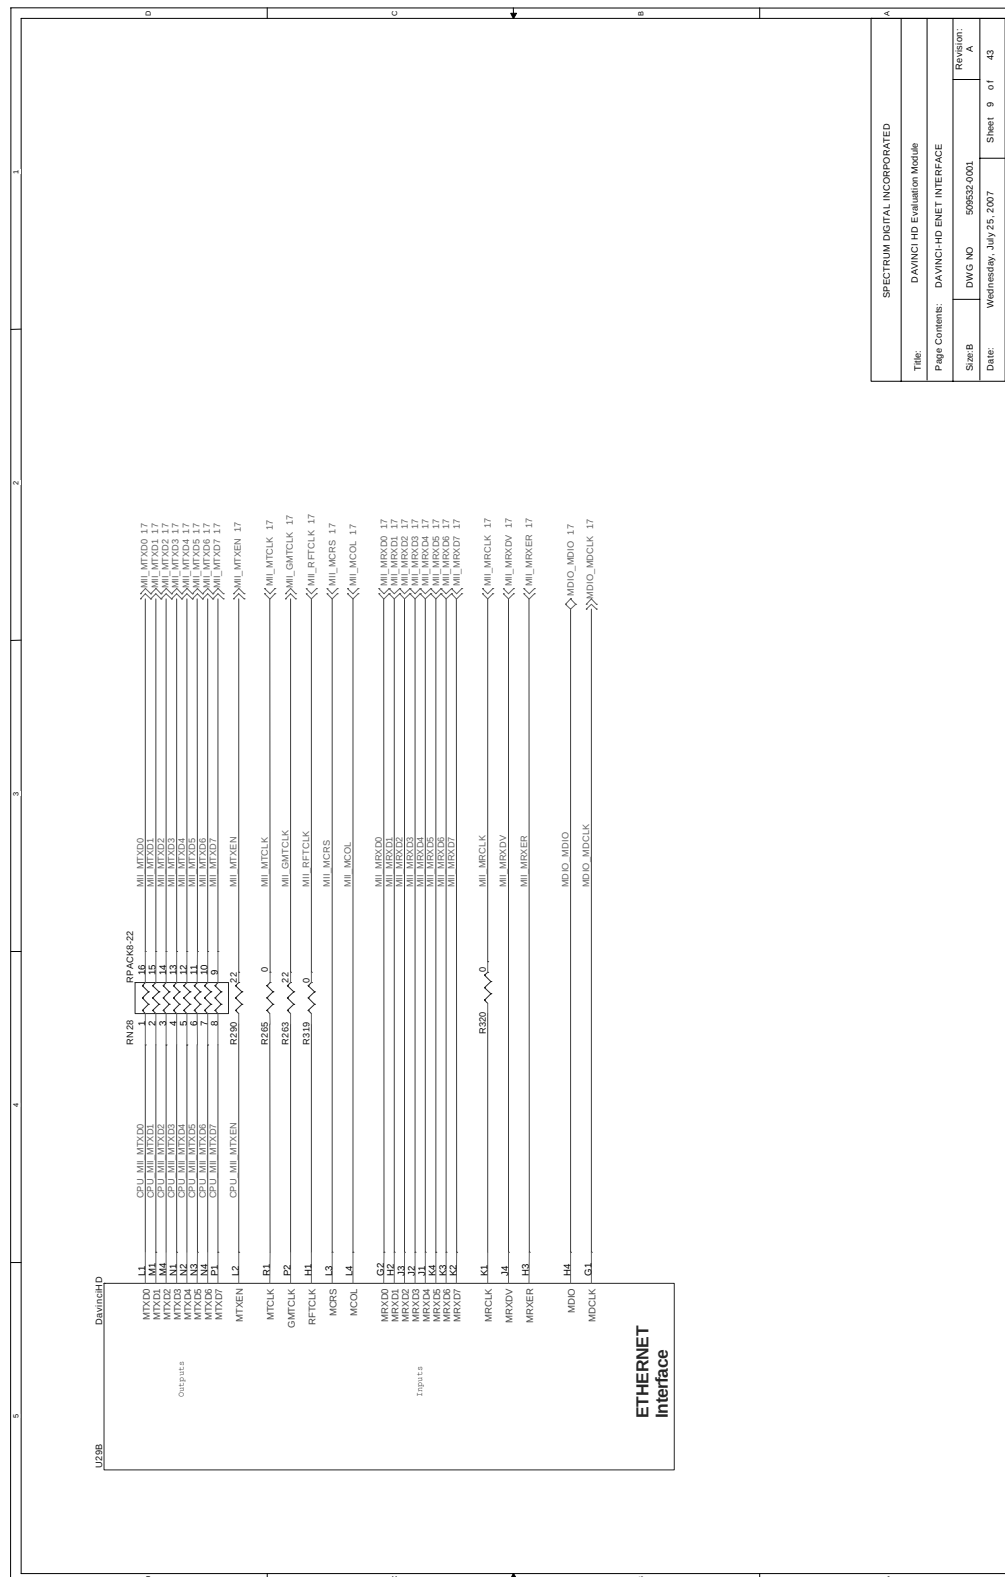


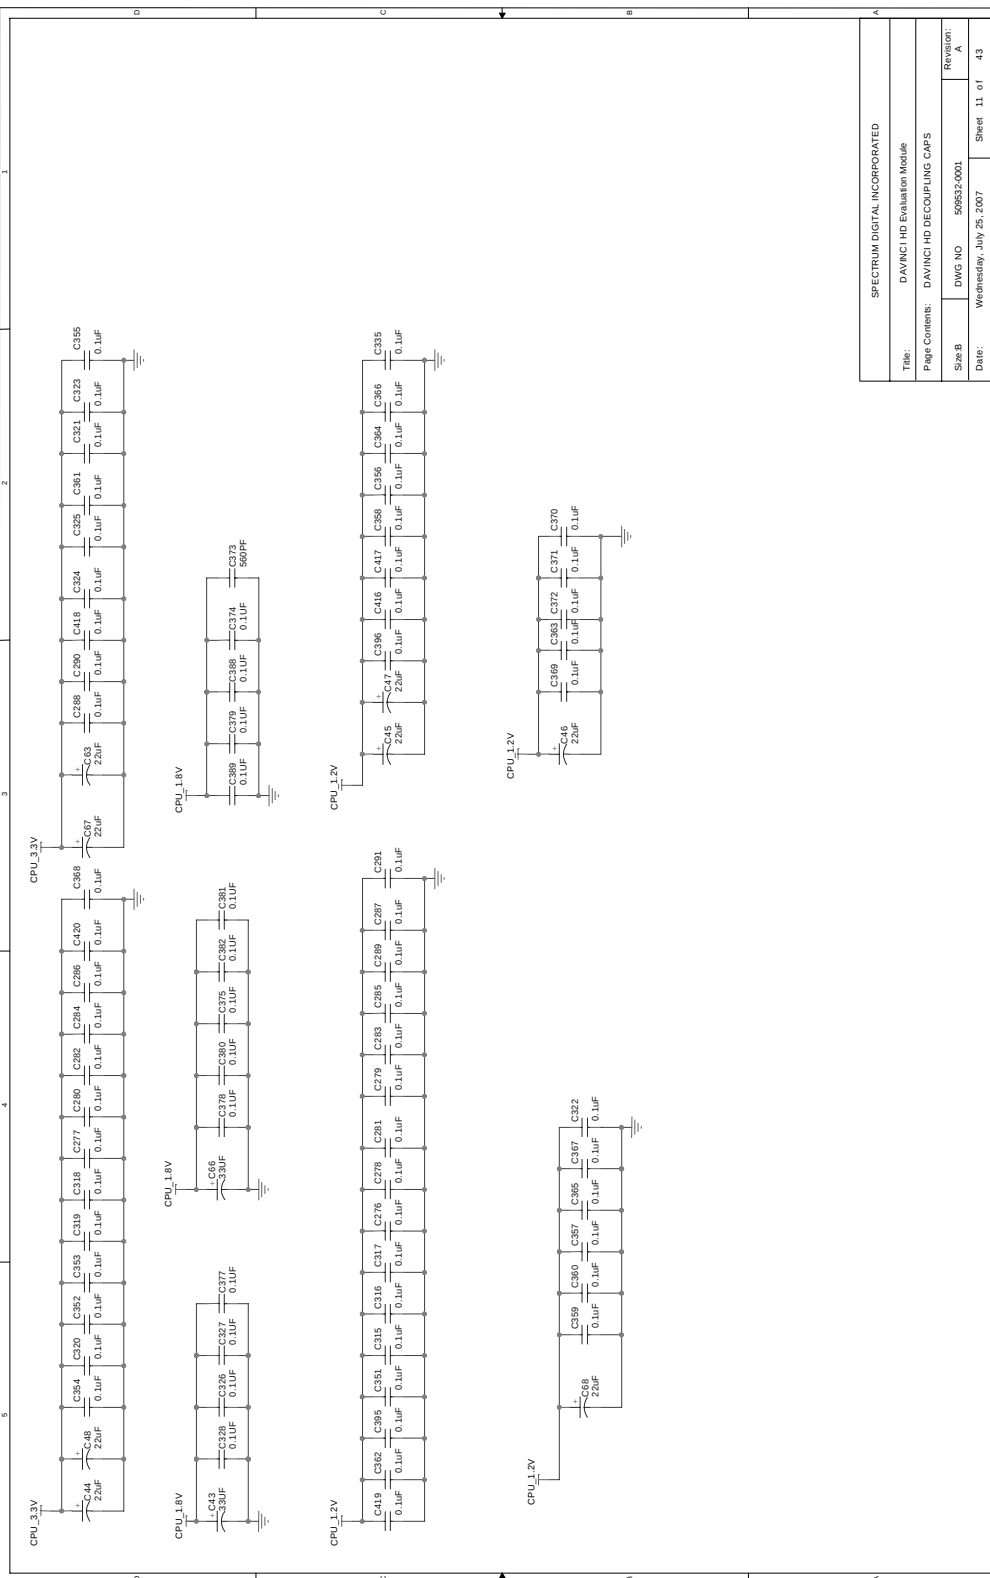


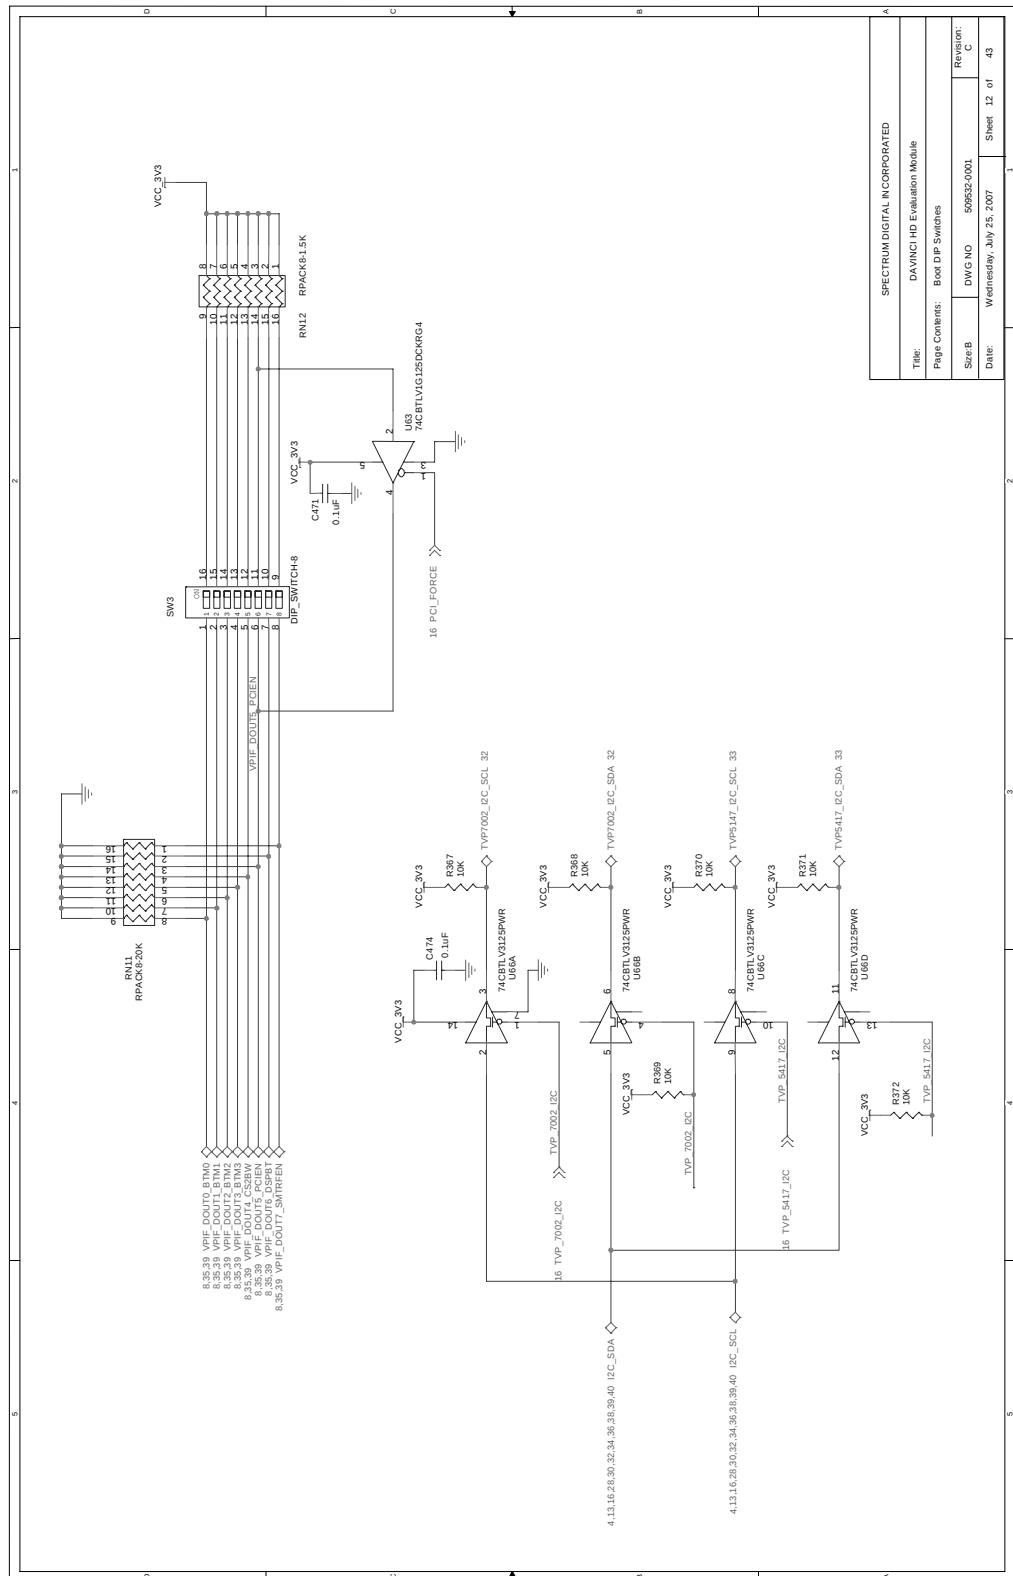


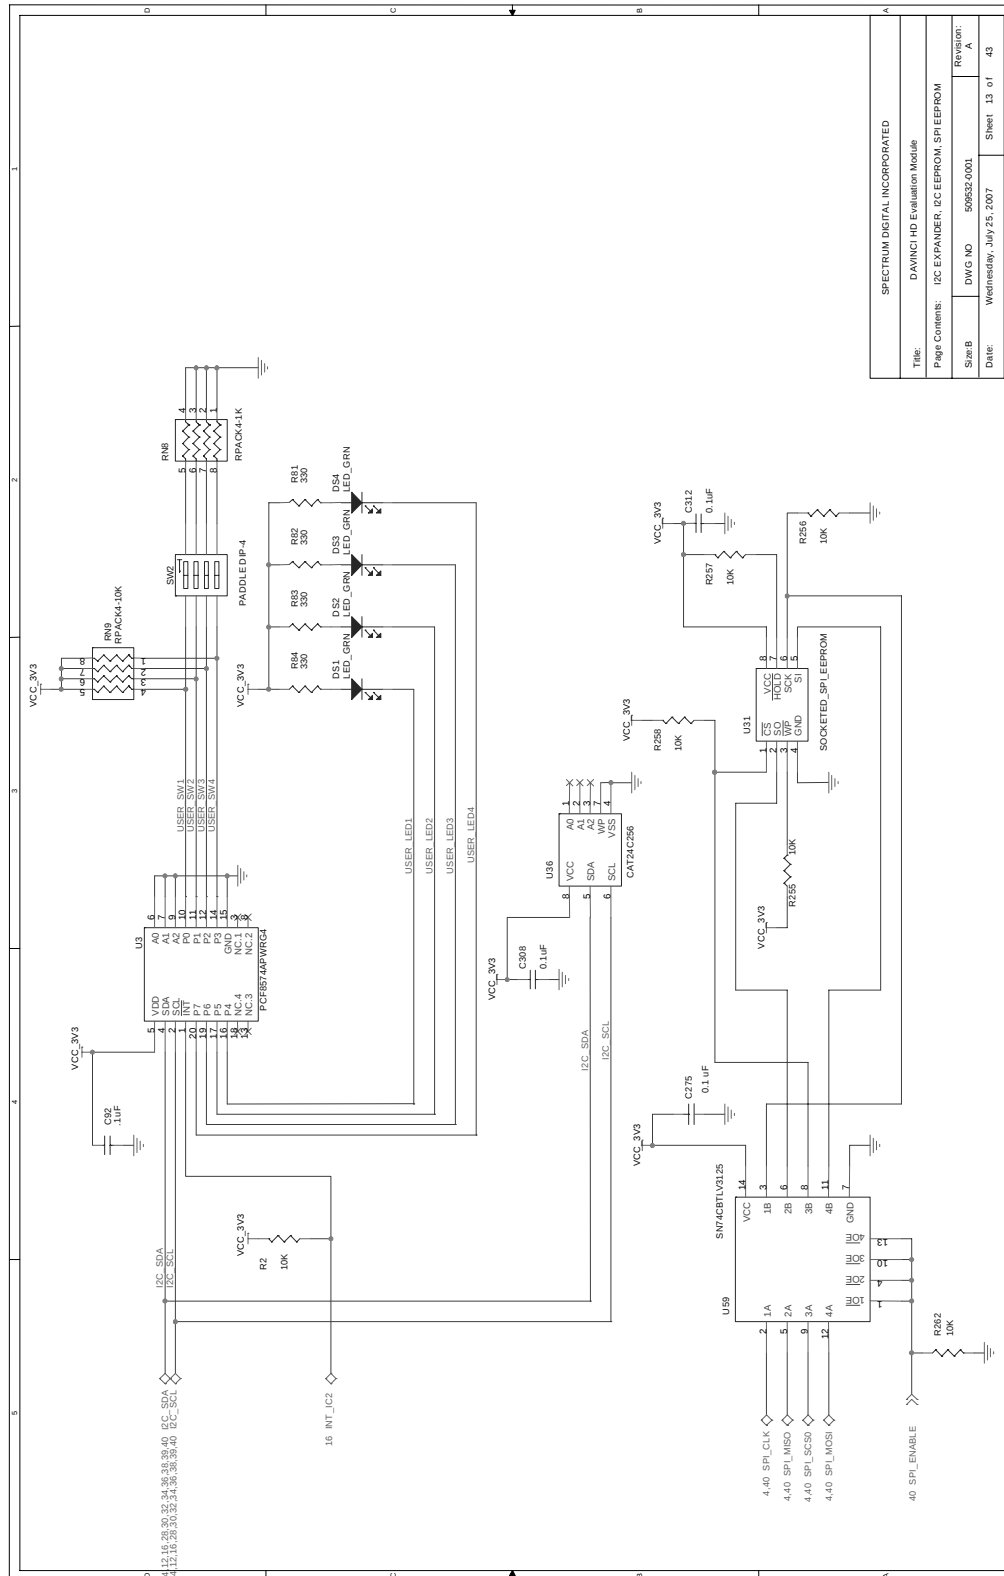



SPECTRUM DIGITAL INCORPORATED			
Title:	DAVINCI HD Evaluation Module		
Page Contents:	I2C EXPANDER, I2C EEPROM, SPI EEPROM		
Size:	DWG NO	509532-000L	Revision: A
Date:	Wednesday, July 25, 2007	Sheet	13 of 43

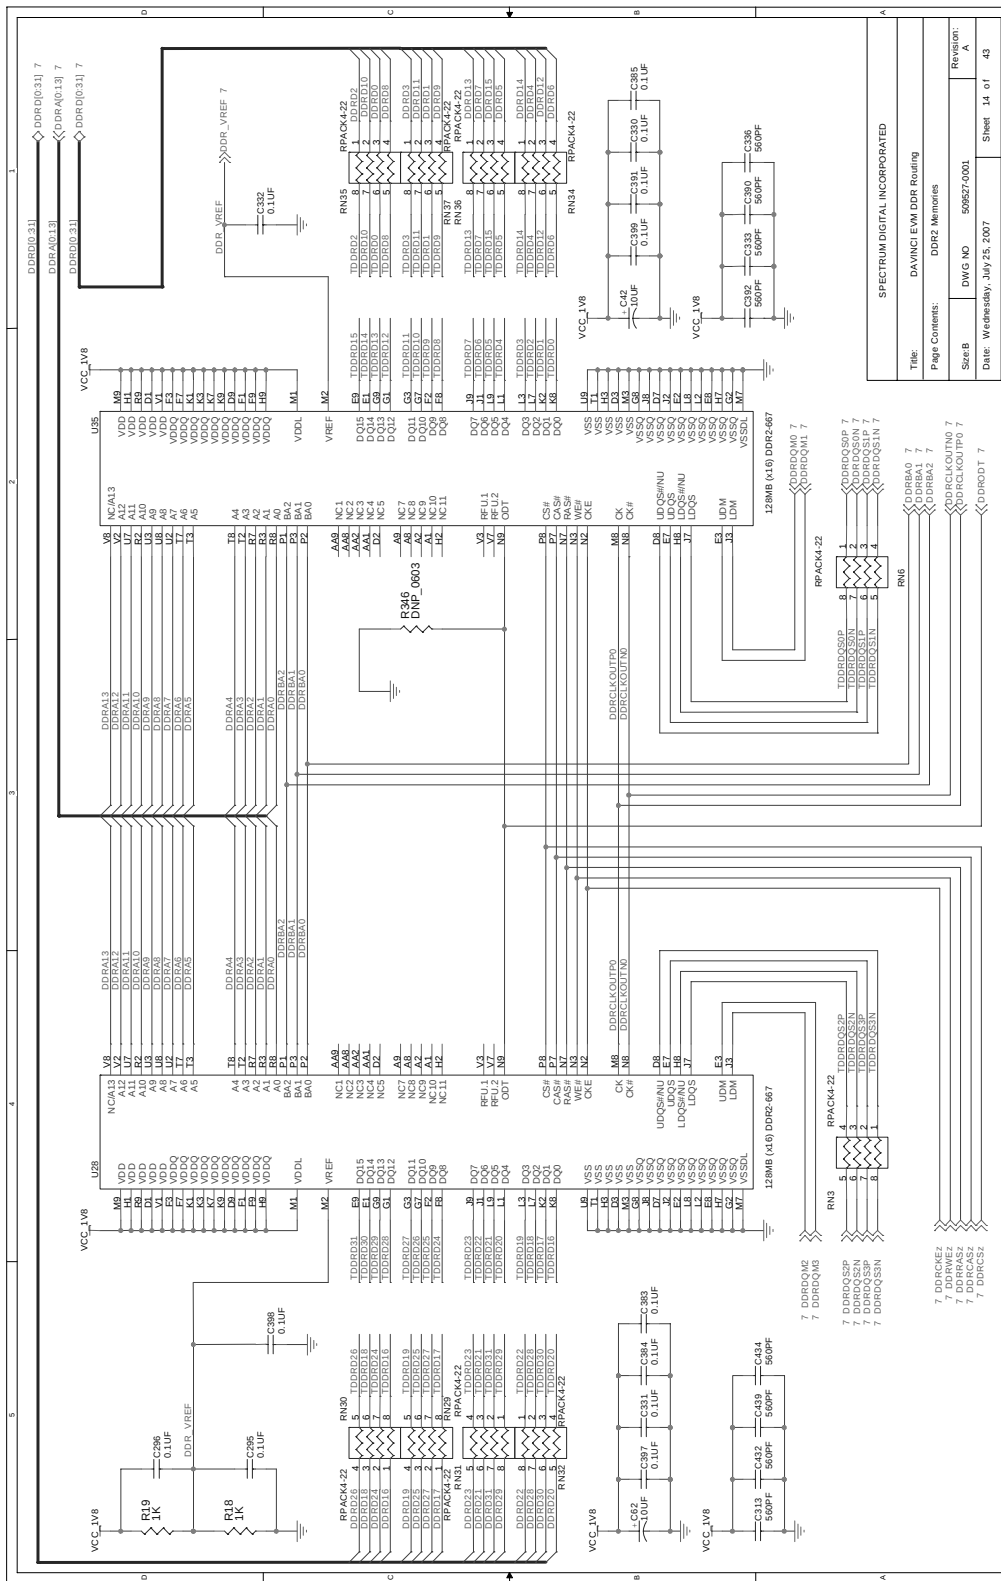


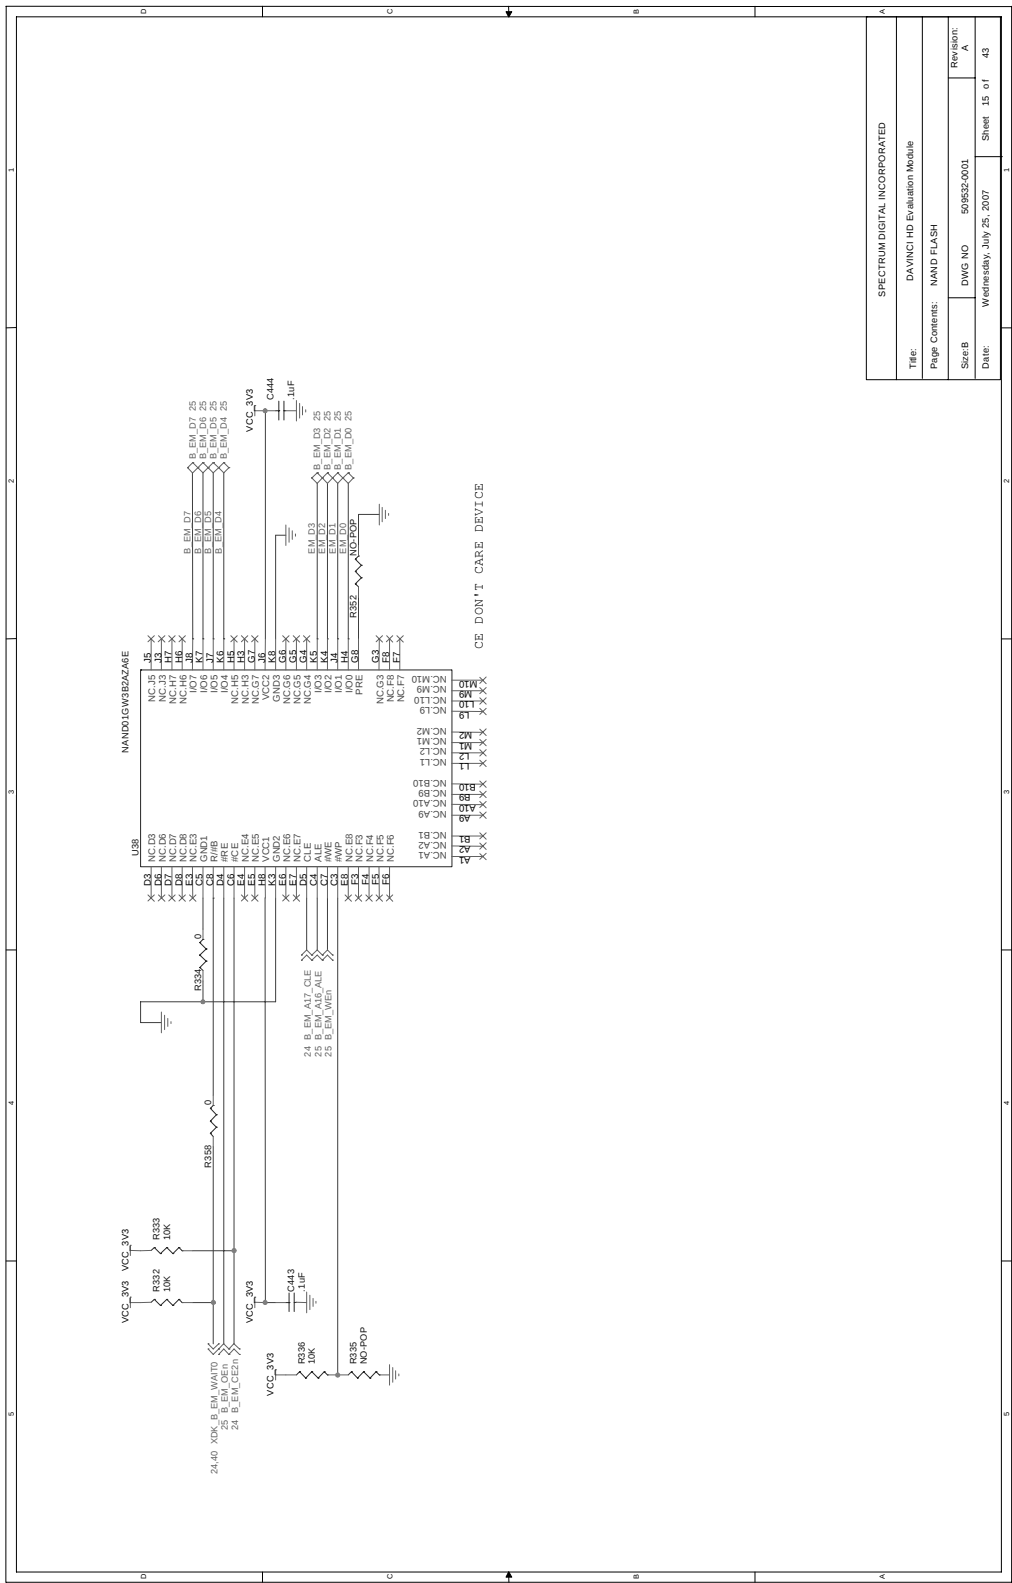

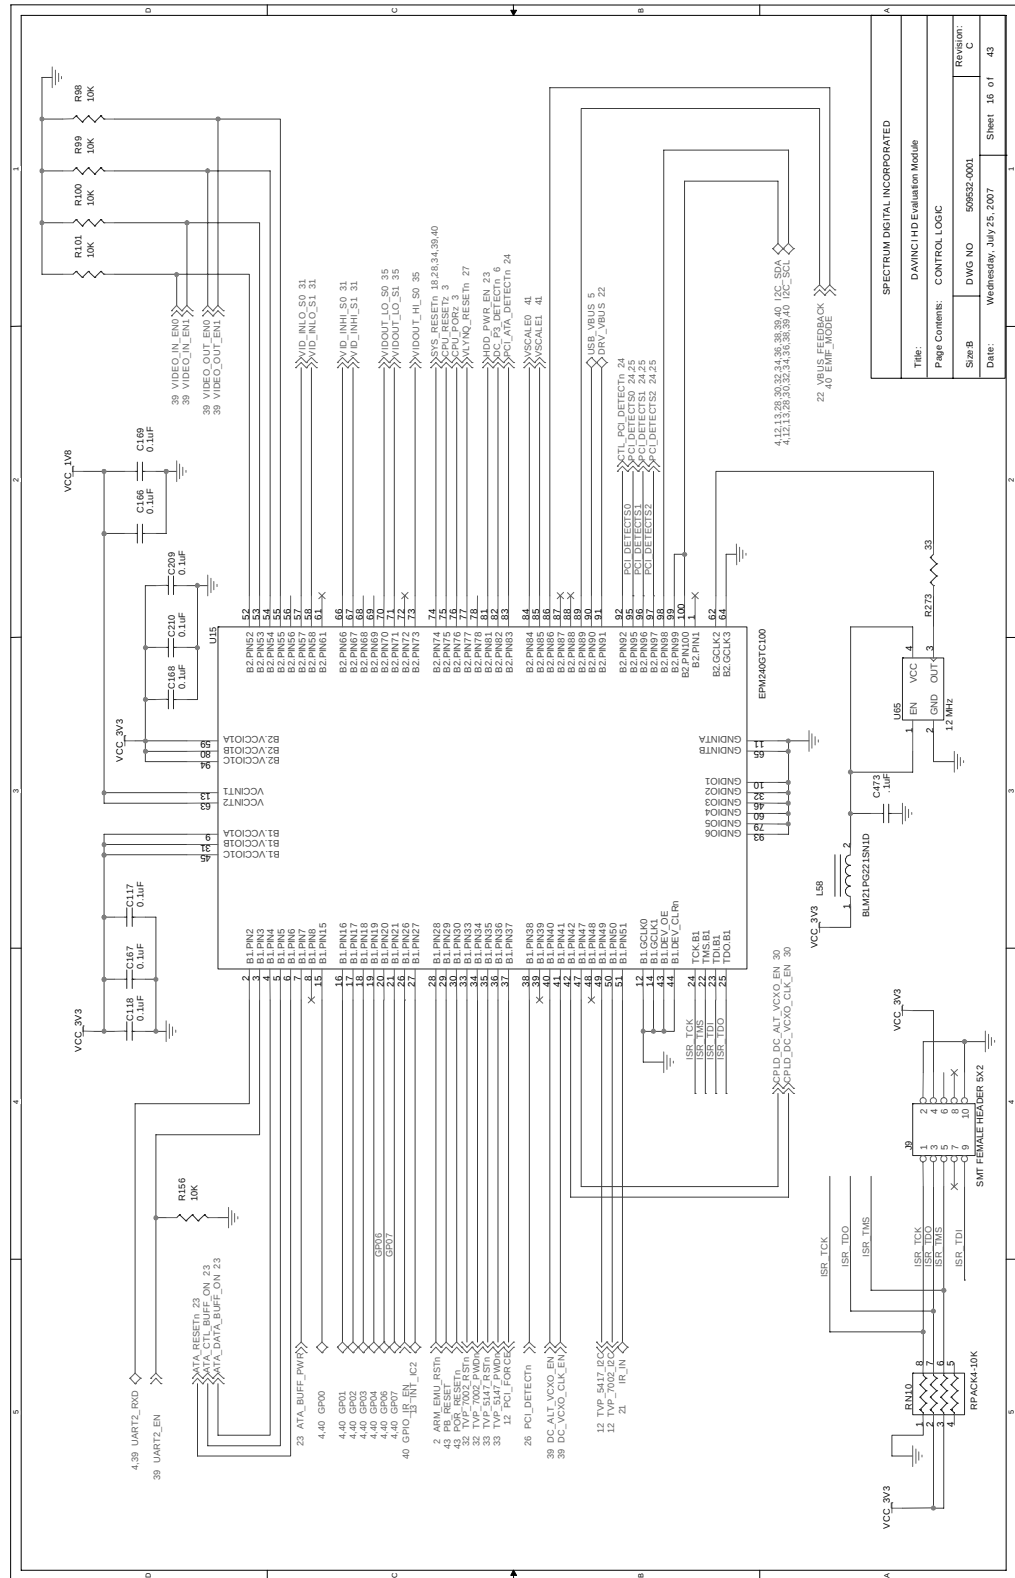

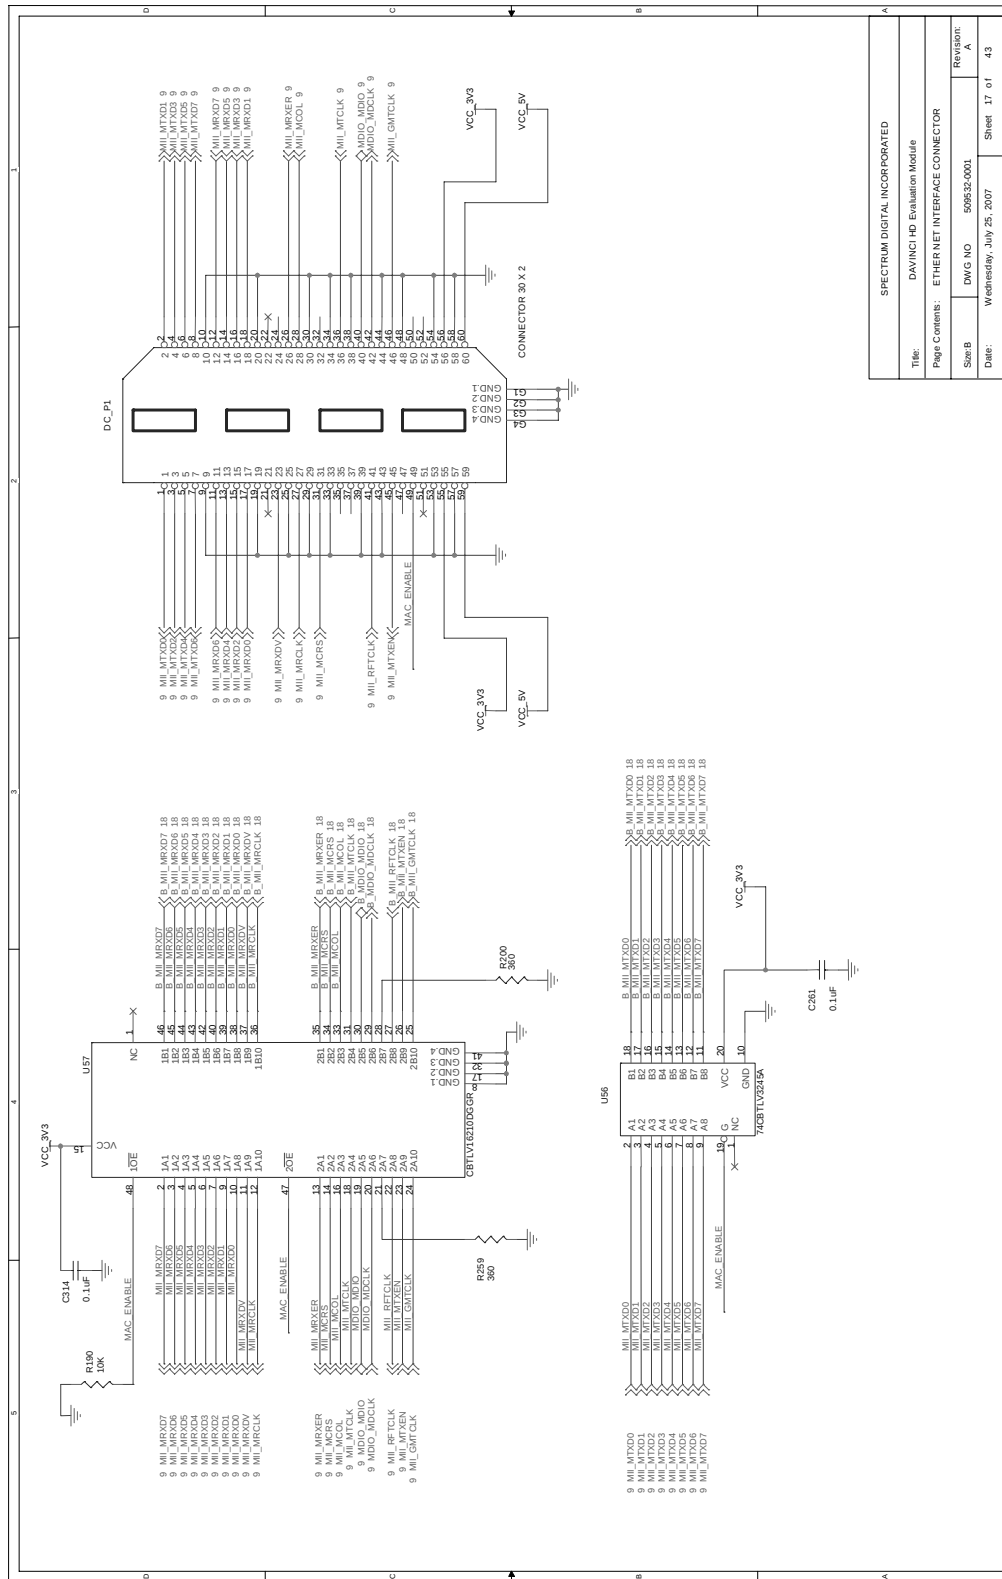


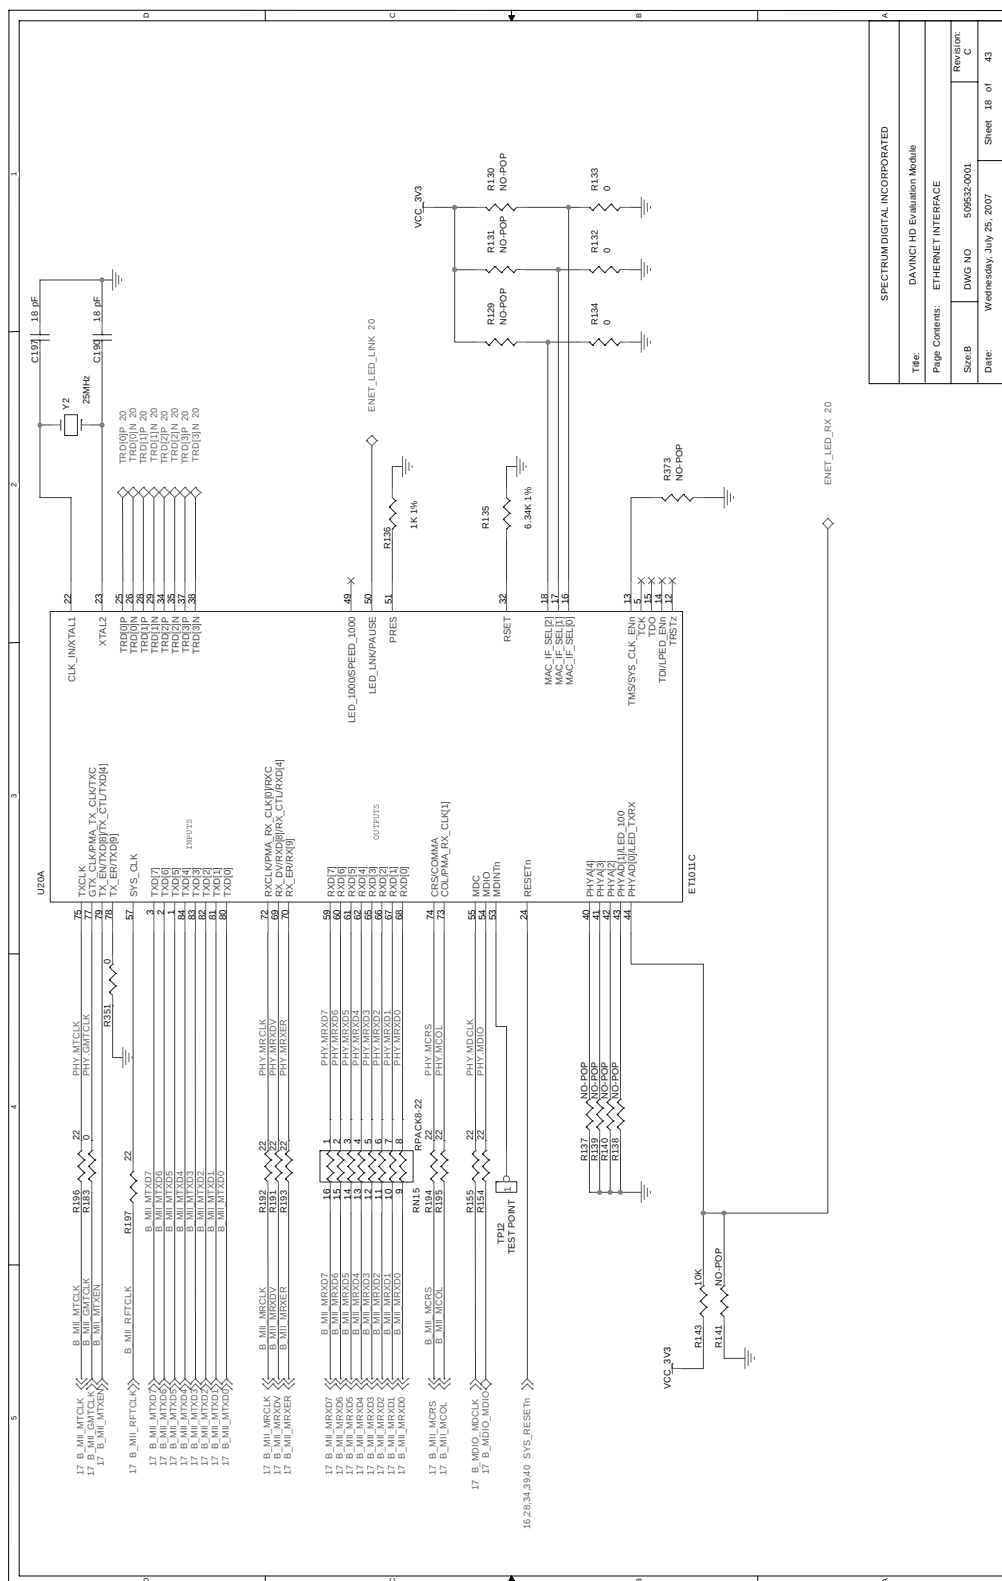

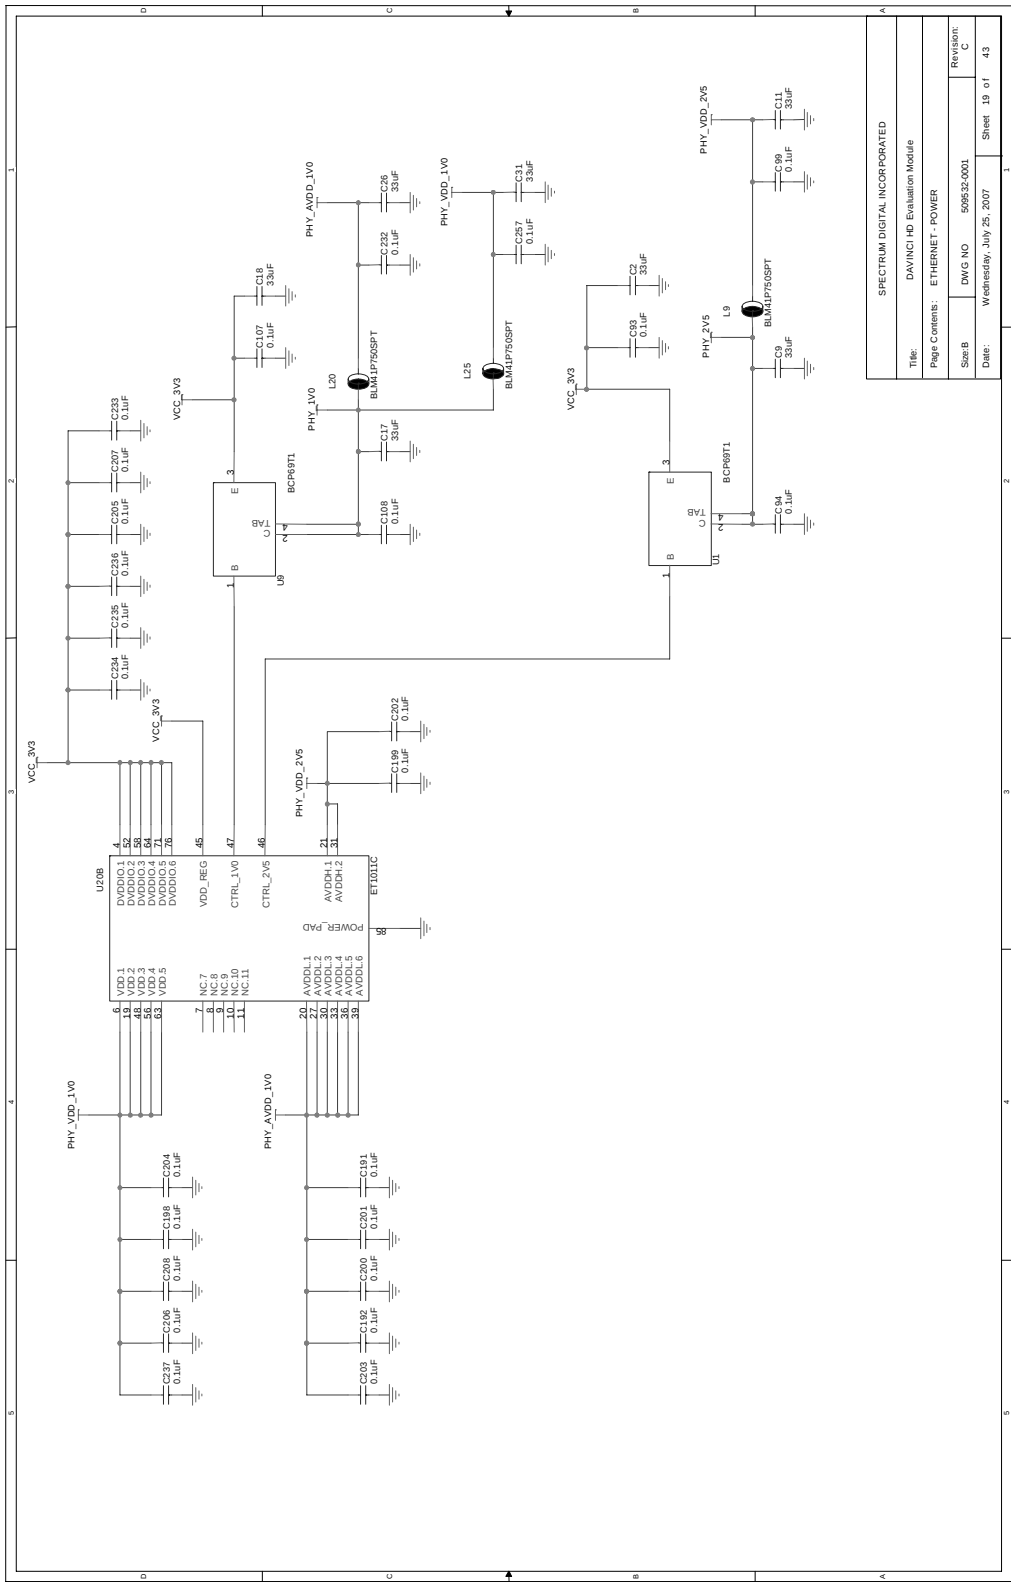



SPECTRUM DIGITAL INCORPORATED			
Title: DAVINCI HD Evaluation Module			
Page Contents: ETHERNET - POWER			
Size B	DWG NO	505532-0001	Revision
Date:	Wednesday, July 25, 2007	Sheet	19 of 43




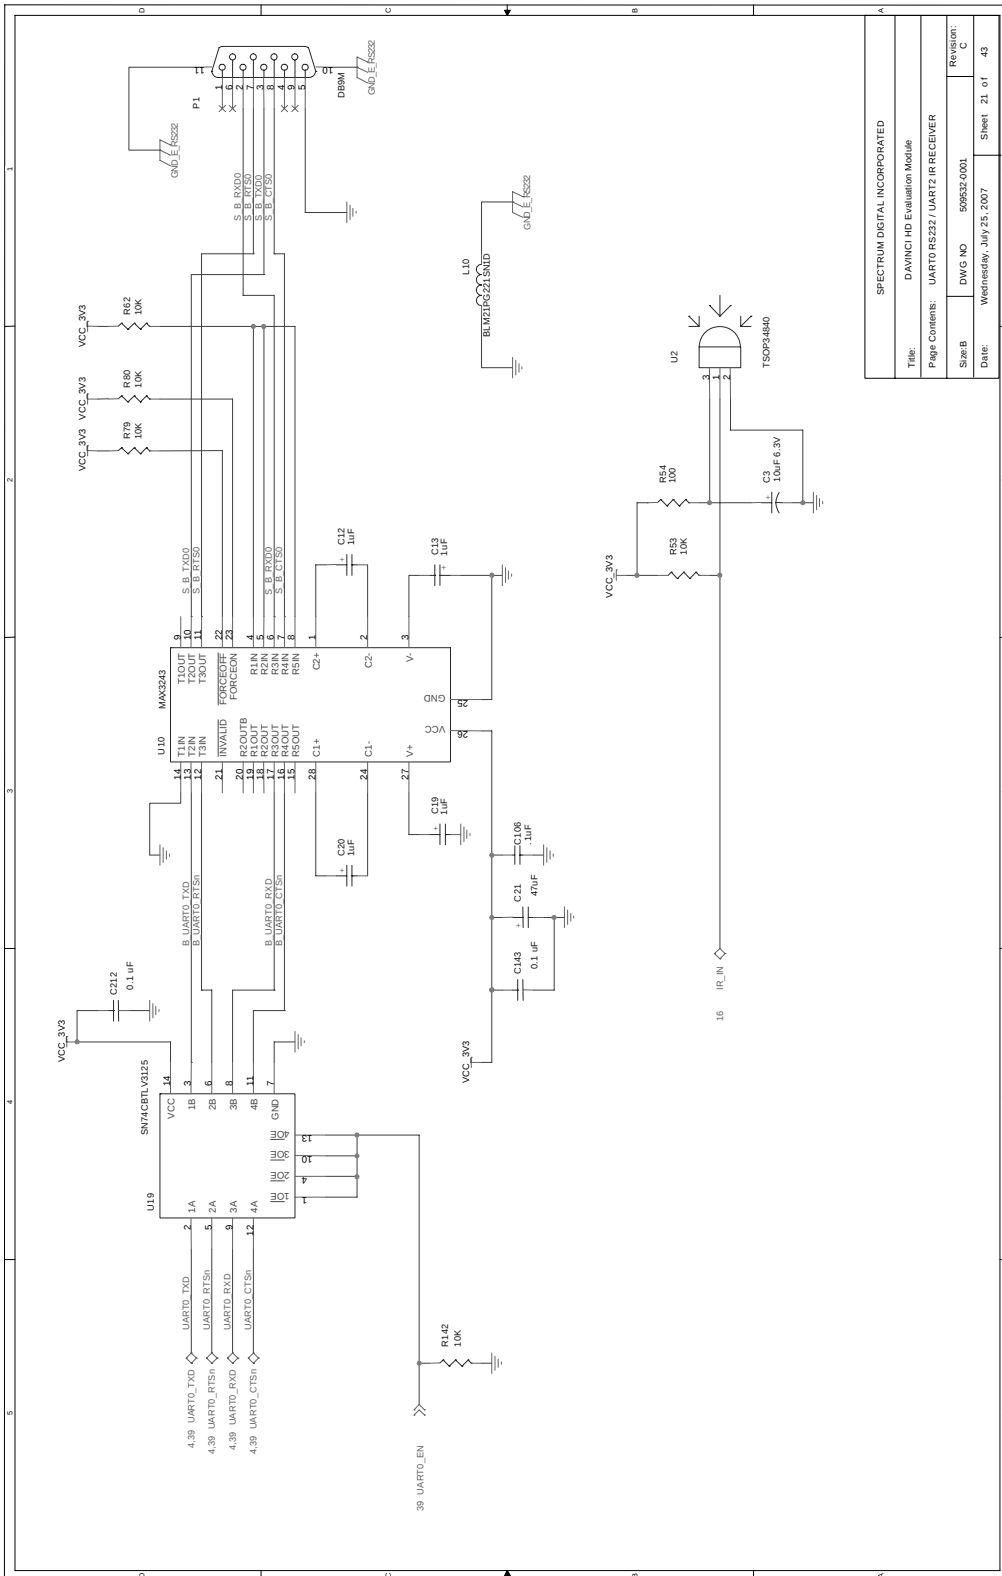


SPECTRUM DIGITAL INCORPORATED			
Title: DAVINCI HD Evaluation Module			
Page Contents: UART0 RS232 / UART2 IR RECEIVER			
Sheet:	DWG NO:	509532-0001	Revision:
C			C
Date:	Wednesday, July 25, 2007	Sheet	21 of 43

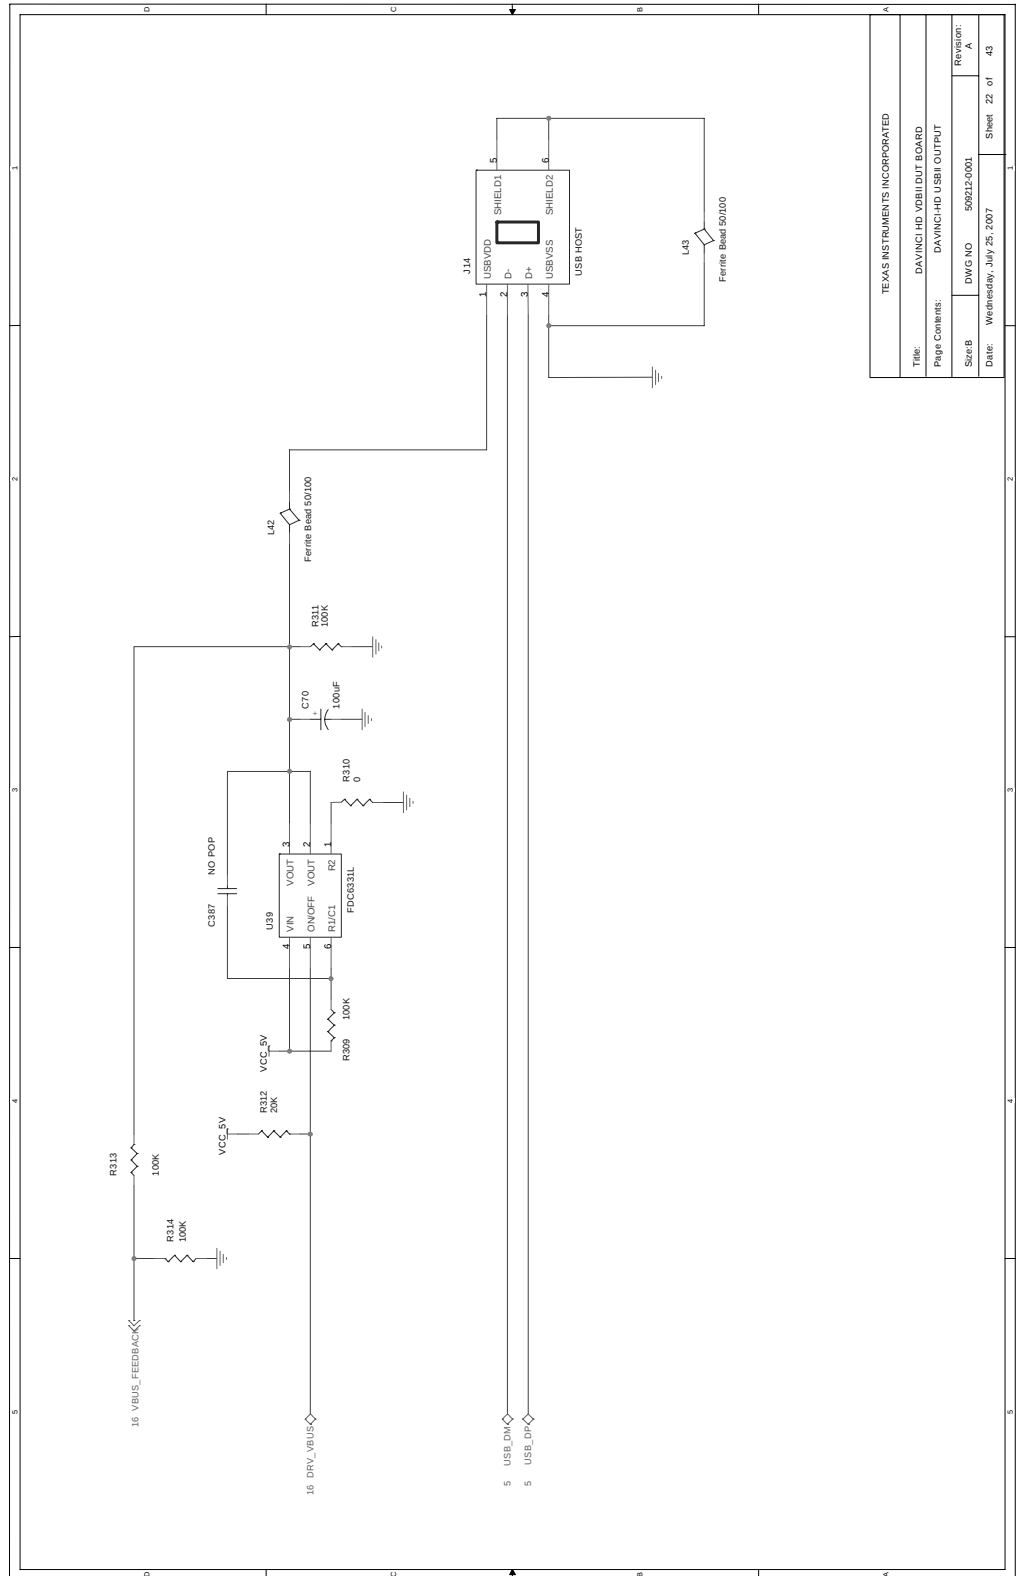


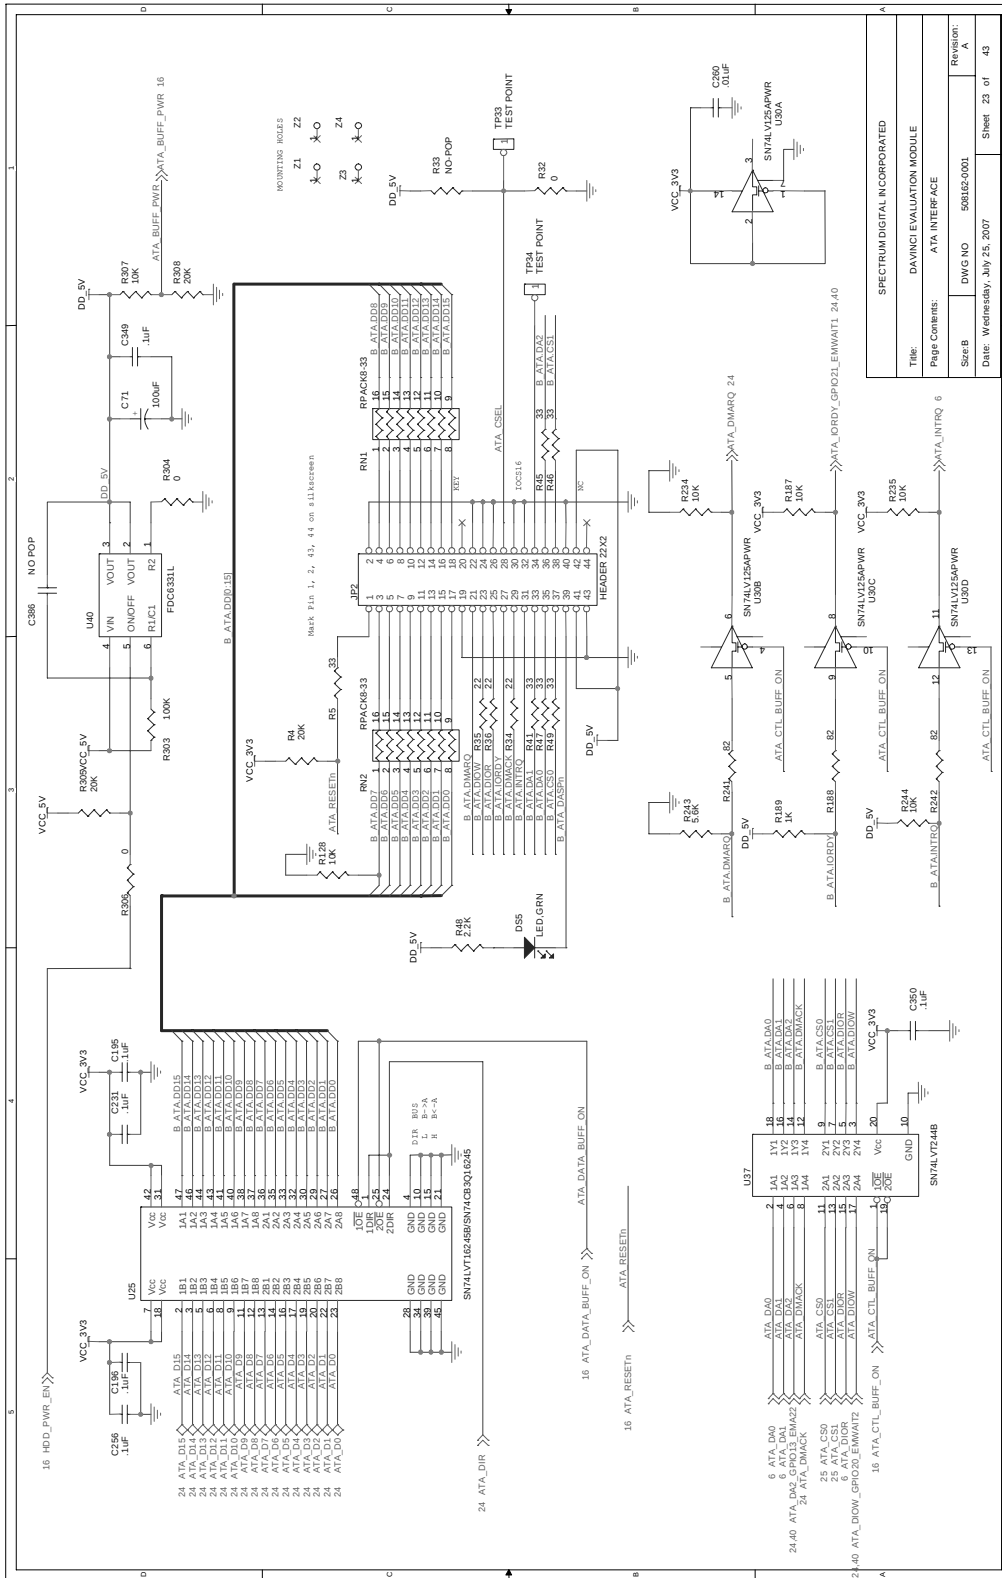


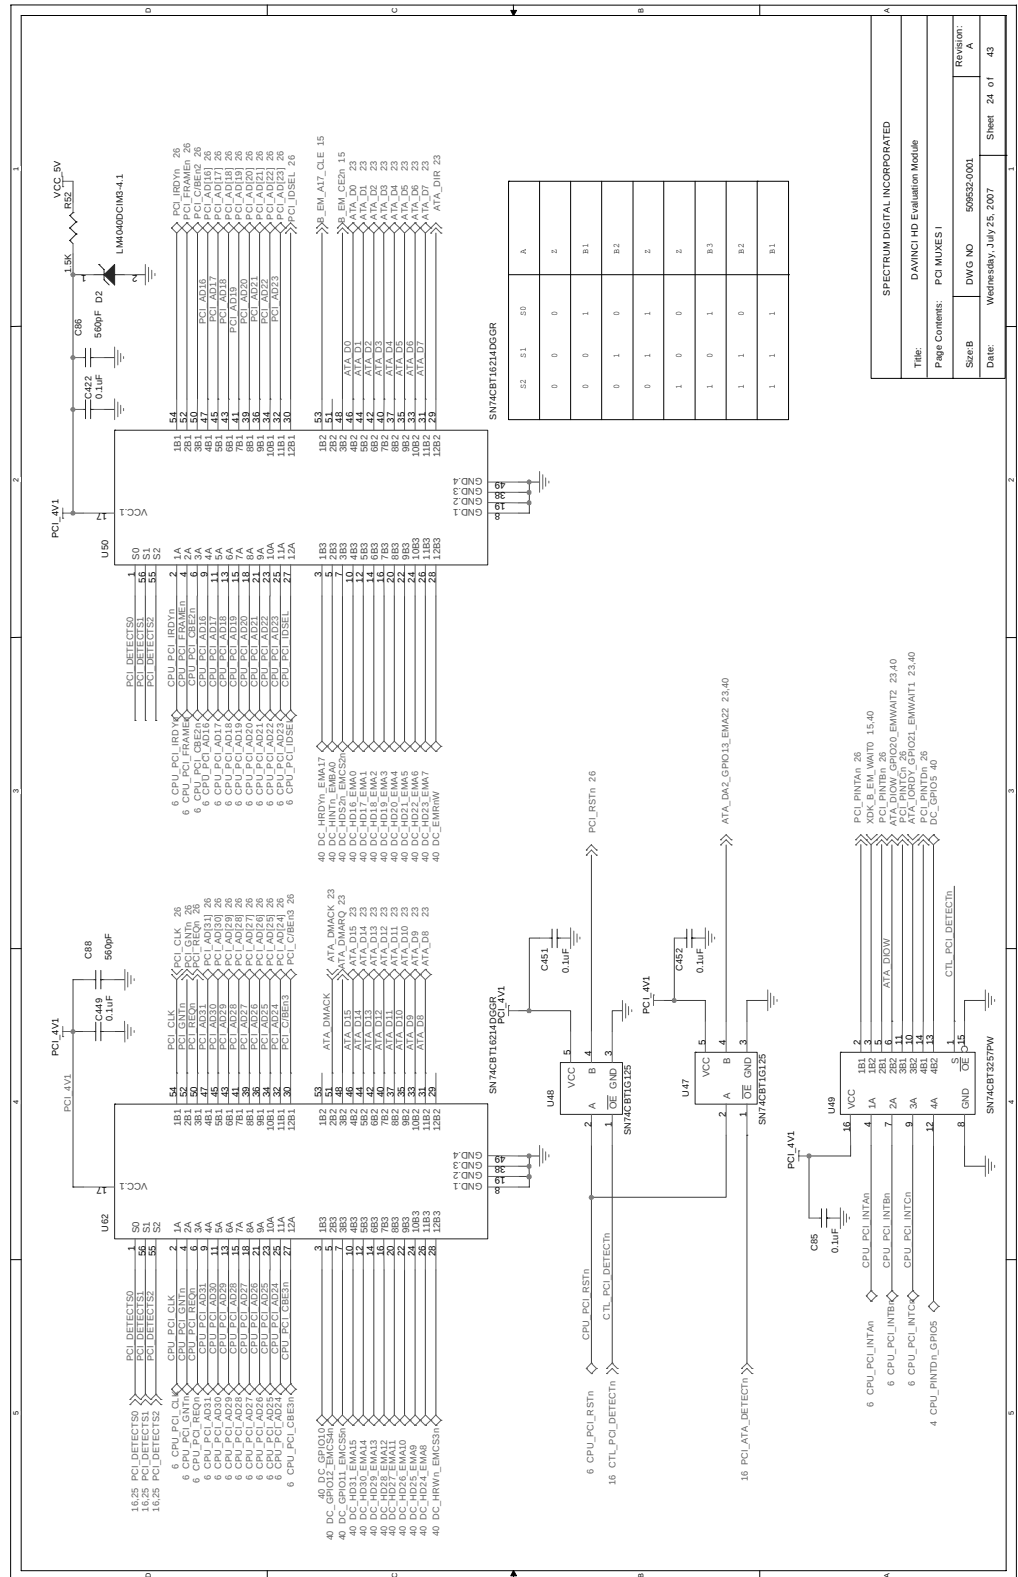



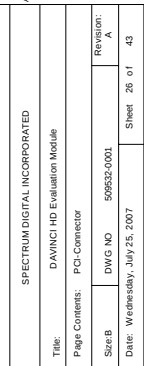


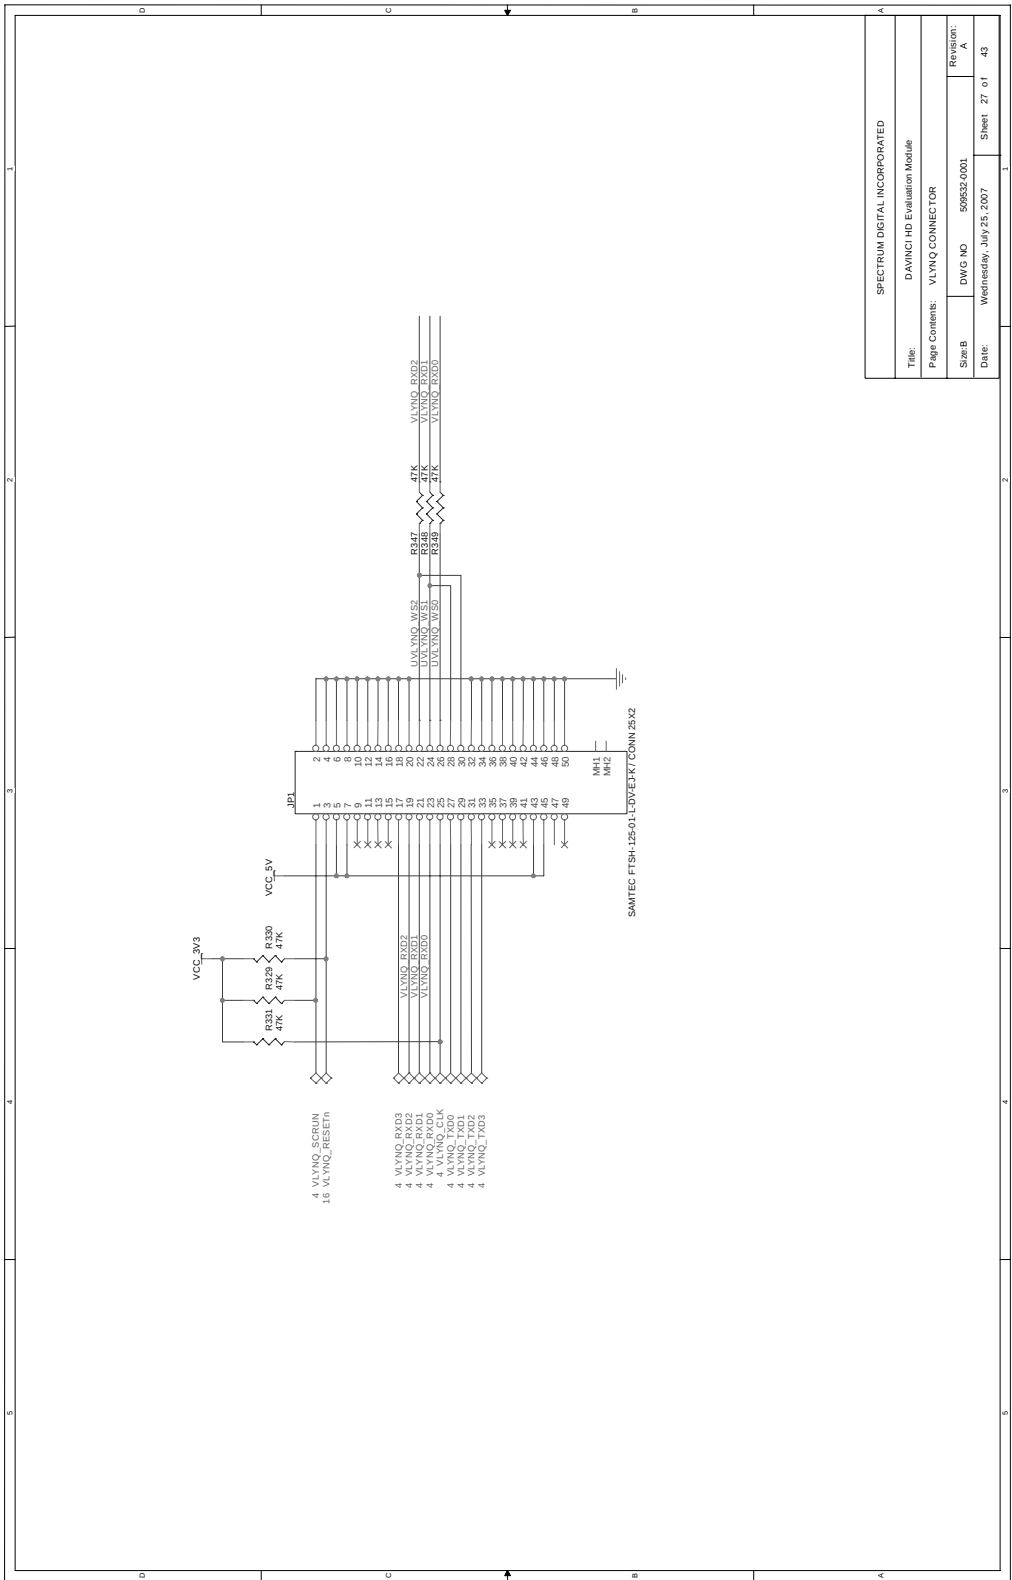

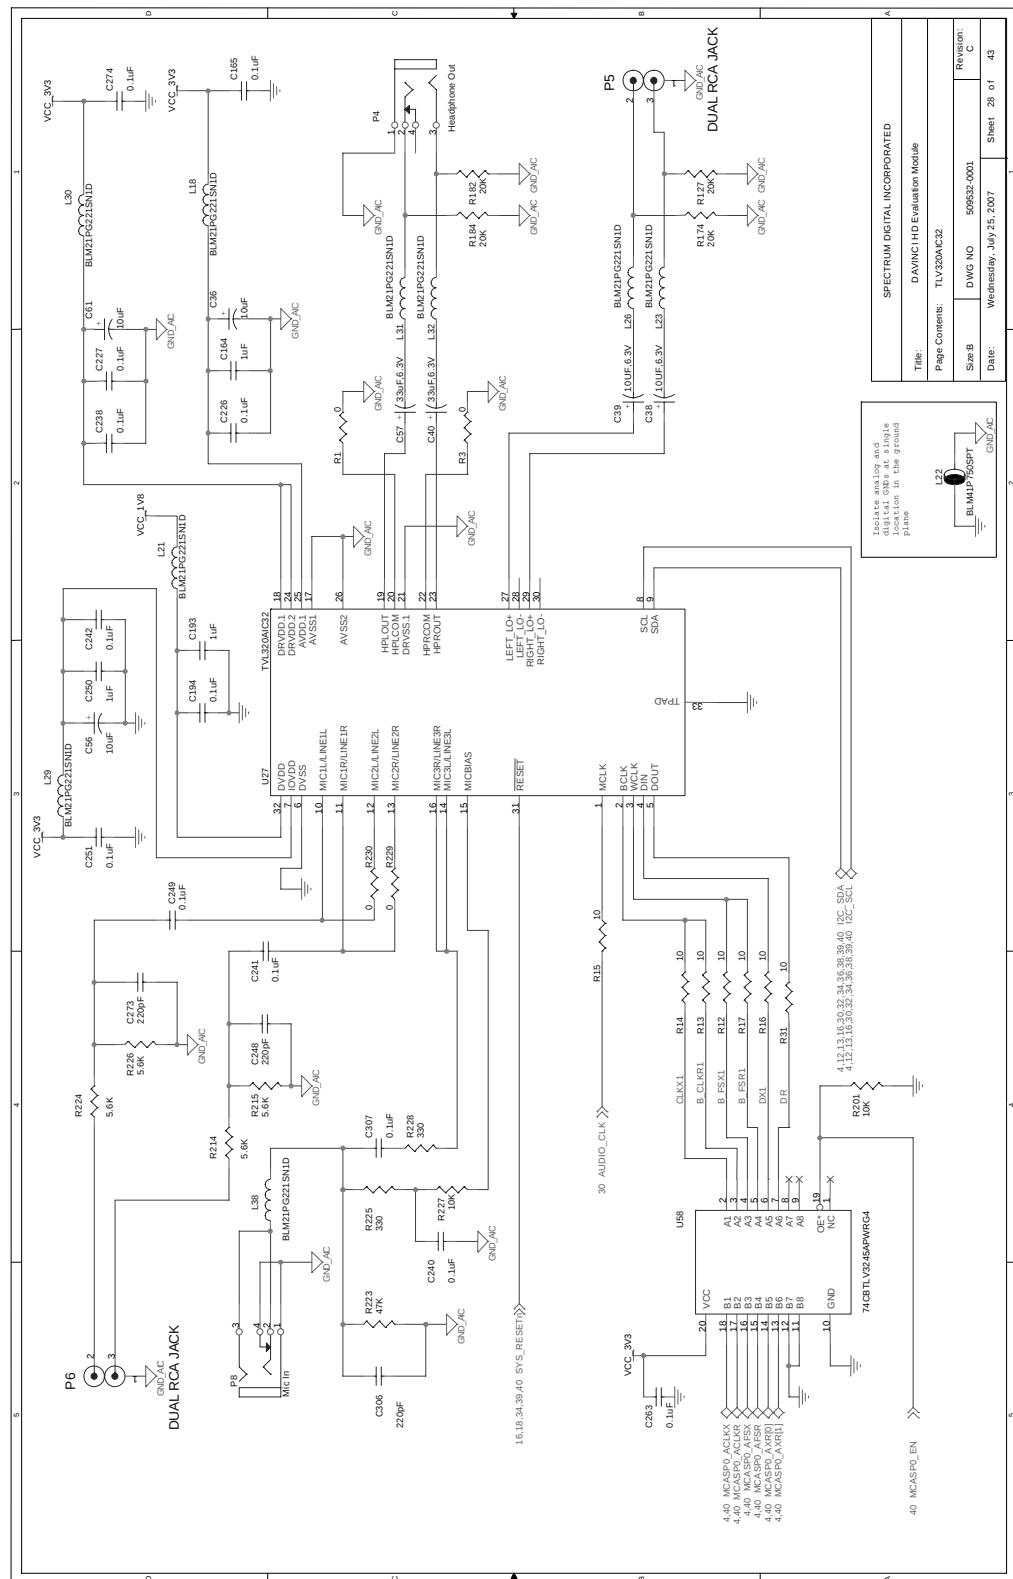



Location of the digital output pins in the ground plane


SPECTRUM DIGITAL INCORPORATED			
Title: DAVINCI HO Evaluation Module			
Page Contents: TLV320AC32			
Size B	DWG NO	595532-0001	Revision: C
Date:	Wednesday, July 25, 2007	Sheet	28 of 43

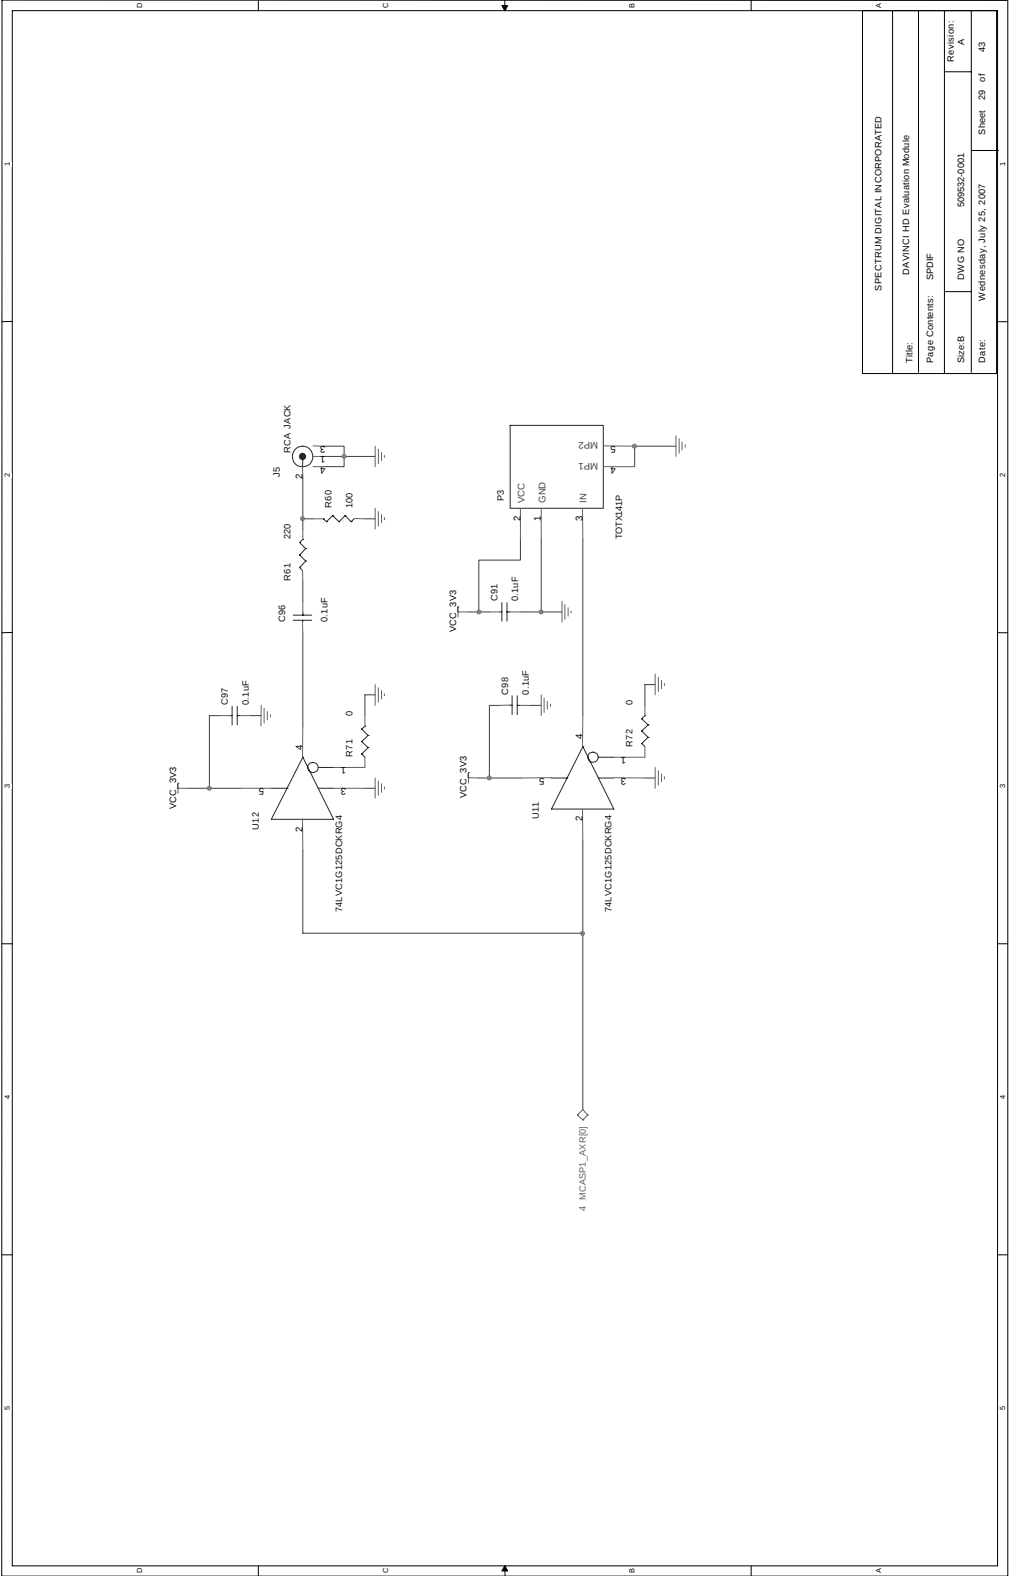





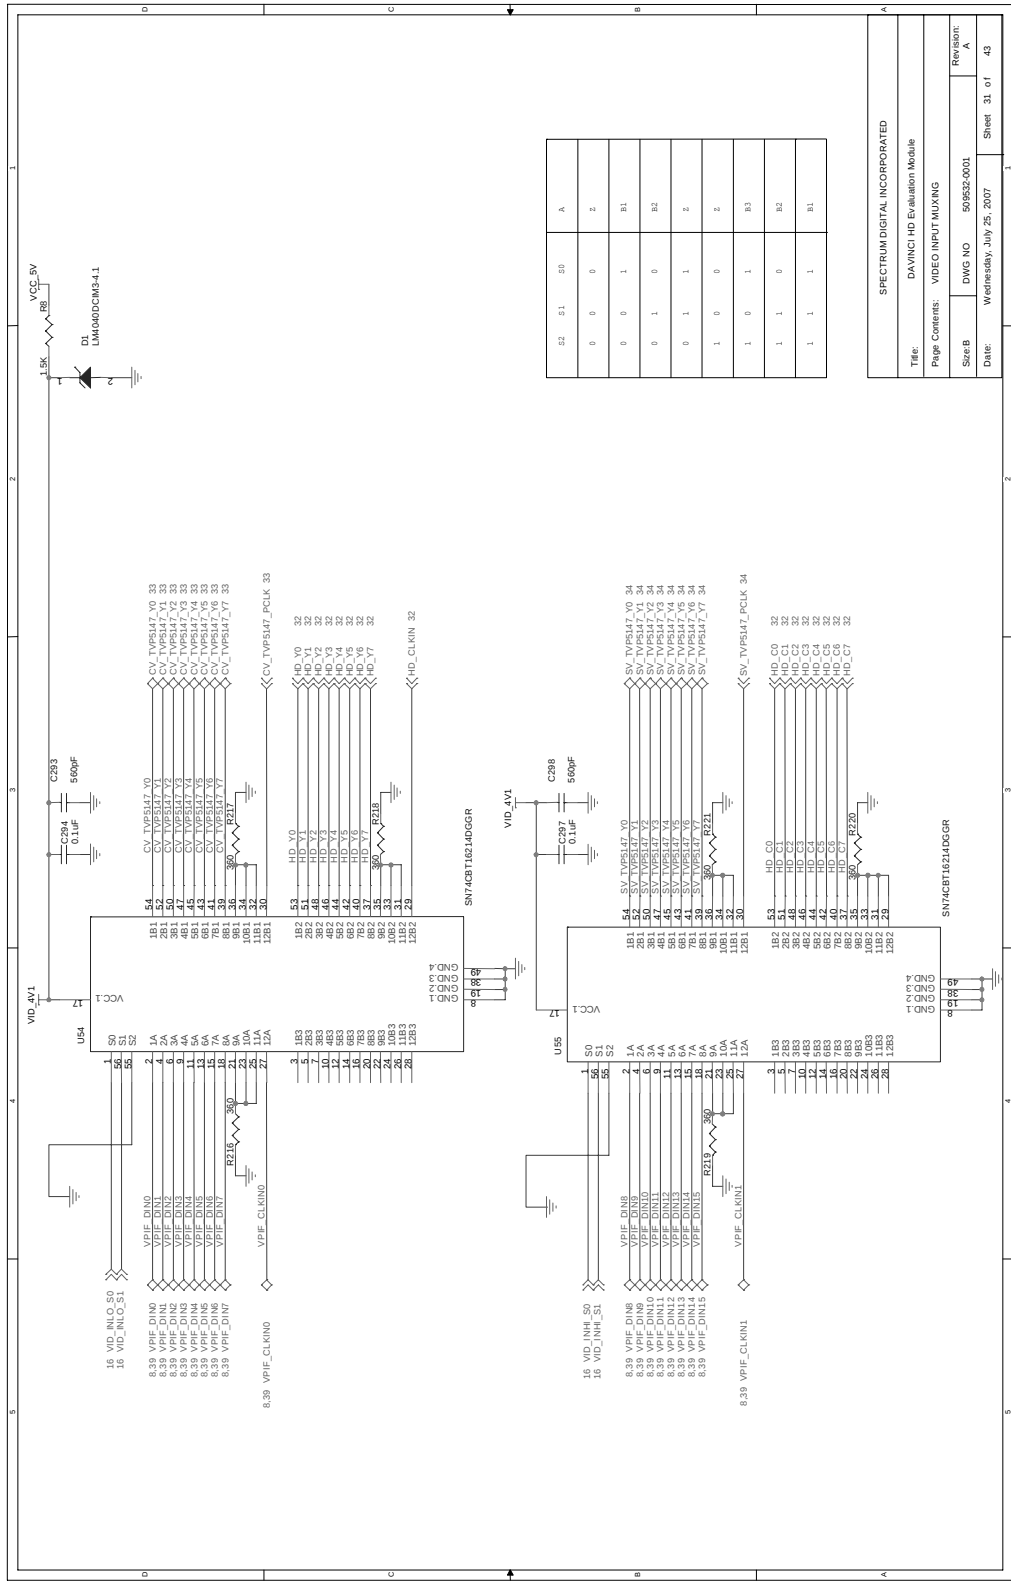


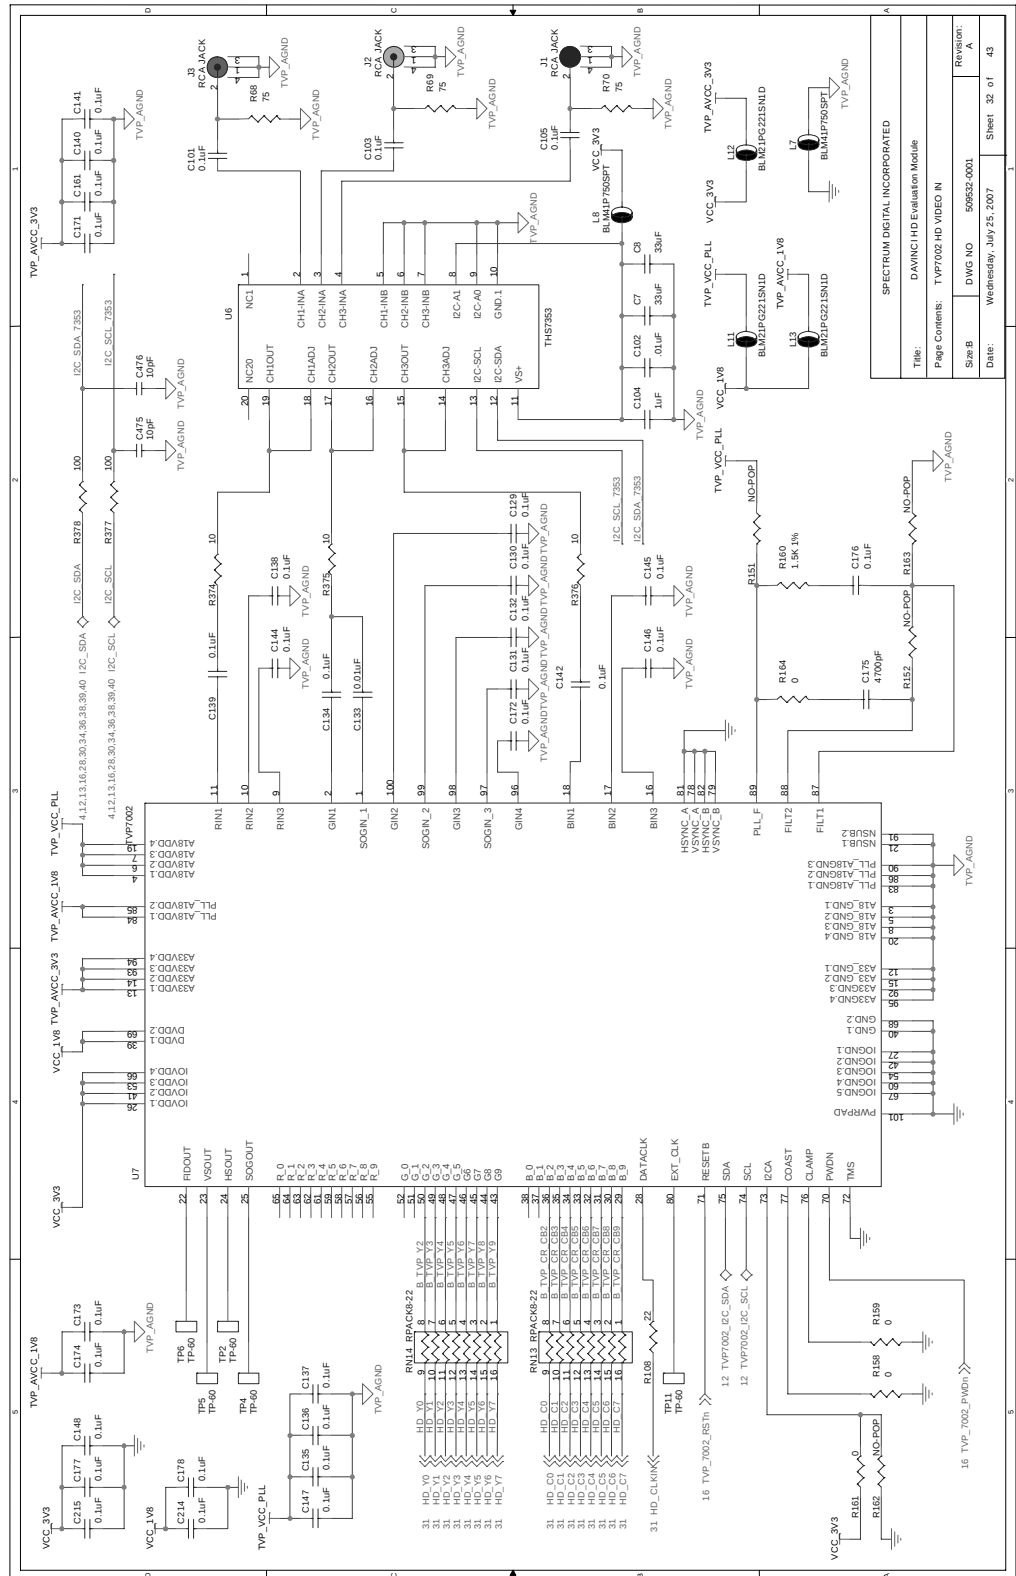


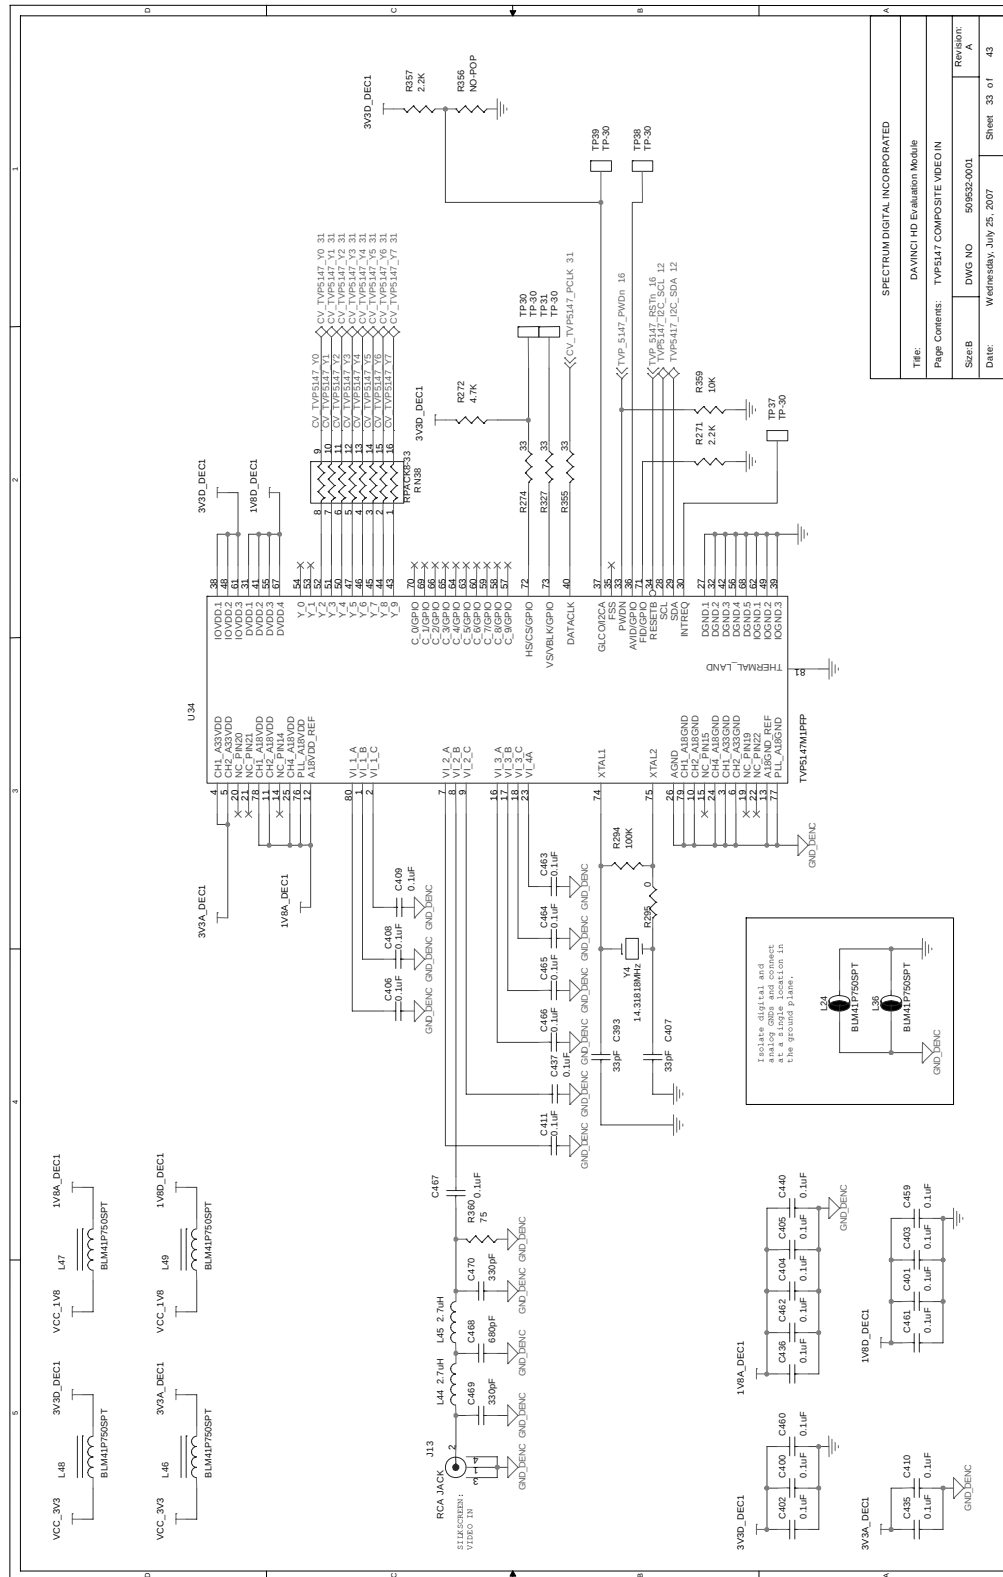

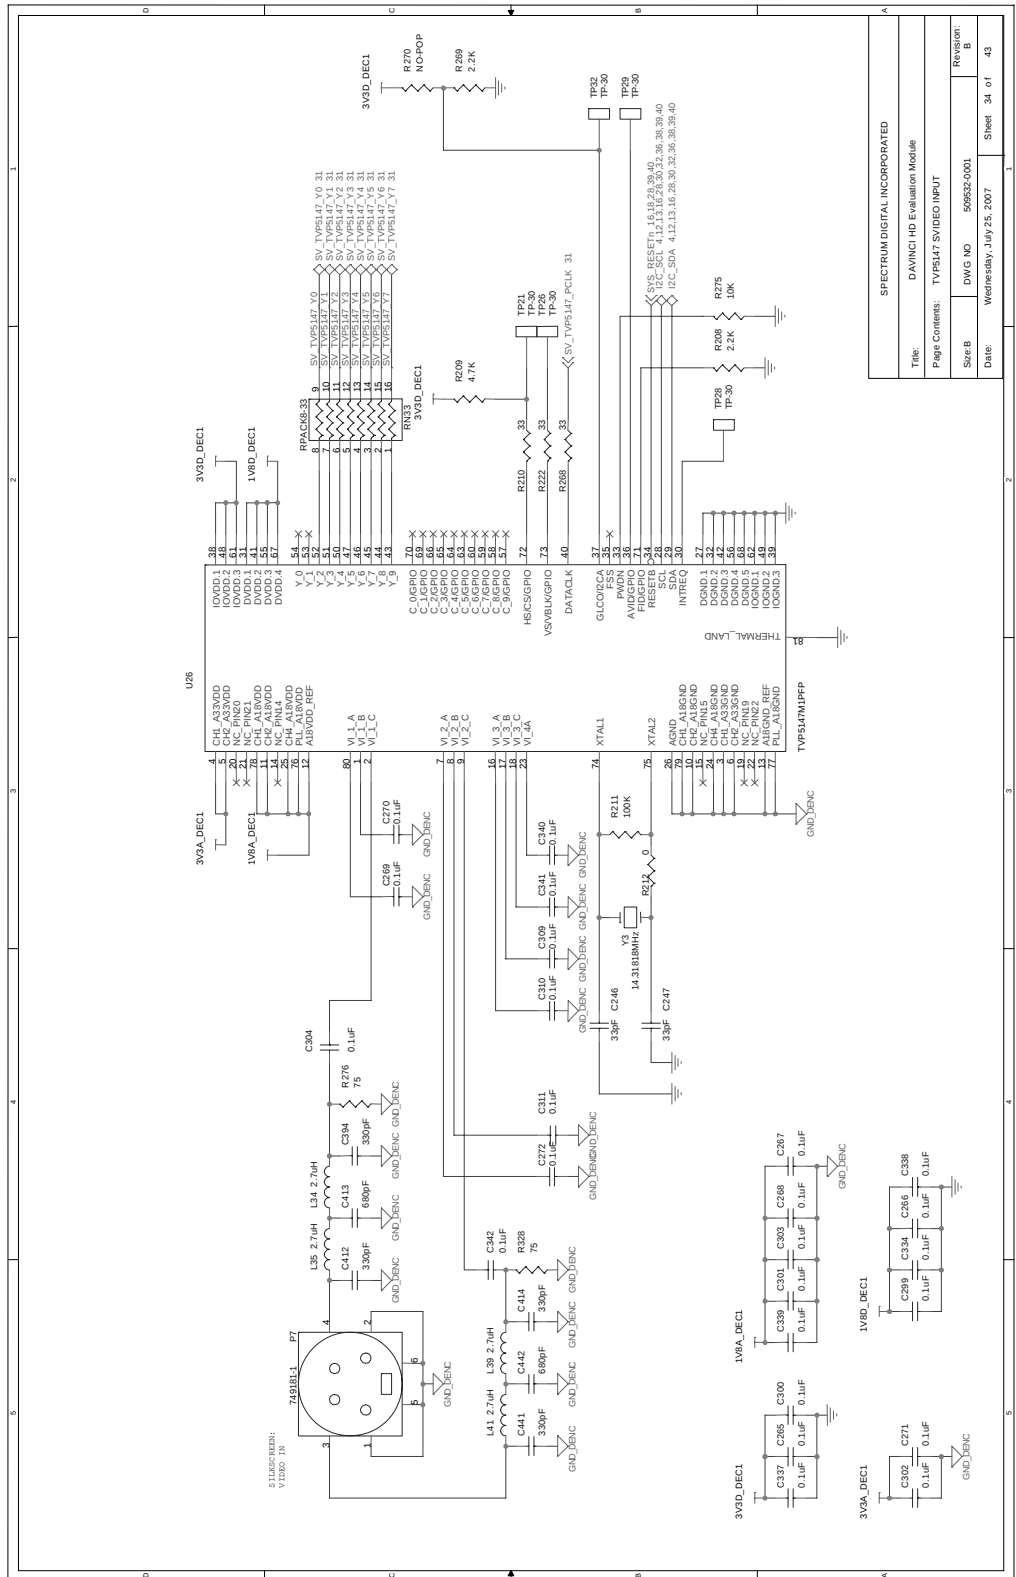


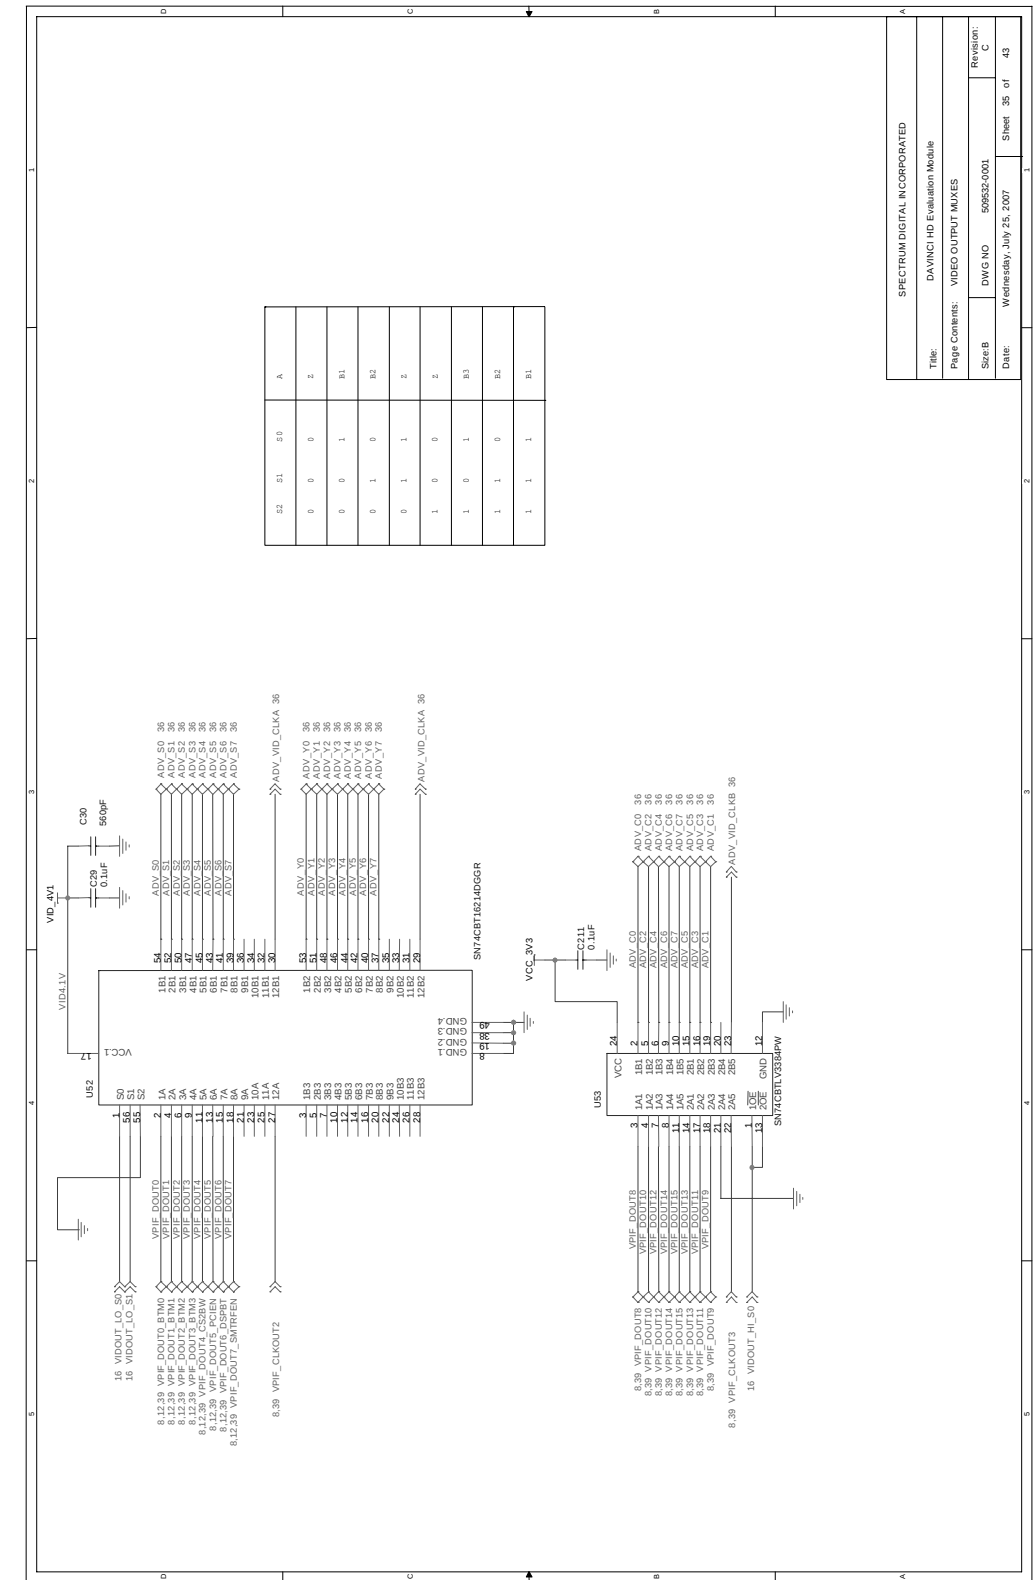


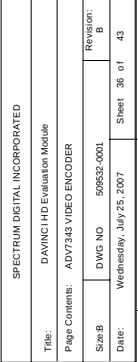


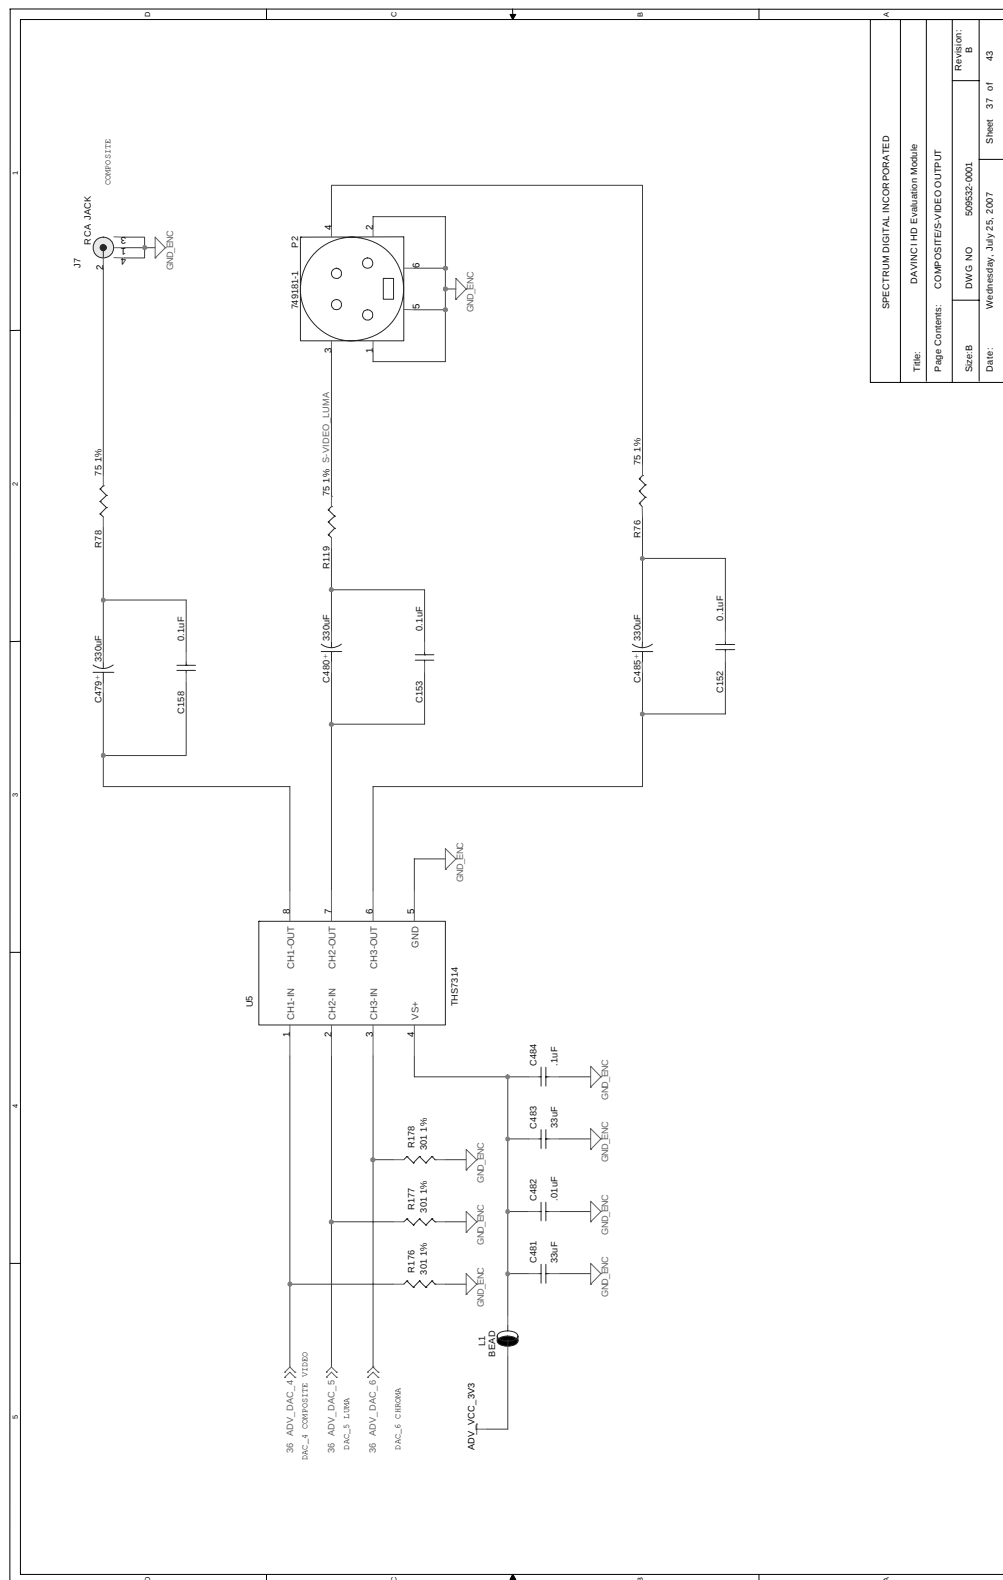





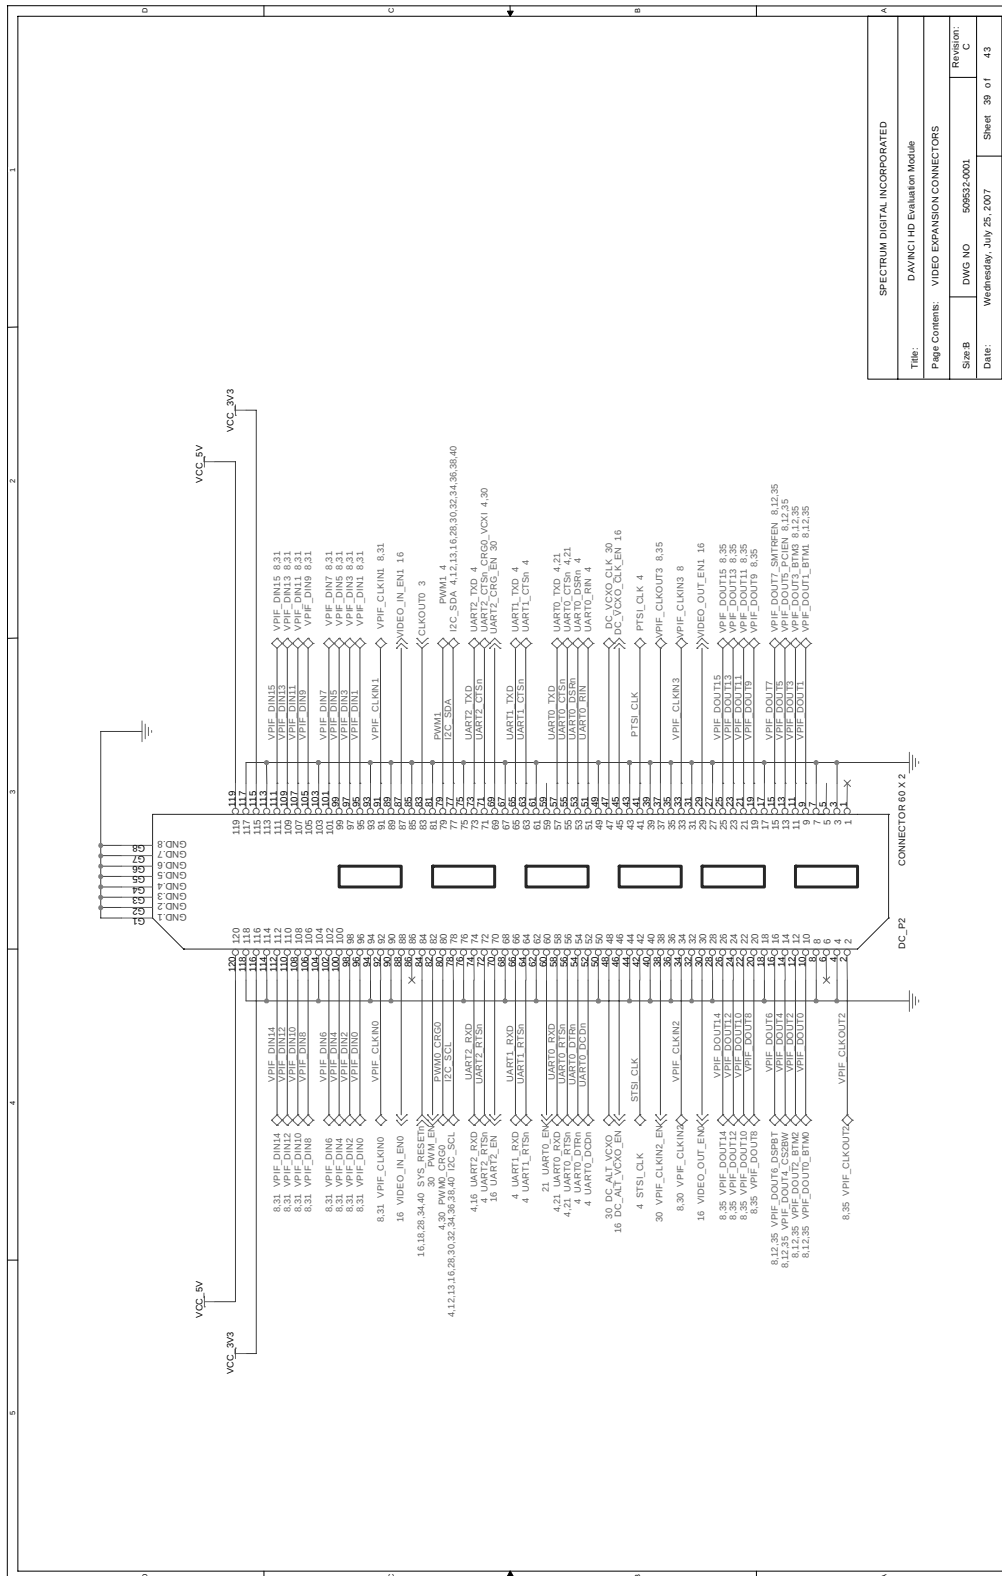

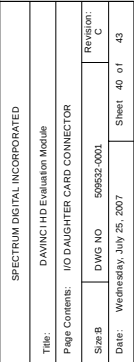

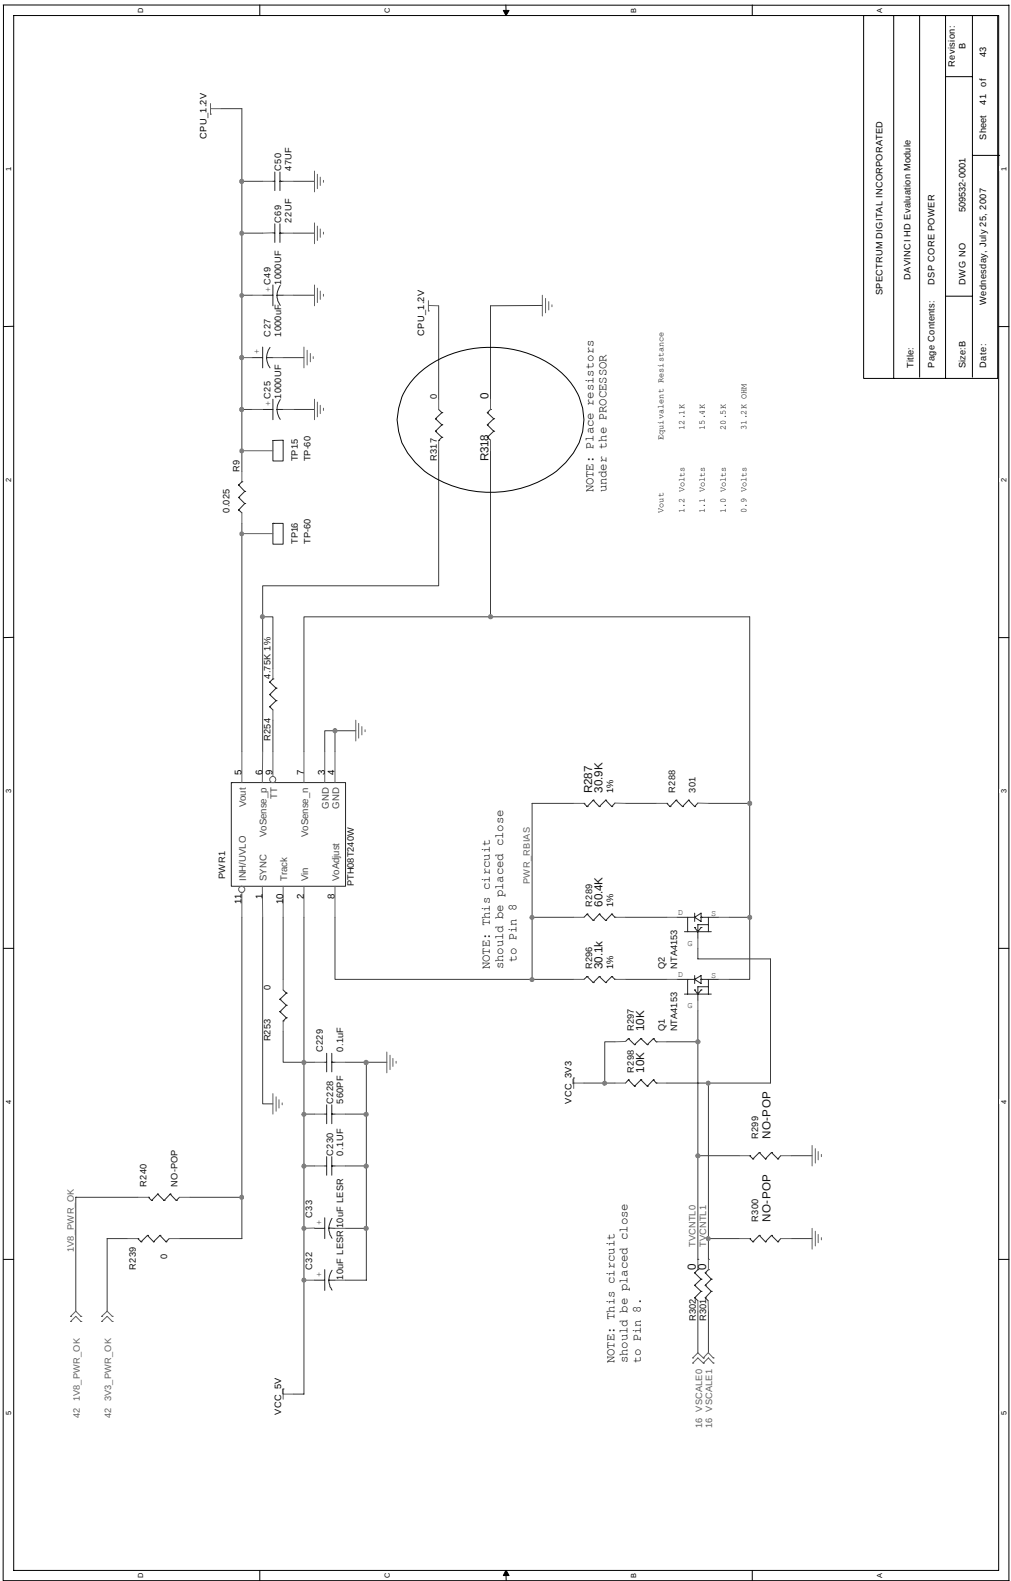

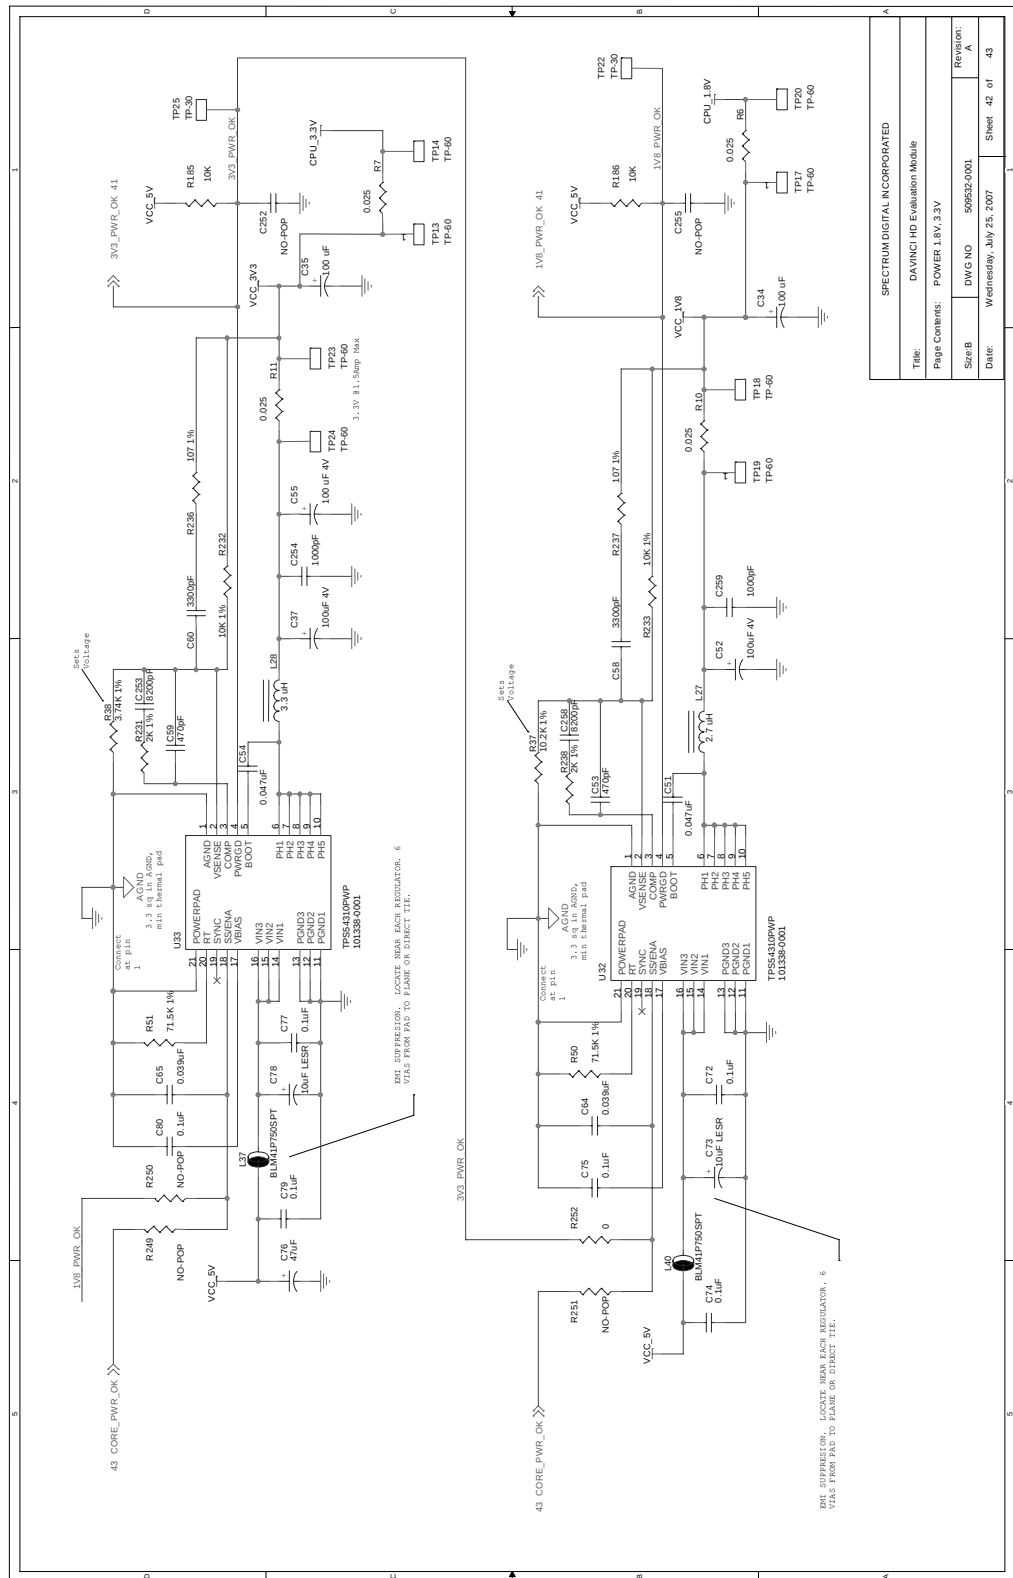


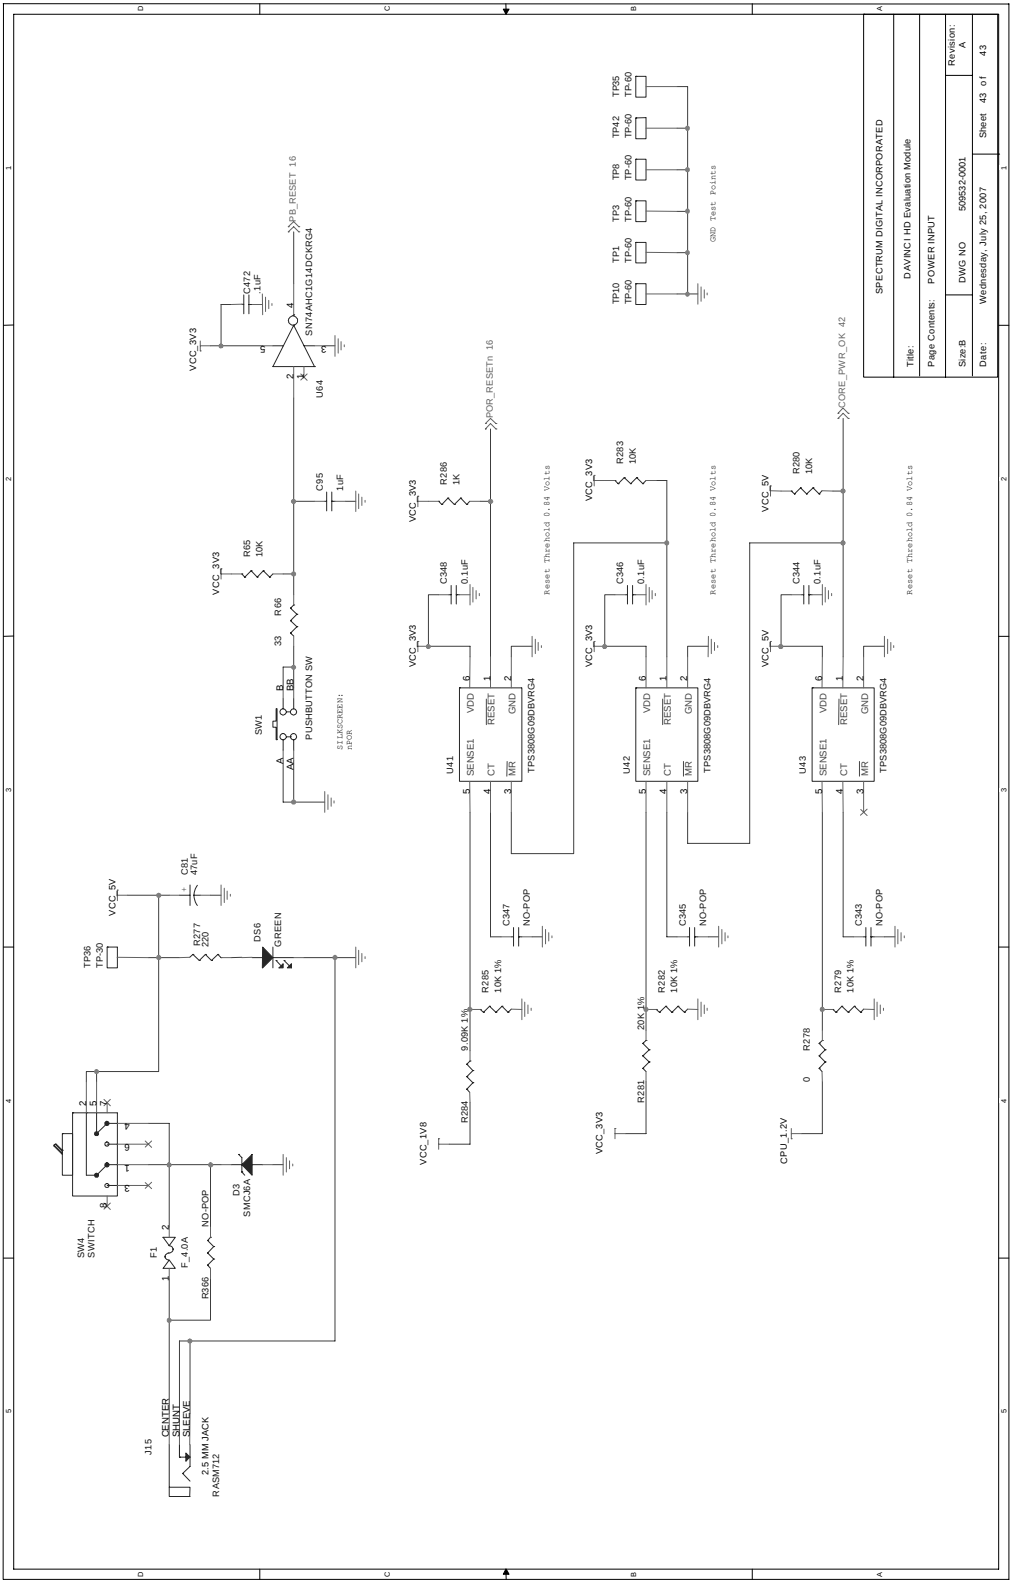


Appendix B

Mechanical Information

This appendix contains the mechanical information about the TMS320DM6467 EVM produced by Spectrum Digital.





Printed in U.S.A., July 2007
509535-0001 Rev A



AMEYA360

Components Supply Platform

Authorized Distribution Brand :



Website :

Welcome to visit www.ameya360.com

Contact Us :

➤ Address :

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd
Minhang District, Shanghai , China

➤ Sales :

Direct +86 (21) 6401-6692
Email amall@ameya360.com
QQ 800077892
Skype ameyasales1 ameyasales2

➤ Customer Service :

Email service@ameya360.com

➤ Partnership :

Tel +86 (21) 64016692-8333
Email mkt@ameya360.com