



# **Panasonic**

# Relay for control panel of 1c 10A, 2c 5A and 1a 16A

# **HN RELAYS**



#### **FEATURES**

#### 1. Slim and compact size

20% smaller (width and height) than existing model\* (with the condition of screw terminal socket for DIN rail) \*Compared with our HC/HJ relay.

## 2. High-capacity and high reliability Max. switching current:

16 A (for 1 Form C type at AC load) Highly reliable contact (for 2 Form C type).

#### 3. Environmentally friendly

Cadmium-free contacts and lead-free solder are used.

## 4. Slim screw terminal socket and PC board terminal socket

Utilizes relay-securing hook for easy relay removal.

One-touch relay removal possible. Terminal sockets with finger protect function available.

#### 5. Full lineup

We added a TM type that can be built into devices.

#### TYPICAL APPLICATIONS

Control panels
Power supply units
Molding machines
Machine tools
Welding equipment
Agricultural equipment
Office equipment
Vending machines
Communications equipment
Amusement machines, etc.

#### ORDERING INFORMATION

	AHN						
HN relays							
Contact arrangement 1: 1 Form C 2: 2 Form C 3: 1 Form A (TM type only)							
Terminal arrangement 1: AC plug-in type 2: DC plug-in type 5: AC TM type 6: DC TM type							
Type classification 0: Standard 1: With LED indication 2: With diode 3: With diode and LED indica	tion						
Nominal coil voltage 05: 5 V, 06: 6 V, 12: 12 V, 24: X0: 100/110 V AC, 100 V DC X1: 110/120 V AC, 110 V DC Y0: 200/220 V AC Y2: 220/240 V AC	,	8: 48 \	/				
Contact material N:AgNi type (2 Form C type Nil: AgSnO <sub>2</sub> type (1 Form C,	•	A TM t	type)			J	

Note: Certified by UL/C-UL and VDE.

(Please consult us for the VDE approved TM type.)

#### **TYPES**

#### 1. Plug-in type

Coil voltage	1 Form C	2 Form C
Coll voltage	Part No.	Part No.
5V DC	AHN12005	AHN22005N
6V DC	AHN12006	AHN22006N
12V DC	AHN12012	AHN22012N
24V DC	AHN12024	AHN22024N
48V DC	AHN12048	AHN22048N
100V DC	AHN120X0	AHN220X0N
110V DC	AHN120X1	AHN220X1N
12V AC	AHN11012	AHN21012N
24V AC	AHN11024	AHN21024N
100/110V AC	AHN110X0	AHN210X0N
110/120V AC	AHN110X1	AHN210X1N
200/220V AC	AHN110Y0	AHN210Y0N
220/240V AC	AHN110Y2	AHN210Y2N

#### Note: Packing quantity; Carton: 50 pcs, Case: 500 pcs.

#### 2. Plug-in type (with LED indication)

Coil voltage	1 Form C	2 Form C
Coll voltage	Part No.	Part No.
5V DC	AHN12105	AHN22105N
6V DC	AHN12106	AHN22106N
12V DC	AHN12112	AHN22112N
24V DC	AHN12124	AHN22124N
48V DC	AHN12148	AHN22148N
100V DC	AHN121X0	AHN221X0N
110V DC	AHN121X1	AHN221X1N
12V AC	AHN11112	AHN21112N
24V AC	AHN11124	AHN21124N
100/110V AC	AHN111X0	AHN211X0N
110/120V AC	AHN111X1	AHN211X1N
200/220V AC	AHN111Y0	AHN211Y0N
220/240V AC	AHN111Y2	AHN211Y2N

Note: Packing quantity; Carton: 50 pcs, Case: 500 pcs.

#### 3. Plug-in type (with diode)

Coil voltage	1 Form C	2 Form C	
Coli voltage	Part No.	Part No.	
5V DC	AHN12205	AHN22205N	
6V DC	AHN12206	AHN22206N	
12V DC	AHN12212	AHN22212N	
24V DC	AHN12224	AHN22224N	
48V DC	AHN12248	AHN22248N	
100V DC	AHN122X0	AHN222X0N	
110V DC	AHN122X1	AHN222X1N	

Note: Packing quantity; Carton: 50 pcs, Case: 500 pcs.

#### 4. Plug-in type (with diode and LED indication)

Coil voltage	1 Form C	2 Form C	
Coll voltage	Part No.	Part No.	
5V DC	AHN12305	AHN22305N	
6V DC	AHN12306	AHN22306N	
12V DC	AHN12312	AHN22312N	
24V DC	AHN12324	AHN22324N	
48V DC	AHN12348	AHN22348N	
100V DC	AHN123X0	AHN223X0N	
110V DC	AHN123X1	AHN223X1N	

Note: Packing quantity; Carton: 50 pcs, Case: 500 pcs.

#### 5. TM type

Coil voltage	1 Form A
Coll voltage	Part No.
5V DC	AHN36005
6V DC	AHN36006
12V DC	AHN36012
24V DC	AHN36024
48V DC	AHN36048
100V DC	AHN360X0
110V DC	AHN360X1
12V AC	AHN35012
24V AC	AHN35024
100/110V AC	AHN350X0
110/120V AC	AHN350X1
200/220V AC	AHN350Y0
220/240V AC	AHN350Y2

Note: Packing quantity; Carton: 50 pcs, Case: 500 pcs. \* For sockets and terminal sockets, see page page 7.

2 ds\_61C05\_en\_hn: 120713D

#### **RATING**

#### 1. Coil data

#### 1) DC coils

Coil voltage	Pick-up voltage (at 20°C 68°F)	Drop-out voltage (at 20°C 68°F)	Nominal coil current [±20%]	Coil resistance (at 20°C 68°F)	Nominal operating power	Max. allowable voltage (at 20°C 68°F)
5V DC			106.4mA	47Ω [±10%]		
6V DC	70%V or less of		88.2mA	68Ω [±10%]		
12V DC		15%V or more of	44.4mA	270Ω [±10%]		4700()/ (
24V DC	nominal voltage		22.0mA	1,090Ω [±10%]	0.53W	170%V of nominal voltage
48V DC	(Initial) (Initial)	(Initial)	11.0mA	4,350Ω [±10%]		nominal voltage
100V DC			5.3mA	18,870Ω [±10%]		
110V DC			4.8mA	22,830Ω [±10%]		

#### 2) AC coils (50/60Hz)

Coil voltage	Pick-up voltage	Drop-out voltage	Nominal coil current [±20%]		Nominal operating power		Max. Allowable voltage	
Con voitage	(at 20°C 68°F)	(at 20°C 68°F)	50Hz	60Hz	50Hz	60Hz	(at 20°C 68°F)	
12V AC			93mA	75mA		Approx. 0.9 to 1.2 V A	140%V of nominal voltage	
24V AC		30%V or less of 30%V or more of nominal voltage (Initial) (Initial)	46.5mA	37.5mA				
100/110V AC	80%V or less of		11.0/13.0mA	9.0/10.6mA	Approx.			
110/120V AC			10.0/11.8mA	8.2/9.7mA	1.1 to 1.4 V A			
200/220V AC	()		5.5/6.5mA	4.5/5.3mA				
220/240V AC			5.0/5.9mA	4.1/4.8mA				

#### 2. Specifications (Plug-in Standard type and TM type)

Characteristics		Item		Specifications			
Contact	Arrangement		1 Form C	2 Form C	1 Form A (TM type)		
	Contact resistance (Initial)		Max. 100 mΩ (By voltage drop 6 V DC 1A)	Max. 50 mΩ (By voltage drop 6 V DC 1A)	Max. 100 mΩ (By voltage drop 6 V DC 1A)		
	Contact material		AgSnO <sub>2</sub> type	AgNi type	AgSnO <sub>2</sub> type		
	Nominal switching ca	apacity (resistive load)	10A 250V AC, 10A 30V DC	5A 250V AC, 5A 30V DC	16A 250V AC, 16A 30V DC		
	Max. switching power	r (resistive load)	4,000VA, 300W	1,250VA, 150W	4,000VA, 480W		
Datin -	Max. switching voltage	ge	250V AC, 30V DC				
Rating	Max. switching curre	nt	16A (at AC load), 10A (at DC load)	5A	16A		
	Nominal operating po	ower	0.53W, 0.9VA	•	•		
	Min. switching capac	tity (Reference value)*1	100mA 5V DC	1mA 1V DC	100mA 5V DC		
	Insulation resistance (Initial)		Min. 1,000M $\Omega$ (at 500V DC) Measurement at same location as "Breakdown voltage" section.				
	Breakdown voltage (Initial)	Between open contacts	1,000 Vrms for 1min. (Detection current: 10mA.)				
		Between contact sets	_	3,000 Vrms for 1min. (Detection current: 10mA.)			
		Between contact and coil	5,000 Vrms for 1min. (Detection current: 10mA.)				
onaraotonotico	Temperature rise (co	oil) (at 70°C 158°F)	Max. 60°C 140°F (By resistive method, nominal coil voltage)				
	Operate time (at 20°	C 68°F)*2	Max. 15ms (Nominal coil voltage	ge applied to the coil, excluding o	contact bounce time.)		
	Release time (at 20°	C 68°F)*2	Max. 5ms (Nominal coil voltage applied to the coil, excluding contact bounce time.) (without diode)/Max. 20ms (with diode)				
	Shock resistance	Functional	Min. 100 m/s² (Half-wave pulse of sine wave: 11 ms; detection time: 10μs.)				
Mechanical	SHOCK resistance	Destructive	Min. 1,000 m/s <sup>2</sup> (Half-wave pul	se of sine wave: 6 ms.)			
characteristics	Vibration resistance	Functional	10 to 55 Hz at double amplitud	e of 1.5 mm (Detection time: 10μ	ıs.)		
	VIDIALION TESISLANCE	Destructive	10 to 55 Hz at double amplitud	le of 1.5 mm			
Expected life	Mechanical		AC: Min. 107; DC: Min. 2×107 (at 300 times/min.)				
Expected life	Electrical (at nomina	I switching capacity)	Min. 10 <sup>5</sup> (at 20 times/min.) Min. 10 <sup>5</sup> (at 10 times/min.)				
Conditions		tion, transport and storage*3 ndensing at low temperature)	Ambient temperature: -40°C to +70°C -40°F to +158°F Humidity: 5 to 85% R.H. (Not freezing and condensing at low temperature)				
Conditions	Max. Operating spee	ed	20 times/min. (at nominal switch	10 times/min. (at nominal switching capacity			
Unit weight			Approx. 19 g .67 oz	Approx. 17 g .60 oz	Approx. 19 g .67 oz		


ds\_61C05\_en\_hn: 120713D 3

Notes:
\*1. This value can change due to the switching frequency, environmental conditions and desired reliability level, therefore it is recommended to check this with the actual load.
\*2. For the AC coil types, the operate/release time will differ depending on the phase.


<sup>\*3.</sup> The upper limit of the ambient temperature is the maximum temperature that can satisfy the coil temperature rise value. Refer to "6. Usage, Storage and Transport Conditions" in AMBIENT ENVIRONMENT section in Relay Technical Information.

#### REFERENCE DATA

1-(1). Max. switching capacity (1 Form C and 1 Form A)

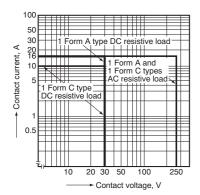


1-(2). Max. switching capacity (2 Form C)

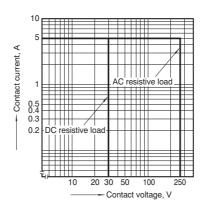


2-(1). Coil temperature rise (1 Form C/AC and 1 Form A/AC types)

Measured portion: Inside the coil Ambient temperature: 70°C 158°F

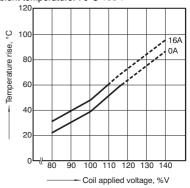


2-(2). Coil temperature rise (1 Form C/DC and 1 Form A/DC types)


Measured portion: Inside the coil Ambient temperature: 70°C 158°F

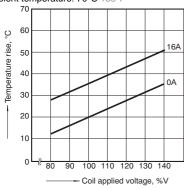

2-(3). Coil temperature rise (2 Form C/AC type)
Measured portion: Inside the coil
Ambient temperature: 70°C 158°F

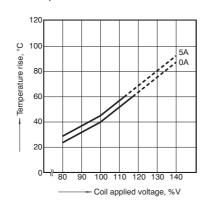

2-(4). Coil temperature rise (2 Form C/DC type) Measured portion: Inside the coil Ambient temperature: 70°C 158°F

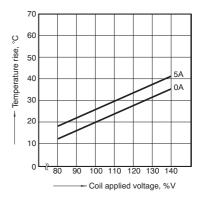

#### **DIMENSIONS** (mm inch)


#### 1. Plug-in type 1 Form C

**CAD Data** 



Max. .512

External dimensions

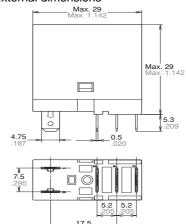



 Dimension :
 Tolerance


 Less than 1mm .039 inch:
 ±0.1 ±.004


Min. 1mm .039 inch less than 3mm .118 inch:  $\pm 0.2 \pm .008$  Min. 3mm .118 inch:  $\pm 0.3 \pm .012$ 

Download **CAD Data** from our Web site.

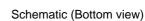

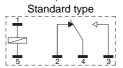

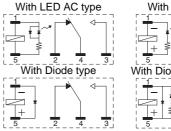

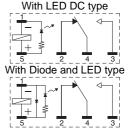



With Diode and LED type


#### 2. Plug-in type 2 Form C

#### CAD Data



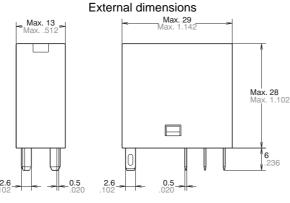


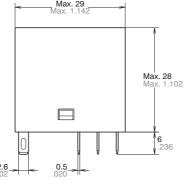

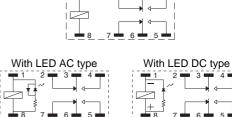

Schematic (Bottom view)

Standard type

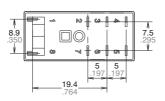



Dimension: **Tolerance** Less than 1mm .039 inch: ±0.1 ±.004 ±0.2 ±.008 Min. 1mm .039 inch less than 3mm .118 inch: Min. 3mm .118 inch: ±0.3 ±.012


With Diode type

#### 3. TM type 1 Form A



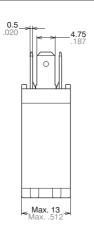

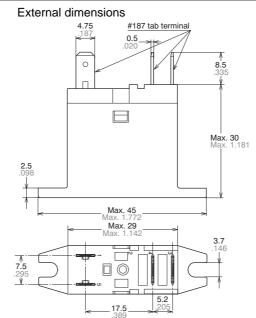

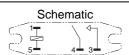

#### Mounting hole dimensions



Notes: 1. When mounting the TM type, since the cover is made from polycarbonate, please use a washer in order to prevent damage,

deformation, and loosening.

2. Suitable tightening torque is 0.3 to 0.5 N·m.

<u>Dimension</u>: <u>Tolerance</u> Less than 1mm .039 inch: ±0.1 ±.004 Min. 1mm .039 inch less than 3mm .118 inch: ±0.2 ±.008 Min. 3mm .118 inch: ±0.3 ±.012

#### **SAFETY STANDARDS**

	File No.	Certification authority: UL/C-UL	File No.	Certification authority: VDE
1 Form C	E43149*	10A 277V AC, 10A 30V DC, TV-5	40012003	10A 250V AC (cosφ=1.0), 10A 30V DC (0ms)
2 Form C	E43149*	5A 277V AC, 5A 30V DC, TV-3	40012003	5A 250V AC (cosφ=1.0), 5A 30V DC (0ms)
1 Form A (TM type)	E43149*	16A 277V AC, 16A 30V DC, TV-5		**

<sup>\*</sup> CSA standard: Certified by C-UL

<sup>\*\*</sup> Please consult us.

#### NOTES

#### 1. Coil applied voltage

To ensure proper operation, the voltage applied to both terminals of the coil should be  $\pm 5\%$  (at 20°C  $68^{\circ}$ F) the rated operating voltage of the coil.

Also, be aware that the pick-up and dropout voltages will fluctuate depending on the ambient temperature and operating conditions.

#### 2. LED indications

The light of the light emitting diode is what displays operation. If voltage remains after relay dropout, the LED might illuminate briefly.

#### 3. Switching lifetime

The switching lifetime is defined under the standard test condition specified in the JIS C 5442(\*2) standard (temperature 15 to 35°C 59 to 95°F, humidity 25 to 75% R.H.). Check this with the real device as it is affected by coil driving circuit, load type, activation frequency, activation phase, ambient conditions and other factors.

Also, be especially careful of loads such as those listed below.

- 1) When used for AC load-operating and the operating phase is synchronous. Rocking and fusing can easily occur due to contact shifting.
- 2) High-frequency load-operating When high-frequency opening and closing of the relay is performed with a load that causes arcs at the contacts, nitrogen and oxygen in the air is fused by the arc energy and HNO₃ is formed. This can corrode metal materials.

Three countermeasures for these are listed here.


- (1) Incorporate an arc-extinguishing circuit.
- (2) Lower the operating frequency
- (3) Lower the ambient humidity

#### 4. Direct mount type (TM type)

If the current to the connection terminal will exceed 10 A, we recommend connecting with solder. If you are going to use a tab terminal when the current will exceed 10 A, make sure to verify the temperature rise on the receptacle side under actual conditions before using. Please be careful, because excessive stress on the TM terminal can cause fluctuations in characteristics and damage.

#### 5. Conditions for operation, transport and storage

- 1) Ambient temperature, humidity, and atmospheric pressure during usage, transport, and storage of the relay:
- (1) Temperature:
- $-40 \text{ to } +70^{\circ}\text{C} 40 \text{ to } +158^{\circ}\text{F}$
- (2) Humidity: 5 to 85% RH (Avoid freezing and condensation.) The humidity range varies with the temperature. Use within the range indicated in the graph below. Temperature and humidity range for usage, transport, and storage

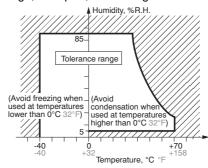

- (3) Atmospheric pressure: 86 to 106 kPa
- 2) Condensation

Condensation forms when there is a sudden change in temperature under high temperature and high humidity conditions. Condensation will cause deterioration of the relay insulation.

3) Freezing

Condensation or other moisture may freeze on the relay when the temperatures is lower than 0°C 32°F.

This causes problems such as sticking of movable parts or operational time lags.

4) Low temperature, low humidity environments

The plastic becomes brittle if the relay is exposed to a low temperature, low humidity environment for long periods of

#### 6. Diode characteristics

1) Reverse breakdown voltage: Min. 1.000V (with diode type) Min. 400V (with diode and LED indication type)

#### 7. Diode type

Since the diode inside the relay coil are designed to absorb the counter emf, the element may be damaged if a large surge, etc., is applied to the diode. If there is the possibility of a large surge voltage from the outside, please implement measures to absorb it.

8. Please connect DC coil types with LED and built-in diode correctly by verifying the coil polarity ("+" and "-"). Connecting with reverse polarity will cause the LED not to light and damage the built-in diode due to its specification.

#### 9. Installation

If you will be installing adjacent to other relays, please keep a distance of at least 5 mm from the relay.

### For Cautions for Use, see Relay Technical Information.

ds 61C05 en hn: 120713D

# **Panasonic**

#### **ACCESSORIES**

# HN RELAYS (Sockets and DIN rail terminal sockets)

#### **TYPES**

Туре	No. of poles	ltem	Part No.
PC board terminal socket	1-pole	HN1 PC board terminal socket	AHNA13
PC board terminal socket	2-pole	HN2 PC board terminal socket	AHNA23
	1-pole	HN1 screw terminal socket	AHNA11
DIN rail terminal socket		HN1 screw terminal socket (Finger protect type)	AHNA11P
Din fali terminai socket	2 nolo	HN2 screw terminal socket	AHNA21
	2-pole	HN2 screw terminal socket (Finger protect type)	AHNA21P

Standard packing: Carton: 10 pcs.; Case: 100 pcs. Note: Certified by UL/C-UL

#### **RATING**

#### Specifications (PC board terminal sockets and terminal sockets)

Item Performance								
Туре		HN1 screw terminal socket	HN1 screw terminal socket (Finger protect type)	HN1 PC board terminal socket	HN2 screw terminal socket	HN2 screw terminal socket (Finger protect type)	HN2 PC board terminal socket	
Contact arrang	gement	1 Form C			2 Form C			
Max. continuo (Ambient temp –40 to +70°C		16A*	10A	10A	5A 5A 5A		5A	
Breakdown	Between open contacts	1, 000 Vrms for 1 min. (Detection current: 10mA)						
voltage	Between contact sets	— 3, 000 Vrms for 1 min. (Detection cur				current: 10mA)		
(Initial)	Between contact and coil		5, 000 Vrms for 1 min. (Detection current: 10mA)					
Initial insulatio	n resistance	1, 000 MΩ between each terminal (500V DC)			•			

 $<sup>^{\</sup>star}$  When using with current of 16 A (for HN1 screw terminal socket), the maximum ambient temperature is 50°C 122°F.

External dimensions

When using between 50°C and 70°C, please reduce by 0.1 A/°C.

Note: In order to prevent breakage and disfiguring, the screw tightening torque for the terminal socket should be within the range of 0.5 to 0.8 N·m.


#### **DIMENSIONS** (mm inch)

(AHNA13)

#### 1. HN1 PC board terminal socket

Max. 36.5 Max. 1.43

#### PC board pattern (Bottom view)

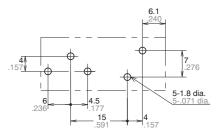

Tolerance: ±0.1 ±.004

**Dimension: Tolerance** Less than 1mm .039inch: ±0.1 ±.004 Min. 1mm .039inch less than 3mm .118 inch:  $\pm 0.2 \pm .008$ 

Min. 3mm .118 inch: ±0.3 ±.012

ds\_61C05\_en\_hn: 080313D


#### 2. HN2 PC board terminal socket

(AHNA23)

#### External dimensions

# Max. 34 Max. 1.339 Max. 36.5 Max. 1.437 .012

#### PC board pattern (Bottom view)

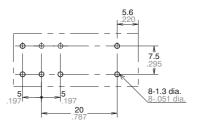

Tolerance:  $\pm 0.1 \pm .004$ 


**Dimension: Tolerance** Less than 1mm .039inch: ±0.1 ±.004 Min. 1mm .039inch less than 3mm .118 inch:  $\pm 0.2 \pm .008$ Min. 3mm .118 inch: ±0.3 ±.012

#### 3. HN1 Screw terminal socket

17.5 .689


(AHNA11) External dimensions \***58** \*2.283 6

**20** .787

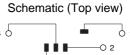

# Q 5

#### Mounting hole dimensions

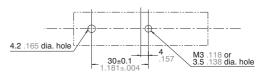


Tolerance:  $\pm 0.5 \pm .020$ \* Reference in case of using DIN rail (ATA48011)

Notes: 1. In order to prevent breakage and disfiguring, the screw tightening torque for the terminal socket should be within the range of 0.5 to 0.8 N·m. 2. When attaching the terminal socket directly to a chassis, please use the metric coarse thread screw M3 × 16.

**35.4** 1.394


8 ds\_61C05\_en\_hn: 080313D

#### 4. HN1 Screw terminal socket (Finger protect type)

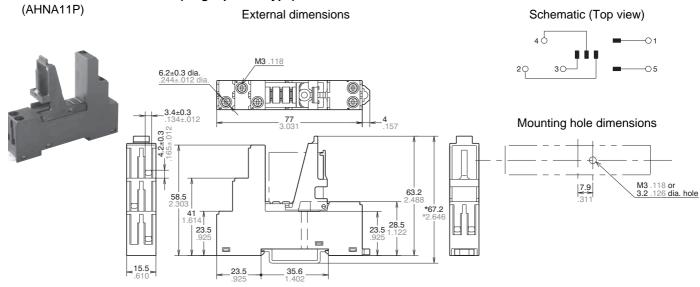

Tolerance: ±0.5 ±.020 \* Reference in case of using DIN rail (ATA48011)

Notes: 1. In order to prevent breakage and disfiguring, the screw tightening torque for the terminal socket should be within the range of 0.5 to 0.8 N·m. 2. When attaching the terminal socket directly to a chassis, please use the metric coarse thread screw M3 × 30. 3. Use rod or plate terminals, etc. (You cannot use Y-shape or round terminals.)

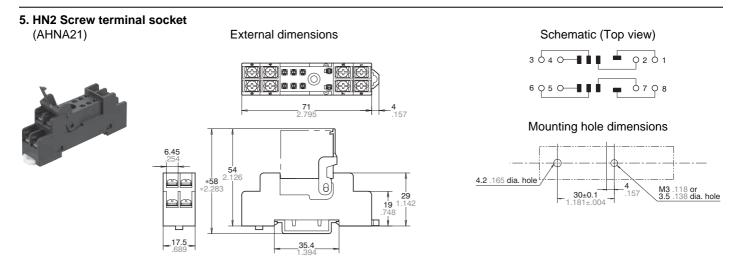

Tolerance:  $\pm 0.5 \pm .020$ \* Reference in case of using DIN rail (ATA48011)


Notes: 1. In order to prevent breakage and disfiguring, the screw tightening torque for the terminal socket should be within the range of 0.5 to 0.8 N·m.

2. When attaching the terminal socket directly to a chassis, please use the metric coarse thread screw  $M3 \times 16$ .

#### 6. HN2 Screw terminal socket (Finger protect type)

(AHNA21P)

External dimensions

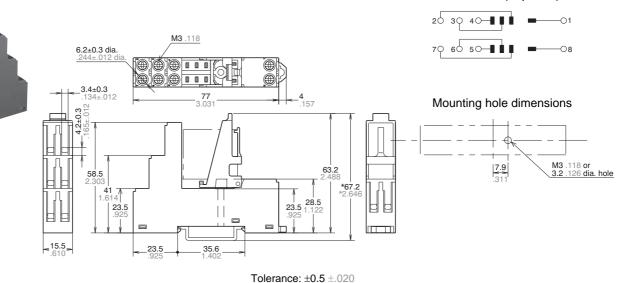

\* Reference in case of using DIN rail (ATA48011)


Notes: 1. In order to prevent breakage and disfiguring, the screw tightening torque for the terminal socket should be within the range of 0.5 to 0.8 N·m.

- 2. When attaching the terminal socket directly to a chassis, please use the metric coarse thread screw M3 imes 30.
- 3. Use rod or plate terminals, etc. (You cannot use Y-shape or round terminals.)


#### **NOTES**

#### About the relay-securing hook


- Screw terminal socket
- 1) Installation of the securing hook is easily performed by pressing upward in the direction of the arrows.

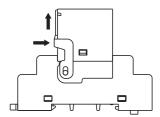


2) Removal of the securing hook is easily performed by releasing the hook and pressing down, as shown in the figure.

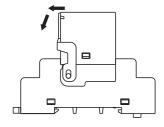

- Screw terminal socket (Finger protect type)
- 1) Install the securing hook by pressing the parts with arrows after inserting the relay.

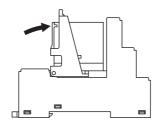

2) Removal of the relay is easily performed by pressing the parts with arrows.

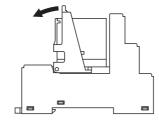

- PC board terminal socket
- 1) Installation of the securing hook is easily performed by pressing upward in the direction of the arrows.

Schematic (Top view)



2) Removal of the securing hook is easily performed by releasing the hook and pressing down, as shown in the figure.



\* To prevent damage and deformity, please use the relay-securing hook at 10 N or less.

10 ds\_61C05\_en\_hn: 080313D

# AMEYA360 Components Supply Platform

#### **Authorized Distribution Brand:**

























#### Website:

Welcome to visit www.ameya360.com

#### Contact Us:

#### Address:

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd Minhang District, Shanghai , China

#### > Sales:

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

#### Customer Service :

Email service@ameya360.com

### Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com