

AN1250

Microchip CTMU for Capacitive Touch Applications

Author: Bruce Bohn

Microchip Technology Inc.

INTRODUCTION

This application note describes the use of Microchip's Charge Time Measurement Unit (CTMU) for capacitive touch applications. The CTMU is an excellent peripheral for use in touch sensing applications. The following are some of the benefits of using the CTMU for touch sensing applications:

- · Easy hardware setup
- Simple to use software algorithms, available free of charge
- High speed allows for greater scan rate of capacitive touch switches and for many other processor tasks
- Low cost and low component count; no external hardware other than a connection to the copper sensor pad

The purpose of this application note is to inform prospective users of the CTMU for capacitive touch on general usage guidelines, CTMU setup and software algorithms, hardware and layout considerations, and advanced capacitive touch applications, such as matrix keys, sliders and multiple press keys.

The CTMU is currently available on selected PIC24 and PIC18F parts. Wherever possible, sample code for both has been included.

All hardware examples used in this application note directly pertain to the PICDEM™ Touch Sense 2 Demonstration Board (Part Number DM164128). The PICDEM Touch Sense 2 Demo Board uses a PIC24F device-based microcontroller (PIC24FJ256GB110). This demo board is not necessary for understanding this application note.

GENERAL FEATURES OF THE CTMU

The CTMU is made up of a constant current source and several logic blocks for it to operate:

- The constant current source is connected to the A/D converter of the microcontroller.
- A switch connected to the CTMU constant current source (and the A/D converter) is provided to allow accumulated charge to be drained.
- Two external pins are provided to trigger the constant current source.
- An output pin is also available for CTMU use.
 For the purposes of capacitive touch, the external pins for triggering the CTMU and the CTMU output pin are not used.


The connection of the CTMU to the A/D converter is all that is needed for capacitive touch applications. For a more in-depth discussion on the CTMU module and how it is used to measure charge or time, refer to the CTMU chapter of the "PIC24F Family Reference Manual" for PIC24F microcontrollers, or the appropriate data sheet for PIC18F microcontrollers on the Microchip web site (http://www.microchip.com).

See Figure 1 for a block diagram of the CTMU hardware.

Note that there are a few slight differences in the CTMU module from the PIC18F and the PIC24F. The PIC18F CTMU module does not have an automatic ADC conversion trigger. This is of no consequence for capacitive touch applications. For clarity, the automatic ADC trigger present on the PIC24F has not been used in the sample code so that it more closely matches the PIC18F code.

Also note that the CTMU on the PIC18F has different internal trigger sources. (ECCP1 and ECCP2 for PIC18F and Timer1 and OC1 for PIC24F). This is mentioned purely for reference, and again, makes no difference for capacitive touch applications. The sample code listings in this application note manually set/clear the EDG1STAT1 and/or EDG2STAT bits in the CTMU control register for starting and stopping the CTMU current source.

FIGURE 1: CTMU BLOCK DIAGRAM

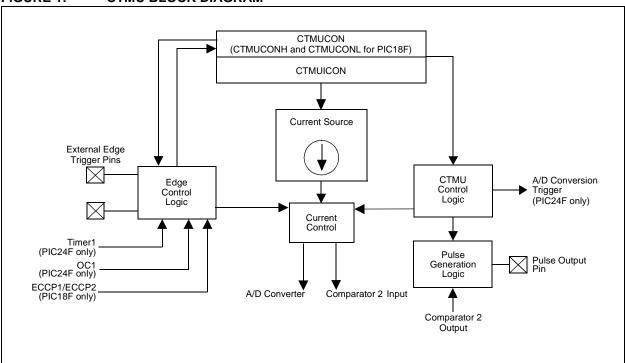

OVERVIEW OF CAPACITIVE TOUCH APPLICATIONS

The CTMU is used in capacitive touch applications by applying the constant current source of the CTMU to the capacitive touch pad using the following equation:

$$I \times T = C \times V$$

Where:

- · I is the constant current source of the CTMU
- T is a fixed period that the CTMU charges the capacitive touch circuit
- · C is the capacitance of the touch circuit
- V is the voltage read by the A/D converter after the capacitive touch circuit is finished charging

It is possible to sense a relative shift in capacitance by observing a change in voltage. The above equation can be rearranged to:

$$V = (I \times T)/C$$

Since the CTMU current source is constant (I), the voltage present on the capacitive touch sensor (V) relies on two variables: the amount of time the touch circuit is charged (T) and the capacitive size of the touch circuit (C). If the amount of time the touch circuit is charged is held constant, then changes in the capac-


itance of the touch circuit will ultimately affect the voltage that the circuit charges to in the fixed period. The A/D converter is used to read the voltage that the touch circuit is charged to with the CTMU.

When the capacitance of a human finger is added to the touch sensor pad, the capacitance increases and the result is a lowering of the voltage seen by the A/D converter (since I and T are held constant).

Setting Up of the CTMU

For a capacitive touch application, each sensor must be connected directly to a channel of the A/D converter. See Figure 2 for a block diagram of a Microchip microcontroller with a CTMU peripheral. This diagram illustrates that the CTMU is internally connected to the A/D converter and allows for selection of any of the A/D channels. With this configuration, a single CTMU unit can measure many capacitive touch sensors. Note that the CTMU has been simplified in order to show only the elements required for capacitive touch, namely the current source, the current source control and the current drain mechanism. These will be explained in detail in later sections. The current source control, labeled "Trigger" in Figure 2, is manually controlled in software by manipulating bits in the CTMU Control register.

FIGURE 2: CAPACITIVE TOUCH BLOCK DIAGRAM

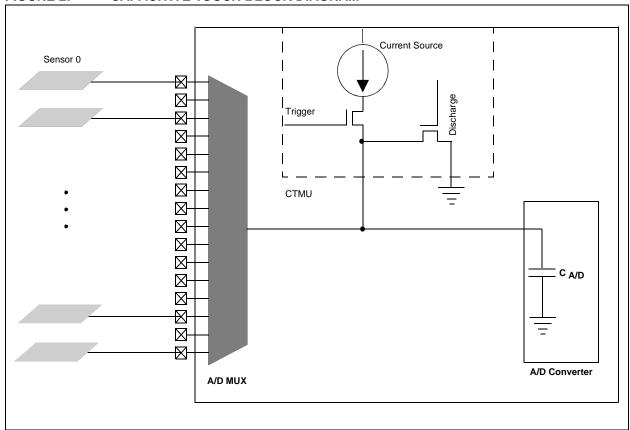

The current source of the CTMU is available in three ranges: 0.55 μA , 5.5 μA and 55 μA . The current range selection is made in the CTMUICON register. The current precision for each of the three ranges is ±20%. For many capacitive touch applications, the highest current range setting (55 μA) works best. This allows for the quickest charging of the capacitive touch circuit. The CTMUICON register also has bits used to trim the current source in ±2% increments up to ±62% for each of the three current ranges.

The CTMU current source is enabled and disabled using software. Two control bits, EDG1STAT and EDG2STAT in the CTMU control register, determine if the current source is enabled. These bits are exclusively ORed. That is, if EDG1STAT and EDG2STAT are both set or cleared, the current source is off. If either bit is set while the other is cleared, the current source is enabled and charging the circuit.

The IDISSEN bit is enabled to drain charge from the A/D converter to insure the charging process begins at zero potential. If the bit is set, the circuit is connected to Vss (grounded). Note that the discharge of the entire circuit is not accomplished with this feature. This is because the A/D converter is not always connected to the external circuitry (i.e., touch sensor pad).

The CTMU Configuration register (CTMUCON) is set up so that the external triggers are not used (these pins may be used for general purpose I/Os). The same is true of the CTMU pulse output pin. The CTMU current

source is configured using the CTMUICON register. For detailed information on the CTMU registers on the PIC24F, refer to **Section 11. "Charge Time Measurement Unit (CTMU)"** of the "PIC24F Family Reference Manual".

The registers that control the CTMU on the PIC18F parts are identical, with the exception that they are 8-bit registers: CTMUCONH and CTMUCONL. The CTMU also has different external trigger sources available, namely the ECCP1 and ECCP2 Special Event Triggers. For detailed information on the CTMU registers for PIC18F, refer to the specific product data sheet.

See Example 1 for a typical setup of the required CTMU and A/D converter registers. Note that the CTMU has been configured so that the external pins are not enabled. For the purposes of this application note, all control of the CTMU is handled through software. The A/D converter is set up to do manual conversion.

For capacitive touch sensing, a relative change in capacitance due to the presence of a finger is required. The absolute measurement of capacitance is not required.

Note:

All PIC18F code examples are written for the PIC18F46J11 family. For other PIC18F parts with the CTMU module, see the device data sheet for specific CTMU register configurations and CTMU usage.

EXAMPLE 1: CTMU AND A/D CONVERTER SETUP FOR PIC24F

```
//setup CTMU
 //CTMUCON
   CTMUCONbits.CTMUEN = 0;
                                   //make sure CTMU is disabled
   CTMUCONDits CTMUSIDL = 0;
                                   //CTMU continues to run in idle mode
   CTMUCONbits.TGEN = 0;
CTMUCONbits.EDGEN = 0;
                                   //disable edge delay generation mode of the CTMU
                                   //edges are blocked
   CTMUCONbits.EDGSEQEN = 0;
                                   //edge sequence not needed
   CTMUCONbits.IDISSEN = 0;
                                   //Do not ground the current source
   CTMUCONbits.CTTRIG = 0;
                                   //Trigger Output is disabled
   CTMUCONbits.EDG2POL = 0;
   CTMUCONbits.EDG2SEL = 0x3;
                                   //Edge2 Src = OC1 (don't care)
   CTMUCONbits.EDG1POL = 1;
   CTMUCONbits.EDG1SEL = 0x3;
                                   //Edgel Src = Timer1 (don't care)
//CTMITCON
   CTMUICON = 0 \times 300;
                                    //55uA
   CTMUICON.ITRIM = 0;
                                   //Nominal - No Adjustment
//setup A/D converter
   AD1PCFGL = 0 \times 0000;
   AD1CON1 = 0 \times 0000;
   AD1CHS = 0 \times 00000;
                                   //select the analog channel 0
   AD1CSSL=0x0000;
   AD1CON1bits.FORM = 0x0;
                                   //Unsigned fractional format
   AD1CON3 = 0x0000;
                                   //bits.ADRC=0;
   AD1CON2 = 0 \times 0000;
                                   //Turn On A/D
   AD1CON1bits.ADON = 1;
   CTMUCONbits.CTMUEN = 1;
                                   //Enable CTMU
```

EXAMPLE 2: CTMU AND A/D CONVERTER SETUP FOR PIC18F

```
//setup CTMU
//CTMUCON
CTMUCONHbits.CTMUEN = 0;
                                 //make sure CTMU is disabled
CTMUCONHbits.CTMUSIDL = 0;
                                 //CTMU continues to run in idle mode
CTMUCONHbits.TGEN = 0;
                                 //disable edge delay generation mode of the CTMU
CTMUCONHbits.EDGEN = 0;
                                 //edges are blocked
CTMUCONHbits.EDGSEQEN = 0;
                                 //edge sequence not needed
CTMUCONHbits.IDISSEN = 0;
                                 //Do not ground the current source
CTMUCONHbits.CTTRIG = 0;
                                  //Trigger Output is disabled
CTMUCONLbits.EDG2POL = 0;
CTMUCONLbits.EDG2SEL = 0x0;
                                 //Edge2 Src = ECCP2 (don't care)
CTMUCONLbits.EDG1POL = 1;
                                  //Edgel Src = ECCPl pin (don't care)
CTMUCONLbits.EDG1SEL = 0x1;
//CTMUICON
                                  //55uA
CTMUICON = 0 \times 03;
CTMUICON.ITRIM = 0;
                                  //Nominal - No Adjustment
//setup A/D converter
ANCONObits.PCFG = 0x00;
ANCON1 = 0 \times 0000;
ADCONObits.CHS = 0 \times 00;
                                  //select the analog channel 0
ADCON1bits.ADFM = 0x00;
                                 //right justified result
                                  //Turn On A/D
ADCON1bits.ADON = 1;
CTMUCONHbits.CTMUEN = 1;
                                  //Enable CTMU
```

In the case of the PIDEM Touch Sense 2 Demo Board, all 16 A/D channels are used for capacitive touch. Reading of each of the sensor channels (A/D channels) is controlled by Timer1. Timer1 is setup to fire at a 1 ms interval. Each time that the Timer1 interrupt handler runs, it increments the channel number of the A/D and

the capacitive sensor connected to that channel is read. After all 16 touch sensors have been read, the Timer1 interrupt handler sets a flag called, "dataReadyCTMU", and the main routine uses this flag to know when to process the new data just gathered from all 16 capacitive touch sensors.

AN1250

The software routine for reading each of the sensor channels consists of the following 13 steps:

- Set all of the A/D converter channels to digital I/O pins and set them to logic zero ('0').
 This has the effect of grounding all of the capacitive touch sensor pads, so they are at zero (0) volts potential.
- 2. Set the A/D channel to be read to an analog input.
- Set the A/D converter to the selected channel.
- Set the discharge bit, IDISSEN, of the CTMUCON register.

This step insures that the internal capacitance of the A/D converter starts at zero (0) volts potential.

- 5. Wait for charge to drain (a few NOPs).
- 6. Clear the discharge bit, IDISSEN.
- Set the sample bit, SAMP (AD1CON1), to begin sampling the selected channel (PIC24F only).
- Set either of the edge status bits of the CTMU. For PIC24F:

EDG1STAT OR EDG2STAT (CTMUCON) bits For PIC18F:

EDG1STAT OR EDG2STAT (CTMUCONL) bits

- This step turns on the CTMU current source to the selected A/D channel and begins charging the connected capacitive touch sensor.
- Wait for a fixed period of time. For most capacitive touch applications, this is approximately 2-10 μS.
 In this case, the fixed time period is a loop set up to do nothing until the allotted time has expired.
- 10. Clear the edge status bit that was set above.

For PIC24F:


EDG1STAT OR EDG2STAT (CTMUCON) bits For PIC18F:

EDG1STAT OR EDG2STAT (CTMUCONL) bits This step turns off the CTMU current source and stops charging the connected capacitive touch sensor.

- 11. Initiate an A/D conversion on the selected channel:
 - a) On PIC24F, clear the SAMP bit (AD1CON1).
 - b) On PIC18F, set the GO/DONE bit (ADCON0).
- 12. Wait for the conversion to complete.
- 13. Store the value read by the A/D converter.

Figure 3 provides a software flowchart of the CTMU capacitive touch sensor, reading as outlined above.

FIGURE 3: CTMU CAPACITIVE TOUCH SENSOR READ FLOWCHART

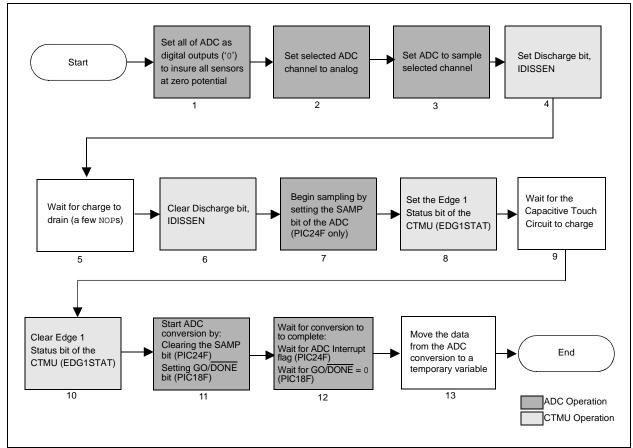

Example 3 provides the equivalent code for reading the capacitive touch sensors using the CTMU on a PIC24F device. Example 4 has the same algorithm for a PIC18F device. Note that the channel number being read is referenced by the Index variable. The ADSELECT array is setup to have the correct bits set for

the corresponding Index variable so that the correct channel is set to an analog A/D. The A/D value is temporarily stored in the variable, immediateValue. The LoopCount determines how long the CTMU current source charges the capacitive touch circuit.

EXAMPLE 3: READING THE CAPACITIVE TOUCH SENSOR CIRCUIT SOFTWARE ALGORITHM (PIC24F)

```
//Read CTMU (Get the raw sensor reading)
   AD1PCFGL= 0xFFFF;
                                               //set all A/D channels to digital I/O pins
   TRISB = 0 \times 0000;
   LATB = 0 \times 00000;
                                               //set all channels to logical 0 outputs
   PORTB = 0 \times 0000;
   Nop(); Nop(); Nop(); Nop();
   Nop(); Nop(); Nop(); Nop();
   //Wait for charge to drain
   TRISB = ADSELECT[Index];
                                               //set selected channel to input
   AD1PCFGL = ~ADSELECT[Index];
                                               //set selected channel to analog A/D input
   Nop(); Nop(); Nop(); Nop();
   Nop(); Nop(); Nop(); Nop();
   //wait for A/D to connect to channel
   AD1CHS = Index;
                                               //select A/D channel
   CTMUCONbits.IDISSEN = 1;
                                               //Drain any charge on the A/D circuit
   Nop(); Nop(); Nop(); Nop();
   //Wait for charge to drain
   CTMUCONbits.IDISSEN = 0;
                                               //Stop discharge of A/D circuit
   IFSObits.AD1IF = 0;
                                               //Make sure A/D interrupt flag = 0
   AD1CON1bits.SAMP
                         = 1;
                                              //Manually start sampling
   CTMUCONbits.EDG2STAT = 0;
                                              // Make sure edge2 is 0
   CTMUCONbits.EDG1STAT = 1;
                                              // Set edgel - Start Charge
   for (count = 0; count < loopCount; count++); // Delay for CTMU charge time
   CTMUCONbits.EDG1STAT = 0;
                                               //Clear edgel - Stop Charge
   IFSObits.AD1IF
                          = 0;
   AD1CON1bits.SAMP
                          = 0;
                                               //Clear SAMP bit to begin manual A/D conversion
   while(!IFSObits.AD1IF);
                                               //Wait for the A/D conversion to finish
   immediateValue = ADC1BUF0;
                                               //Read the value from the A/D conversion
   AD1CON1bits.SAMP
                       = 0;
   IFSObits.AD1IF
                          = 0;
   AD1CON1bits DONE
                         = 0;
                                               //Make sure A/D bits are cleared
   //End of CTMU read
```

EXAMPLE 4: READING THE CAPACITIVE TOUCH SENSOR CIRCUIT SOFTWARE ALGORITHM (PIC18F)

```
//Read CTMU (Get the raw sensor reading)
ANCONObits.PCFG= 0xFF;
                                              //set all A/D channels to digital I/O pins
                                              //set all A/D channels to digital I/O pins
ANCON1bits.PCFG= 0x1F;
TRISA = 0 \times 00;
TRISB = 0x00;
TRISC = 0x00;
TRISE = 0x00;
LATA = 0x00;
LATB = 0x00;
LATC = 0x00;
LATE = 0 \times 00;
PORTB = 0x00;
                                              //set all channels to logical O outputs
Nop(); Nop(); Nop(); Nop();
Nop(); Nop(); Nop(); Nop();
//Wait for charge to drain
TRISA = ADPASELECT[Index];
TRISB = ADPBSELECT[Index];
TRISC = ADPCSELECT[Index];
TRISE = ADPESELECT[Index];
                                              //set selected channel to input
ANCONObits.PCFG = ~ADOSELECT[Index];
ANCON1bits.PCFG = ~AD1SELECT[Index];
                                              //set selected channel to analog A/D input
Nop(); Nop(); Nop(); Nop();
Nop(); Nop(); Nop(); Nop();
//wait for A/D to connect to channel
ADCONObits.CHS = Index;
                                              //select A/D channel
CTMUCONHbits.IDISSEN = 1;
                                              //Drain any charge on the A/D circuit
Nop(); Nop(); Nop(); Nop();
//Wait for charge to drain
CTMUCONHbits.IDISSEN = 0;
                                              //Stop discharge of A/D circuit
Nop(); Nop();
CTMUCONLbits.EDG2STAT = 0;
                                              // Make sure edge2 is 0
CTMUCONLbits.EDG1STAT = 1;
                                              // Set edgel - Start Charge
for (count = 0; count < loopCount; count++);</pre>
                                             // Delay for CTMU charge time
CTMUCONLbits.EDG1STAT = 0;
                                              //Clear edgel - Stop Charge
AD1CON0bits.GODONE =
                       1;
                                              //Set Go bit to begin A/D conversion
while(ANCONObits.GODONE);
                                              //Wait for the A/D conversion to finish
immediateValue = ADRESH;
immediateValue = immediateValue << 8;</pre>
immediateValue = immediateValue + ADRESL;
                                              //Read the value from the A/D conversion
//End of CTMU read
```

The $\mathtt{main}()$ function contains a $\mathtt{while}(1)$ loop (endless) that checks for the $\mathtt{dataReadyCTMU}$ flag (set by the Timer1 interrupt handler). If the $\mathtt{dataReadyCTMU}$ flag is not set, other tasks are performed while it waits. In the case of the PICDEM Touch Sense 2 Demo Board, communication of data over the USB is serviced. If the $\mathtt{dataReadyCTMU}$ flag is set, the $\mathtt{main}()$ function clears the flag and calls the routines necessary to process the newly acquired data. The $\mathtt{main}()$ function temporarily disables Timer1 to insure that no new data is introduced in the middle of the routines that are handling data processing. After all processing of the capacitive touch

sensor data is complete, and the LED display information is also updated, Timer1 is re-enabled, and the whole process begins again.

The structuring of the code in this manner is done to make the system deterministic. Using a fixed timer to read each capacitive touch sensor channel at a 1 ms rate fixes the update rate to approximately 16 ms (1 ms times 16 channels). The actual update rate is slightly slower, since Timer1 is disabled while the new data is processed.

IMPLEMENTATIONS OF SPECIAL PURPOSE CAPACITIVE TOUCH

This section describes some of the special handling of the data that is available from reading the capacitive touch sensors using the CTMU. The following topics are covered:

- Software algorithms for reliable touch operation
- Software algorithms for special purpose capacitive touch sensor implementations
- Physical board properties for optimal capacitive touch sensors


Software Algorithms for Reliable Touch Operation

There are several software methods used to combat problems with false sensing of capacitive touch sensing circuits. The following software algorithms are used not only in the PICDEM Touch Sense 2 Demo Board, but throughout all of the capacitive touch solutions offered by Microchip.

 First method – This is to use a slow averaging routine. This is implemented by simply adding the value read for any capacitive touch sensor circuit into a running average. The key to this method is that a value is only added to the average at a rate much slower than the actual rate that the

- capacitive touch sensor is being read. On the PICDEM Touch Sense 2 Demo Board, for example, the average is only updated on every 16th read of the capacitive sensor channel. Since the update rate is 16 ms, the slower moving average value is updated at a rate of 256 ms. This slower moving value is then compared to the immediate value. If the immediate value varies by more than what has been established for the trip point for that capacitive sensor, the sensor is determined to be "pressed", or touched. For more information on the method of slow averaging, refer to the specific averaging section in *AN1103*, "Software Handling for Capacitive Sensing".
- Second method This is a debouncing routine. This algorithm is very similar to that used for debouncing of mechanical switches. In the case of capacitive sensors, the debouncing acts as a noise filtering mechanism. Since noise by definition is non-periodic, it should not occur repetitively in multiple sequential scans of a capacitive sensor channel. Figure 4 provides the routine setup for both a pressed and unpressed condition. It requires three consecutive values of pressed or unpressed before the actual state of the capacitive touch sensor is ultimately determined. The value can be changed to suit the application. It should be noted that if a higher number is used, a slower response time will be observed.

FIGURE 4: DEBOUNCE ALGORITHM FLOWCHART

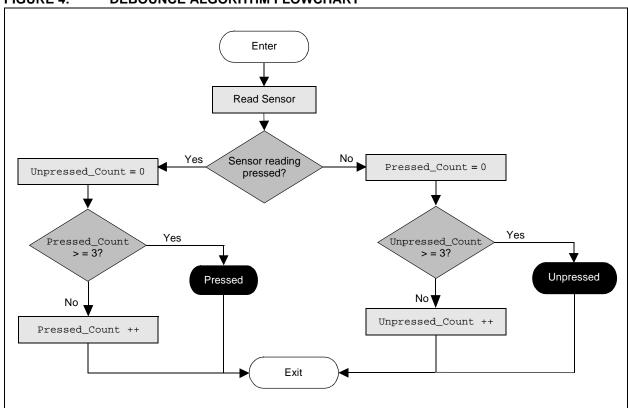

AN1250

• Third method – This is used to improve capacitive touch sensor reliability in oversampling. This method takes advantage of the high-speed capability of the CTMU. Using the PICDEM Touch Sense 2 Demo Board as an example, each reading of any of the 16 capacitive touch channels takes approximately 12 μs. Since the scan rate has been determined by Timer1 to be 1 ms, there is sufficient time to reread the capacitive touch sensor channel multiple times. The PICDEM Touch Sense 2 Demo Board reads each channel 64 times. The sum of all 64 readings for the channel is then divided by 64, and this final value is used as the data used by all other software routines in the application.

To use this method, a loop is added around the routine that reads the capacitive touch sensor. The sum of the reads is tallied for each iteration through the loop, and at the end of all of the iterations, the sum is divided by the number of times through the loop (64 in this case). This routine has the effect of a low-pass filter. Since the average value of multiple readings is taken, a noise source that may cause an incorrect reading is averaged in with multiple correct readings and has a very minimal effect on the overall value.

• Fourth method – This is similar to that used for slow averaging. In this scenario, an array of previously read values is kept, and when a new value is read, it is introduced into the data array and the oldest value is removed. The average value of the array is used as the data value passed to all of the other software routines in the application. This method again causes a spurious incorrect value to have only a slight impact on the final value used. This routine is used on every value read by the capacitive touch routine.

Note that the PICDEM Touch Sense 2 Demo Board uses all of these methods combined to provide the most reliable sensing solution.

Capacitive touch sensors can go beyond a simple button that is pressed and released. In this section, we will explore some different capacitive touch topologies, such as multiple key press, paired button press, matrix keyboard implementation and the use of capacitive touch sensors as a slider.

Multiple Keys Press

Using software algorithms, it is possible to detect when two or more buttons are simultaneously pressed. In a multiple press scenario, the buttons are specifically designed to allow for multiple presses. The physical layout of the touch pad sensors is such that an area exists for a single button press, and the button area is

extended to an area shared with an adjacent touch pad sensor. The PICDEM Touch Sense 2 Demo Board has an area designated as the "directional wheel". This area has four capacitive touch sensors laid out as the four main ordinal compass directions (north, south, east and west). Each of these sensors is extended to an area equal to one half (1/2) of the main portion of the sensor. These "dual" touch sensor areas make up four more directions (northeast, southeast, southwest and northwest). Each of the four main sensors also extends to the center of the wheel, with each having one quarter (1/4) of the area of the main portion of the sensor. A "quad" touch sensor is then formed in the center. See Appendix A: "PICDEM™ Touch Sense 2 Demo Board". Note that the cover plate is removed in Figure A-2. The software algorithm now looks first for all four sensors being pressed at approximately one quarter (1/4) of the value of a single pressed key. If all four are in range, it is determined that the center button is pressed. Next, it looks for two adjacent keys pressed at approximately one half (1/2) of a single pressed key. Lastly, single key presses at a full level of the trip value are checked. Using this multiple press setup, nine distinct keys are created from only four capacitive touch sensor inputs. The directional wheel works nicely when a finger is moved around the wheel, either clockwise or counter-clockwise. It provides a smooth fluid-like transition between the keys.

Capacitances for each of the sensors should be matched as closely as possible, especially when considering that the software algorithm is searching for multiple button presses. The trace lengths to each sensor and adjacent sensors, LEDs and other board traces become important. The CTMU current trimming capability is a great aid in achieving a "level playing field" in this respect. The PICDEM Touch Sense 2 Demo Board uses this trimming capability to match up each of the four sensors of the directional wheel.

This was done using a manual process, and each of the A/D readings for the sensors was adjusted using the CTMUICON register to slightly alter the CTMU current source up or down so that the unpressed readings matched. The adjusted values required for each channel were then stored in an array, and the CTMUICON register was written to with a value that was selected from the array to match the selected channel being read. This is done for each channel and is applied to the CTMUICON register at the beginning of the CTMU channel read routine provided in Example 3.


Note:

For clarity, the code for CTMU current adjustment is not included in the example code, but may be found in the code listing for the PICDEM Touch Sense 2 Demo Board.

Paired Keys Press

The paired keys press is similar to the multiple key press with the exception that all of the combinations of one half (1/2) are used. In Figure 5, it can be seen that each button is made up of either a full circle single touch pad, or two half (1/2) circle touch pads. The software for the paired press is similar to that used for the multiple key press described above. The "half" pressed keys are looked for first, and then single keys are scanned for if no paired press keys are found. This implementation has the distinction of generating 10 keys from only four capacitive touch sensor inputs. It should be noted that it is somewhat difficult to differentiate between two single keys being pressed and a single paired press key.

FIGURE 5: PAIRED KEY PRESS CAPACITIVE TOUCH SENSOR KEYS

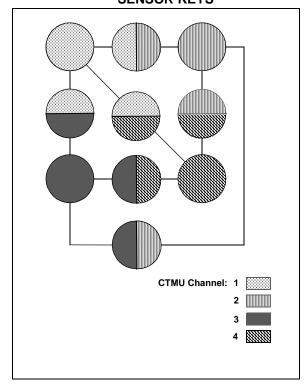


Matrix Keys Implementation

Matrix keys use a set of capacitive touch sensors arranged in rows and columns to provide a maximum number of buttons or keys with respect to the number of capacitive touch sensor inputs. The PICDEM Touch Sense 2 Demo Board makes use of a matrix of four rows by five columns (4 x 5) to implement a 20-key calculator type keypad. Notice that the number of channels (9) yields a total of 20 distinct keys. The number of possible keys is the multiplication of the number of rows and columns (4 x 5), while the number of channels required is the sum of the number of rows plus the number of columns (4 + 5). Appendix A: "PICDEM™ Touch Sense 2 Demo Board" depicts the PICDEM Touch Sense 2 Demo Board with the cover plate removed. The keypad matrix is in the center of the board. Each key is a unique combination of a row and a column of the matrix. Each key is made up of two touch sensors shaped as half circles, one half circle for the row and one half circle for the column. See Figure 6 for a visual example of a keypad matrix. The software algorithm for the keypad matrix looks for a row pressed and a column pressed, and decodes the key pressed. The software for this implementation also looks for the most pressed row and column. This is done since the proximity of the sensors can sometimes cause adjacent rows or columns to cross the tripped threshold level. It is important to note that using matrix keys causes the overall capacitance to increase. For example, a matrix with four (4) rows will have approximately two (2) times the capacitance of a single sensor key of equal size. This factor becomes important, since the software is looking for the relative change in capacitance due to a finger on the capacitive touch sensor key. Another key factor is that since the rows and columns are very close to each of the actual keys, capacitive coupling also increases the amount of capacitance seen by each of the sensor inputs.

It is important to keep the capacitances for each of the rows and each of the columns matched as closely as possible, especially when considering that the software algorithm is searching for the "most pressed" row and column. The trace lengths to each row/column and adjacent sensors, LEDs and other board traces become important. The CTMU current trimming capability, mentioned in the "Multiple Keys Press" section, is applicable to the matrix keypad as well.


The difference between paired press and matrix keys is that for the matrix, there is a key for each combination of row and column, and for the paired press, there is a key assigned to each capacitive touch channel and a key assigned to each combination of two capacitive touch channels.

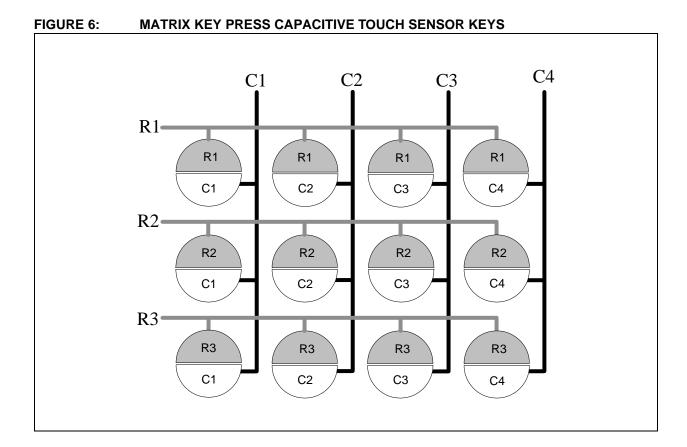

CAPACITIVE TOUCH SLIDER

The capacitive touch slider senses the position of a finger along a strip of the circuit board. The area designated as the strip has two capacitive sensor channels, each formed in the shape of a triangle (see Figure 7 and Figure A-2). The schematic of the PICDEM Touch Sense 2 Demo Board with the cover plate removed shows the slider toward the right hand side of the board.

FIGURE 7: SLIDER IMPLEMENTATION COPPER PAD SHAPE

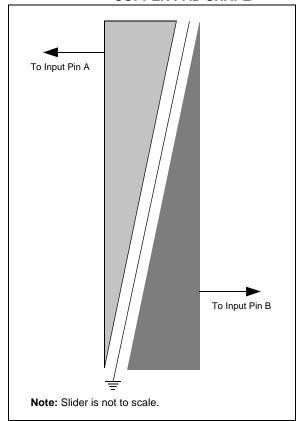

Notice that the trace between the two triangular pads is grounded. This trace provides additional isolation between the two triangular capacitive touch sensors by reducing the effect of capacitive coupling.

The slider works by reading the amount of shift in capacitance from a normal untouched sensor. The slow moving average described earlier is used to track the untouched "base" capacitance of each of the two sensors. When the value is shifted from this base value to a value where the trip point is reached for either of the two slider sensors, the base value is then locked and the slow moving average is no longer used for slider position calculations until the value of both slider sensors is again above the trip threshold. The base values for each of the two sensors is captured and used for the slider position calculations. The software algorithm then looks at the change in the slider value

from the captured base value. The position of a finger on the slider is then determined by the following equations.

EQUATION 1:

Delta Left = (Captured Left Base Capacitance – Current Left Value)

Delta Right = (Captured Right Base Capacitance – Current Right Value)

Since the left triangular sensor has its point at the bottom of the slider, it is expected that the shift in capacitance from a finger on the slider at the bottom will be minimal, and maximum when a finger is positioned at the top. The position of the left sensor (scaled for a value of 0 to 100) is shown in Equation 2:

EQUATION 2:

Left Position = (Delta Left * 100)/(Delta Left + Delta Right)

Similarly, the right triangular sensor is large at the bottom of the slider and a finger positioned at the bottom would cause the largest shift in capacitance, while a finger at the top of the slider would produce a minimum amount of capacitance shift. The position of the right sensor (again scaled for a value 0 to 100) is shown in Equation 3:

EQUATION 3:

 $Right\ Position = ((1 - Delta\ Right)*100)/(Delta\ Left + Delta\ Right))$

Finally, the two values may be averaged for the final position calculation:

EQUATION 4:

 $Position = (Left\ Position + Right\ Position)/2$

It should also be noted that when neither the left nor right slider has crossed the tripped value (base or unpressed), the position is not calculated. This prevents jitter between values that are displayed on the slider LEDs.

To achieve maximum linearity and accuracy of the slider, it is important to keep the capacitance for each of the triangular sensors matched as closely as possible since the software algorithm is using and comparing the values for two triangular sensors. The trace lengths to each triangular sensor and adjacent sensors, LEDs and other board traces become important. The CTMU current trimming capability, mentioned in the "Multiple Keys Press" section, is applicable to the slider sensors as well.

APPLICATION-SPECIFIC CONSIDERATIONS

Every application will have unique needs relative to its capacitive touch features. Some of the factors include: environment, response time, number and type of capacitive touch sensors, and the number of other tasks that the microcontroller is ultimately responsible for (such as USB, graphics, I^2C^{TM} , SPI, UART, etc).

There are typically three common variables that affect overall performance of capacitive touch sensors. These are:

- Printed Circuit (PC) board layout including sensor pad size, shape and proximity to other sensors
- Material and thickness of covering over the capacitive touch sensors
- · Noise susceptibility, both conducted and radiated

PC Board Layout

Basic considerations for PC Board (PCB) layout include keeping traces as short as possible. Traces to capacitive touch sensors should not run for long lengths in parallel due to capacitive coupling effects. The PICDEM Touch Sense 2 Demo Board was laid out so that the most sensitive area (i.e., the matrix keypad) was closest to the microprocessor, so that the traces run to the capacitive sensors were the shortest, and capacitance due to trace length was kept to a minimum. The subject of board layout practice can be quite intricate; refer to AN1102, "Layout and Physical Guidelines for Capacitive Sensing" for more information. The pad shape, size and proximity to other sensors is also covered in AN1102. The PICDEM Touch Sense 2 Demo Board uses a half inch (1/2") diameter pad with a quarter inch (1/4") spacing between adjacent sensors. The matrix keypad uses half circle sensor pads that have a 1/2" diameter. The directional wheel sensors have a total area that is approximately double that of the ½" diameter pads. This was required to allow the double and quad button areas.

Capacitive Touch Covering (Overlay) Considerations

The material and thickness of the covering over the capacitive touch sensors is very significant. It determines how much of the capacitance of a human finger is actually transmitted to the capacitive touch sensor. Therefore, thinner is better than thicker. If a material is too thin, it may not be mechanically sufficient to support and protect the circuit board. The dielectric constant of the material also is a determining factor. A higher dielectric constant will give better results. Two common materials used are PLEXIGLAS™ and tempered window glass. PLEXIGLAS has a dielectric constant of 2.5-3.5, while window glass has a dielectric constant in the range of 4-8. More information on the topic of covering capacitive touch sensors can be found in AN1102, "Layout and Physical Guidelines for Capacitive Sensina".

Noise Susceptibility


The existing noise, which affects capacitive touch applications, should always be considered. The factors affecting how to protect against noise are very application-specific. The PICDEM Touch Sense 2 Demo Board, for example, is open on both the front and back. A hatched ground pattern was added to the back of the board wherever possible to minimize the effects of noise that could be introduced from the bottom of the board. The cross hatched pattern provides a good path to conduct unwanted noise to ground, and at the same time, it does not cause an appreciable increase in the capacitance of the touch sensors due to the coupling effect of the sensor pad through the PC board material to the ground plane.


Some applications may have a completely shielded enclosure which would allow for less ground plane added to the PC board. Another consideration is the proximity of the capacitive touch sensors to other noise producing circuitry on the board, such as communication busses, inverting power supplies for back lighting displays, RF radio transmitters such as those used for Wi-Fi or other radio based communications, and so on. In the case of a radio transmitter and capacitive touch sensors, it is best to read the buttons only when the RF transmitter is disabled.

APPENDIX A: PICDEM™ TOUCH SENSE 2 DEMO BOARD

Figure A-2 displays the PICDEM Touch Sense 2 Demo Board schematic with the cover plate removed.

FIGURE A-1: PICDEM™ TOUCH SENSE 2 DEMO BOARD WITH COVER REMOVED

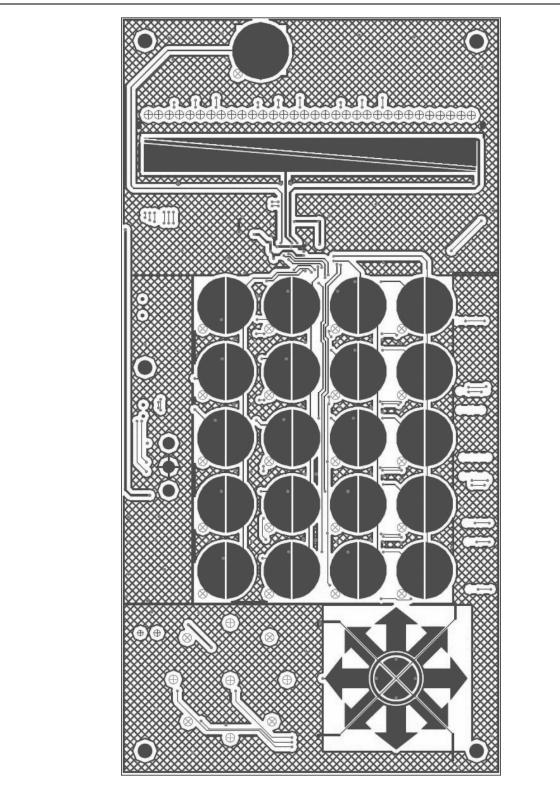

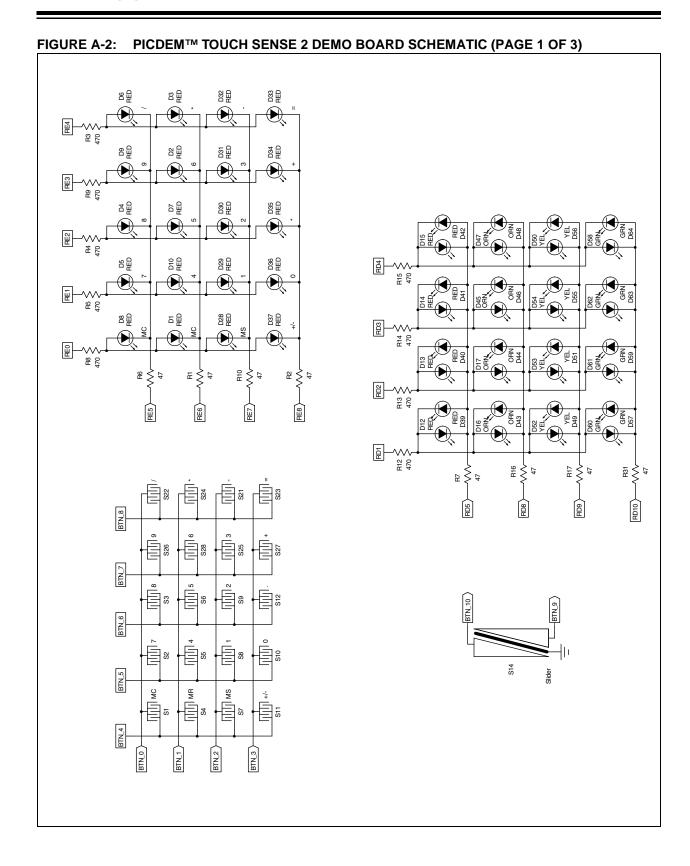



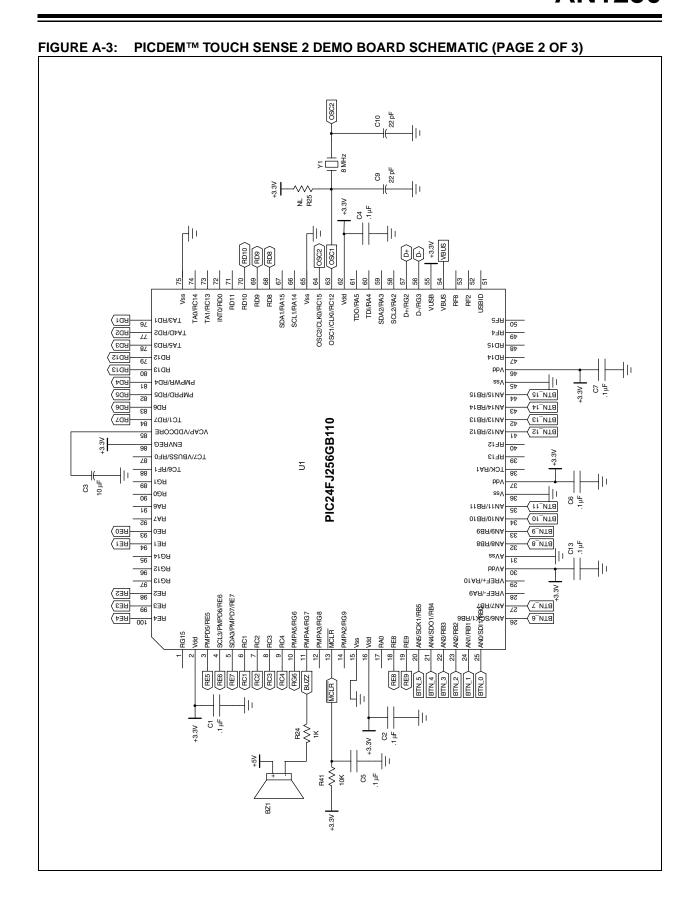


FIGURE A-4: PICDEM™ TOUCH SENSE 2 DEMO BOARD SCHEMATIC (PAGE 3 OF 3)

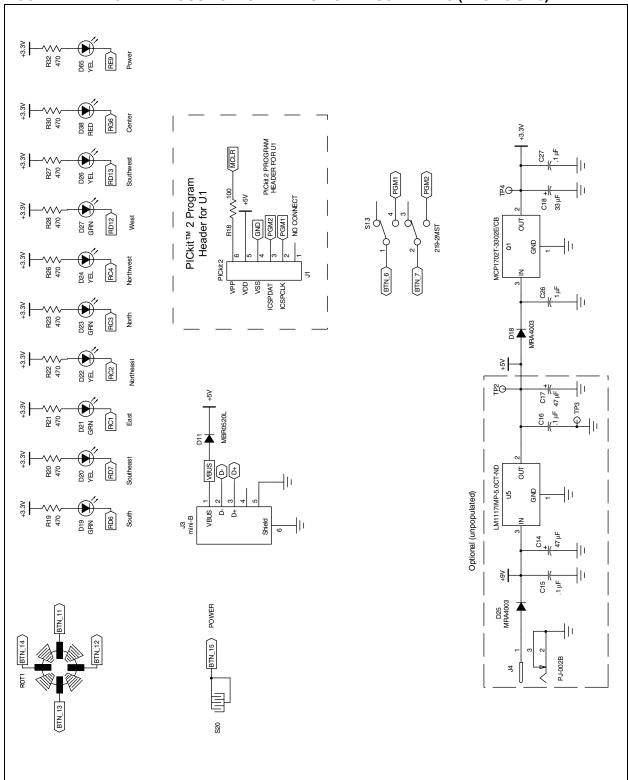

APPENDIX B: OSCILLOSCOPE TRACE

FIGURE B-1: OSCILLOSCOPE TRACE OF CHARGING OF CAP SENSOR CIRCUIT

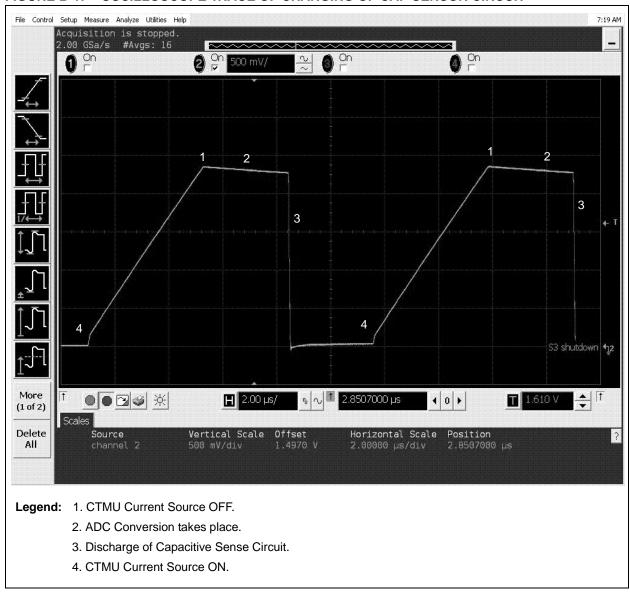

CONCLUSION

Microchip's CTMU-based capacitive touch solutions provide a reliable solution for the implementation of capacitive touch and require minimal external hardware. The CTMU unit is fast and software needed for operation is easy to set up, configure and integrate into any application requiring capacitive touch.

REFERENCES

- http://www.microchip.com/mTouch
- AN1103, "Software Handling for Capacitive Sensing"
- AN1102, "Layout and Physical Guidelines for Capacitive Sensing"
- "PICDEM™ Touch Sense 2 Demo Board User's Guide" (DS51748)
- "Section 11. Charge Time Measurement Unit (CTMU)" in the "PIC24F Family Reference Manual" (DS39724)

Note the following details of the code protection feature on Microchip devices:

- · Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the
 intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, Accuron, dsPIC, KEELOQ, KEELOQ logo, MPLAB, PIC, PICmicro, PICSTART, rfPIC, SmartShunt and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

FilterLab, Linear Active Thermistor, MXDEV, MXLAB, SEEVAL, SmartSensor and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, dsSPEAK, ECAN, ECONOMONITOR, FanSense, In-Circuit Serial Programming, ICSP, ICEPIC, Mindi, MiWi, MPASM, MPLAB Certified logo, MPLIB, MPLINK, mTouch, PICkit, PICDEM, PICDEM.net, PICtail, PIC³² logo, PowerCal, PowerInfo, PowerMate, PowerTool, REAL ICE, rfLAB, Select Mode, Total Endurance, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2009, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

Printed on recycled paper.

QUALITY MANAGEMENT SYSTEM

CERTIFIED BY DNV

ISO/TS 16949:2002

Microchip received ISO/TS-16949:2002 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office

2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200

Fax: 480-792-7277 Technical Support:

http://support.microchip.com

Web Address: www.microchip.com

Atlanta

Duluth, GA Tel: 678-957-9614 Fax: 678-957-1455

Boston

Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago

Itasca, IL Tel: 630-285-0071 Fax: 630-285-0075

Dallas

Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

Detroit

Farmington Hills, MI Tel: 248-538-2250 Fax: 248-538-2260

Kokomo

Kokomo, IN Tel: 765-864-8360 Fax: 765-864-8387

Los Angeles

Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608

Santa Clara

Santa Clara, CA Tel: 408-961-6444 Fax: 408-961-6445

Toronto

Mississauga, Ontario, Canada

Tel: 905-673-0699 Fax: 905-673-6509 ASIA/PACIFIC

Asia Pacific Office

Suites 3707-14, 37th Floor Tower 6, The Gateway Harbour City, Kowloon

Hong Kong Tel: 852-2401-1200

Fax: 852-2401-3431

Australia - Sydney Tel: 61-2-9868-6733 Fax: 61-2-9868-6755

China - Beijing

Tel: 86-10-8528-2100 Fax: 86-10-8528-2104

China - Chengdu

Tel: 86-28-8665-5511 Fax: 86-28-8665-7889

China - Hong Kong SAR

Tel: 852-2401-1200 Fax: 852-2401-3431

China - Nanjing

Tel: 86-25-8473-2460 Fax: 86-25-8473-2470

China - Qingdao

Tel: 86-532-8502-7355 Fax: 86-532-8502-7205

China - Shanghai

Tel: 86-21-5407-5533 Fax: 86-21-5407-5066

China - Shenyang

Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

China - Shenzhen

Tel: 86-755-8203-2660 Fax: 86-755-8203-1760

China - Wuhan

Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

China - Xiamen

Tel: 86-592-2388138 Fax: 86-592-2388130

China - Xian Tel: 86-29-8833-7252

Fax: 86-29-8833-7256 China - Zhuhai

Tel: 86-756-3210040 Fax: 86-756-3210049 ASIA/PACIFIC

India - Bangalore

Tel: 91-80-3090-4444 Fax: 91-80-3090-4080

India - New Delhi

Tel: 91-11-4160-8631 Fax: 91-11-4160-8632

India - Pune

Tel: 91-20-2566-1512 Fax: 91-20-2566-1513

Japan - Yokohama

Tel: 81-45-471- 6166 Fax: 81-45-471-6122

Korea - Daegu

Tel: 82-53-744-4301 Fax: 82-53-744-4302

Korea - Seoul

Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934

Malaysia - Kuala Lumpur

Tel: 60-3-6201-9857 Fax: 60-3-6201-9859

Malaysia - Penang

Tel: 60-4-227-8870 Fax: 60-4-227-4068

Philippines - Manila

Tel: 63-2-634-9065 Fax: 63-2-634-9069

Singapore

Tel: 65-6334-8870 Fax: 65-6334-8850

Taiwan - Hsin Chu

Tel: 886-3-572-9526 Fax: 886-3-572-6459

Taiwan - Kaohsiung

Tel: 886-7-536-4818 Fax: 886-7-536-4803

Taiwan - Taipei

Tel: 886-2-2500-6610 Fax: 886-2-2508-0102

Thailand - Bangkok

Tel: 66-2-694-1351 Fax: 66-2-694-1350 **EUROPE**

Austria - Wels

Tel: 43-7242-2244-39 Fax: 43-7242-2244-393

Denmark - Copenhagen

Tel: 45-4450-2828 Fax: 45-4485-2829

France - Paris

Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

Germany - Munich

Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Italy - Milan

Tel: 39-0331-742611 Fax: 39-0331-466781

Netherlands - Drunen

Tel: 31-416-690399 Fax: 31-416-690340

Spain - Madrid

Tel: 34-91-708-08-90 Fax: 34-91-708-08-91

UK - Wokingham Tel: 44-118-921-5869 Fax: 44-118-921-5820

01/16/09

AMEYA360 Components Supply Platform

Authorized Distribution Brand:

























Website:

Welcome to visit www.ameya360.com

Contact Us:

> Address:

401 Building No.5, JiuGe Business Center, Lane 2301, Yishan Rd Minhang District, Shanghai , China

> Sales:

Direct +86 (21) 6401-6692

Email amall@ameya360.com

QQ 800077892

Skype ameyasales1 ameyasales2

Customer Service :

Email service@ameya360.com

Partnership :

Tel +86 (21) 64016692-8333

Email mkt@ameya360.com